TECHNICAL DATA SHEETS

FLEXIBLE PROTECTIONS AND SAFETY BARRIERS

mpm FLEXIBLE PROTECTIONS



JUNE **2025**



01 RACK PROTECTIONS & TRAFFIC BARRIERS

RPS/RPM/RPL/RPL XL 600	05
TECHNICAL RACK	08
RACK CORNER	10
SM	12
LM	13
LINK SINGLE	16
LM/1 LINK	19
LINK LM	23
FENCE 90	26
FENCE 150	27
FENCE 150 REINFORCED	28
FENCE 150 LINK	30
BFLEX.FRONT/1	32
BFLEX.FRONT/1 MODULAR	34
BFLEX.COM/1	37

02 BOLLARDS

GRD 90	40
GRD 150	41
GRD 150 PLUS	42
GRD 200	44
ROCKET 150	46
ROCKET 200	47

03 COLD LINE

ROD 70	49
ROD 120	52
ROD FLOOR 70	55
ROD FLOOR 100/120	60
ROD FLOOR 120 DOUBLE	63

mpm
FLEXIBLE PROTECTIONS

CONTENTS

DATA SHEETS / ASSEMBLY INSTRUCTIONS

04 GROUND LEVEL PROTECTIONS

GR 90 66
GR 150 71
TRUCK LINE 74
GRIN 90 76
GRIN 150 77
GUARDIAN 200 80
GUARDIAN 300 81

05 PEDESTRIAN BARRIERS

HR 90 83
PED 90 86
CORNER PED 90 89
PED 90 GL REF 92
PED 90 LINK 96
LINK 120/1 97
LINK 120/2 98
LINK 120/3 99
PED 150 103
CORNER PED 150 106
PED 150 TL 110
PED 150 LINK 113
LINK 150/1 114
LINK 150/2 115
CORNER LINK 150 119
PED 150 PIN 123
PED 200 PIN 126
BFLEX.FRONT/2 129
BFLEX.FRONT/2 MODULAR 131
BFLEX.COM/2 134

06 GATES

DP 90 ONE WAY 137
DP 90 SWING 141
LIFT GATE 90 145
DP 150 ONE WAY 149
DP 150 SWING 153
LIFT GATE 150 157

07 INDUSTRIAL DOOR PROTECTIONS

WARNING BAR 161
WARNING BAR INFORMATION SIGN 162
WARNING BAR LIGHT & SOUND 163
FULL FRAME SELF STANDING 165
FULL FRAME WALL FIXING 168

08 LOADING BAYS PROTECTIONS

HUG GATE 171
DOCK GATE 173
CAR STOP 177
TRUCK STOP 179
DOCK BUMPER S 181
DOCK BUMPER 183

09 COLUMN PROTECTIONS

MINI HUG TOWER 185
HUG TOWER 3 SIDES 187
HUG TOWER 190
TOWER PROTECTIONS 193
TOWER LINK 197
COPRO 90 200
COPRO 150 203

10 CORNER PROTECTIONS

CP 100/200 206

11 KERB

PLEX 100 208
PLEX 200 209
KERB 200/300 211

12 WALL PROTECTION

WP 100/150 216
ASP 200 219
WALL HUG 221
WALL BFLEX 223
WALL BFLEX MODULAR 225

13 ACCESSORIES

SOFT BOLLARD 229
REMOVABLE SAFETY BARRIERS 90 231
REMOVABLE SAFETY BARRIERS 150 233

14 TECH SOLUTIONS


DP 150 SAFE WAY 235




RPS/RPM/RPL/RPL XL 600

PROTEZIONE MONTANTE
RACK PROTECTOR


RPS

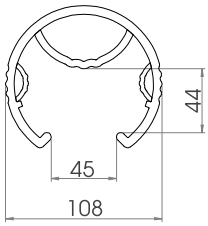


RPM

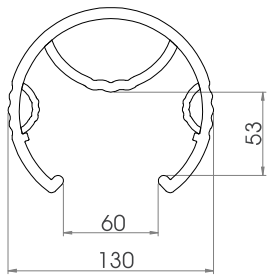


RPL

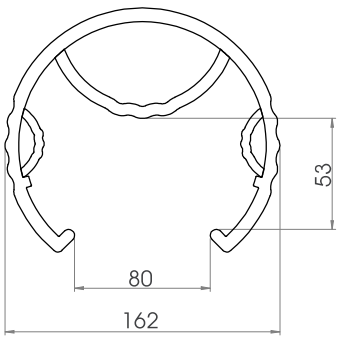

RPL XL

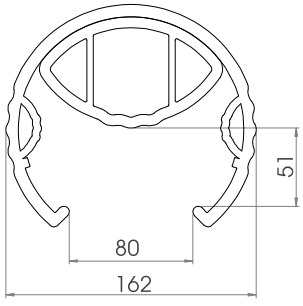


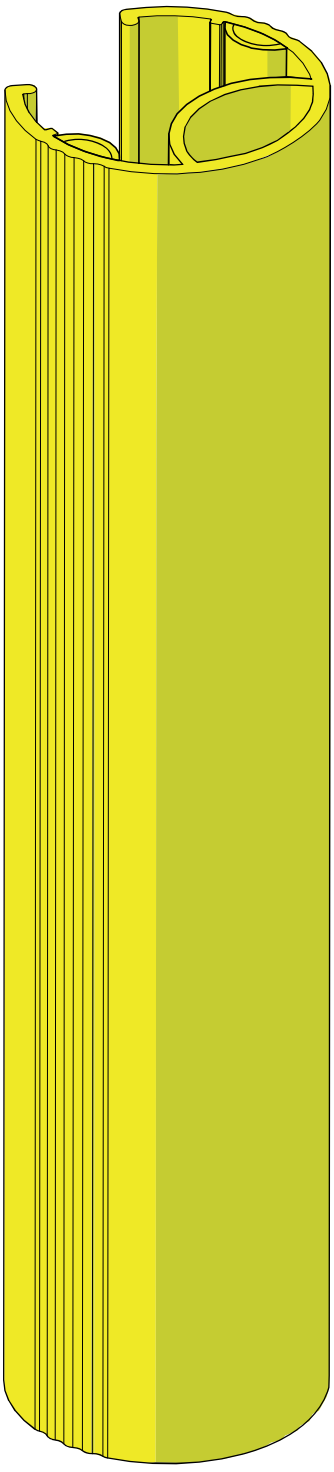



IMPACT TEST PASSED
according to
EN 15512:2009


RPS/RPM/RPL/RPL XL


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

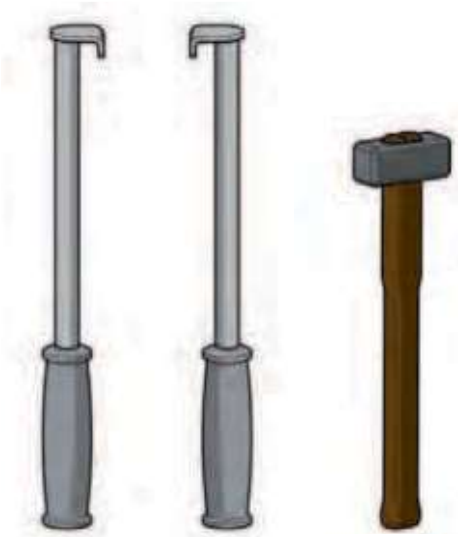


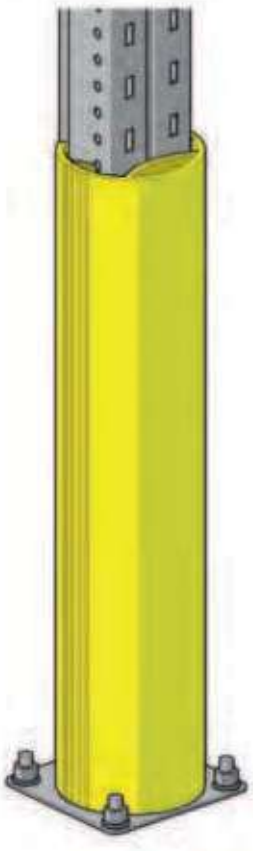

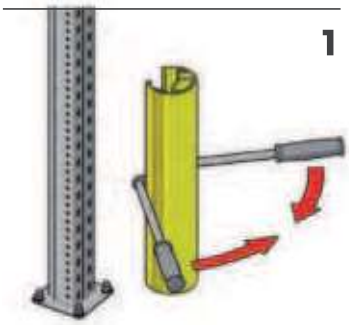

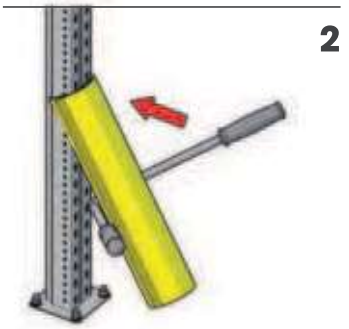

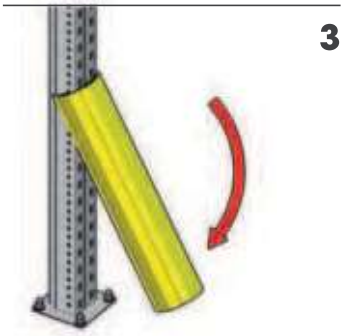


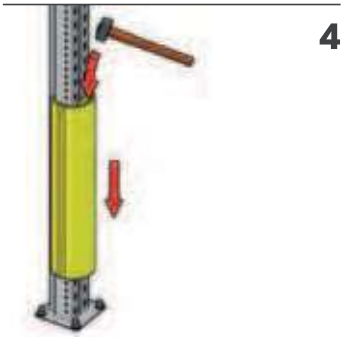

UPRIGHT SIZE LAYOUT

PLEASE **CHECK SIZE** MENTIONED AS "A" AND "B" AND EVENTUALLY "C"
ON YOUR UPRIGHT IN ORDER TO CHOOSE THE RIGHT MODEL OF RACK PROTECTOR.

CUSTOMIZED PROTECTORS AVAILABLE ON REQUEST. SEND DIMENSIONS TO MPM TO GET THE CORRECT RP QUOTATION.

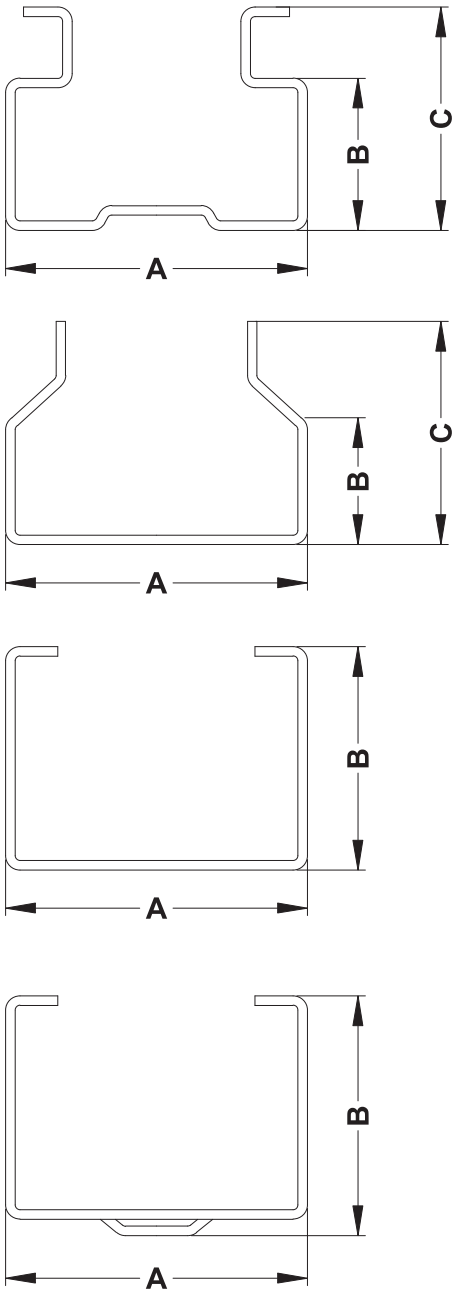


TECHNICAL RACK


PROTEZIONE MONTANTE
RACK PROTECTOR

-30°
RESISTANT TO
LOW TEMPERATURES


TRS

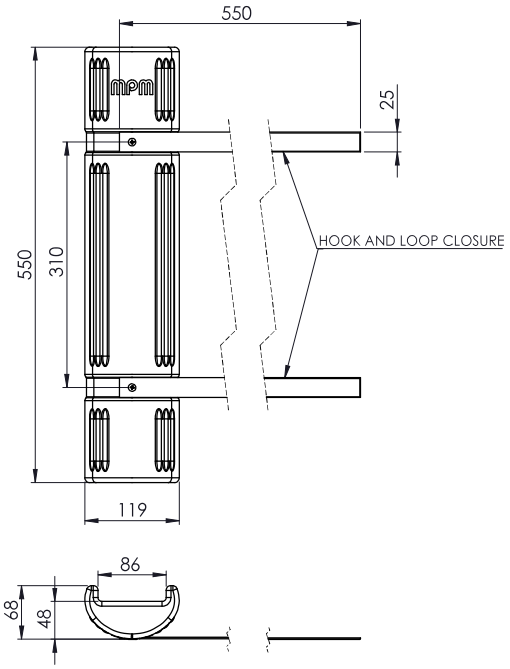


TRL

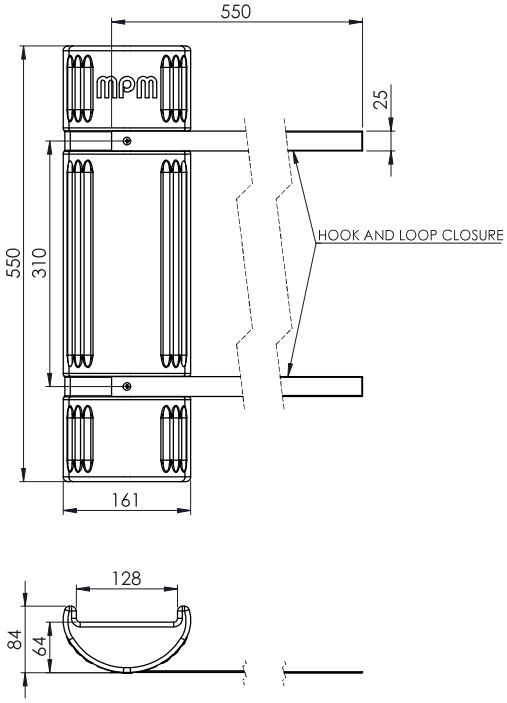


TRM

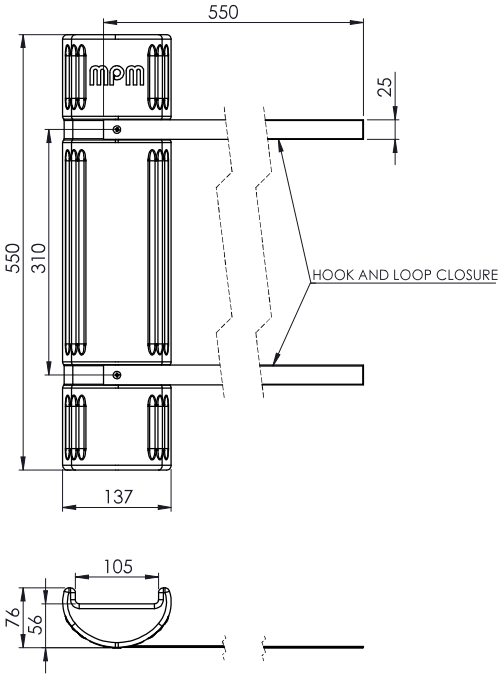


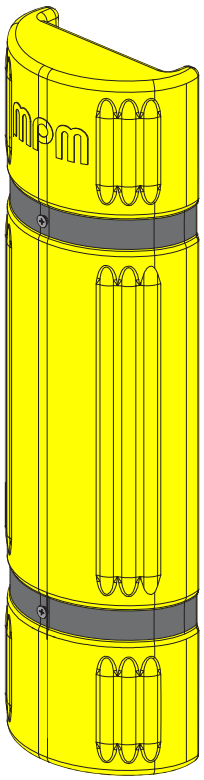



-30°
RESISTANT TO
LOW TEMPERATURES

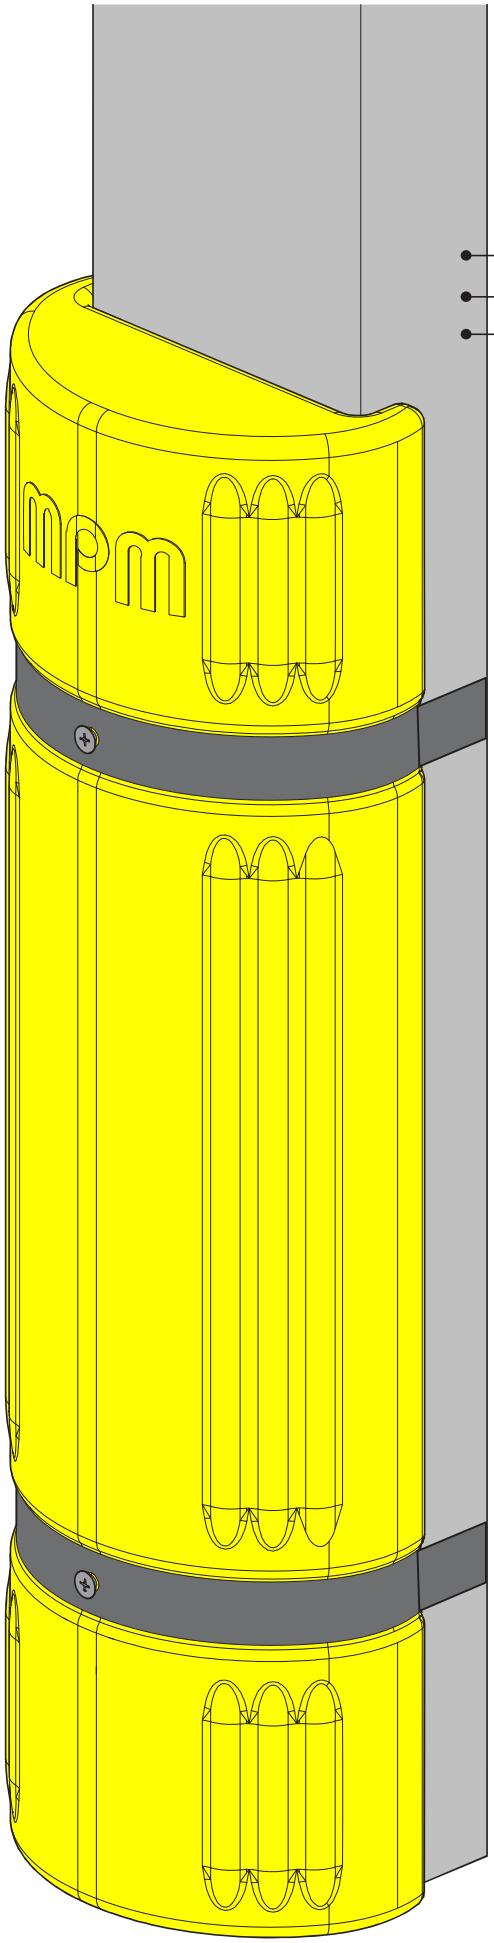

- **TRS**: Front width from 60mm to 85mm.
- **TRM**: Front width from 86mm to 102mm.
- **TRL**: Front width from 103mm to 125mm.

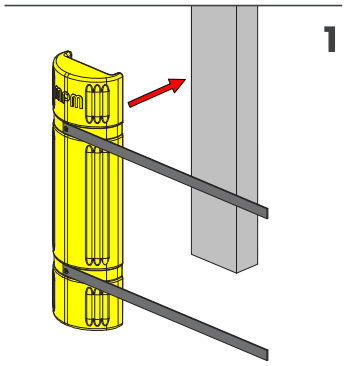

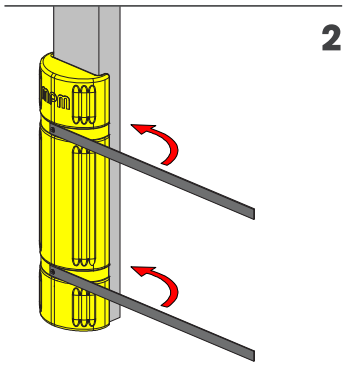


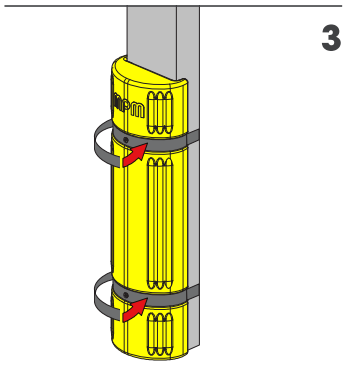


RACK CORNER


PROTEZIONE ANGOLO SCAFFALE
RACK CORNER

IMPACT TEST PASSED
according to
EN 15512:2009

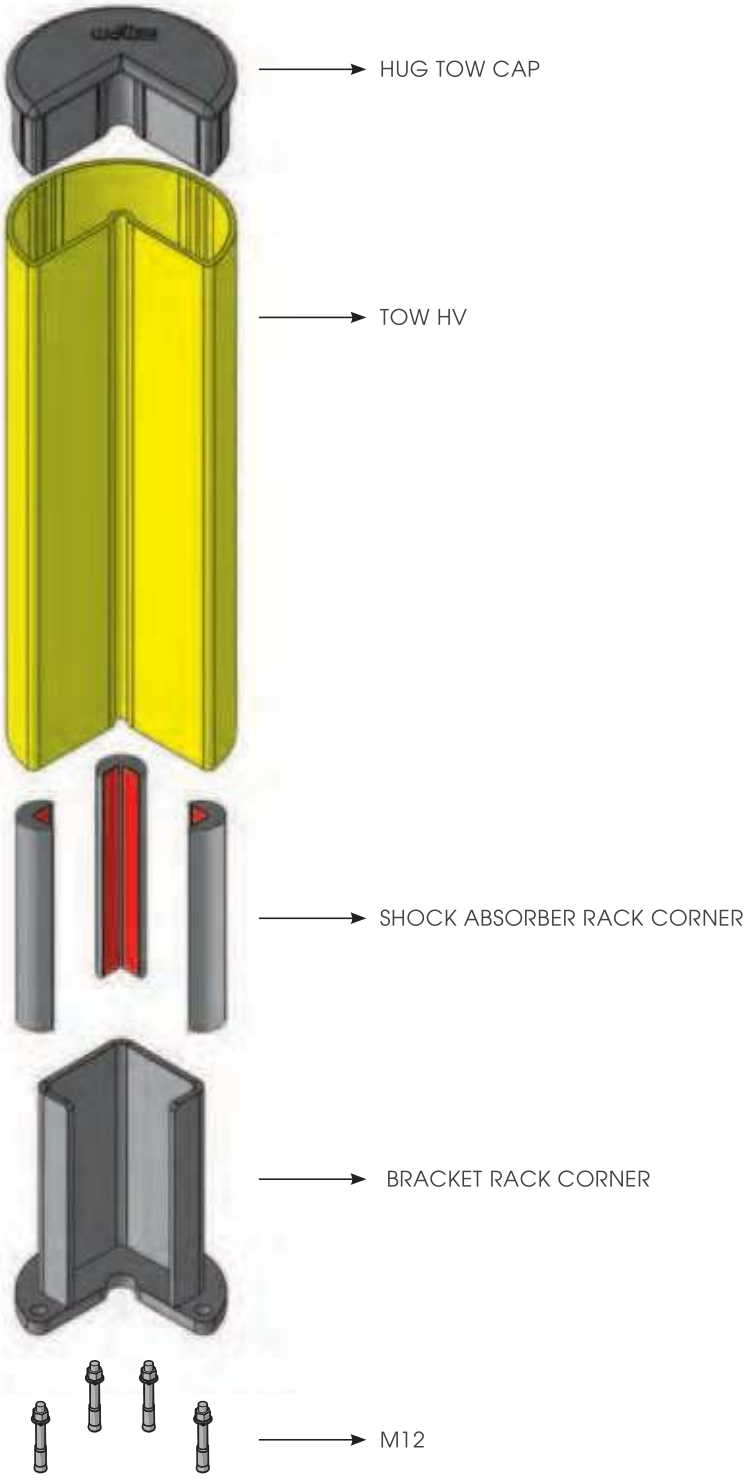

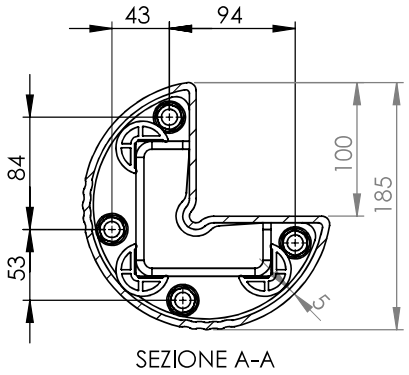


SEZIONE A-A

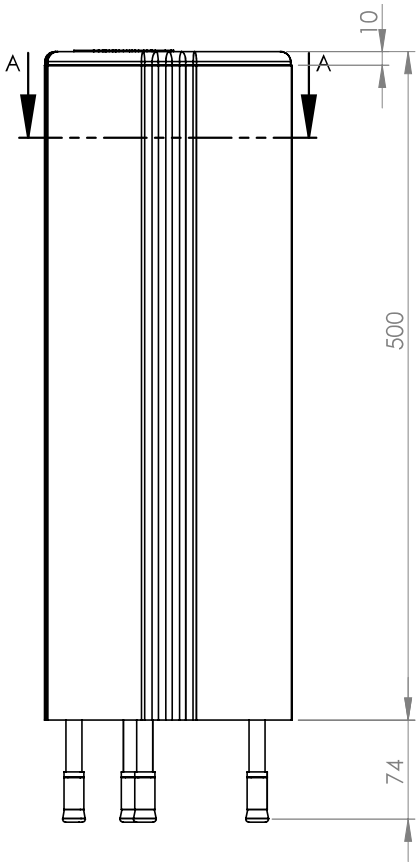


RACK CORNER


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

ONLY WITH MECHANICAL ANCHOR M12

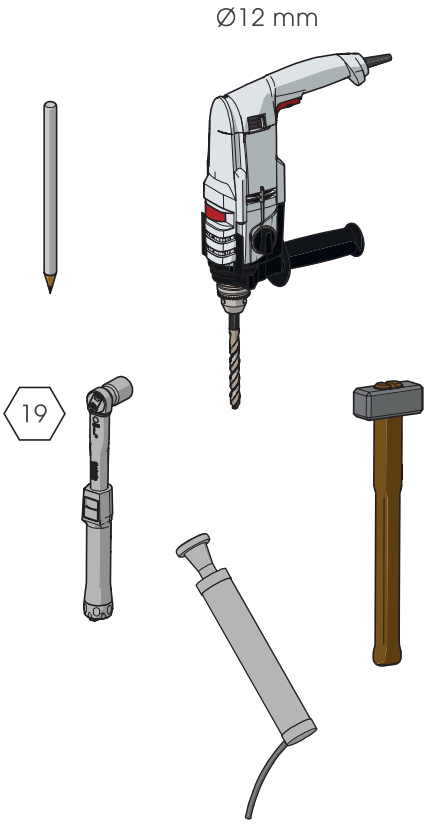


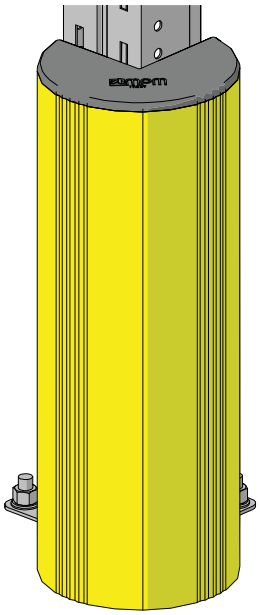


1

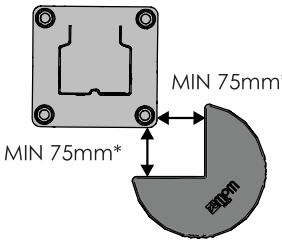


2

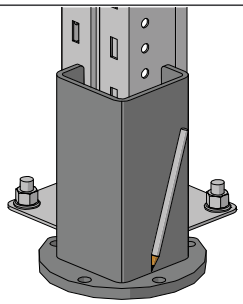


3

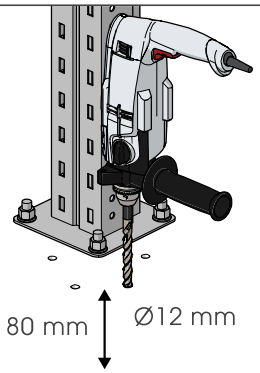


4

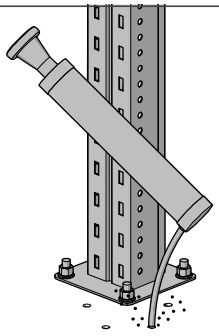


5

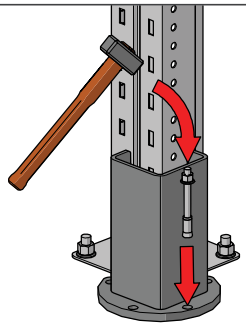


6

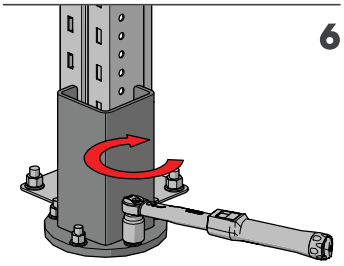

7

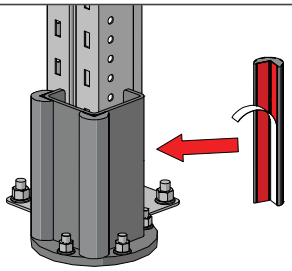


8





SM

GUARD RAIL A DOPPIA BARRIERA
DOUBLE RAIL BARRIER

LIGHT LOAD / FOR HAND PALLET TRUCKS

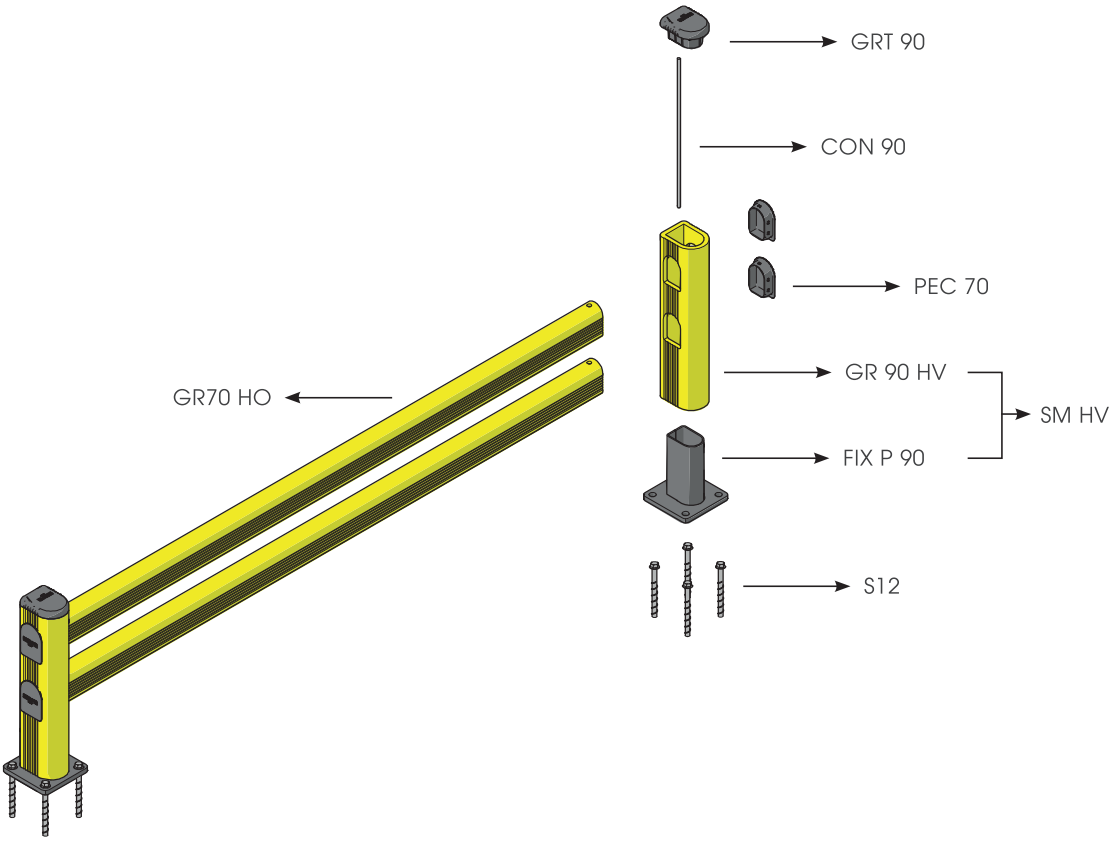

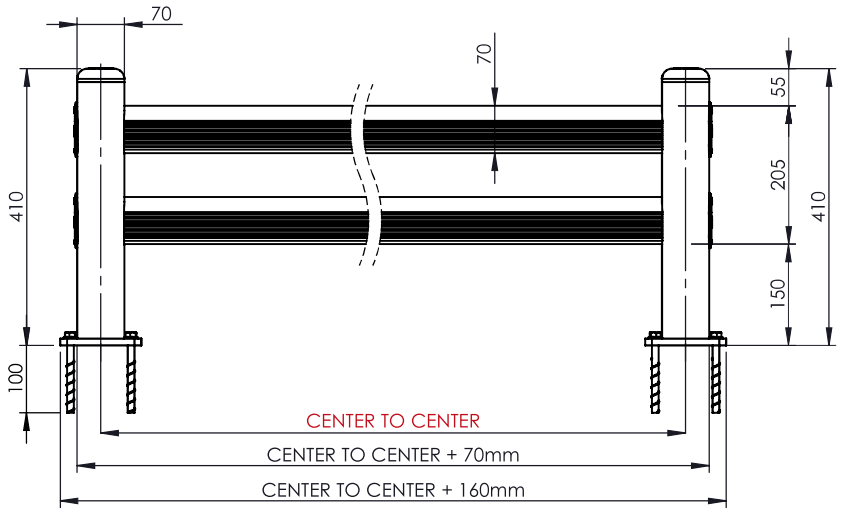

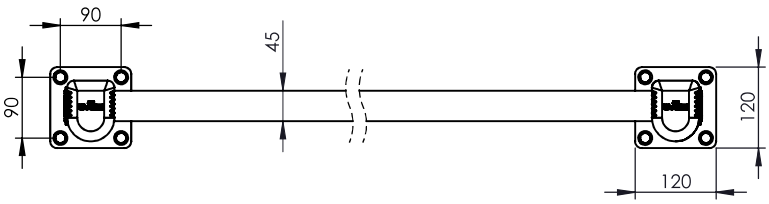



LM


GUARD RAIL A DOPPIA BARRIERA
DOUBLE RAIL BARRIER

IMPACT TEST PASSED
according to
EN 15512:2009

HEAVY LOAD / FOR FORKLIFTS

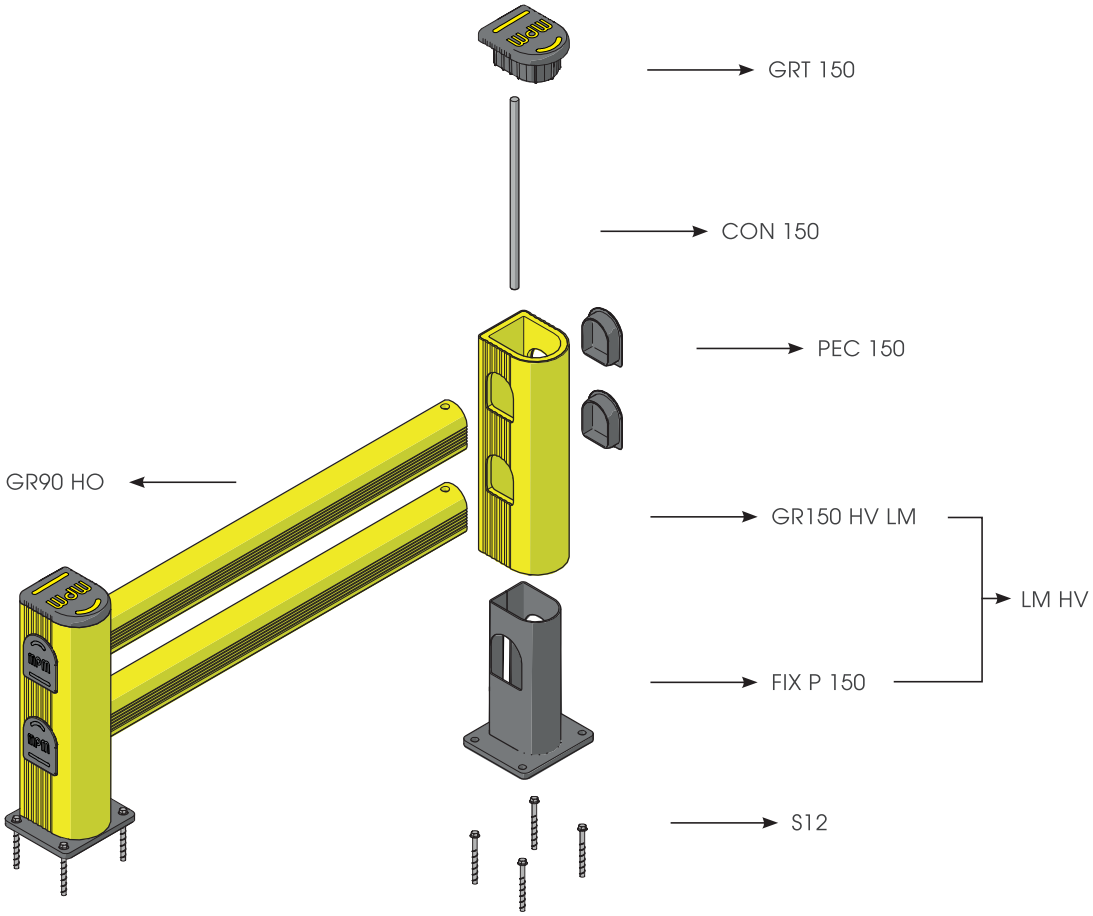


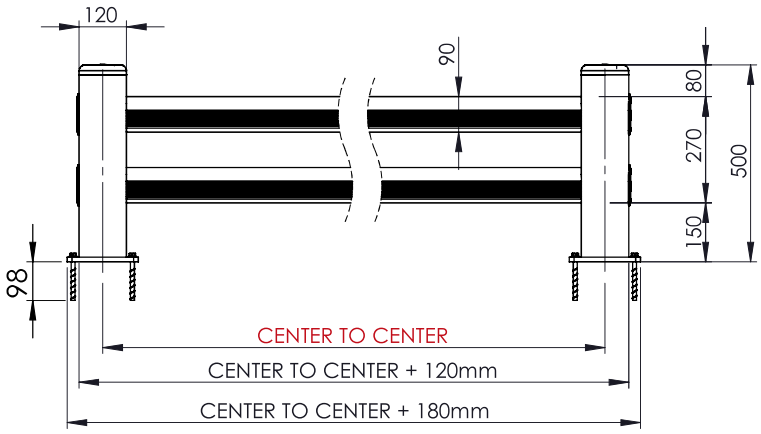


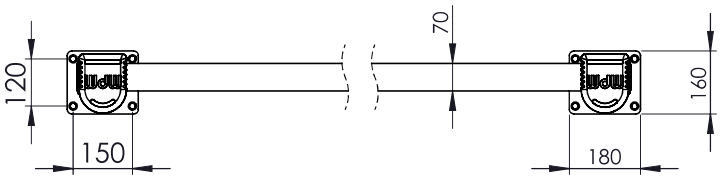



SM/LM


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

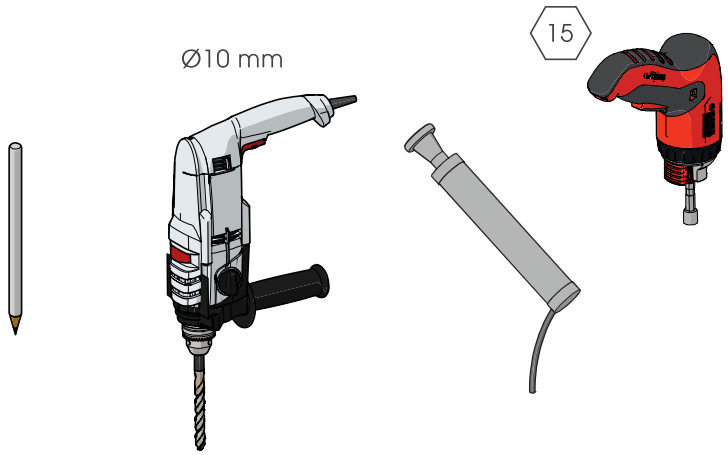


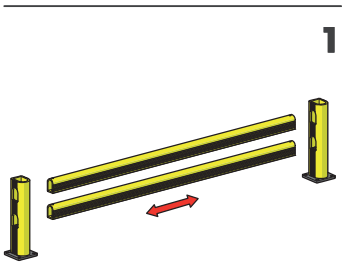

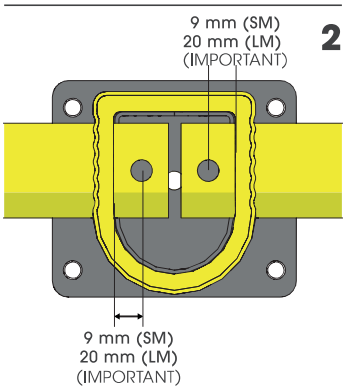

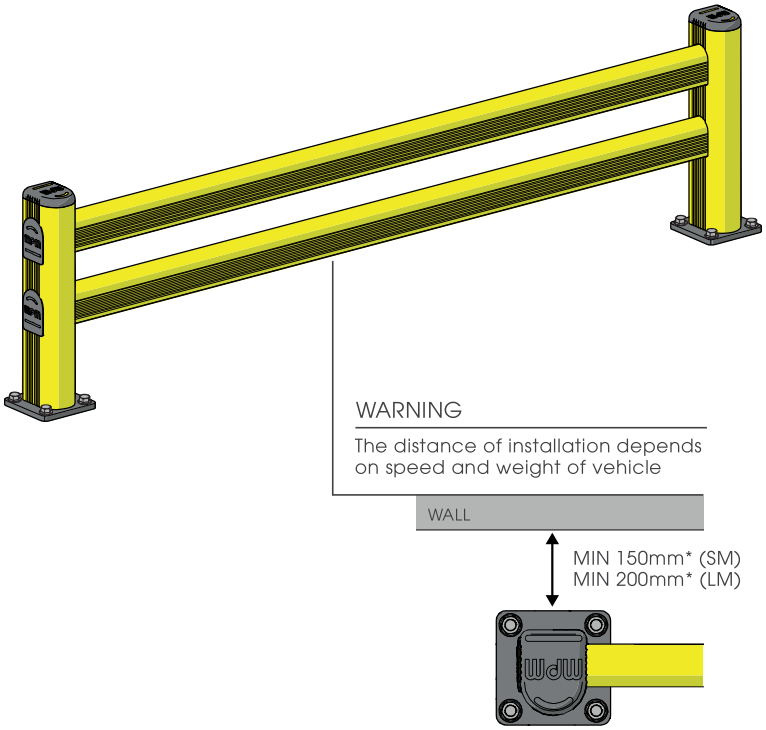

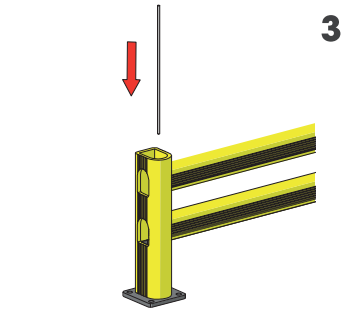


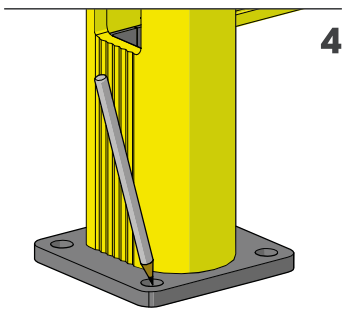


SM/LM

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

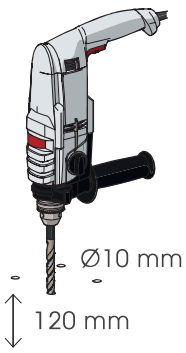


6

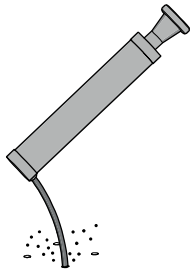


7

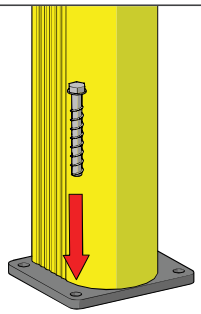


8

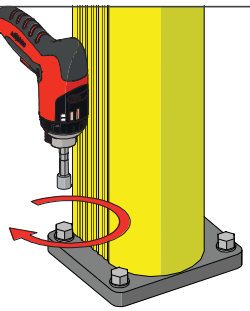

9

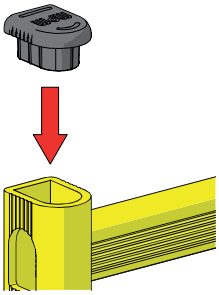


10

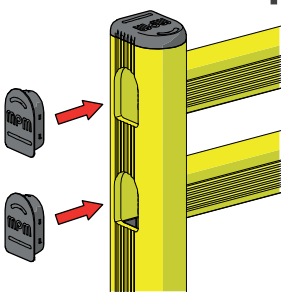



LINK SINGLE

GUARD RAIL A SINGOLA BARRIERA REGOLABILE
ADJUSTABLE SINGLE RAIL BARRIER

HEAVY LOAD / FOR FORKLIFTS

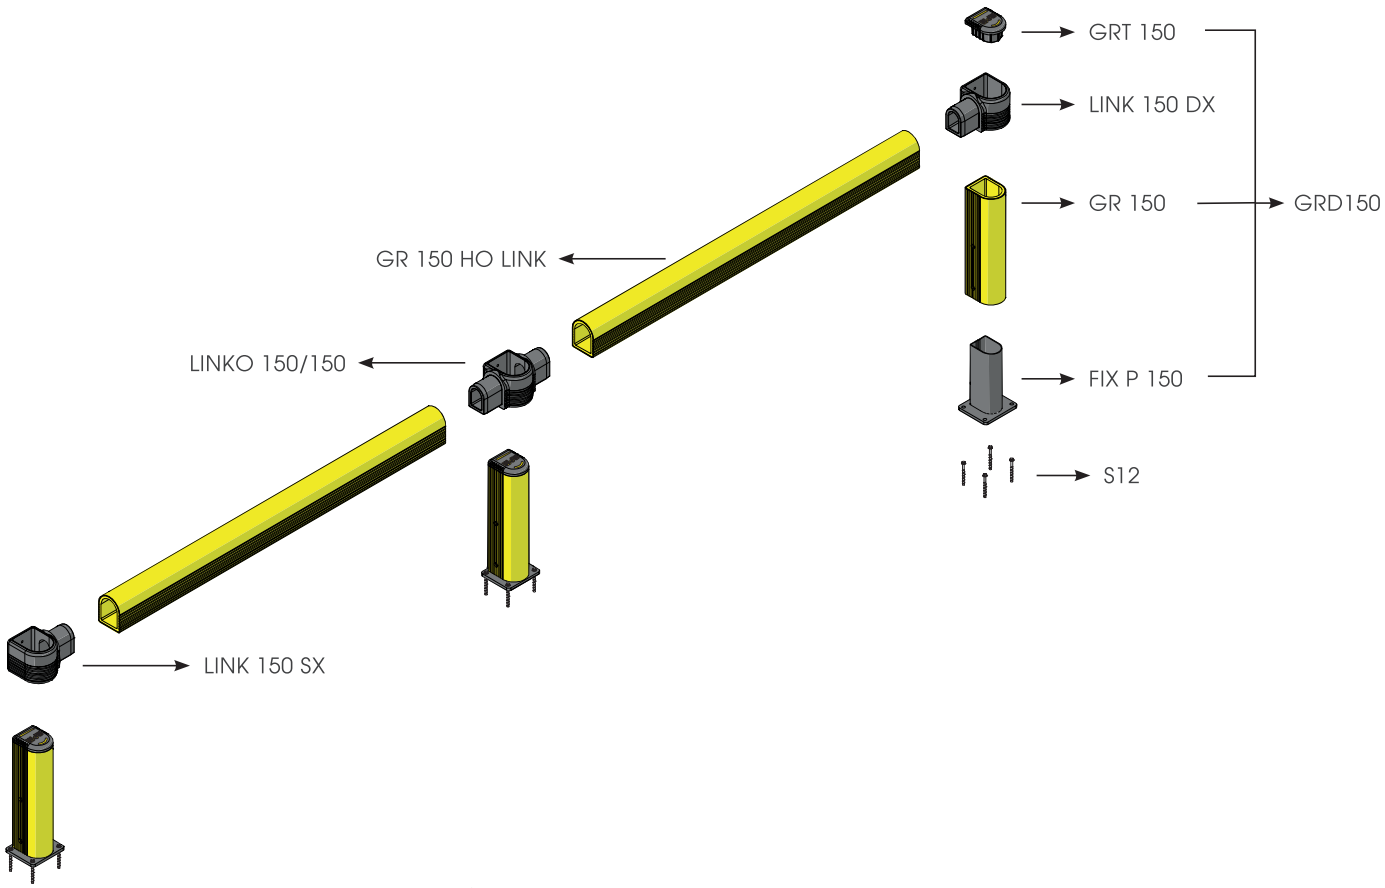

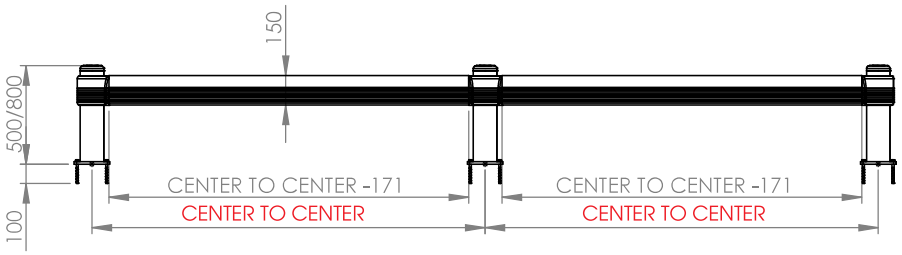


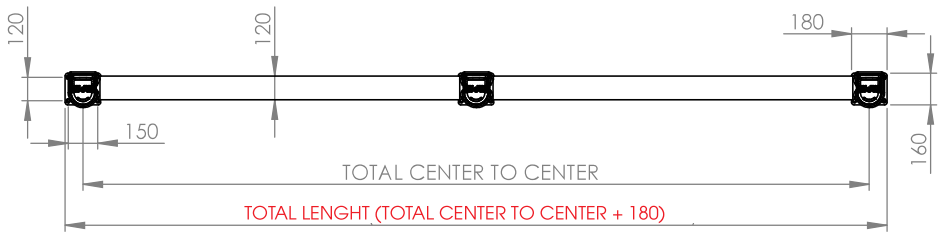


LINK SINGLE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

LINK CORNER

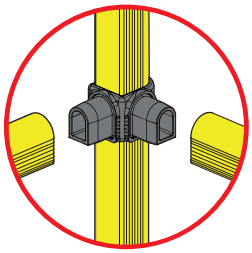


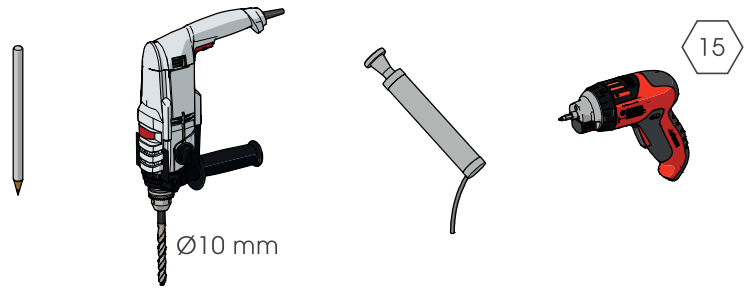


WARNING

The distance of installation depends on speed and weight of vehicle


1

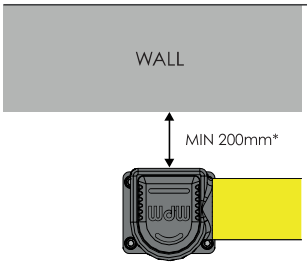


2

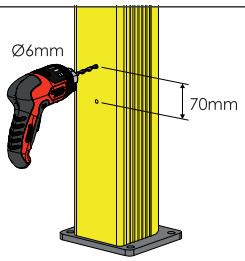


3



4

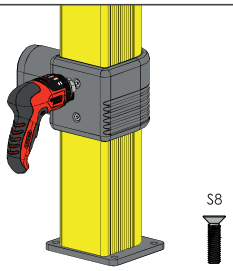


5

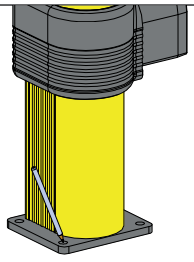


6




7

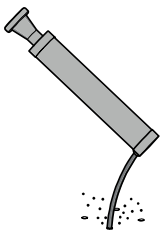

8

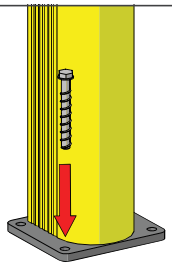


9

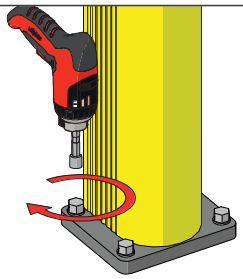


LINK SINGLE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


10

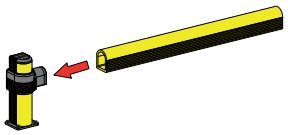


11

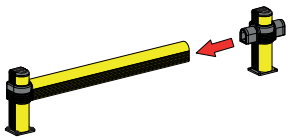


12

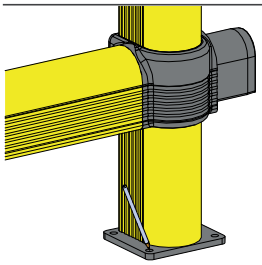


13

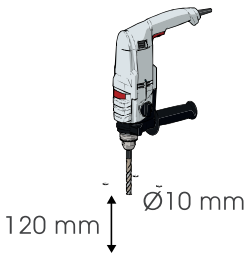


14

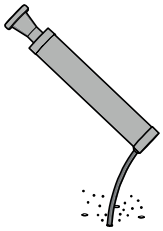


15

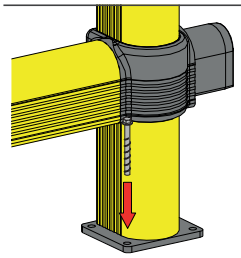


16

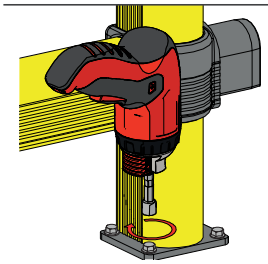


17

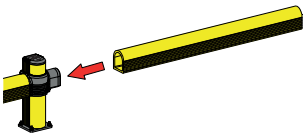


18

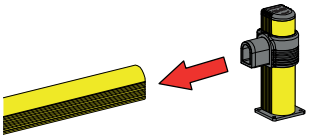


19

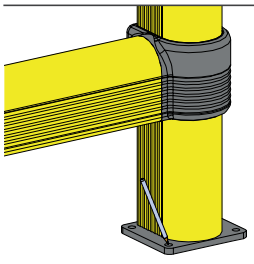


20

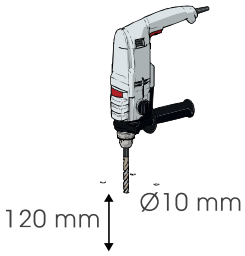


21

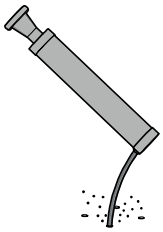

22

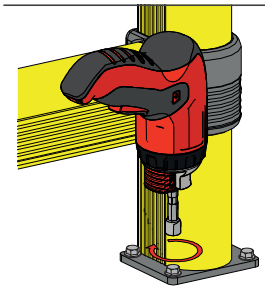


23

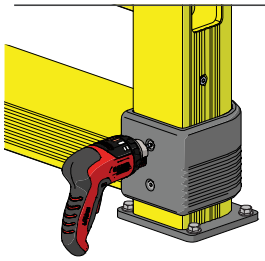



LM/1 LINK

BARRIERA DI SICUREZZA
SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

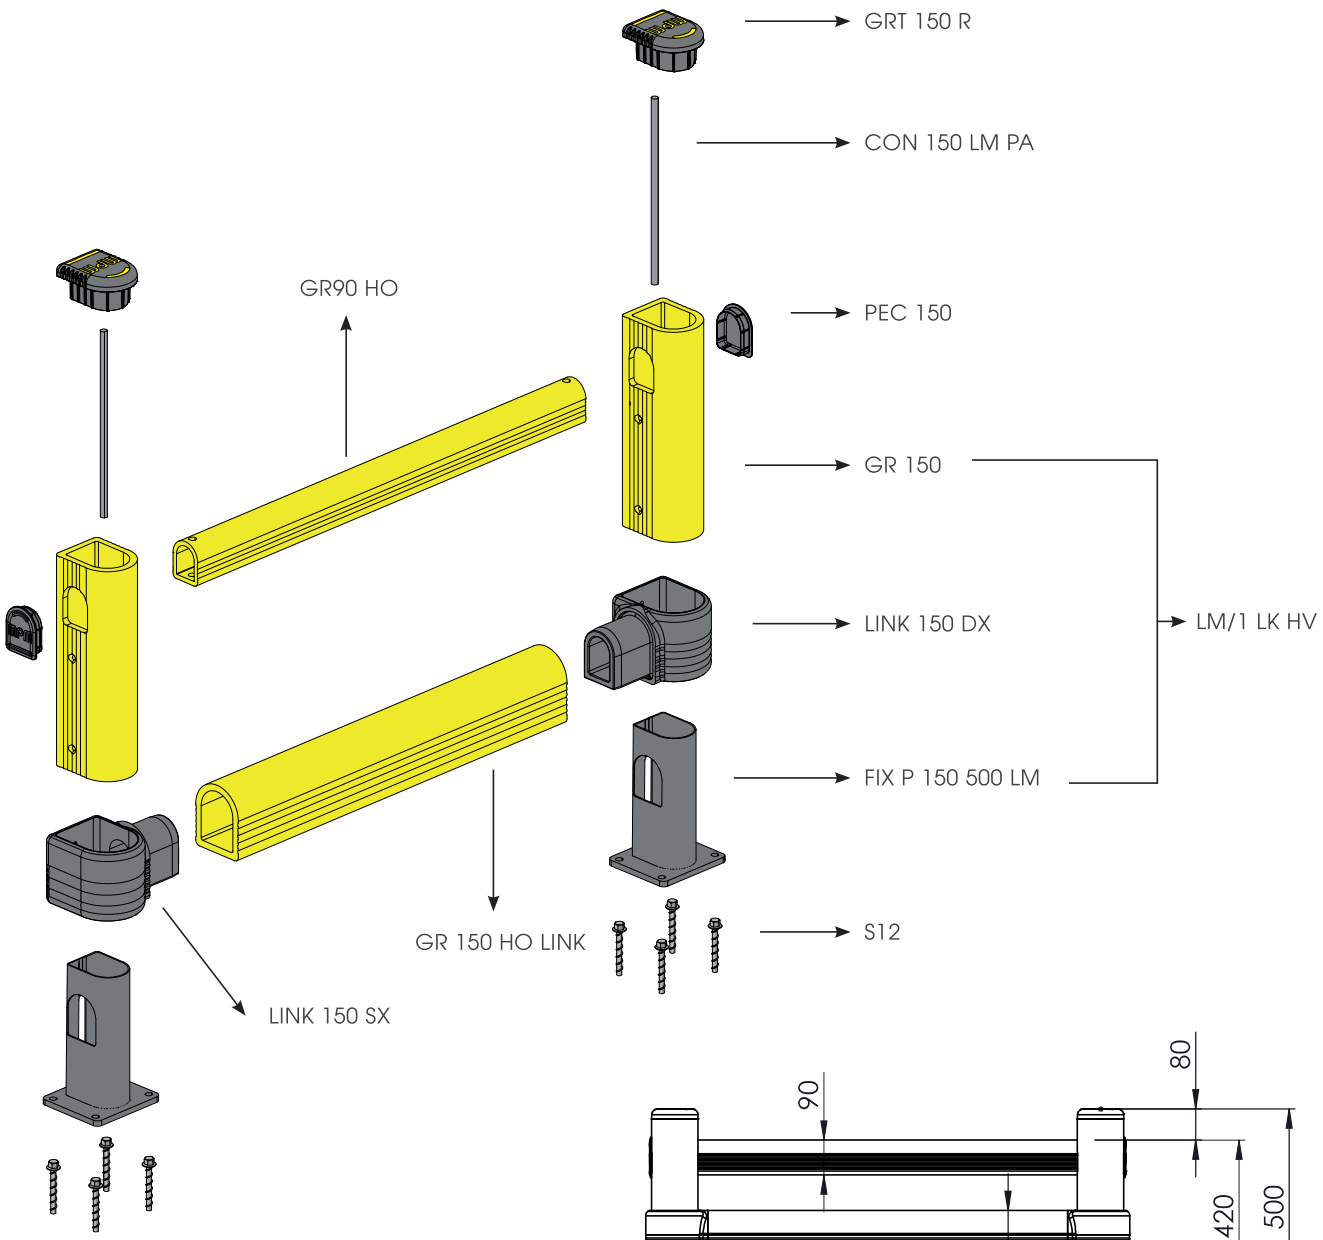


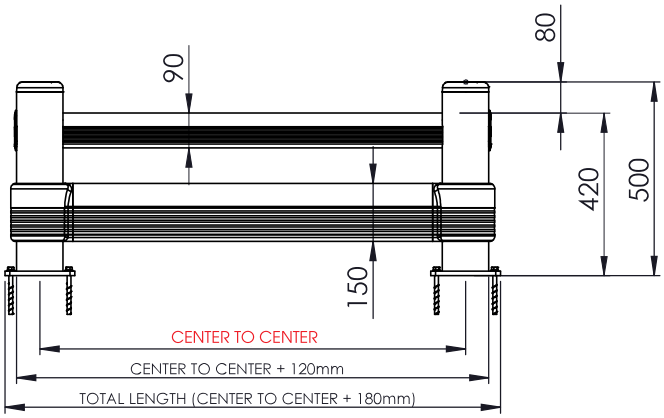


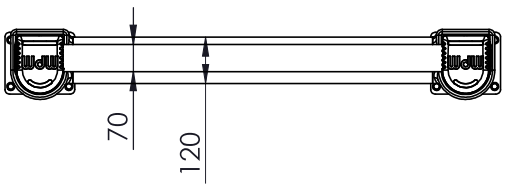


LM/1 LINK

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

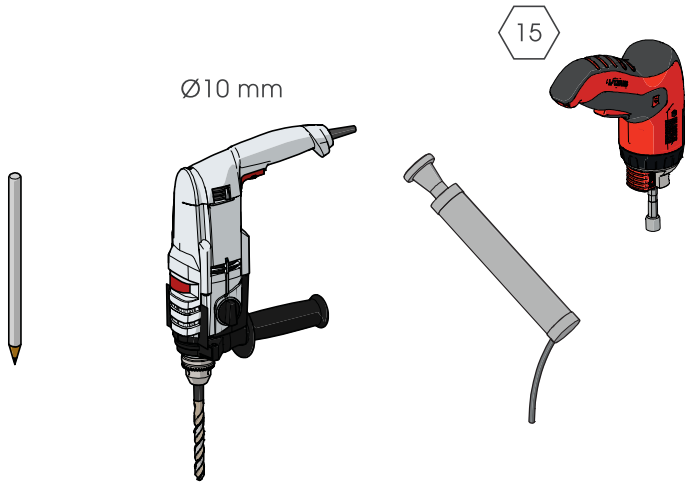


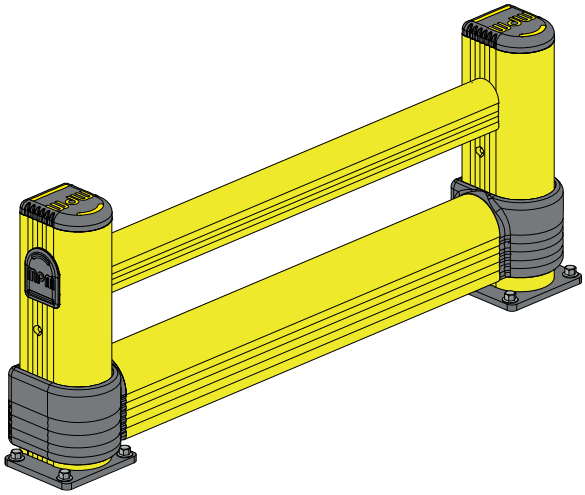


1

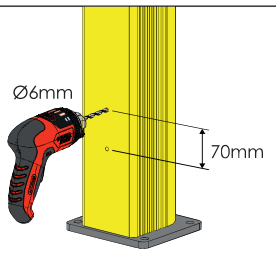


2



3

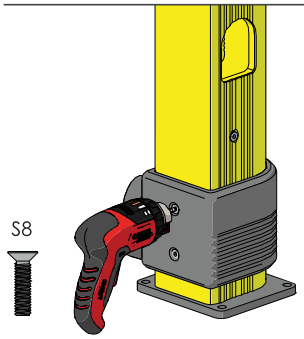


4

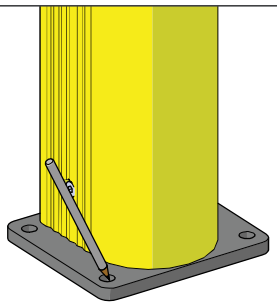

WARNING


The distance of installation depends on speed and weight of vehicle

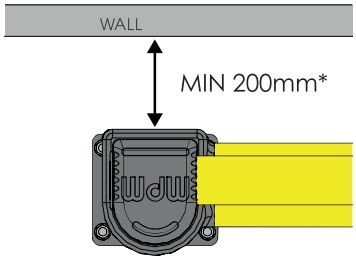


LM/1 LINK

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

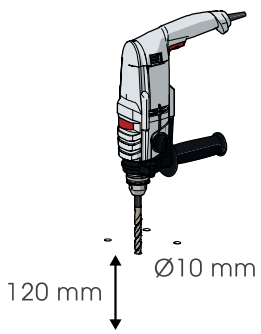


6

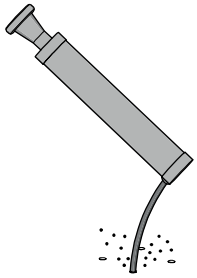


7

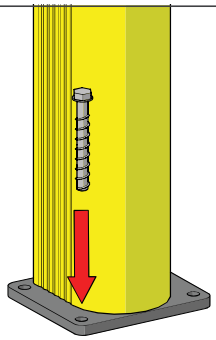


8

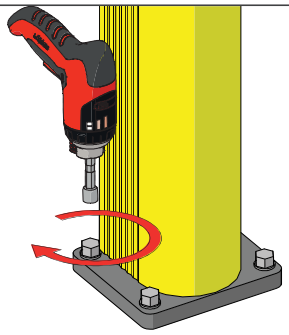


9

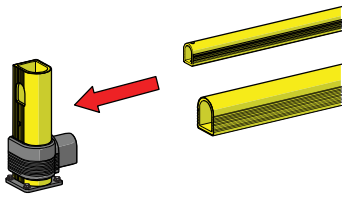


10

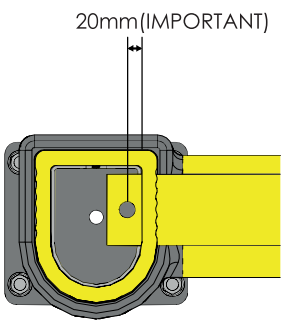


11

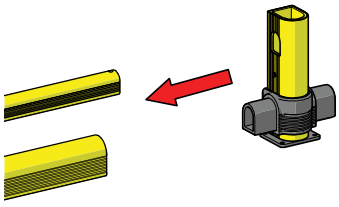


12

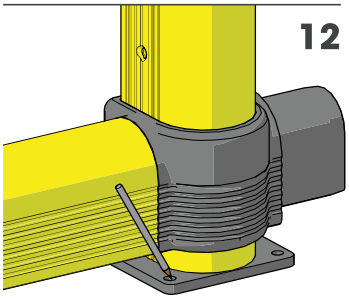


13

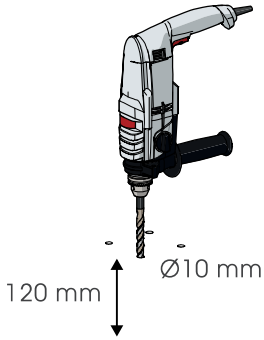


14

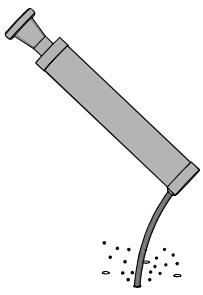

15

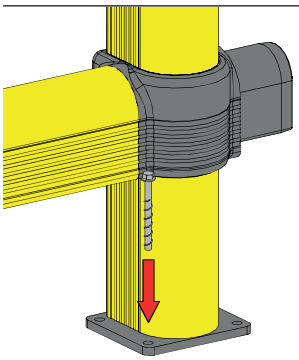


16

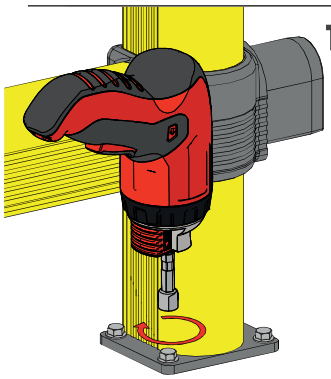


LM/1 LINK

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


17

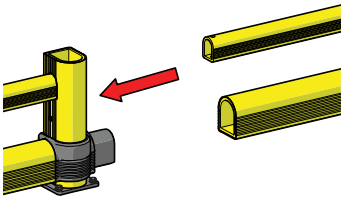


18

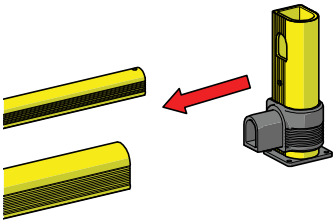


19

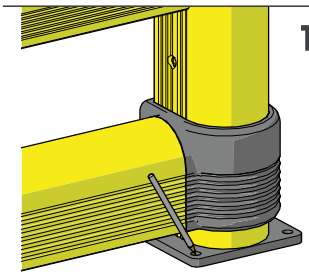


20

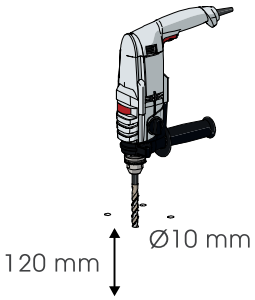


21

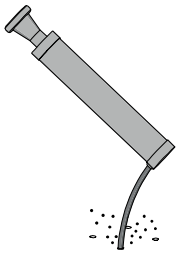


22

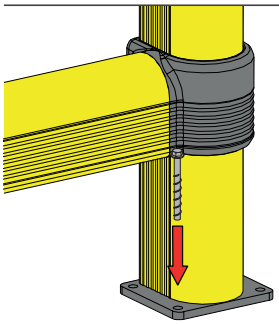


23

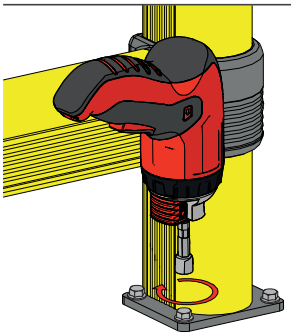


24

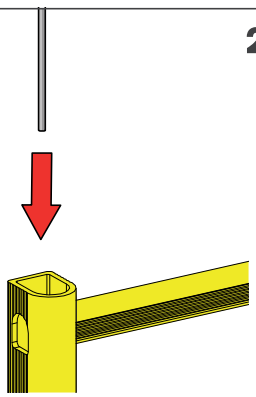

25

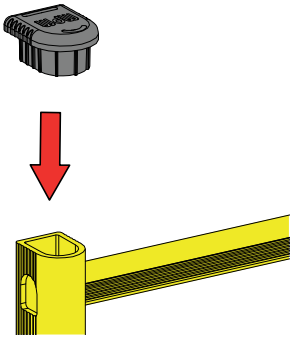


26

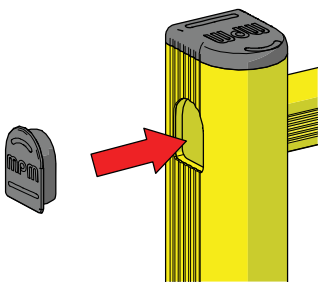


LINK LM

GUARD RAIL A DOPPIA BARRIERA REGOLABILE
ADJUSTABLE DOUBLE RAIL BARRIER

HEAVY LOAD / FOR FORKLIFTS

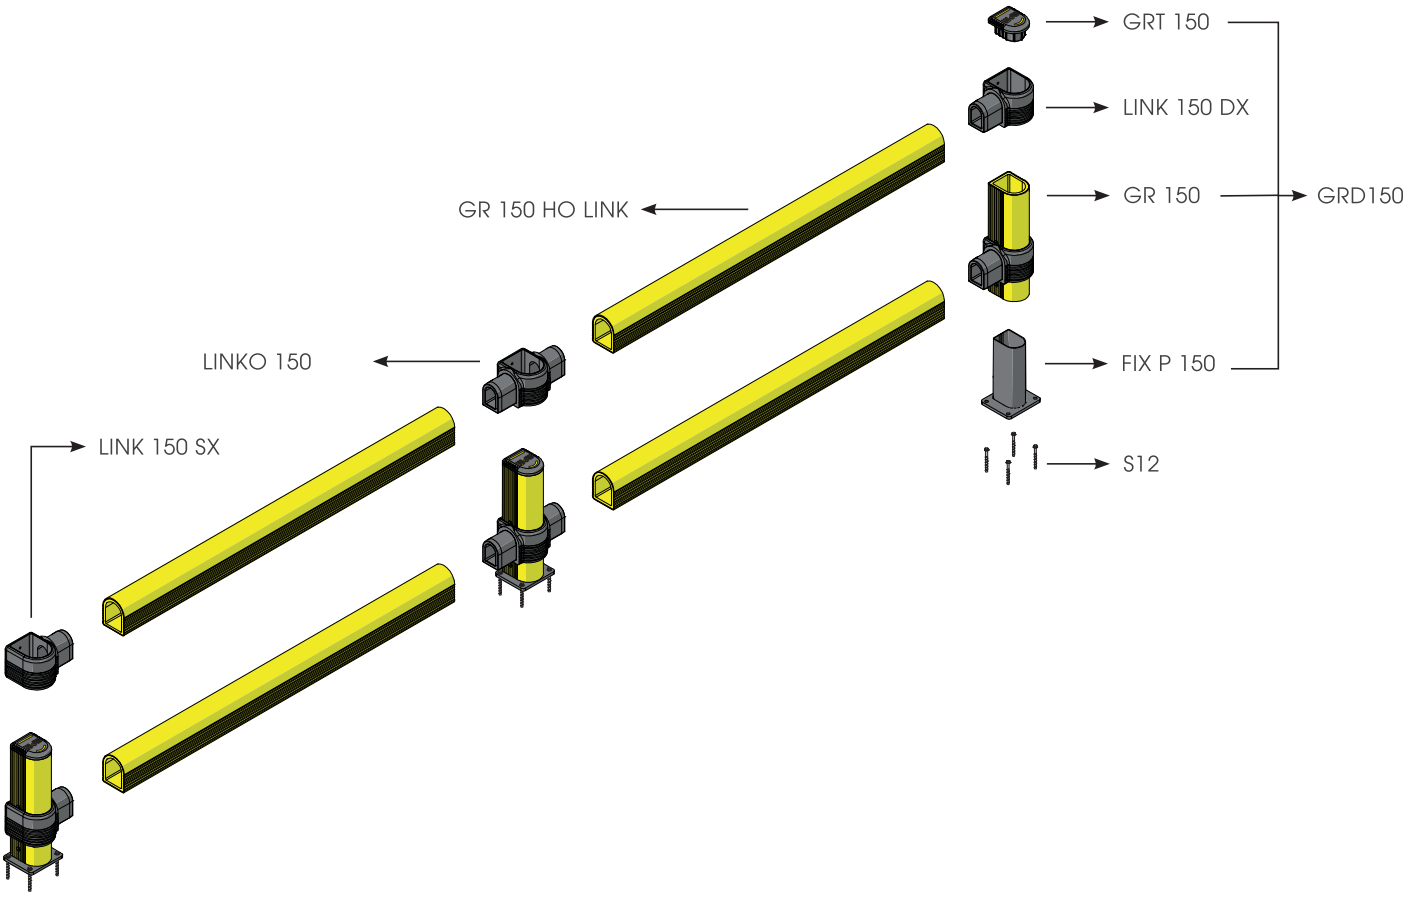


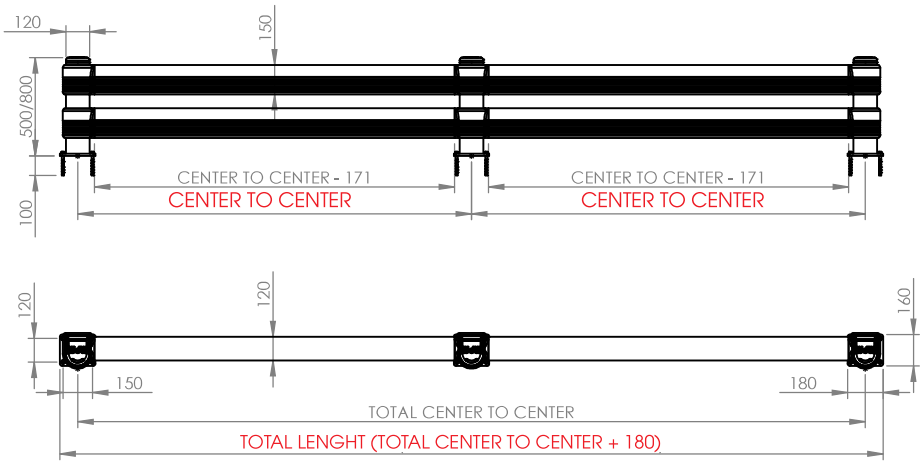



LINK LM


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

LINK CORNER

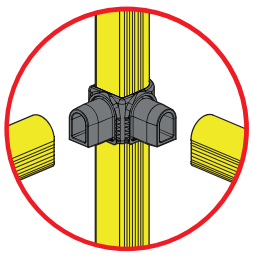

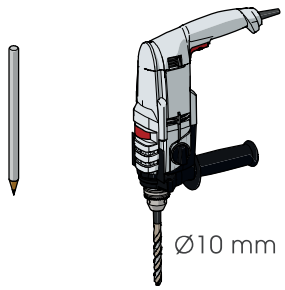

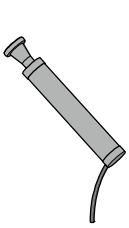


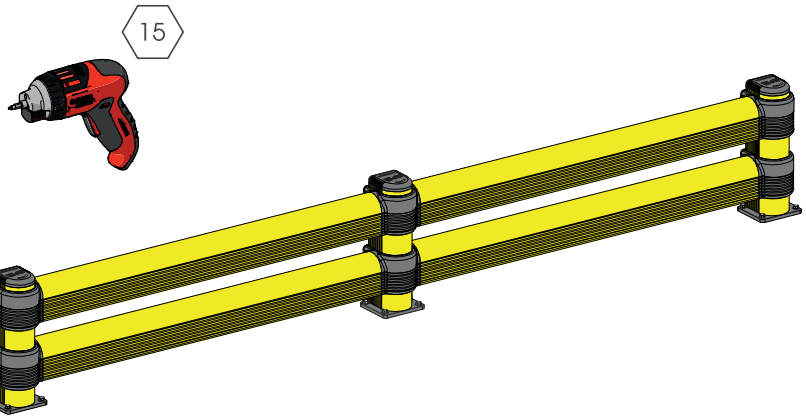


WARNING

The distance of installation depends on speed and weight of vehicle


1

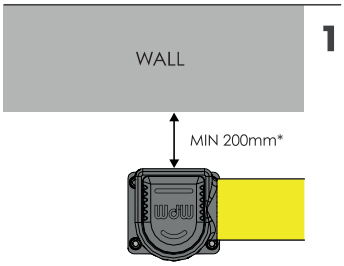


2

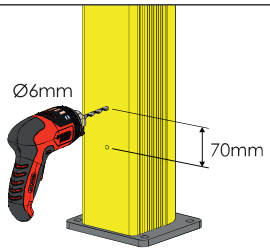


3




4

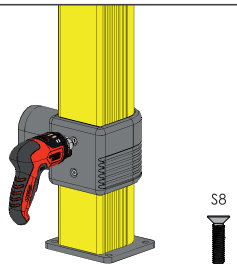


5

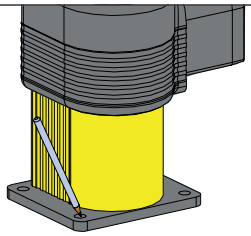


6

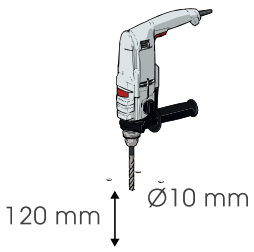


7

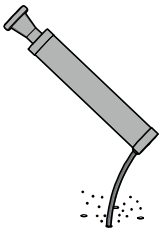

8

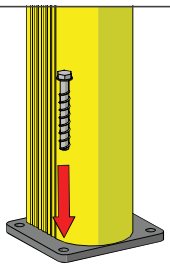


9

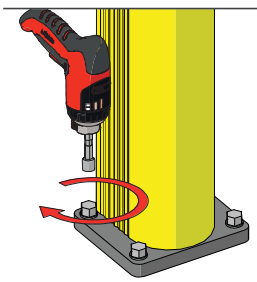


LINK LM

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


10

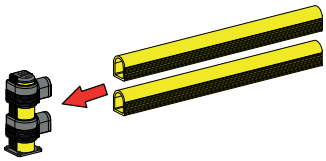

11

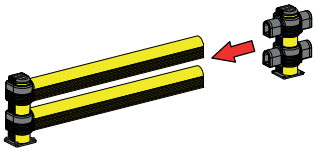


12

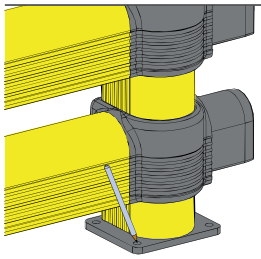


13




14

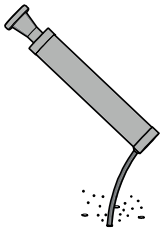


15

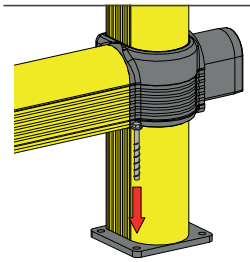


16

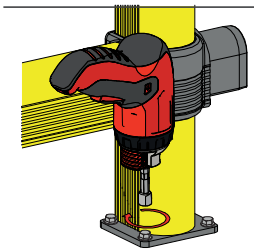


17

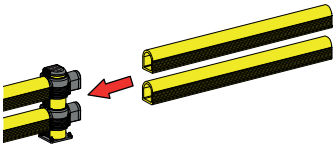


18

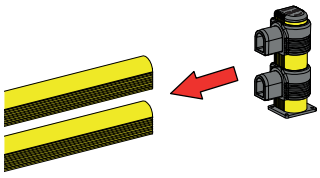


19

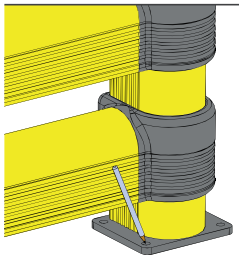


20

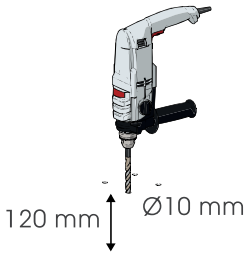


21

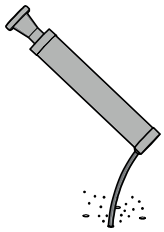

22

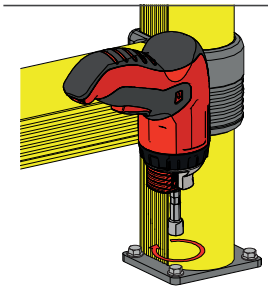


23

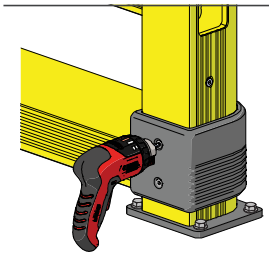



FENCE 90

BARRIERE DI PROTEZIONE PER SCAFFALI
RACK END BARRIER

LIGHT LOAD / FOR HAND PALLET TRUCKS

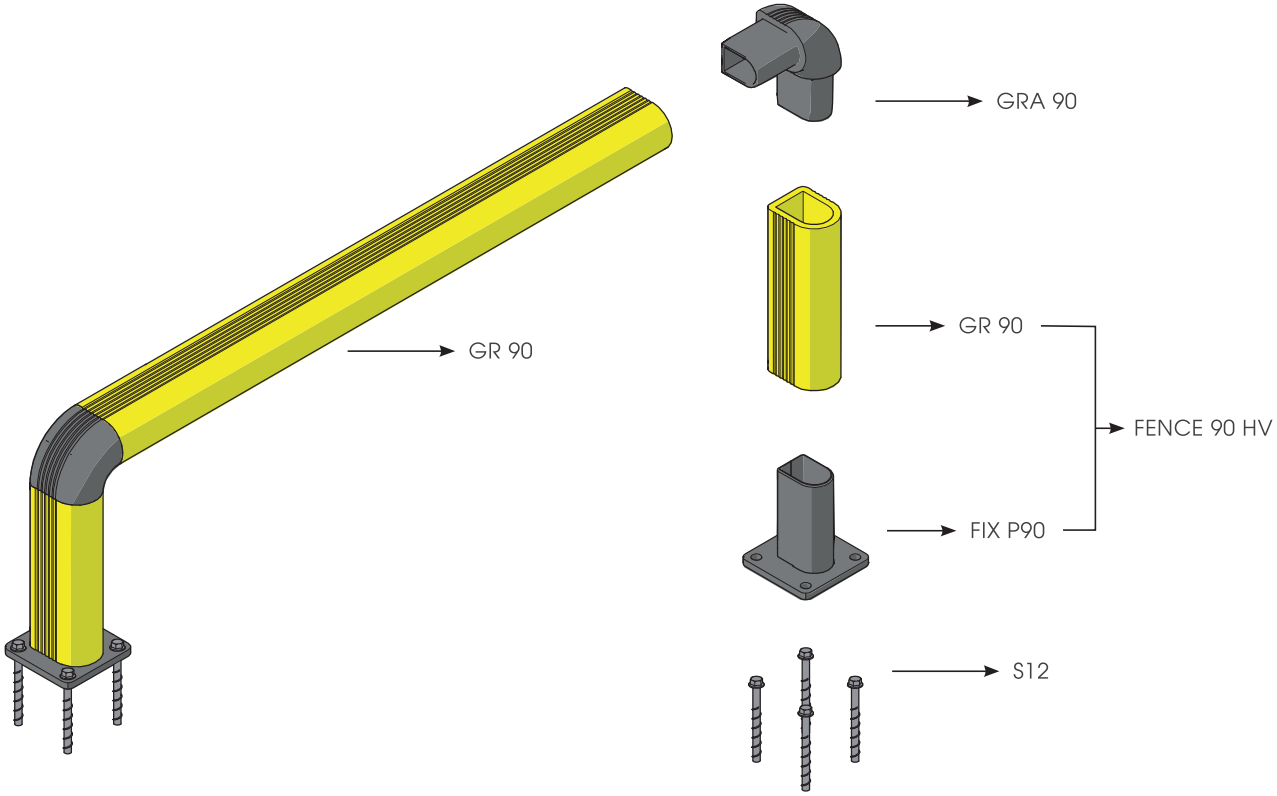

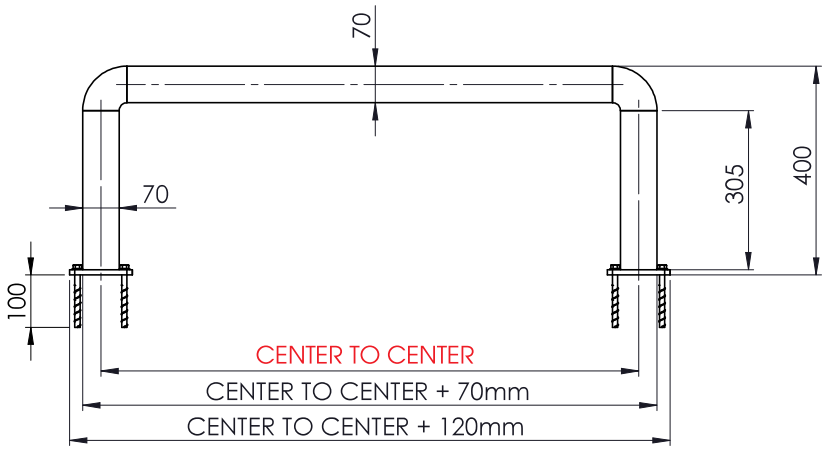


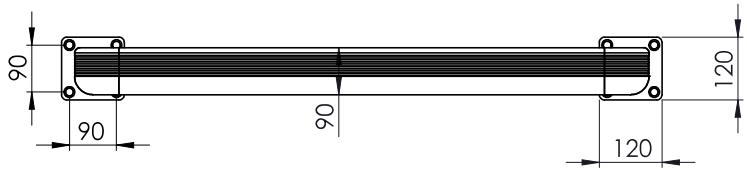


FENCE 150

BARRIERE DI PROTEZIONE PER SCAFFALI
RACK END BARRIER


HEAVY LOAD / FOR FORKLIFTS

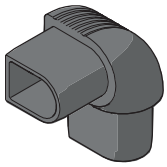


GRA 150

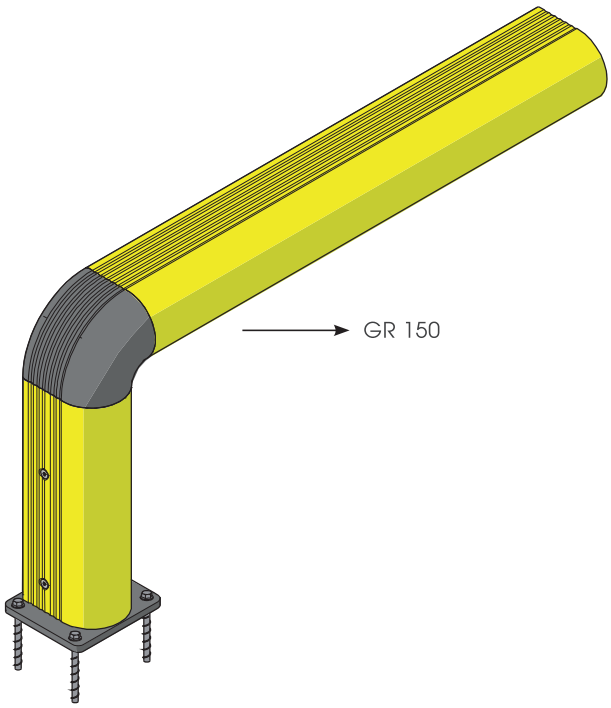

GR 150

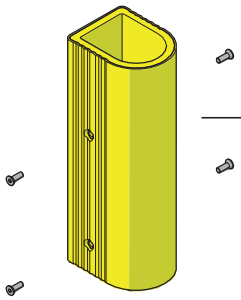


GR 150

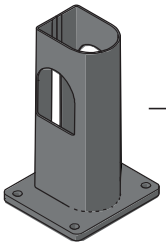


FIX P150



S12

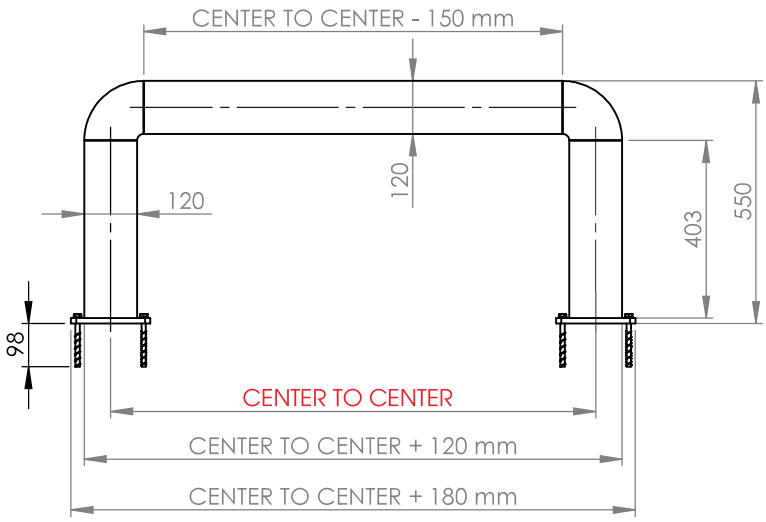


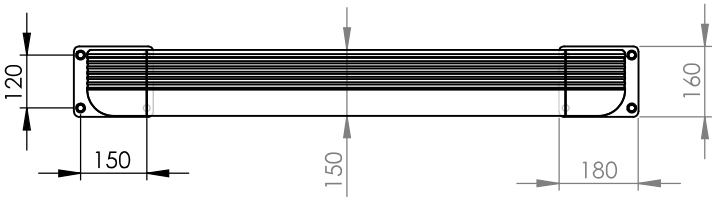



FENCE 150 REINFORCED

BARRIERE DI PROTEZIONE PER SCAFFALI
RACK END BARRIER

HEAVY LOAD / FOR FORKLIFTS

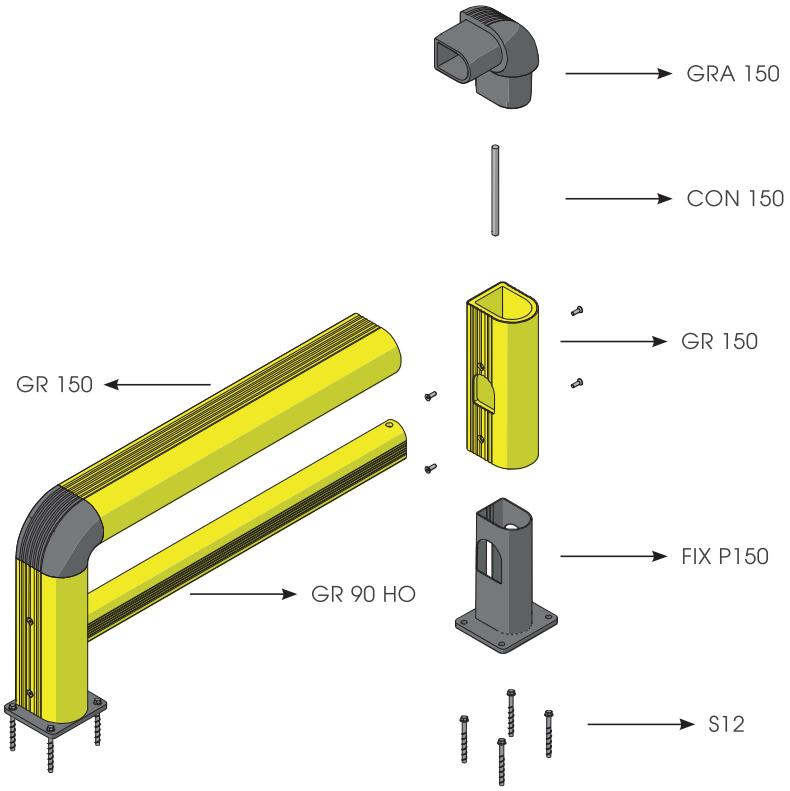

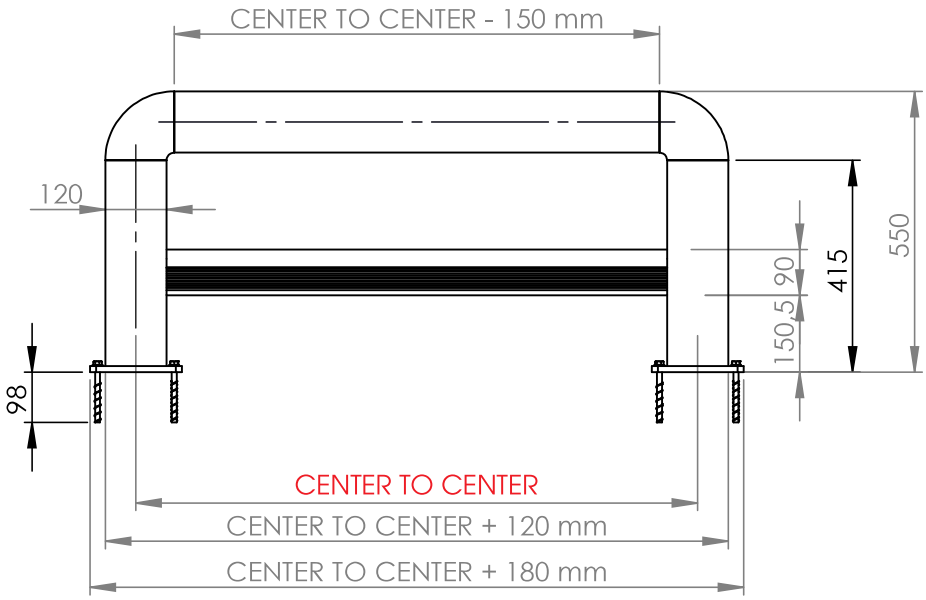


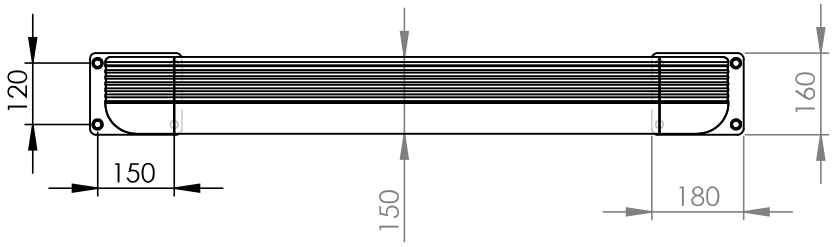

FENCE 90/150/150 REINF.


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




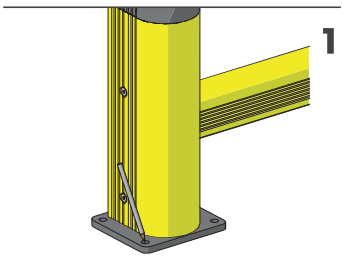






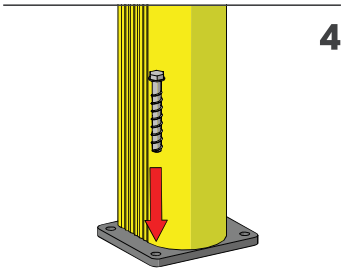

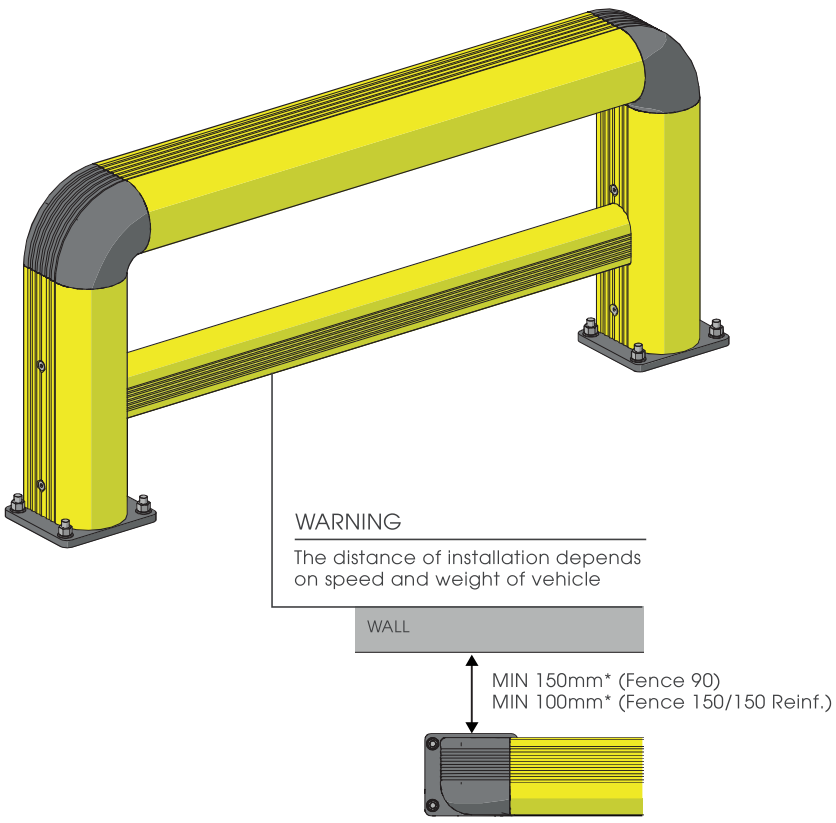


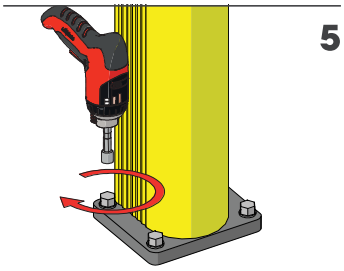


FENCE 150 LINK

BARRIERE DI PROTEZIONE PER SCAFFALI
RACK END BARRIER


HEAVY LOAD / FOR FORKLIFTS

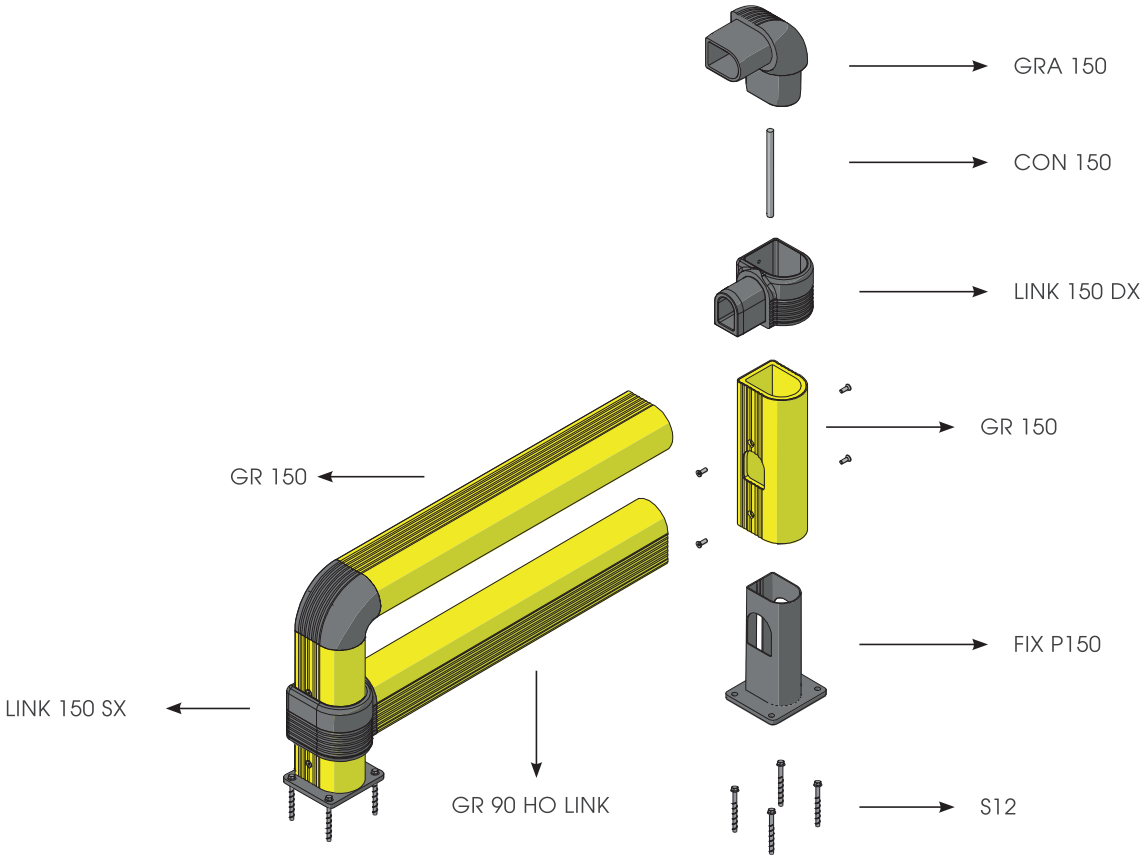


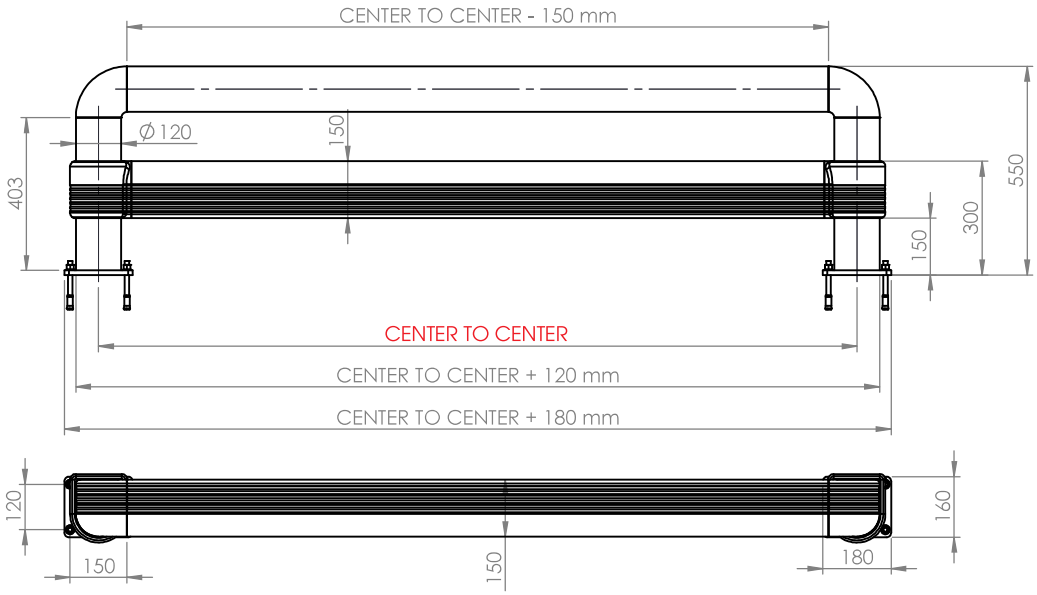


FENCE 150 LINK

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

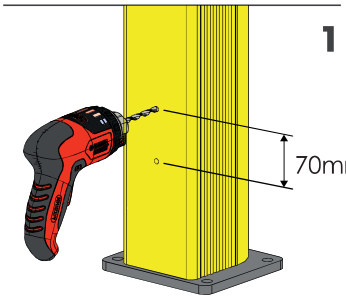

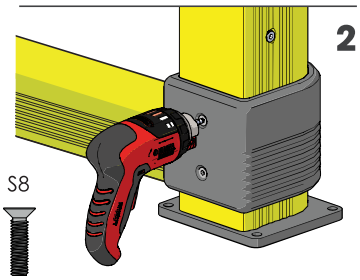


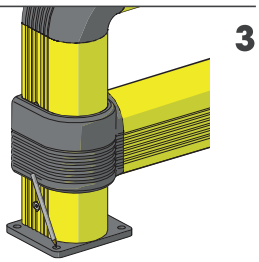









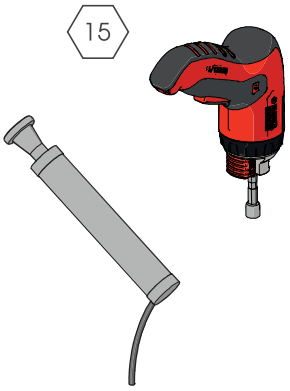


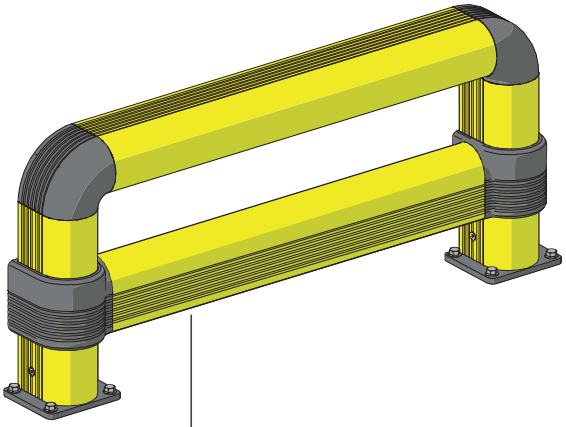


WARNING

The distance of installation depends on speed and weight of vehicle

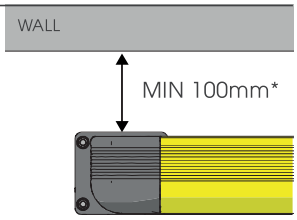

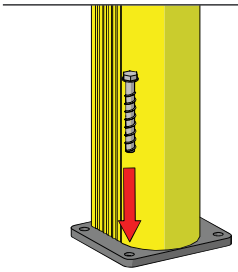


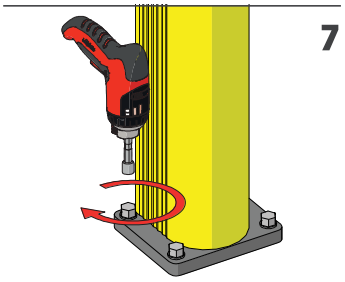



BFLEX.FRONT/1

BARRIERA SINGOLA FRONTALE - RACK END MODULO SINGOLO
FRONTAL SINGLE RACK END BARRIER

HEAVY LOAD / FOR FORKLIFTS

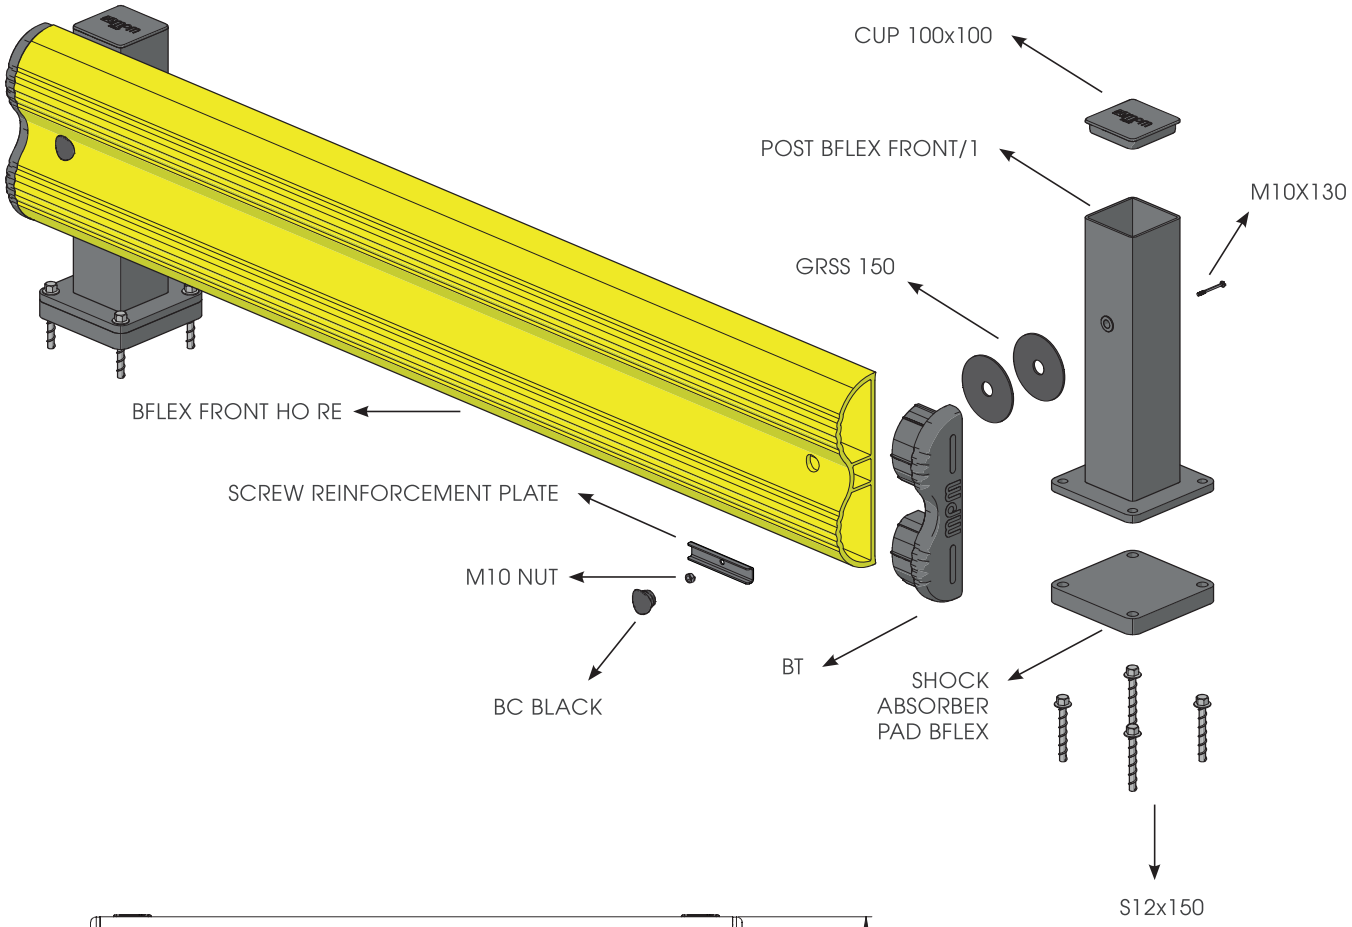


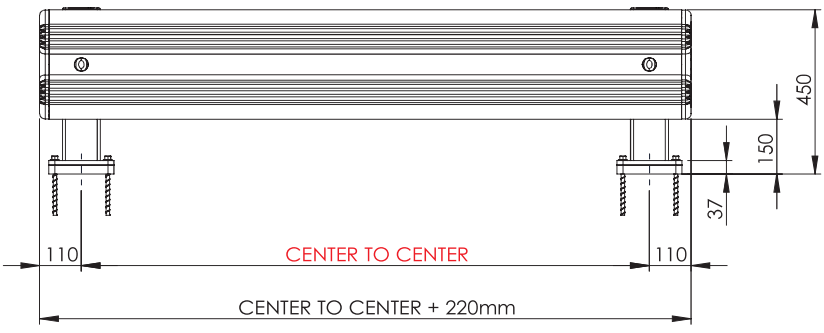

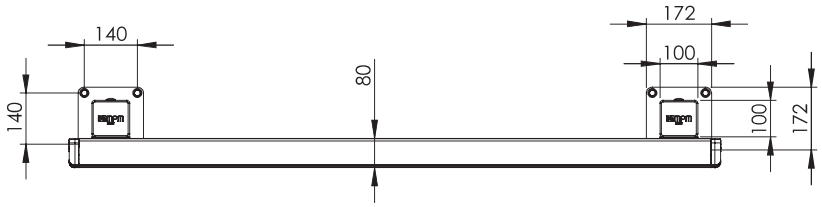


BFLEX.FRONT/1

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

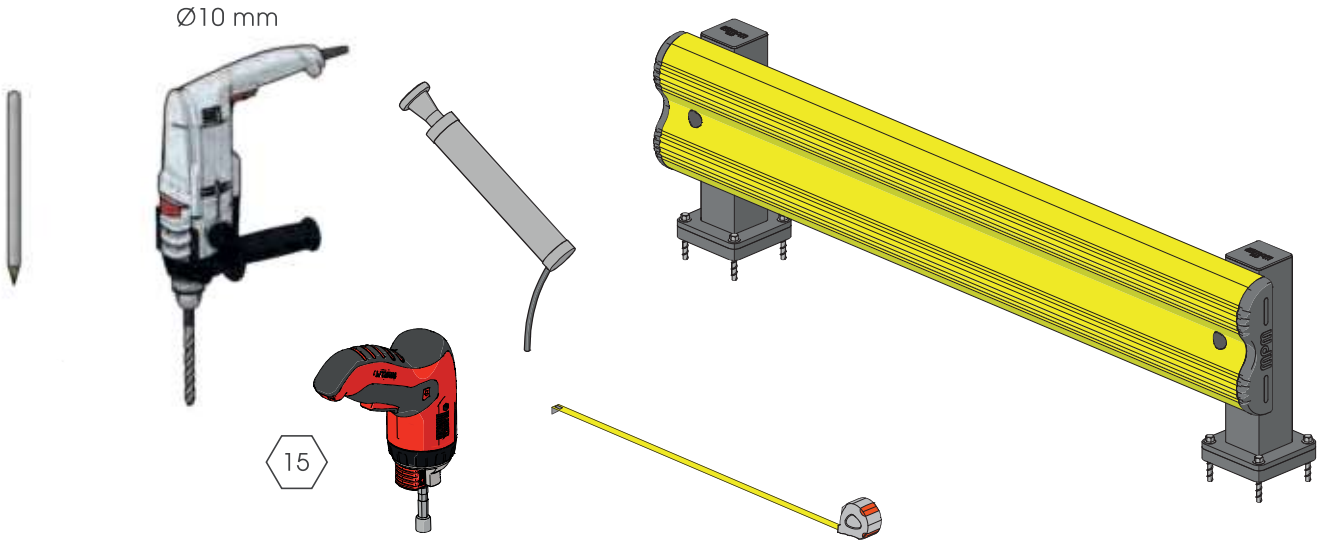


WARNING


The distance of installation depends on speed and weight of vehicle

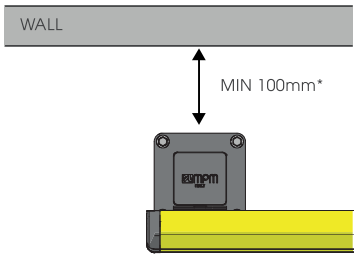


1

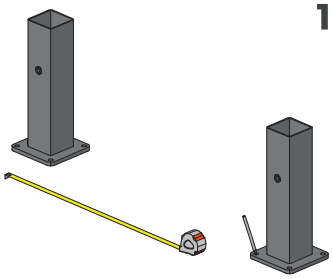


2

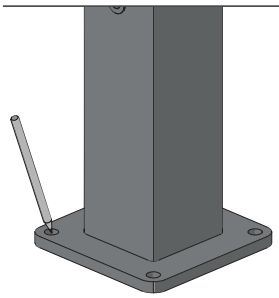


3

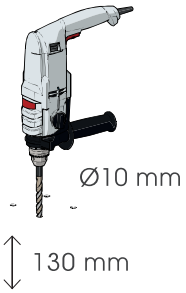


4

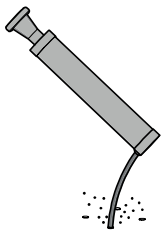


5




6

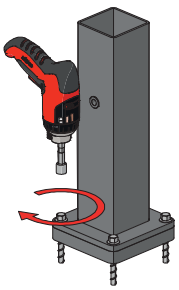

7

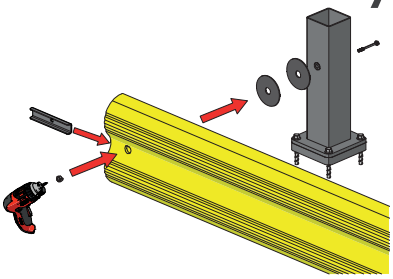


8

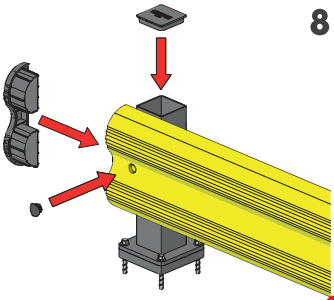



BFLEX.FRONT/1 MODULAR

BARRIERA SINGOLA FRONTALE MODULARE
FRONTAL SINGLE BARRIER MODULAR

HEAVY LOAD / FOR FORKLIFTS

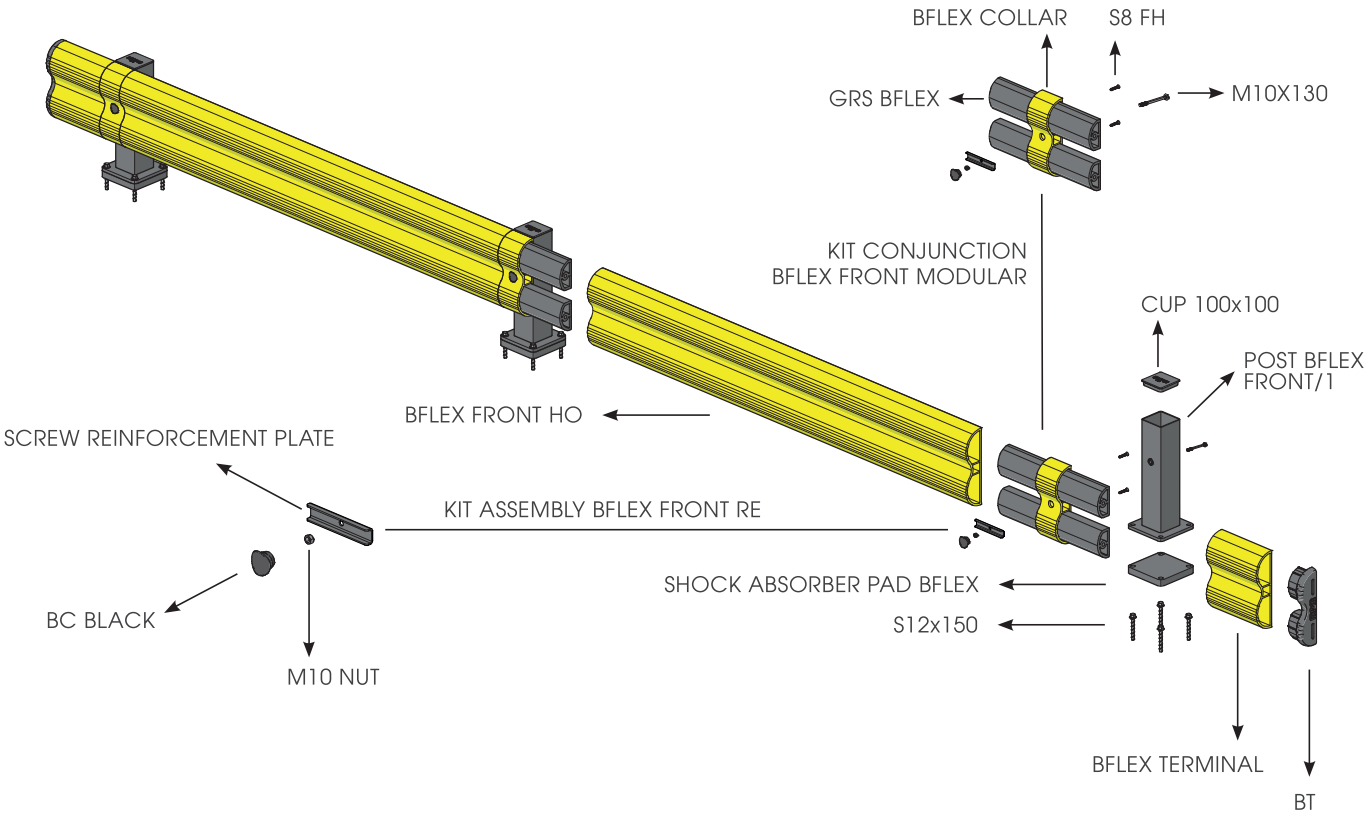


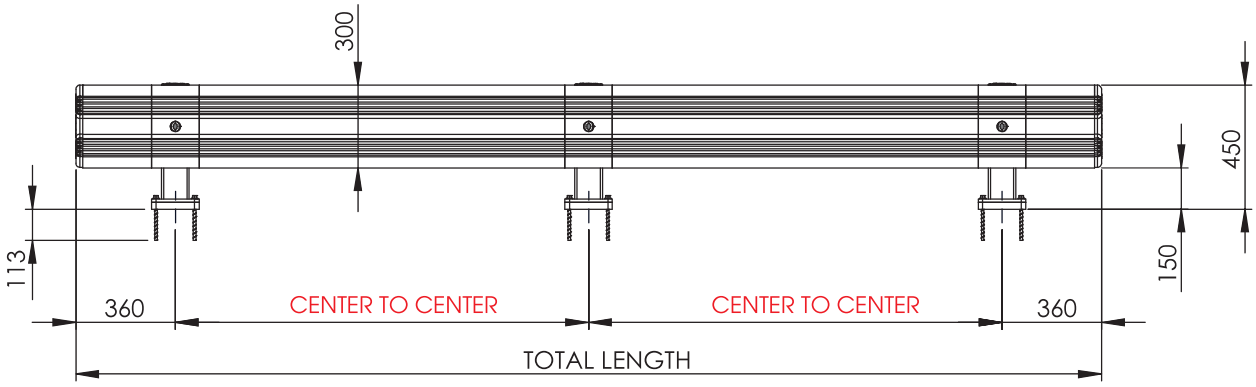

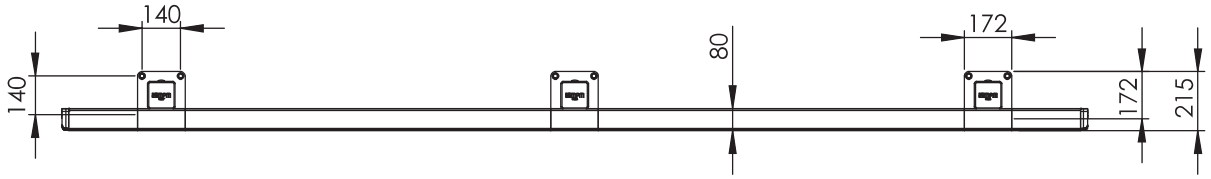


BFLEX.FRONT/1 MODULAR

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

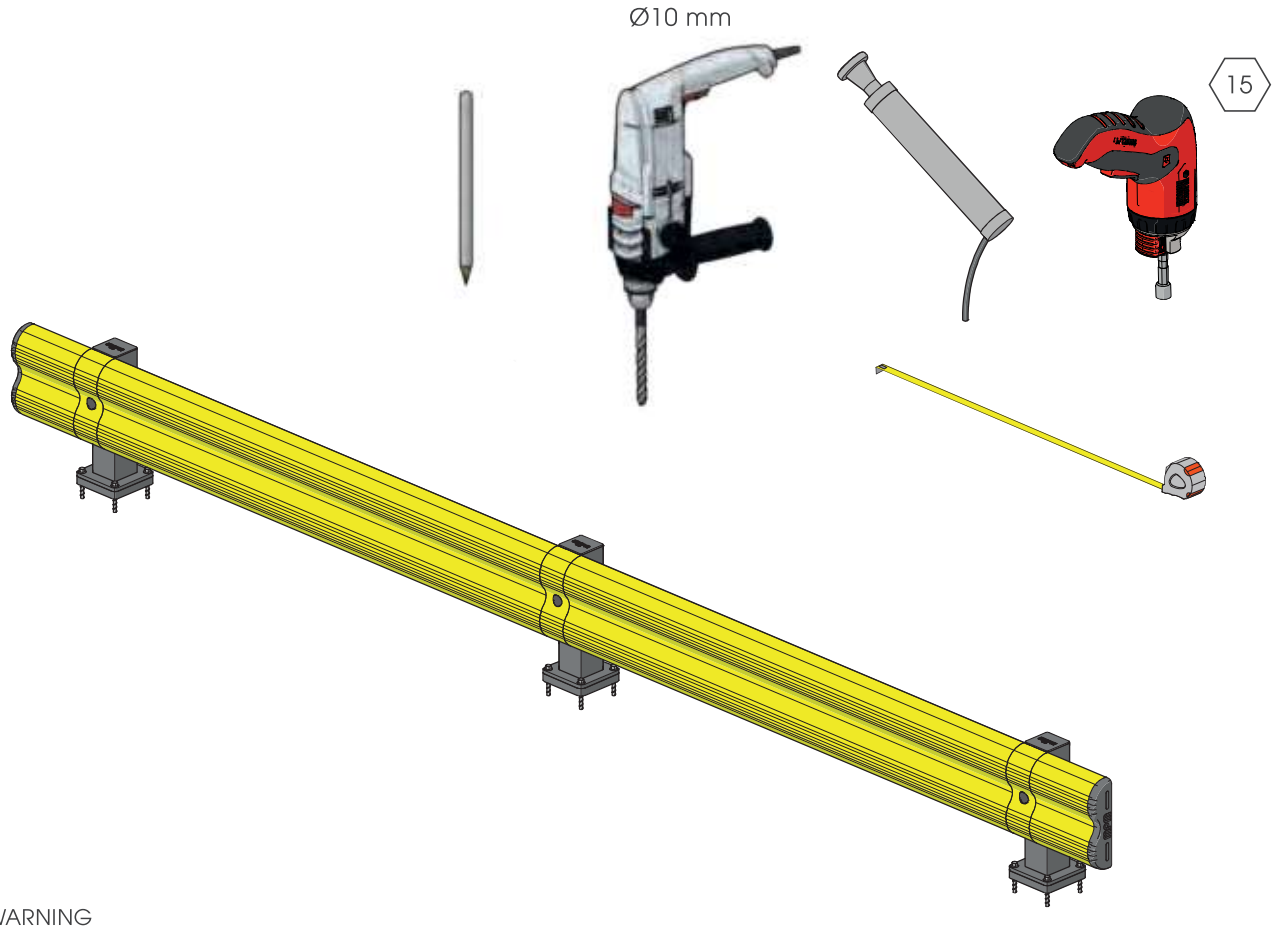


WARNING


The distance of installation depends on speed and weight of vehicle

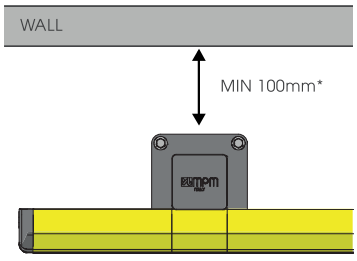


1

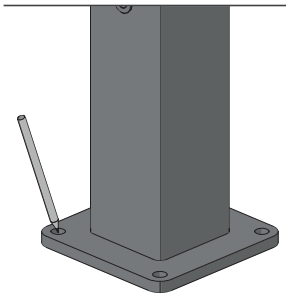


2

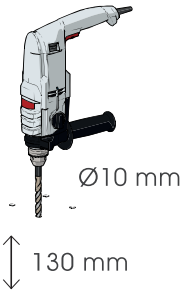


3

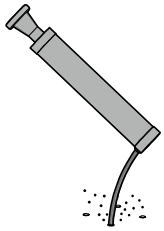

4




5

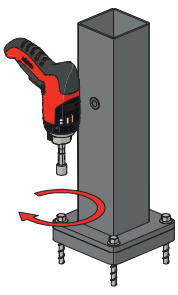


BFLEX.FRONT/1 MODULAR

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


6

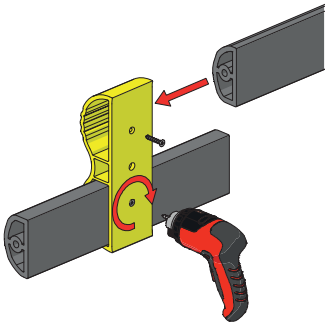

7

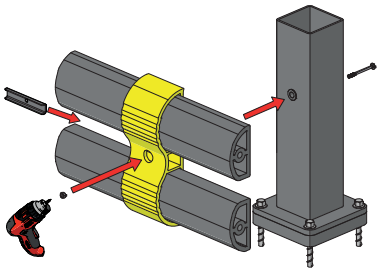


8

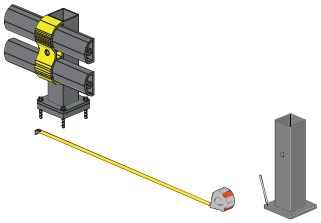


9




10

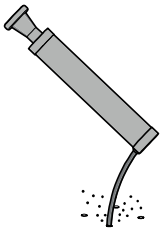


11




12

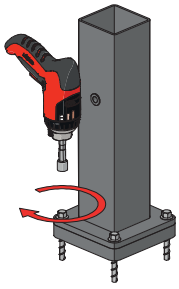


13

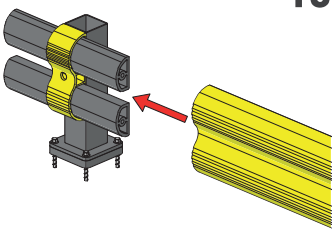

14

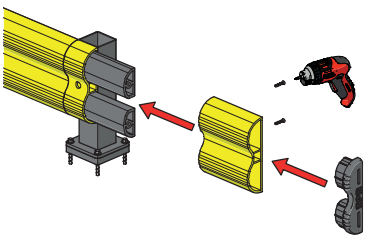


15

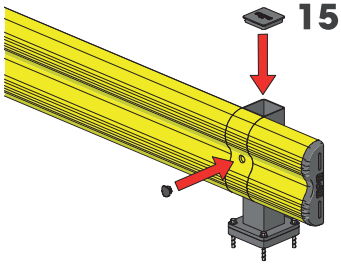



BFLEX.COM/1

BARRIERA SINGOLA COMPATTA
COMPACT SINGLE BARRIER

HEAVY LOAD / FOR FORKLIFTS

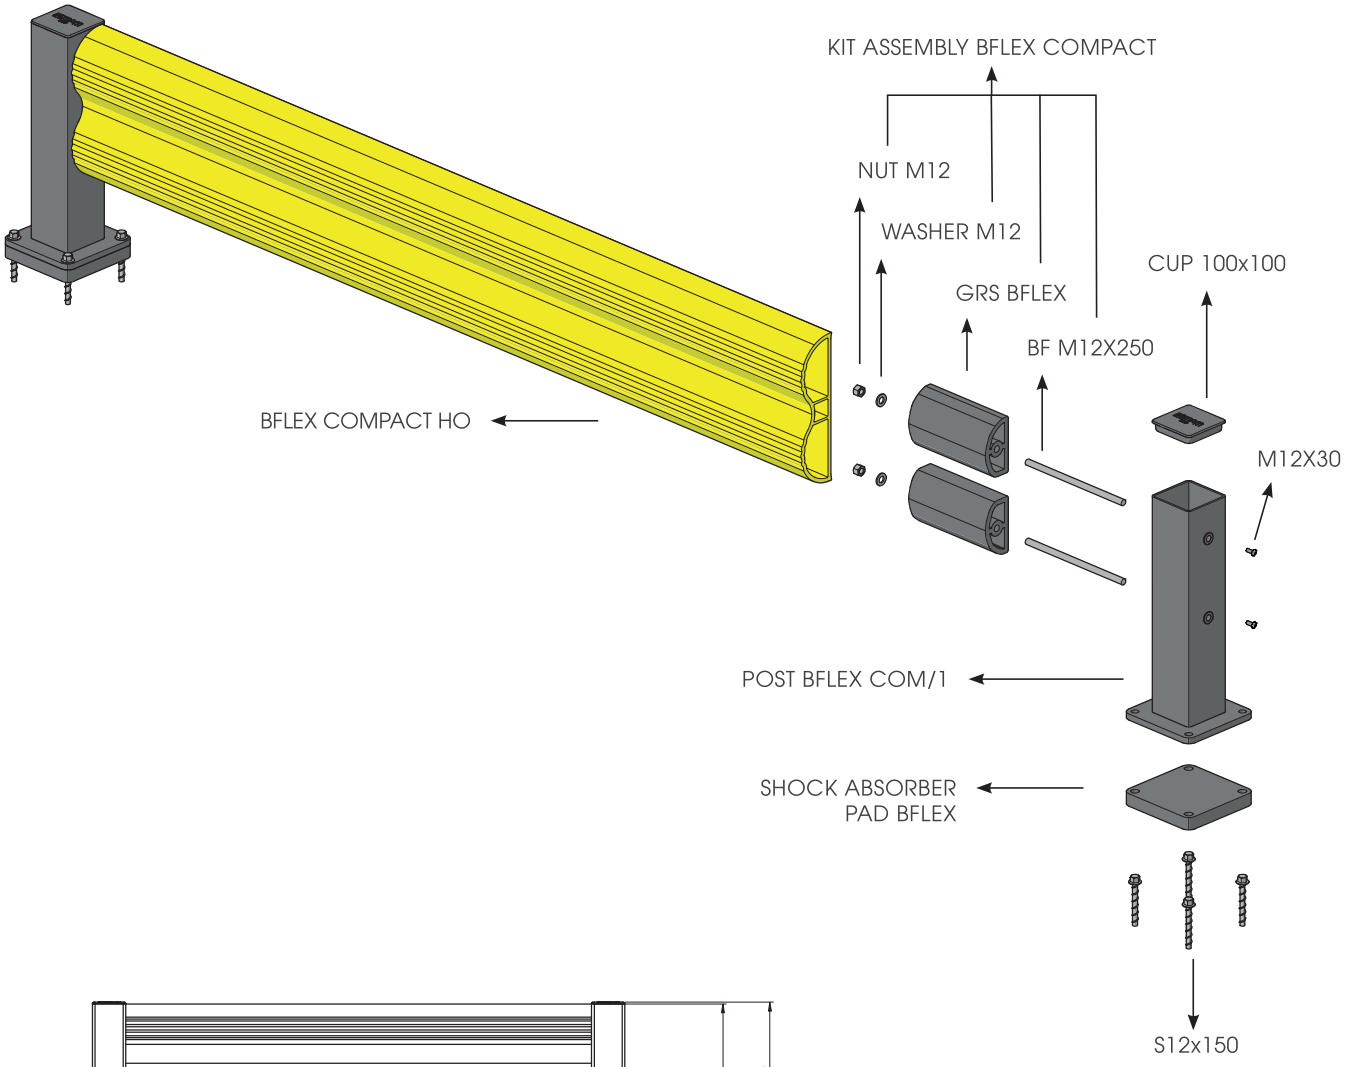


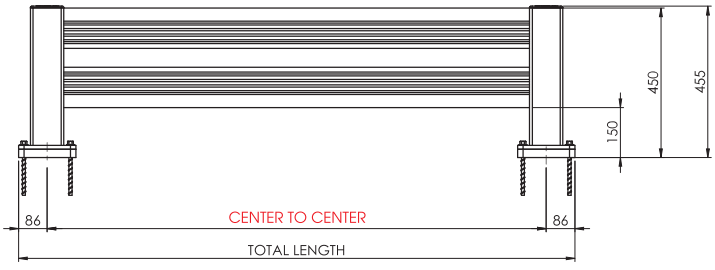


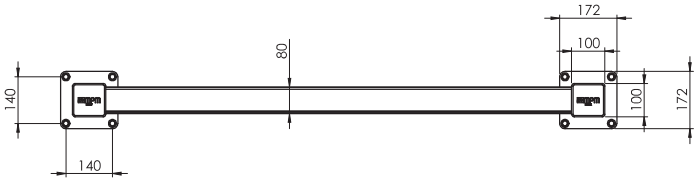

BFLEX.COM/1


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

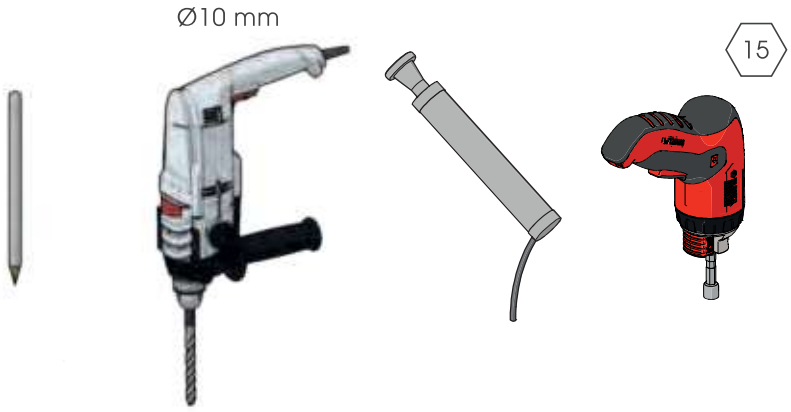


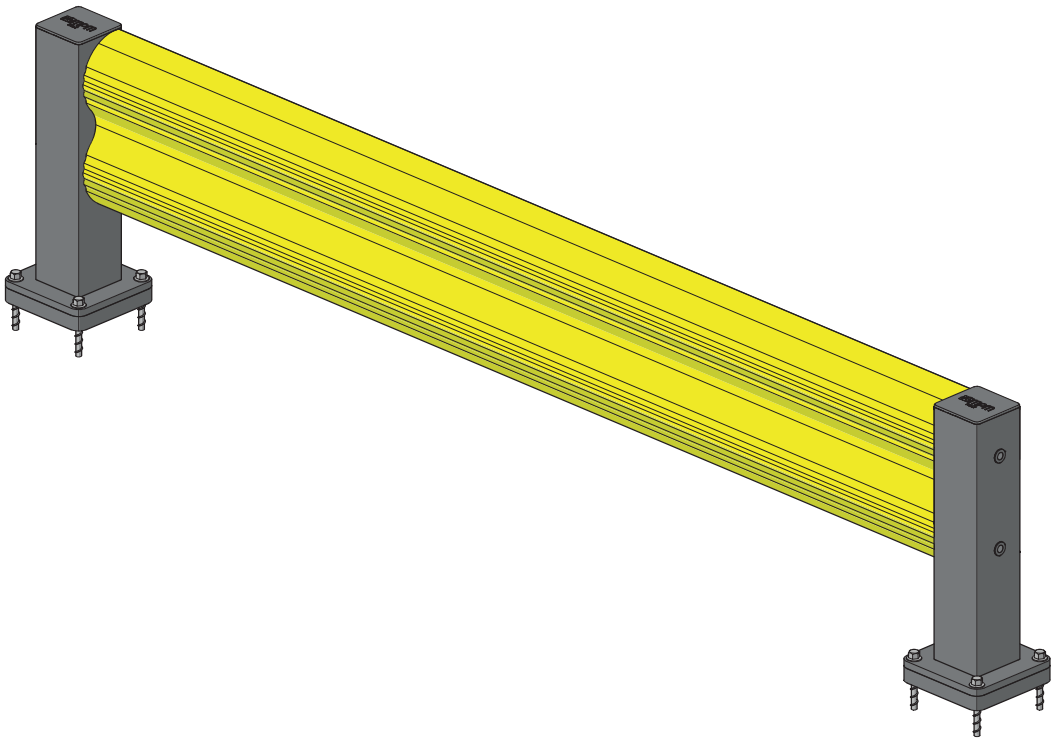


WARNING

The distance of installation depends on speed and weight of vehicle

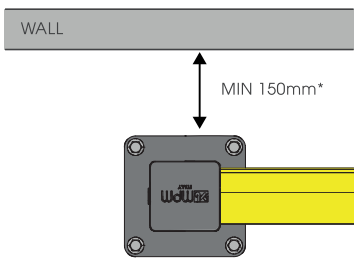

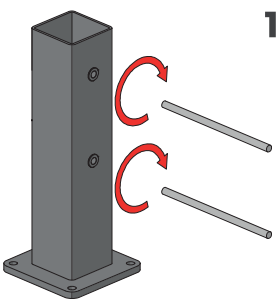


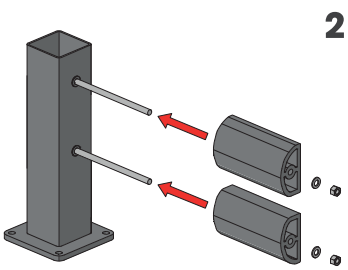


BFLEX.COM/1

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

3

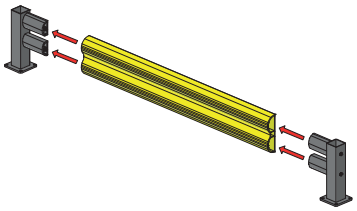


4

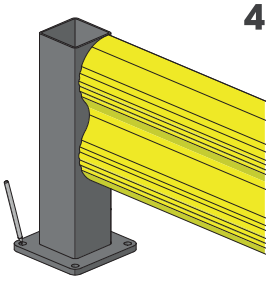


5




6

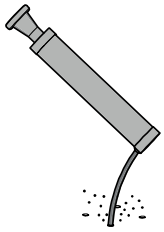


7

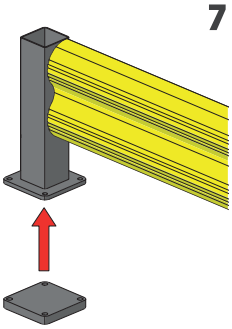


8

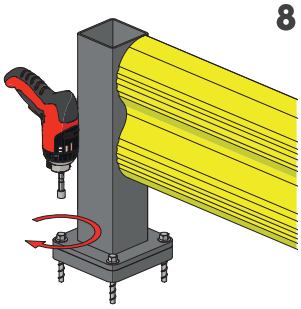


9

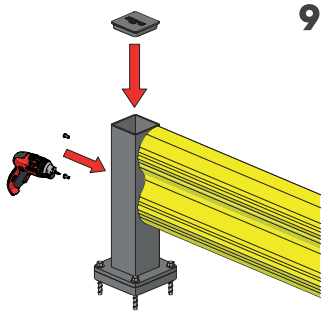

BFLEX.COM/1 MODULAR

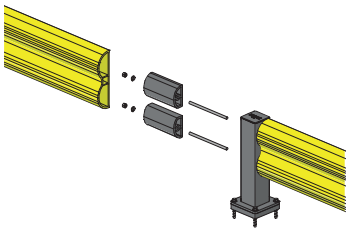


BFLEX.COM/1 MODULAR CORNER

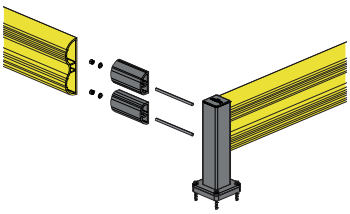


GRD 90

PALO PROTEZIONE
BOLLARD


LIGHT LOAD / FOR HAND PALLET TRUCKS

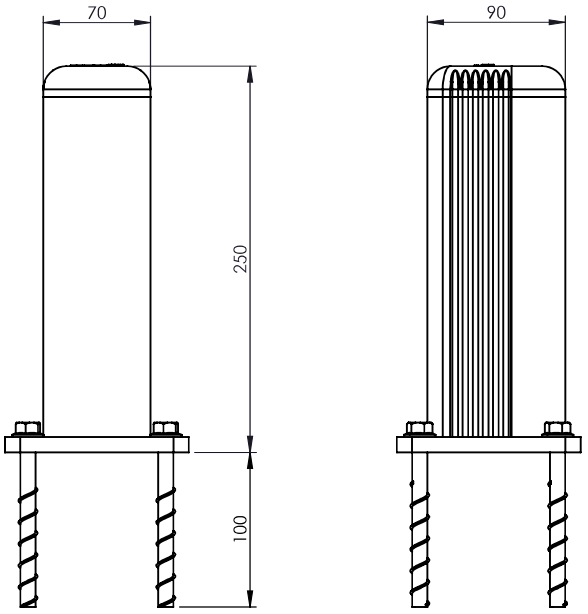

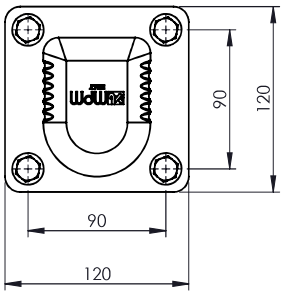





GRT 90

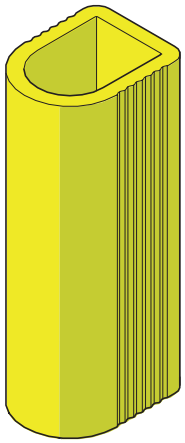

GR 90

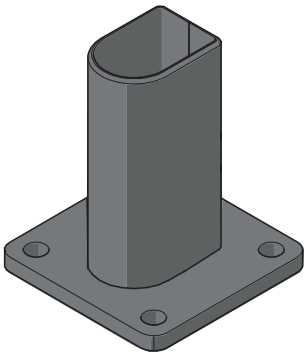

FIX P 90

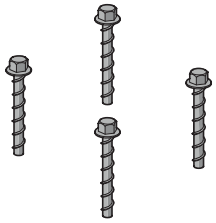


S12


GRD 150


PALO PROTEZIONE
BOLLARD

IMPACT TEST PASSED
according to
EN 15512:2009


HEAVY LOAD / FOR FORKLIFTS

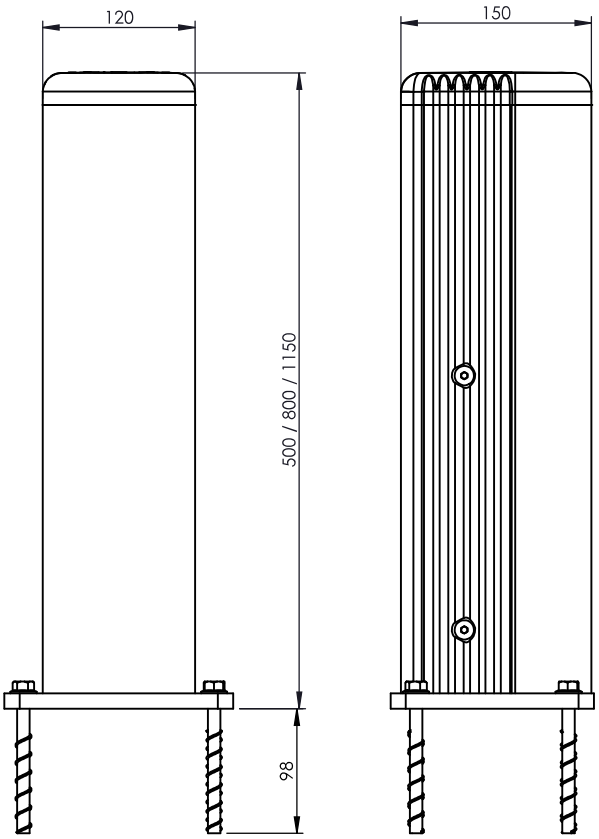

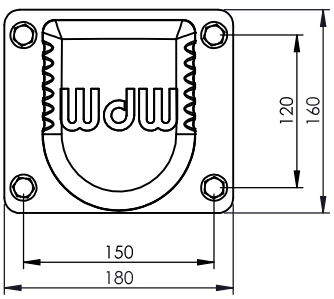


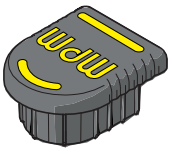


GRT 150

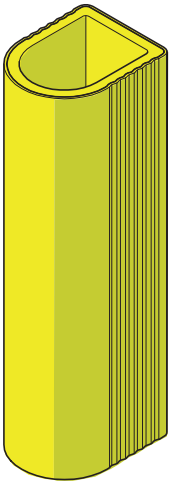

GR 150

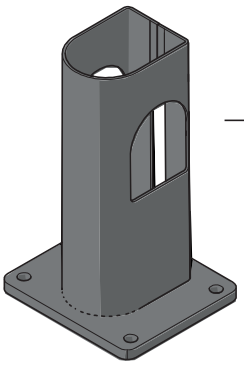

FIX P 150

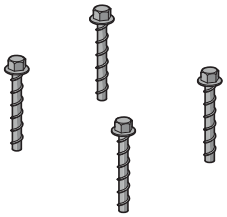


S12


GRD 150 PLUS


PALO PROTEZIONE
BOLLARD

IMPACT TEST PASSED
according to
EN 15512:2009


HEAVY LOAD / FOR FORKLIFTS

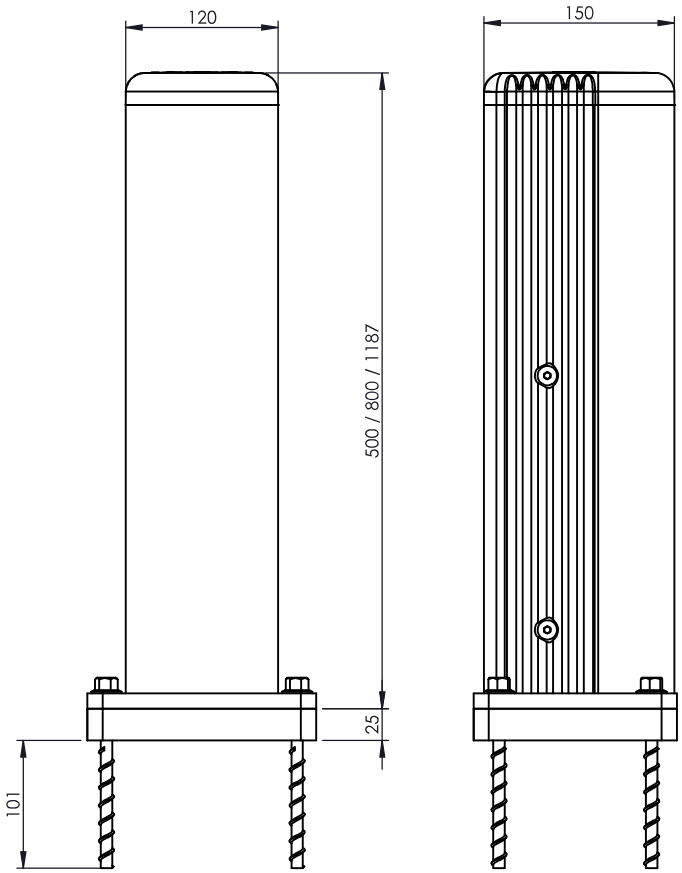

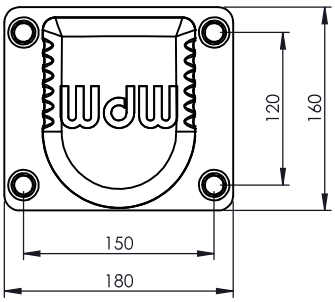


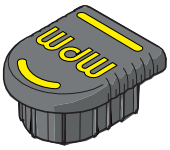


GRT 150

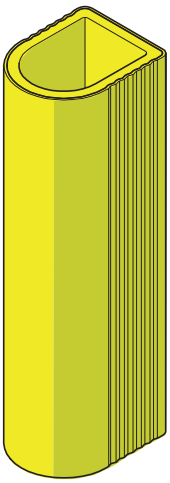


GR 150

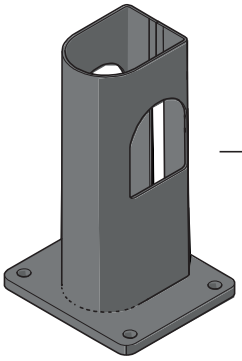

FIX P 150

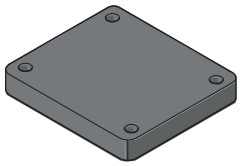

SHOCK ABSORBER PAD 150

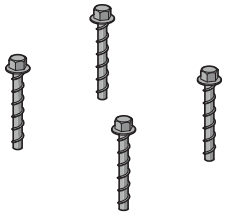


S12X150

GRD 90/150/150 PLUS


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



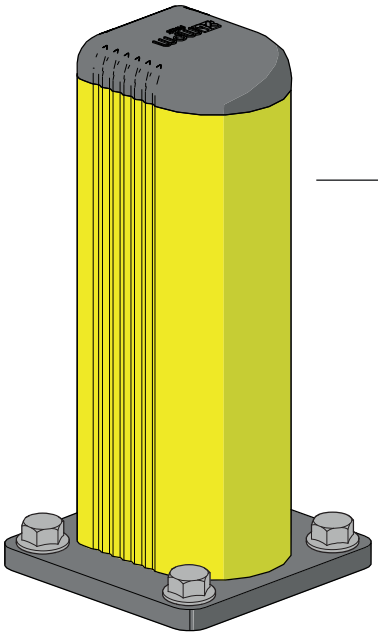


WARNING


The distance of installation depends on speed and weight of vehicle

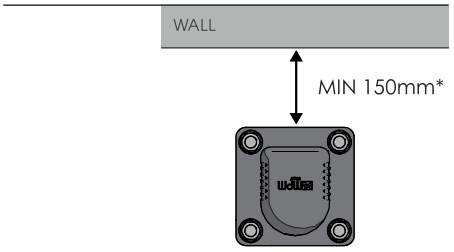


GRD 150 PLUS

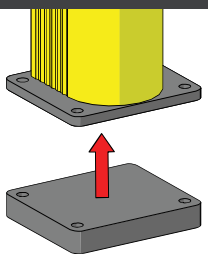


1

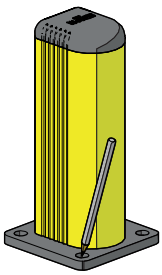


2

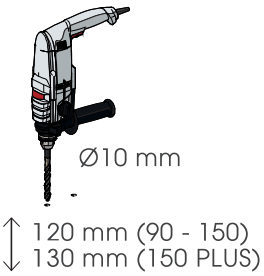


3

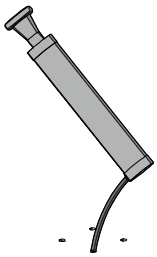

4

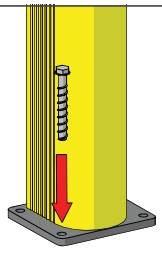


5

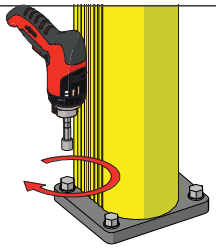


GRD 200


PALO PROTEZIONE
BOLLARD

HEAVY LOAD / FOR FORKLIFTS

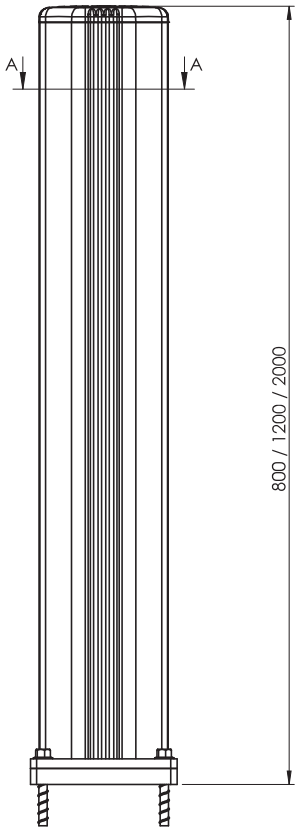

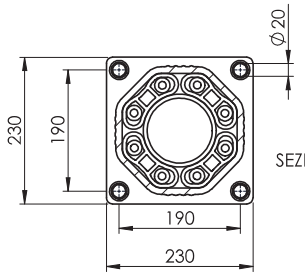

SEZIONE A-A

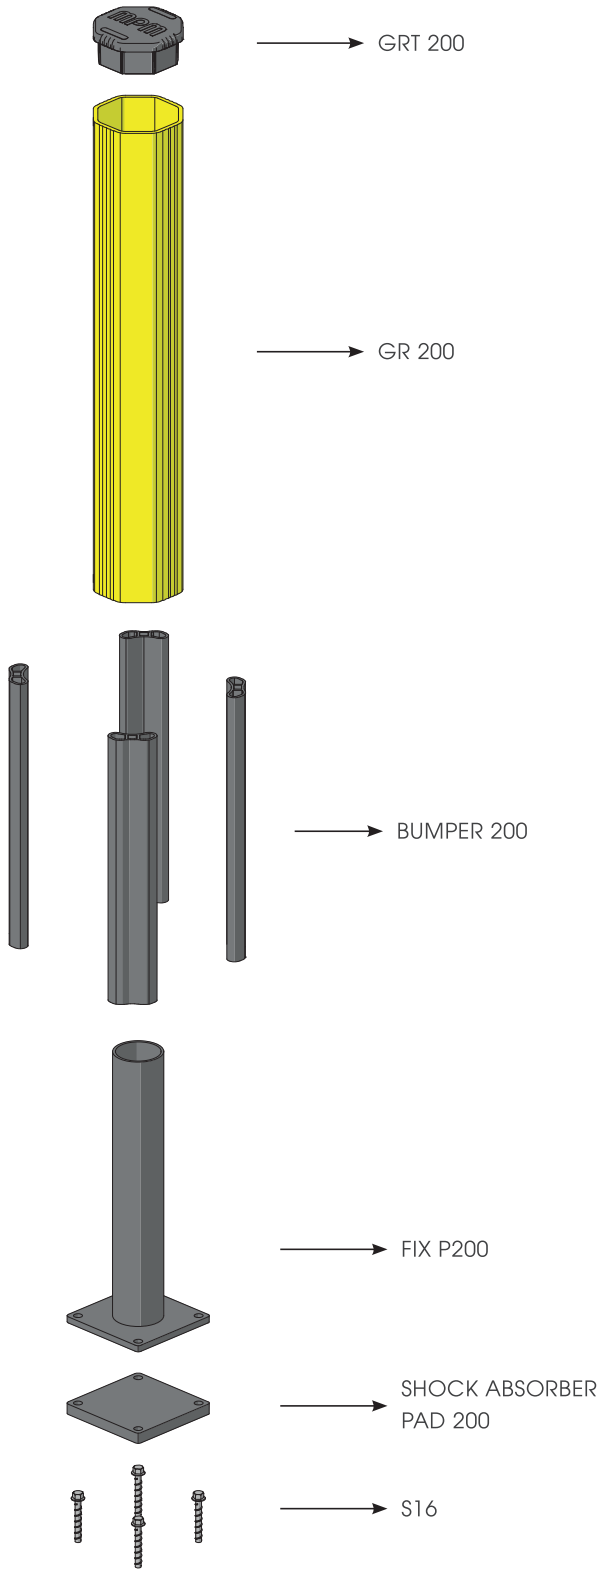


GRD 200


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




1

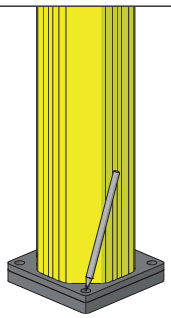


2

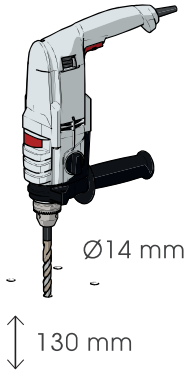


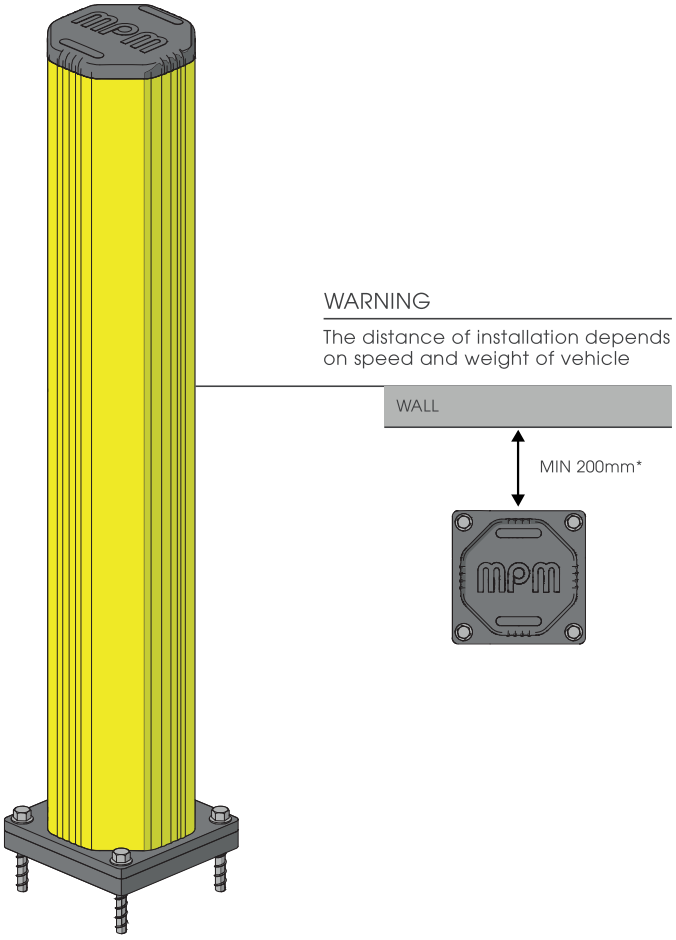

3

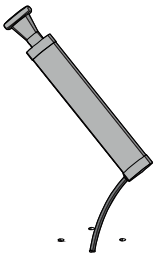

4

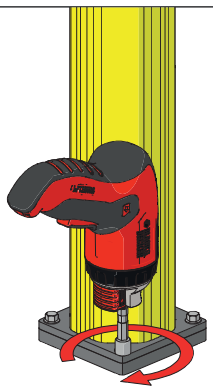



ROCKET 150


PALO PROTEZIONE
BOLLARD

-30°
RESISTANT TO
LOW TEMPERATURES


HEAVY LOAD /
FOR FORKLIFTS

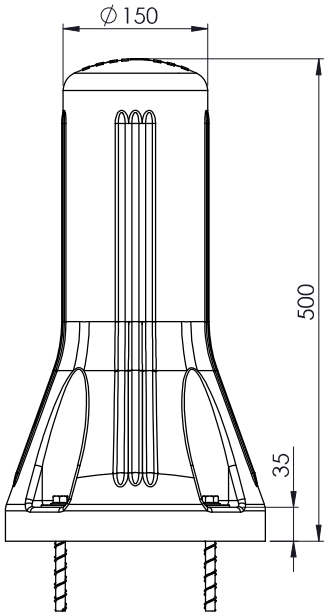

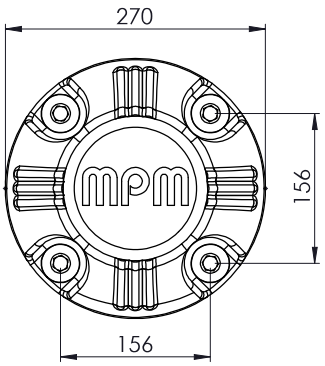

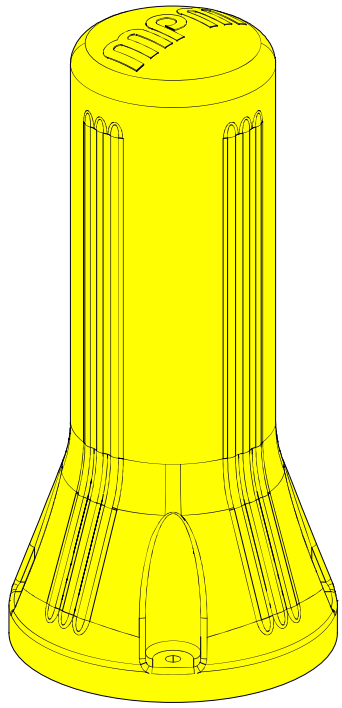

ROCKET 150

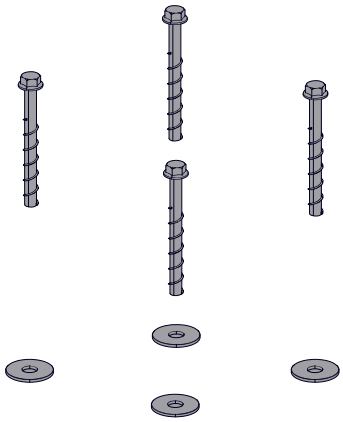

S12X150


INCREASED
WASHER M12


ROCKET 200


PALO PROTEZIONE
BOLLARD

-30°
RESISTANT TO
LOW TEMPERATURES

HEAVY LOAD /
FOR FORKLIFTS

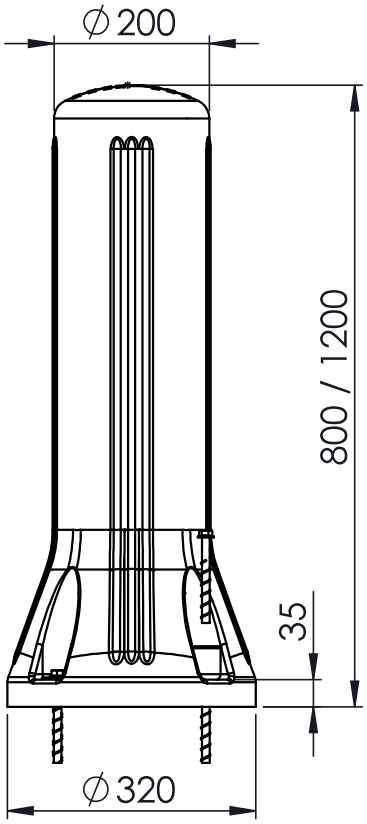

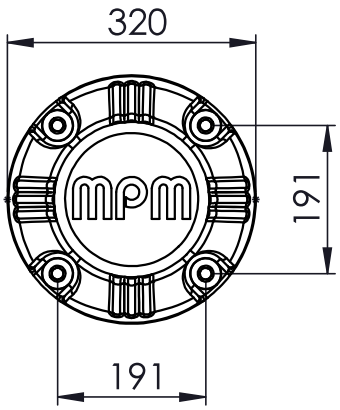

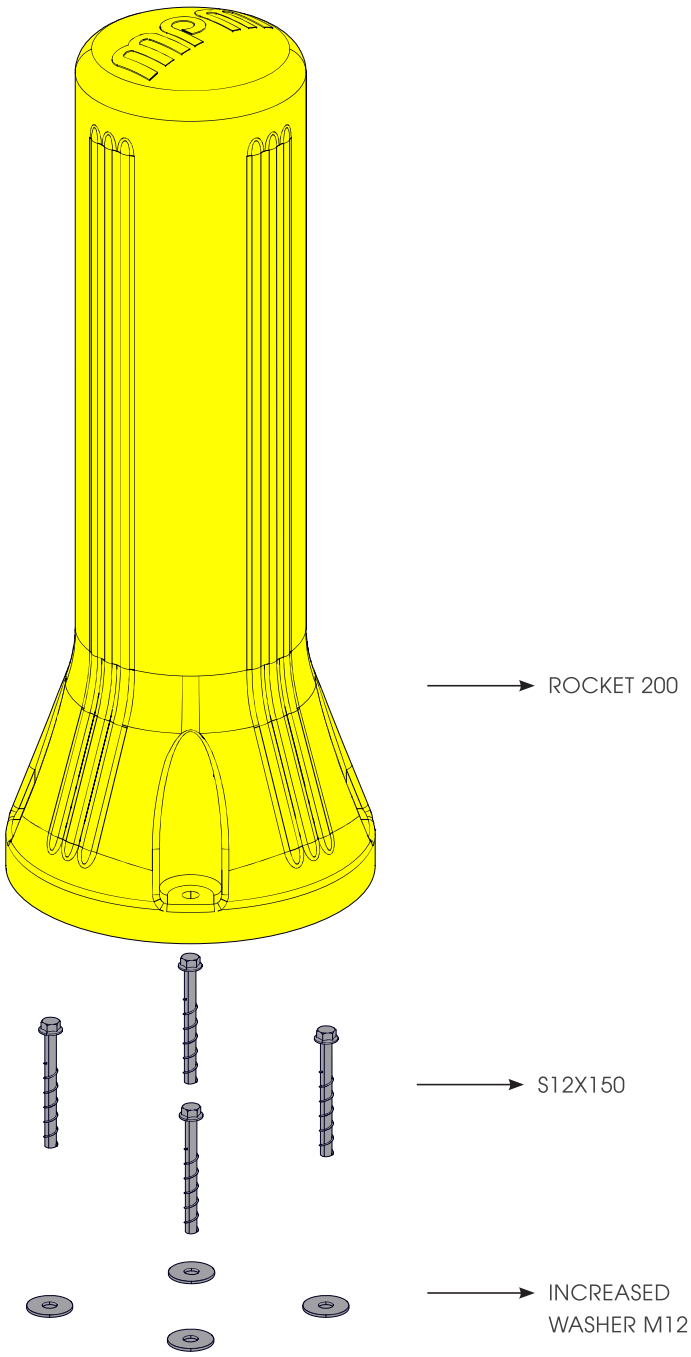



ROCKET 150/200

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

-30°
RESISTANT TO LOW TEMPERATURES




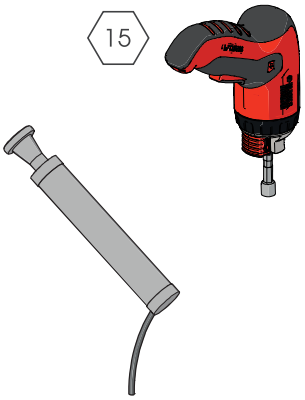

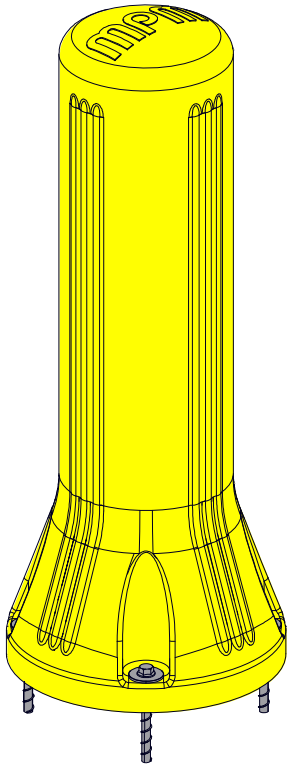


WARNING


The distance of installation depends on speed and weight of vehicle

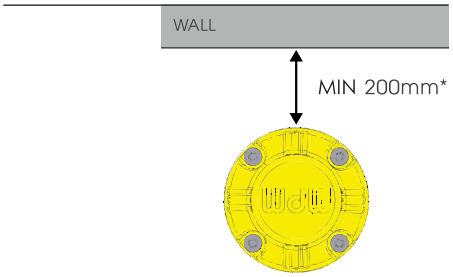


1

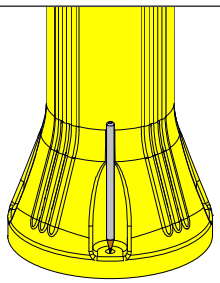


2

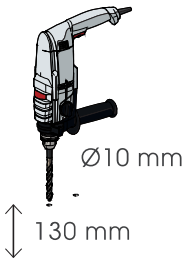


3

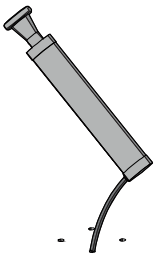

4

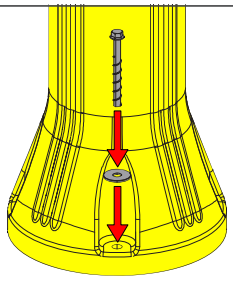

5

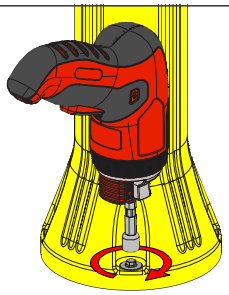



ROD 70

PALO PROTEZIONE
BOLLARD

-30°
RESISTANT TO LOW TEMPERATURES

LIGHT LOAD / FOR HAND PALLET TRUCKS

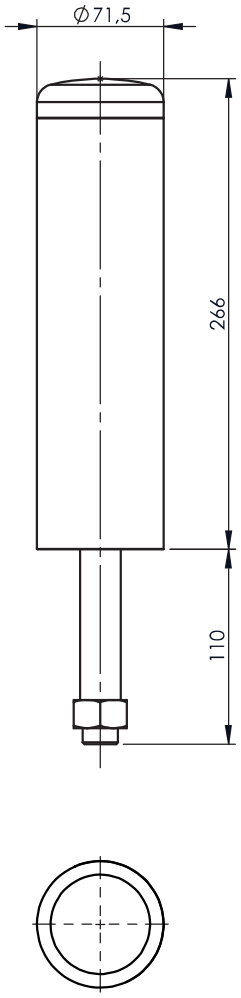

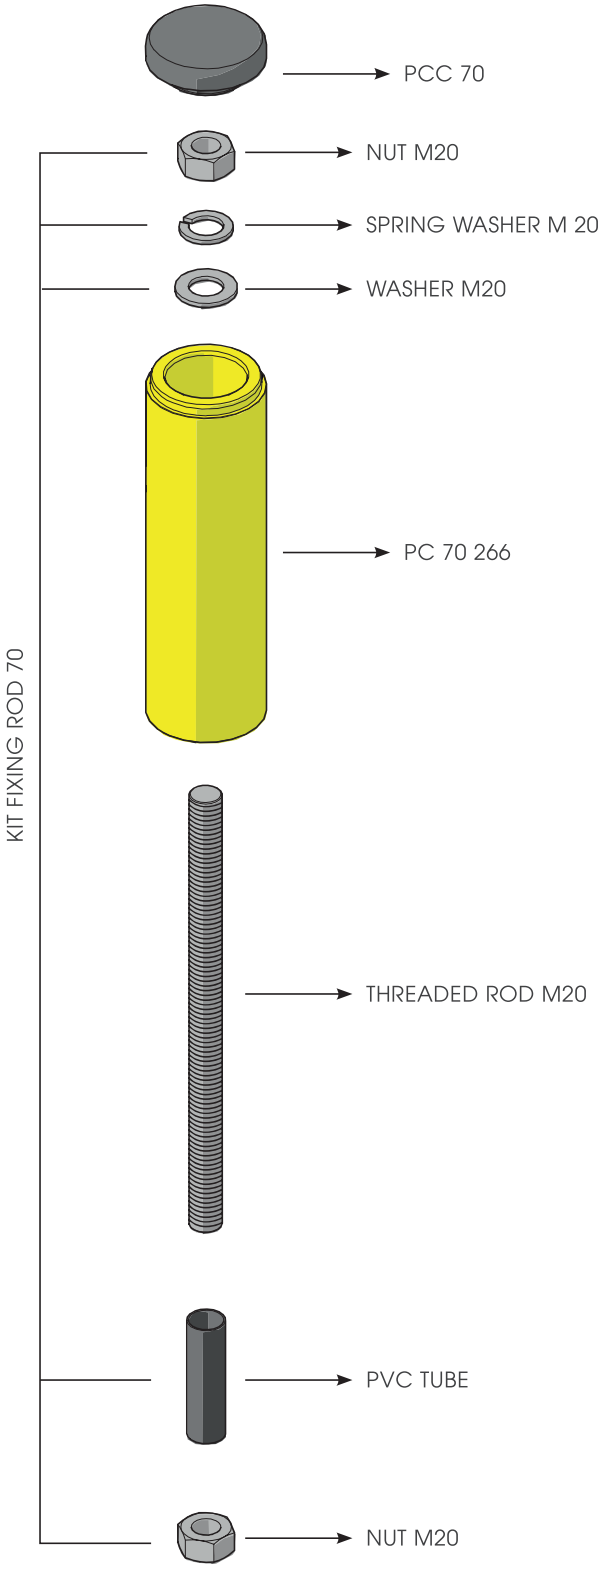


ROD 70


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

-30°
RESISTANT TO LOW TEMPERATURES

CHEMICAL ANCHOR

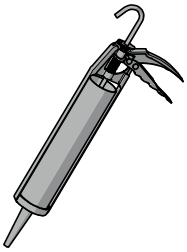


Ø38 mm

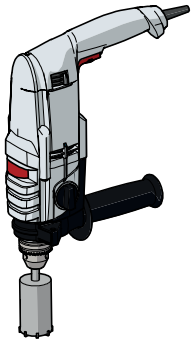





Ø38 mm


30



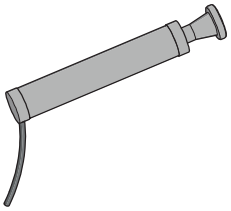

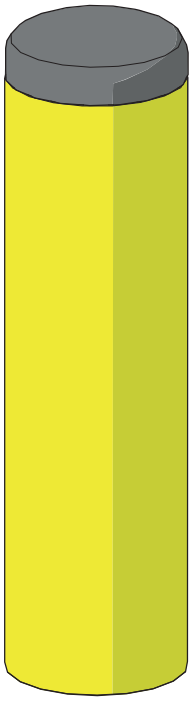


1

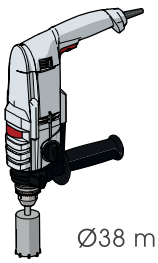

Ø38 mm


115 mm

2

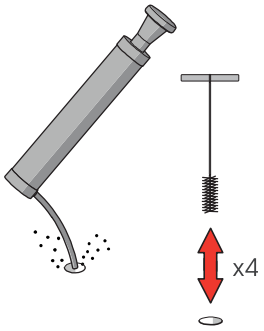

x4


3

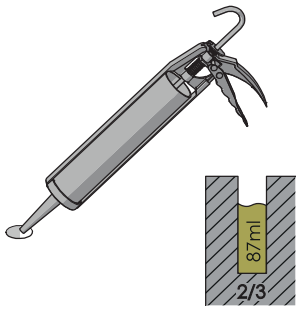

87ml

2/3

4

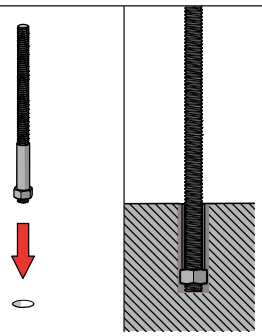

ROD 70

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

-30°
RESISTANT TO
LOW TEMPERATURES


5



6



7

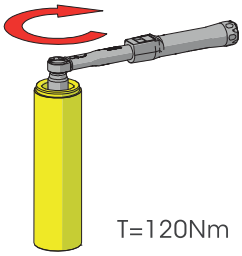


8



ROD REPLACEMENT

1



2





ROD 120


PALO PROTEZIONE
BOLLARD

-30°
RESISTANT TO LOW TEMPERATURES

HEAVY LOAD / FOR FORKLIFTS

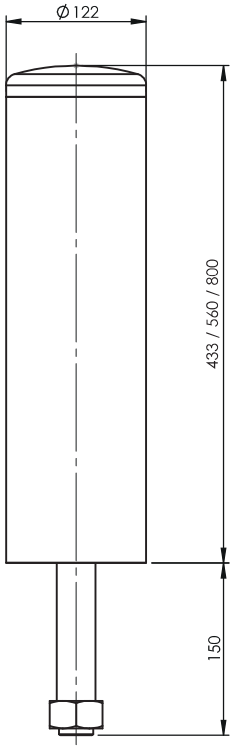

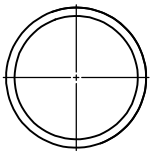

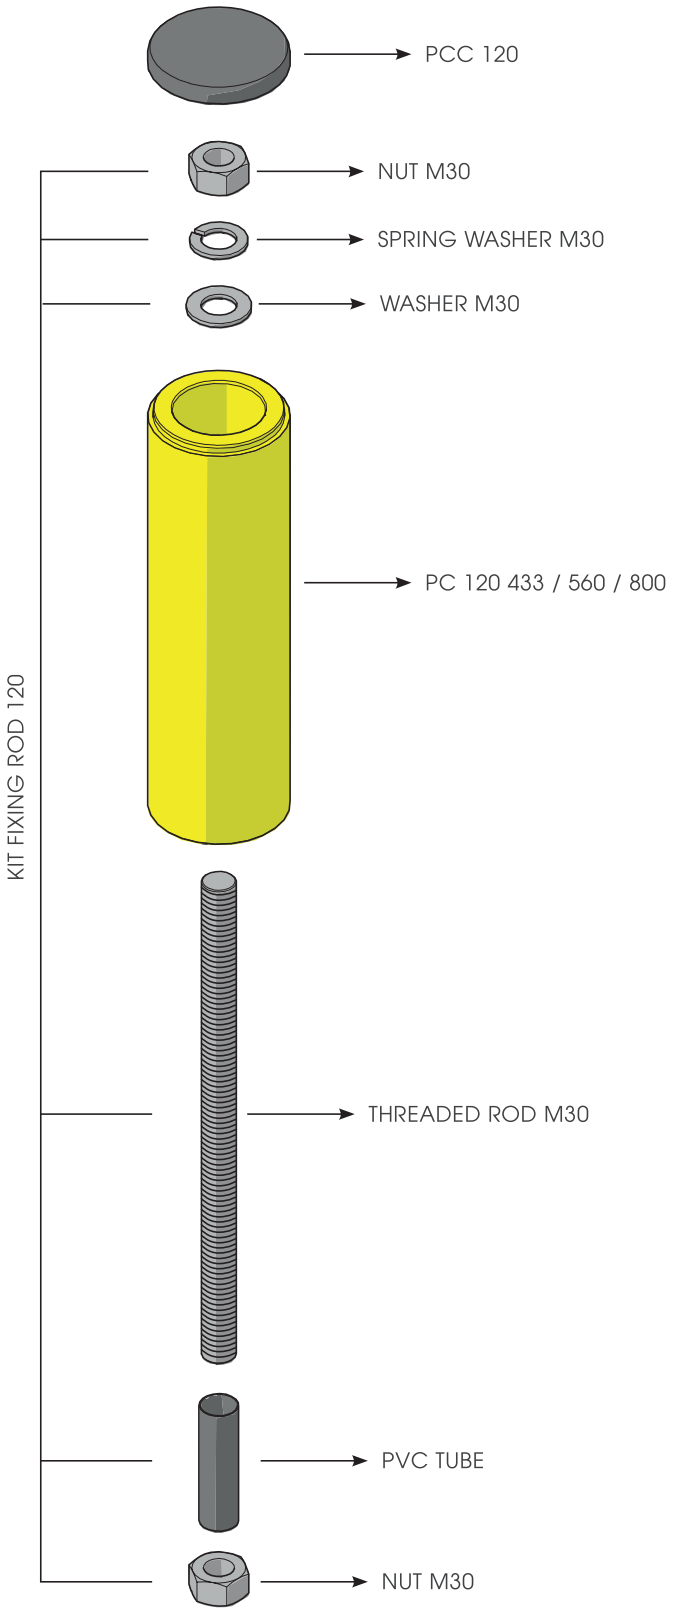


ROD 120


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


-30°
RESISTANT TO LOW TEMPERATURES

CHEMICAL ANCHOR

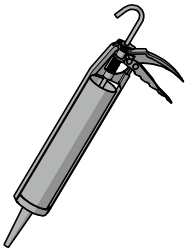

Ø56 mm

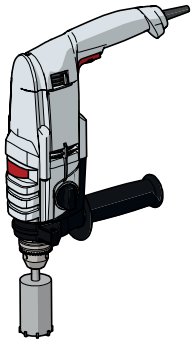





Ø56 mm


46



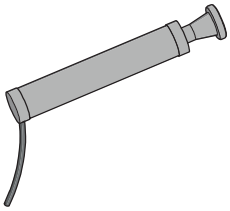

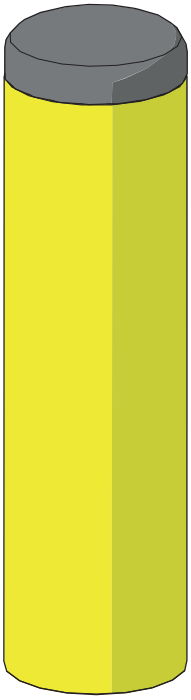


1

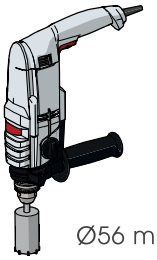

Ø56 mm

155 mm


2

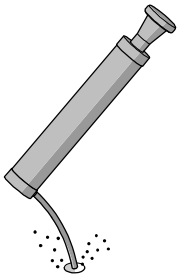



x4


3

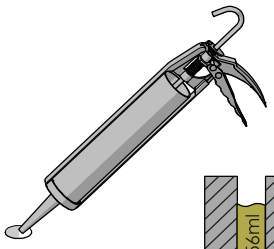

256ml

2/3

4

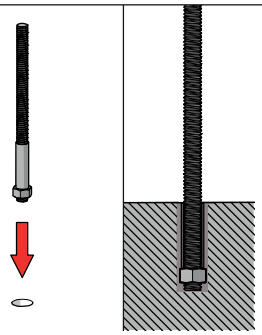

ROD 120

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

-30°
RESISTANT TO
LOW TEMPERATURES


5



6



7

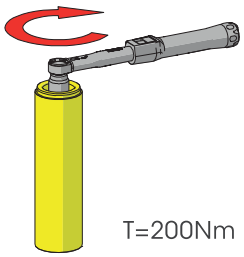


8



ROD REPLACEMENT

1

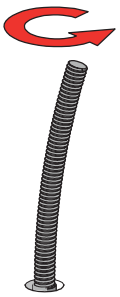


2





ROD FLOOR 70


BARRIERA SINGOLA
SINGLE-RAIL BARRIER


-30°
RESISTANT TO LOW TEMPERATURES

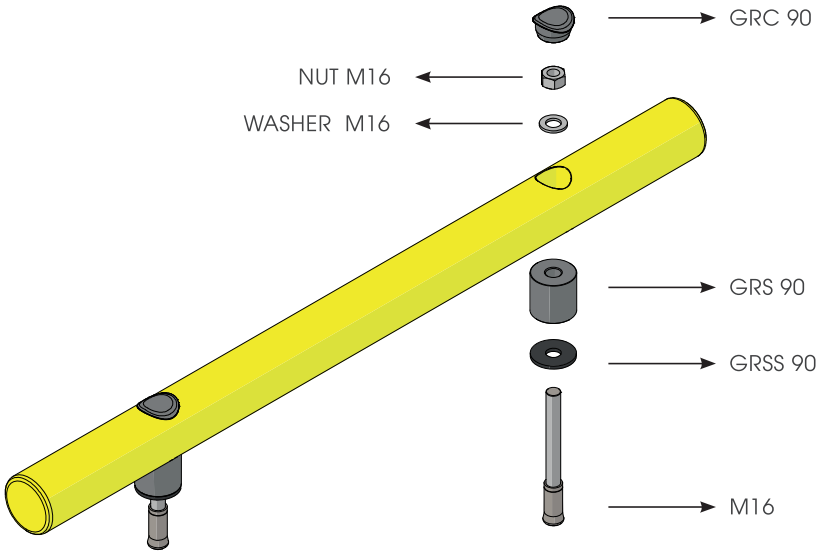


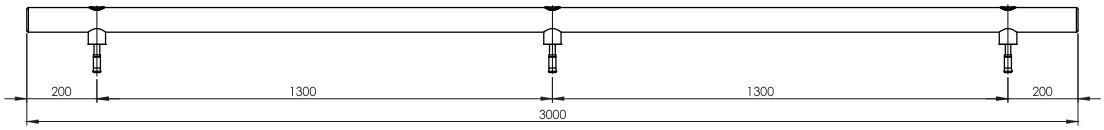


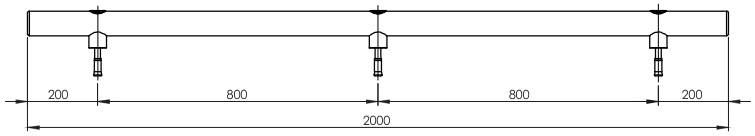

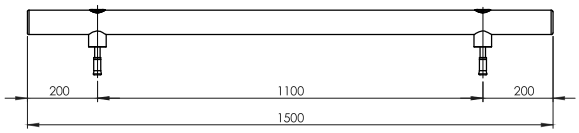

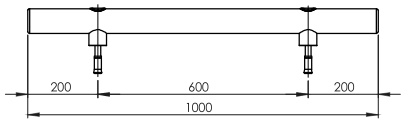

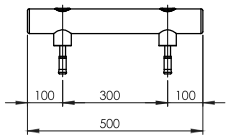

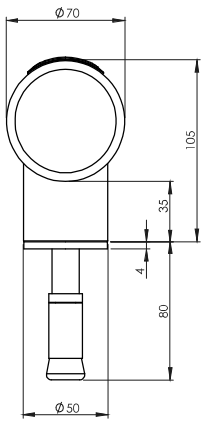


ROD FLOOR 70

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




M16 GALVANIZED STEEL

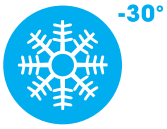


RESISTANT TO LOW TEMPERATURES

WITH EXPANSION SCREW




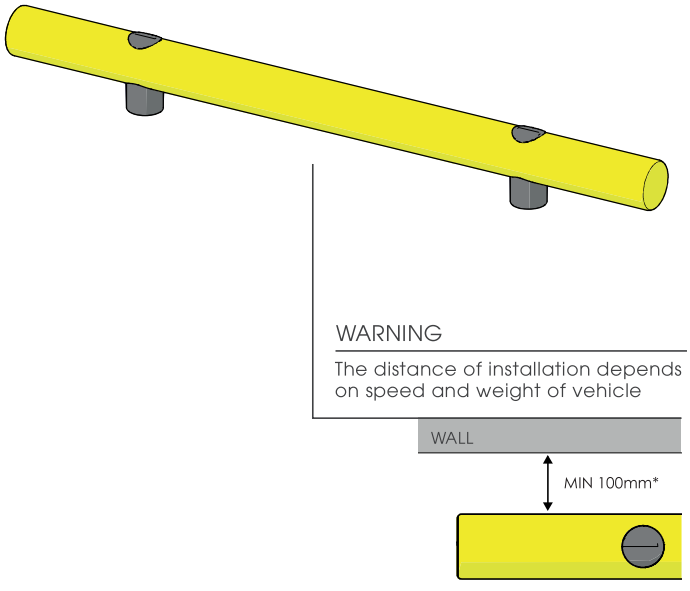


1




2

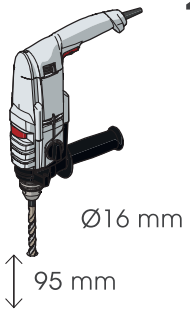

3

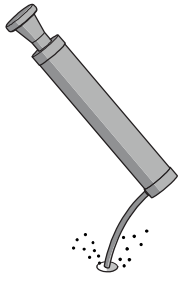

4

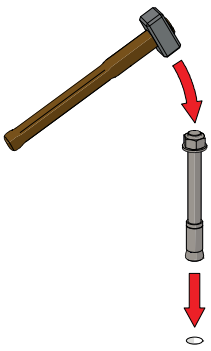


ROD FLOOR 70

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




M16 GALVANIZED STEEL

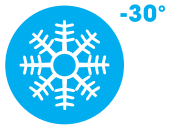

RESISTANT TO
LOW TEMPERATURES

WITH EXPANSION SCREW


5

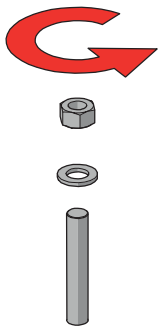


6



7

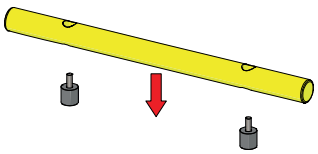


8

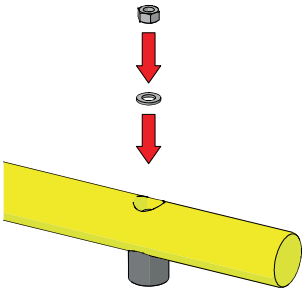


9

T=120Nm

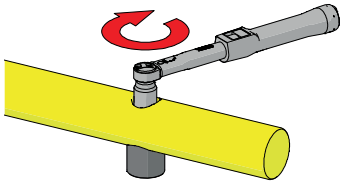

10

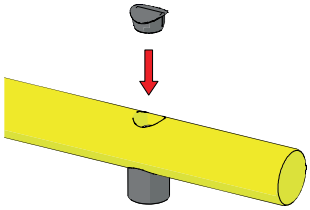

ROD FLOOR 70

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


-30°
RESISTANT TO LOW TEMPERATURES

WITH RESIN

CHEMICAL ANCHOR

Ø18 mm




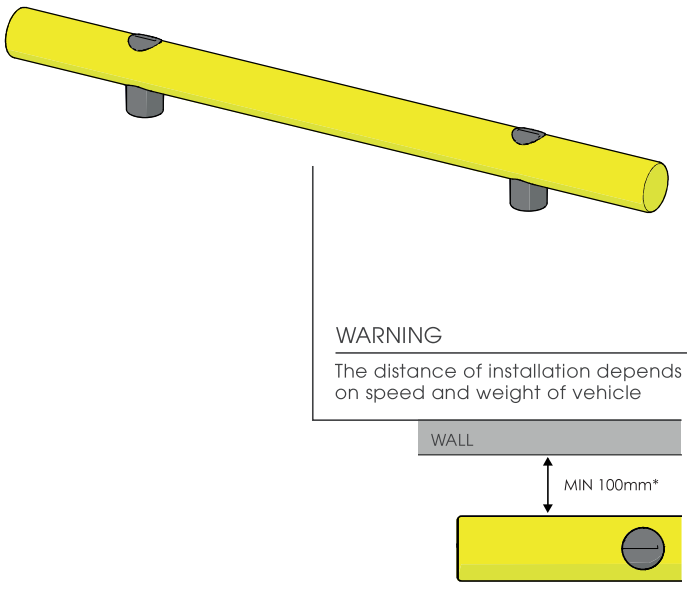




SF16x 200 STAINLESS STEEL | ANCHOR (FR) | ANCHOR (NORDIC) Only for low temperatures


1



2

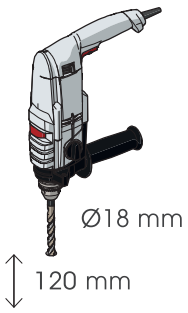

3

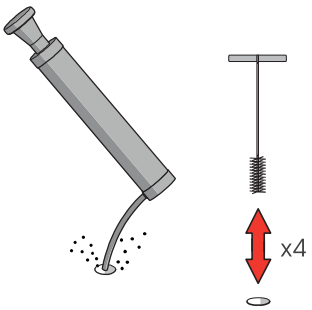

4



ROD FLOOR 70

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

-30°
RESISTANT TO LOW TEMPERATURES

WITH RESIN



SF16x 200
STAINLESS STEEL




ANCHOR
(FR)



ANCHOR
(NORDIC)
Only for low temperatures


5

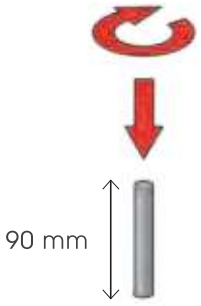


6




7

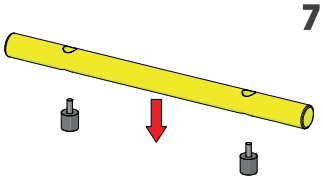


8

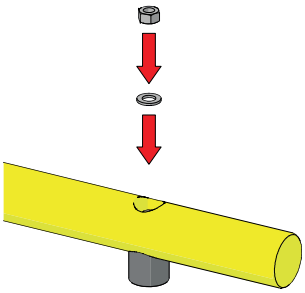

T=60Nm **9**

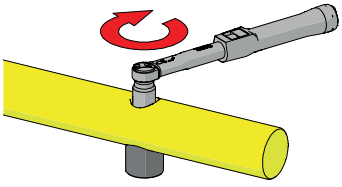


10

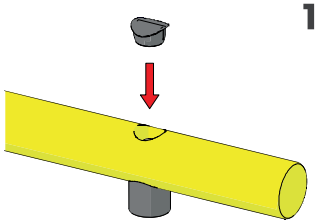


ROD FLOOR 100/120

BARRIERA SINGOLA
SINGLE-RAIL BARRIER

-30°
RESISTANT TO LOW TEMPERATURES

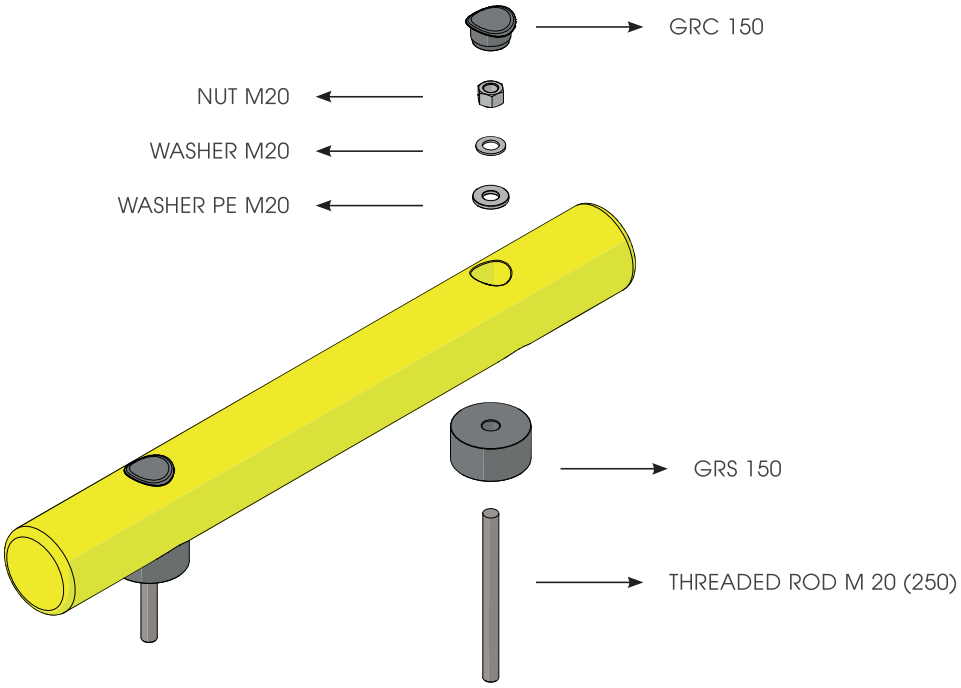

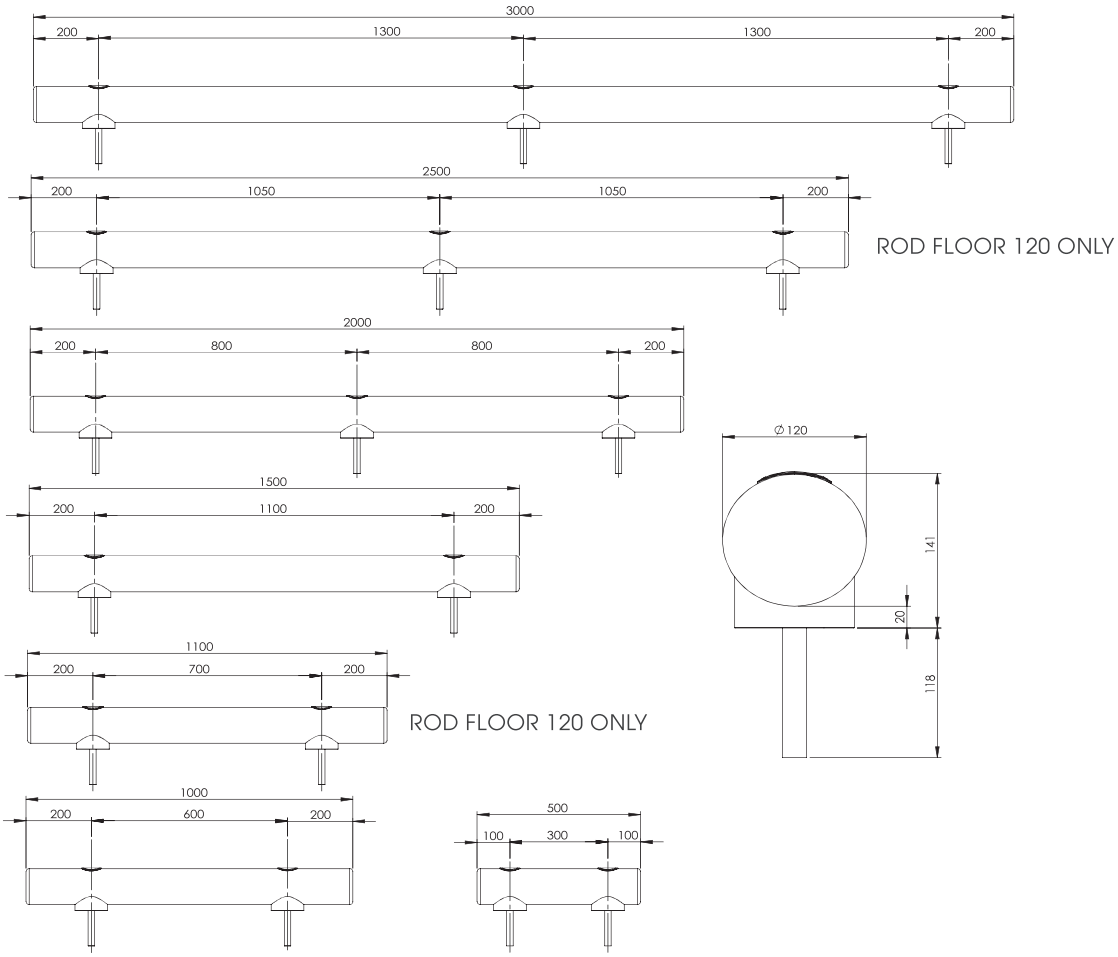

ROD FLOOR 100/120


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

-30°
RESISTANT TO LOW TEMPERATURES

ONLY WITH RESIN


CHEMICAL ANCHOR

Ø24 mm

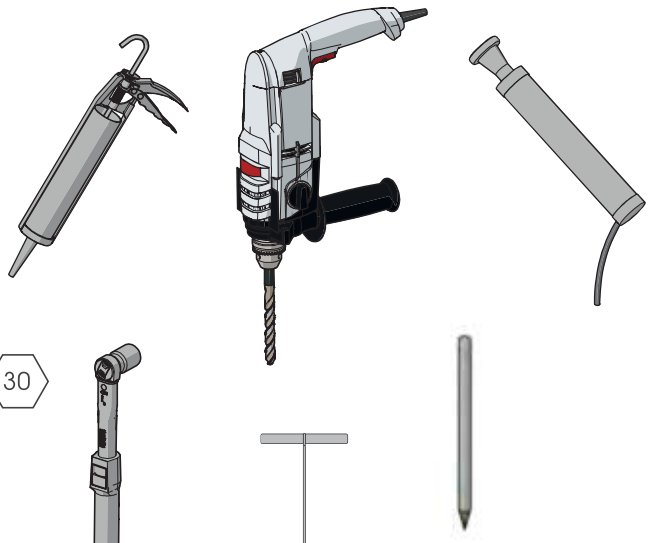


30

Ø24 mm

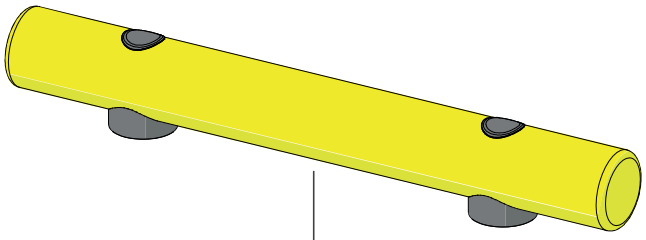

WARNING

The distance of installation depends on speed and weight of vehicle

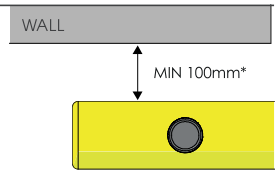



SF20x 250 STAINLESS STEEL




ANCHOR (FR)




ANCHOR (NORDIC) Only for low temperatures

1

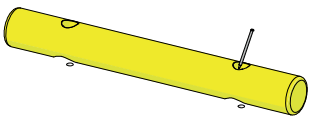


2

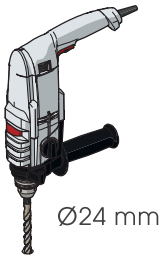


Ø24 mm

150 mm (RF100)
140 mm (RF120)

3

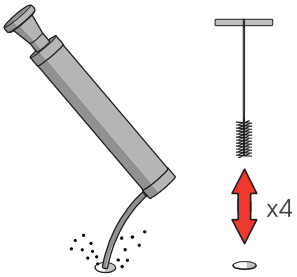

4

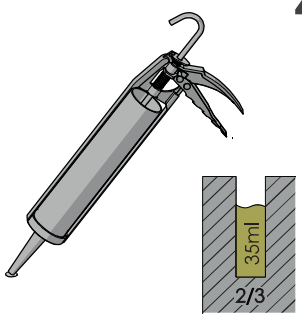

ROD FLOOR 100/120

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

-30°
RESISTANT TO LOW TEMPERATURES

ONLY WITH RESIN



SF20x 250
STAINLESS STEEL




ANCHOR
(FR)




ANCHOR
(NORDIC)
Only for low temperatures


5

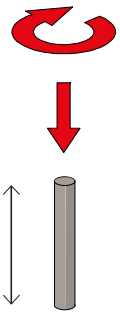


6



7

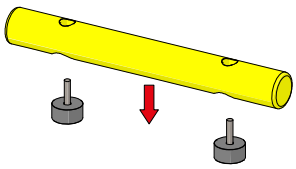


8

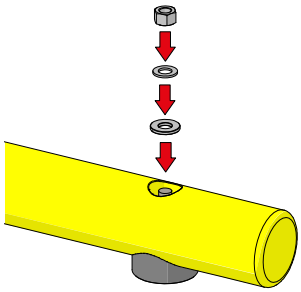


T=120Nm

9

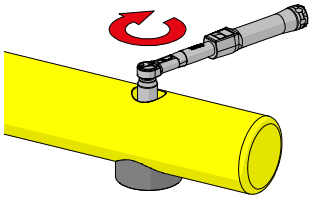


10

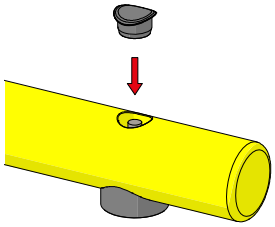



ROD FLOOR 120 DOUBLE


BARRIERA DOPPIA
DOUBLE-RAIL BARRIER


-30°
RESISTANT TO LOW TEMPERATURES

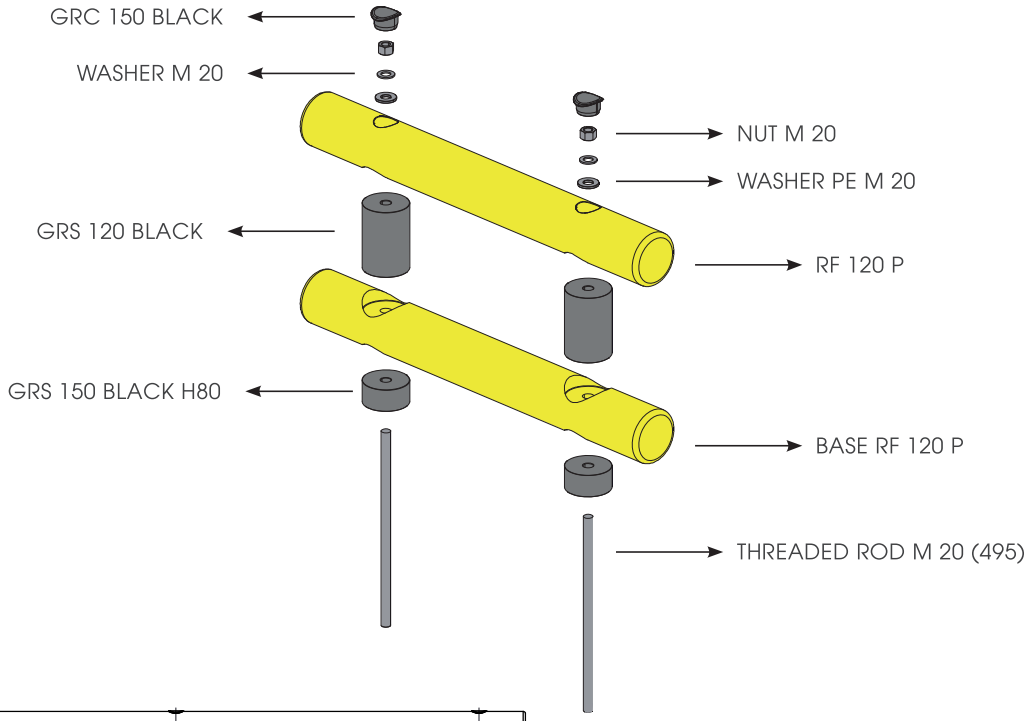


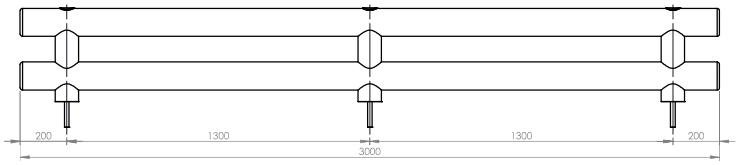


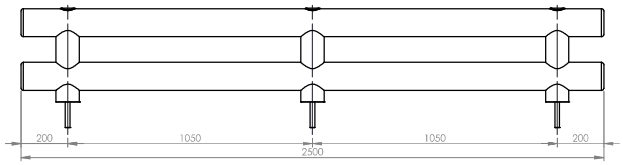


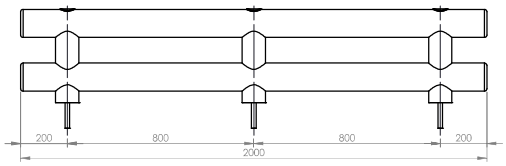


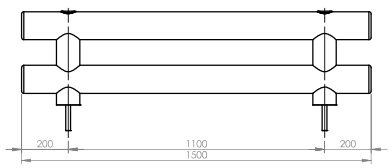

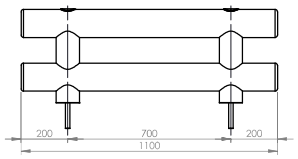

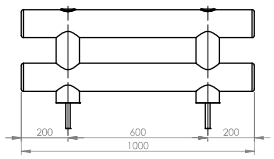

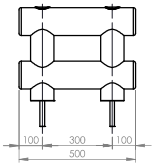

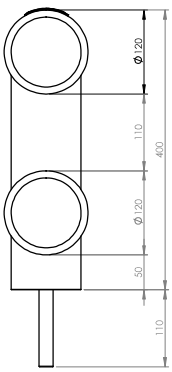

ROD FLOOR 120 DOUBLE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



SF20x 495
STAINLESS STEEL



ANCHOR
(FR)



ANCHOR
(NORDIC)
Only for low
temperatures




RESISTANT TO
LOW TEMPERATURES


ONLY WITH RESIN

CHEMICAL
ANCHOR

Ø24 mm

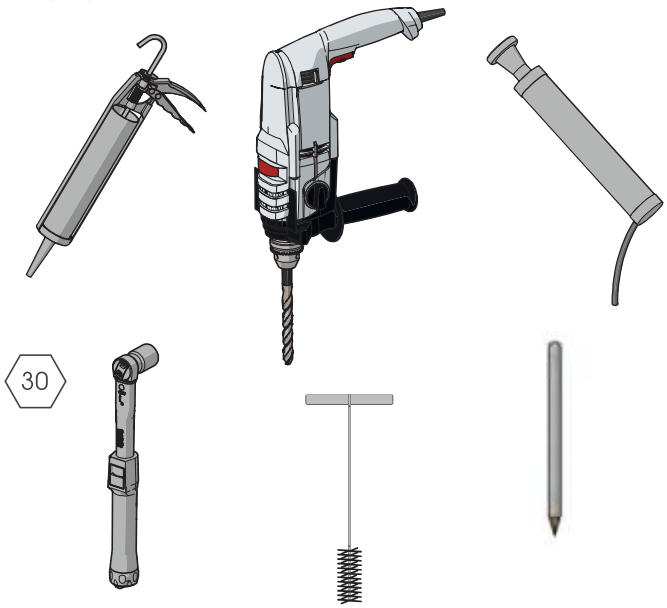


Ø24 mm

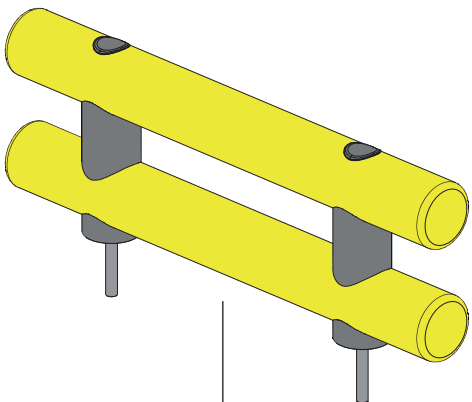


WARNING

The distance of installation depends
on speed and weight of vehicle

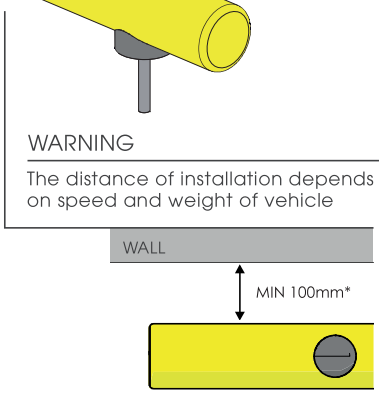


1




2



3

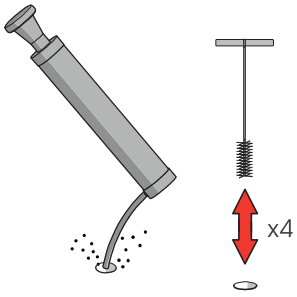

4

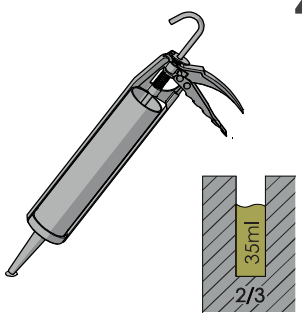

ROD FLOOR 120 DOUBLE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



SF20x 495
STAINLESS STEEL



ANCHOR
(FR)




ANCHOR
(NORDIC)
Only for low
temperatures




RESISTANT TO
LOW TEMPERATURES

ONLY WITH RESIN


5

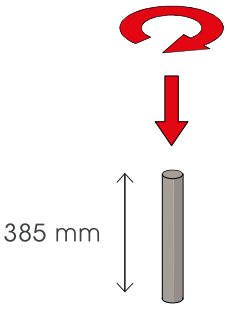


6



7

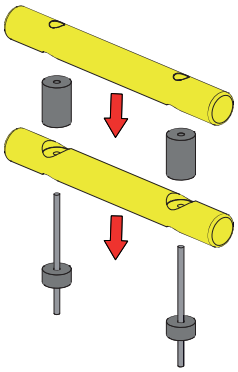


8

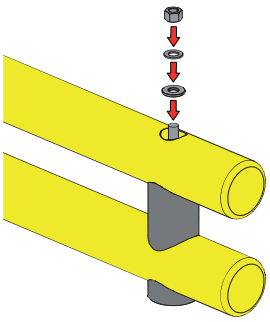


T=120Nm

9

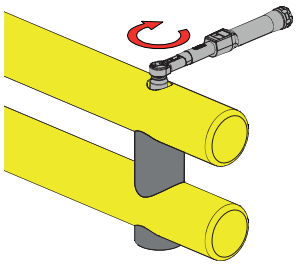


10

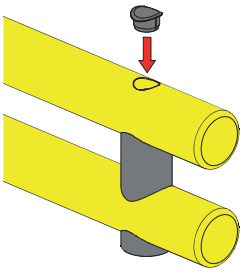



GR 90


BARRIERA SINGOLA
SINGLE-RAIL BARRIER


LIGHT LOAD / FOR HAND PALLET TRUCKS

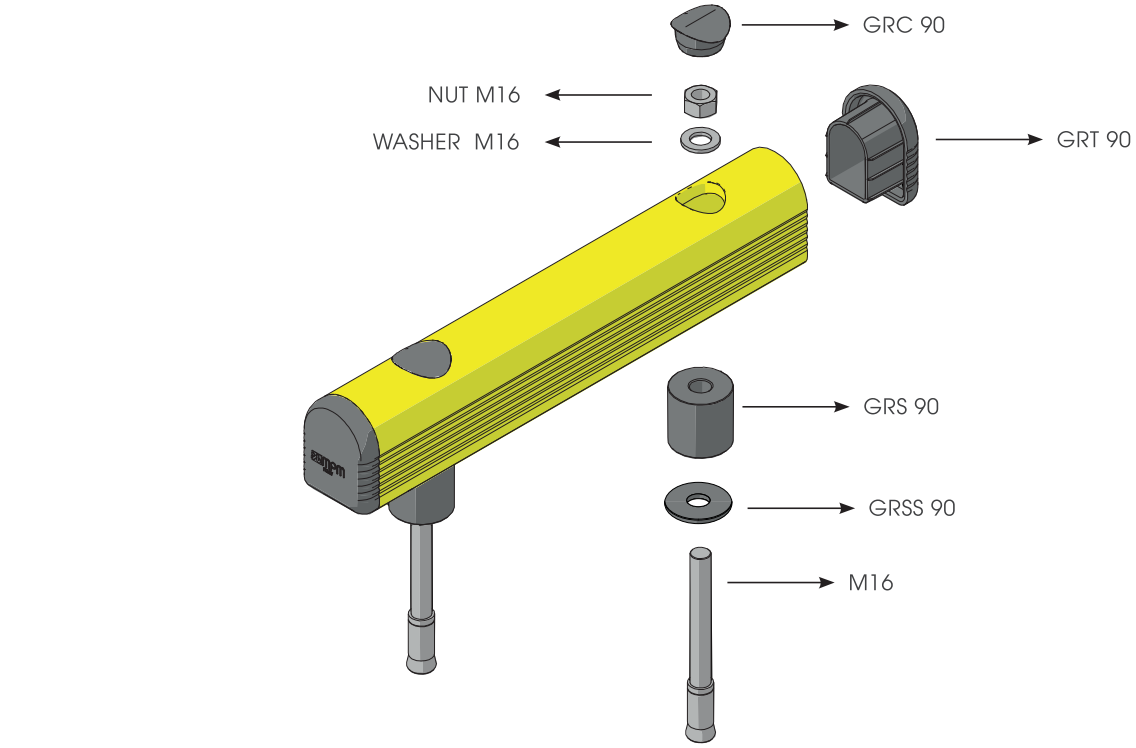


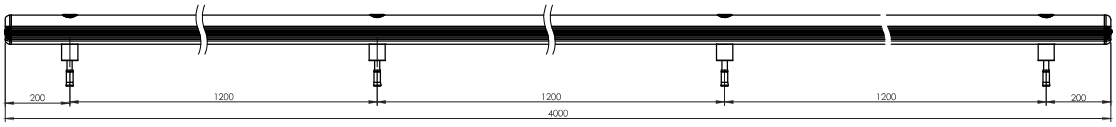


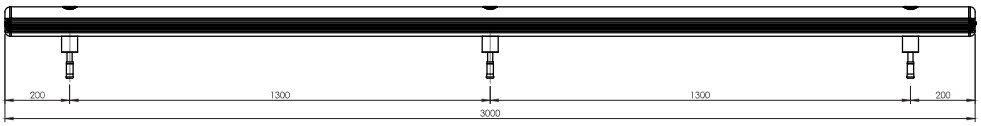


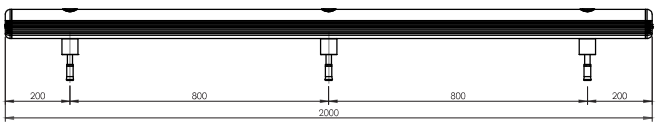


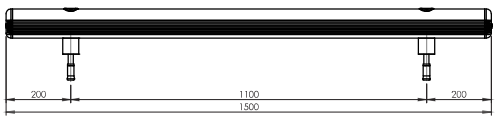

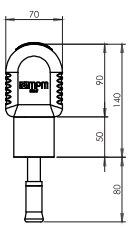

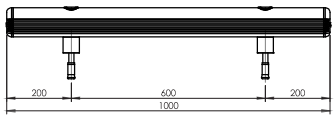

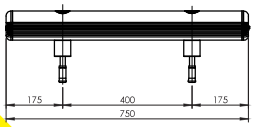

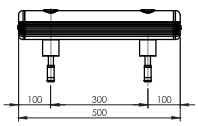

GR 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




M16 GALVANISED STEEL


WITH EXPANSION SCREW




1

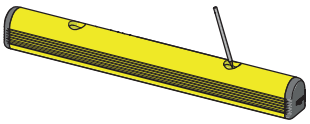

2

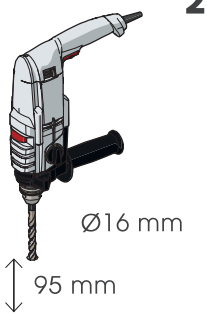


3

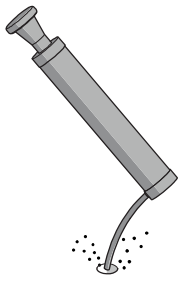

4



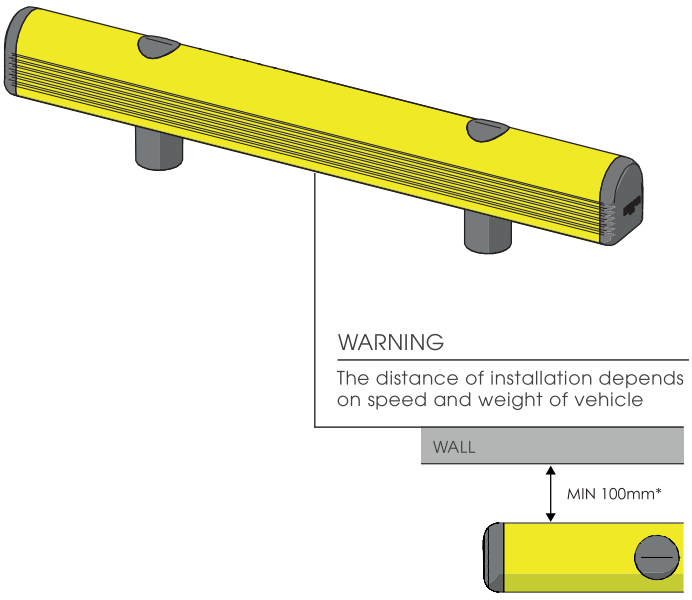

GR 90


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



M16 GALVANISED STEEL

WITH EXPANSION SCREW


5

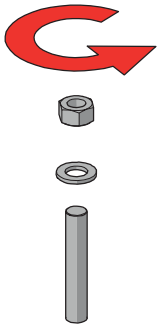


6



7

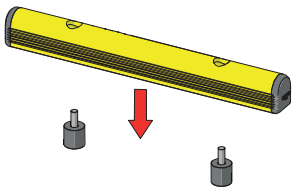


8

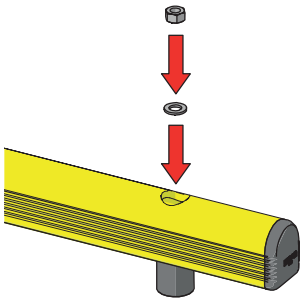


T=120Nm

9

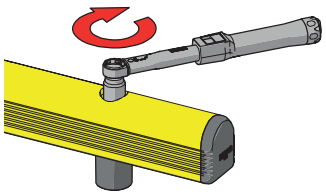

10

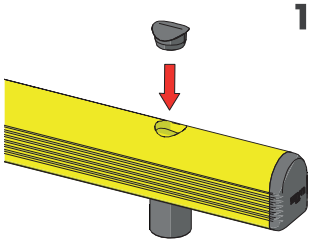

GR 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



SF16 INOX



ANCHOR (FR)


WITH RESIN

CHEMICAL ANCHOR


Ø18 mm



24






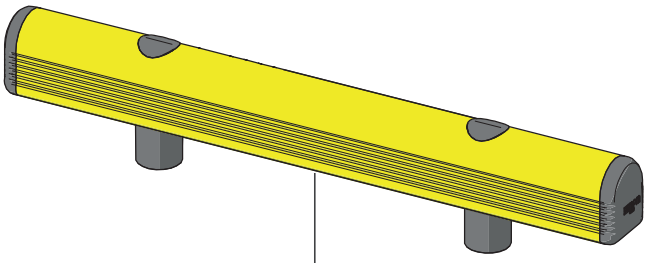


WARNING


The distance of installation depends on speed and weight of vehicle

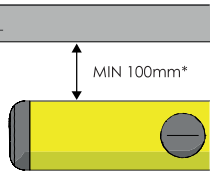


1

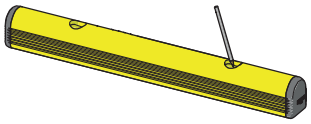

2

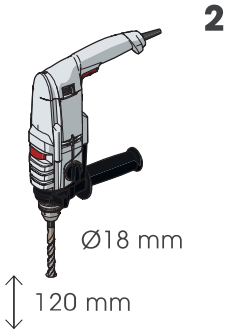

3

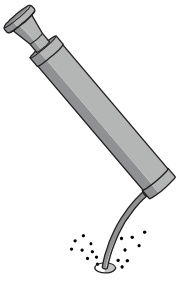

4



GR 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




SF16 INOX



ANCHOR (FR)

WITH RESIN


5

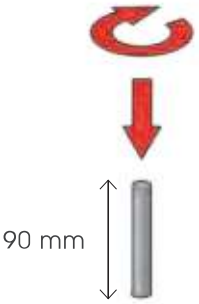


6




7

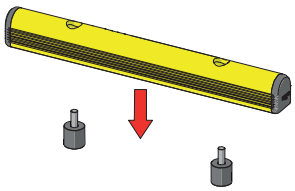


8

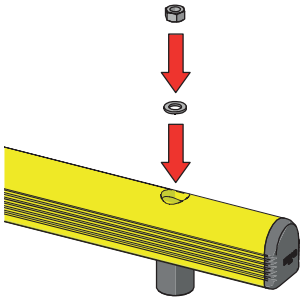

T=60Nm **9**

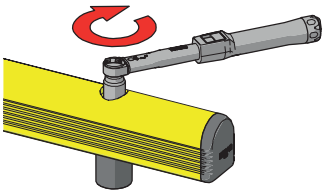


10

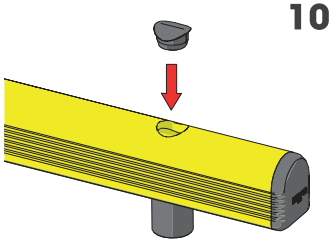


GR 150

BARRIERA SINGOLA
SINGLE-RAIL BARRIER

HEAVY LOAD / FOR FORKLIFTS

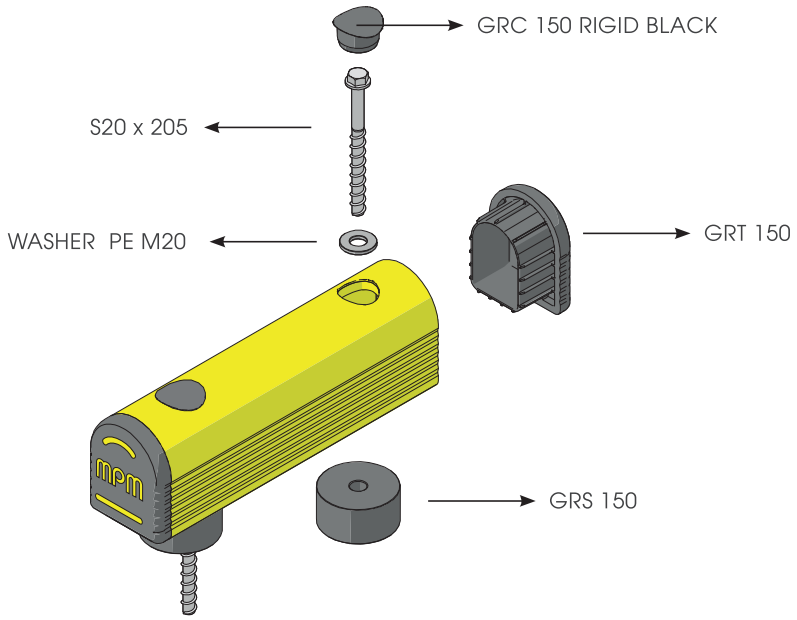

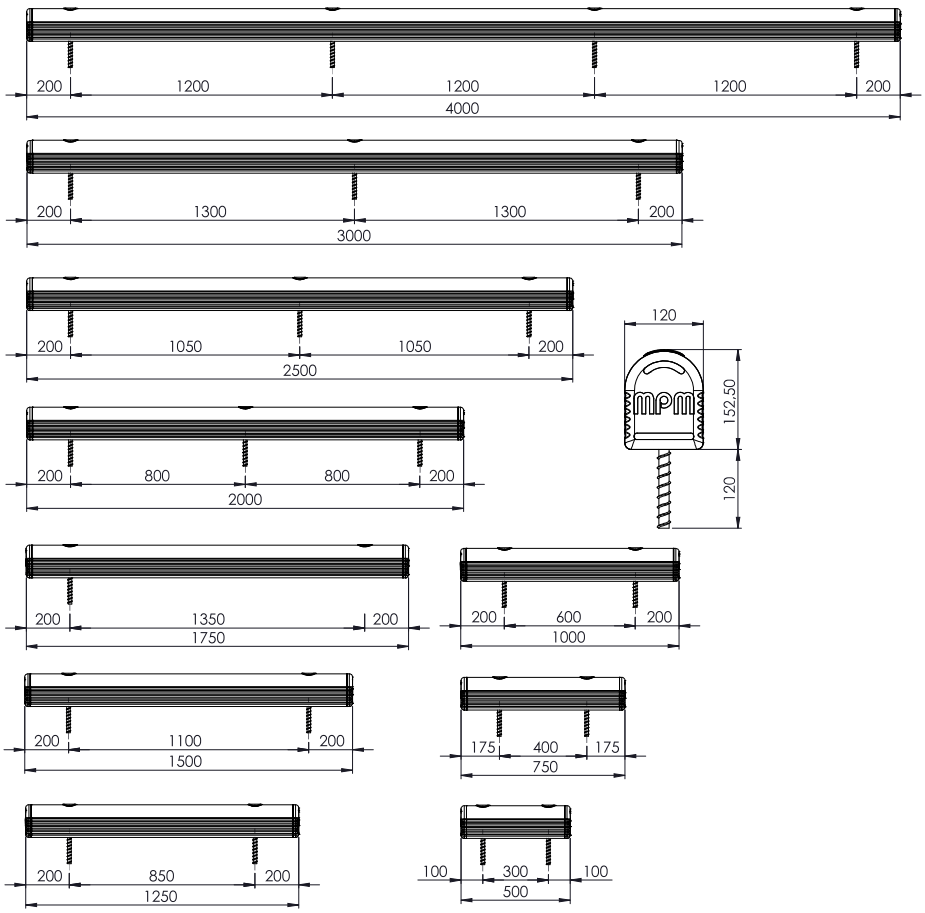


GR 150


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




1

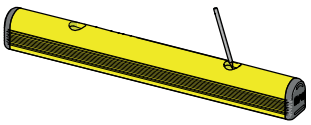


2

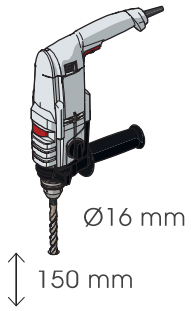


3

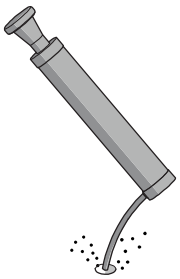

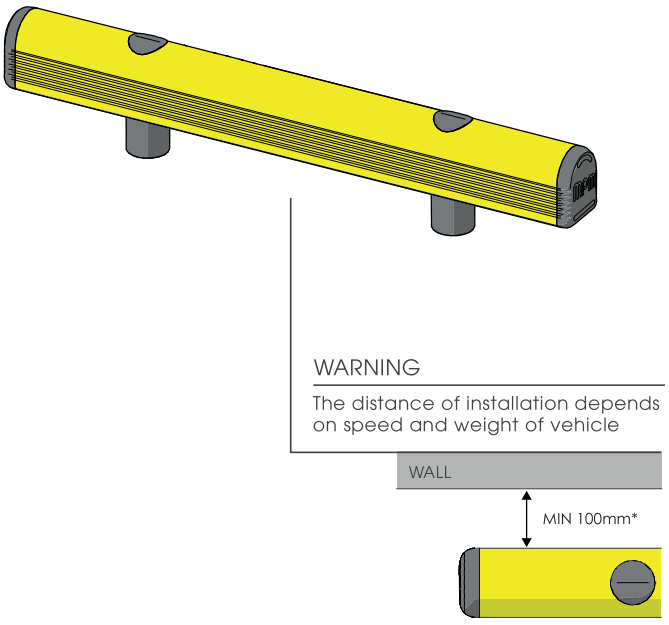


4

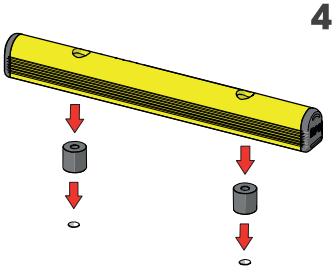


GR 150

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

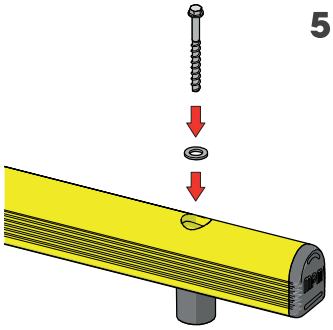

6

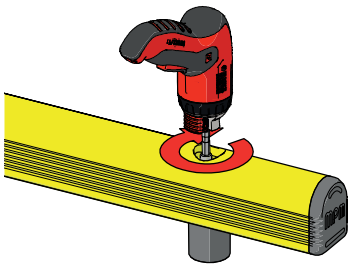



7

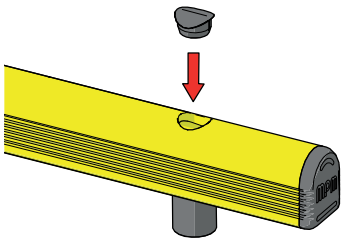

TRUCK LINE

HEAVY LOAD / FOR FORKLIFTS

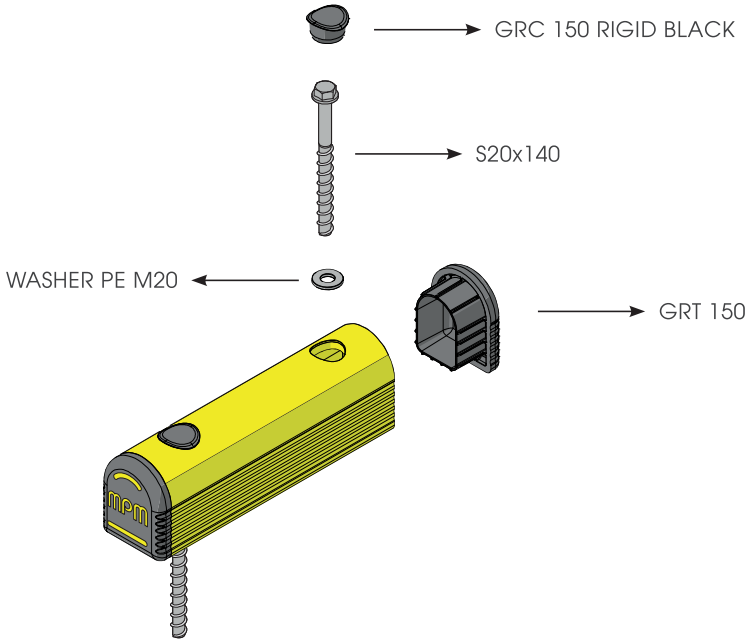

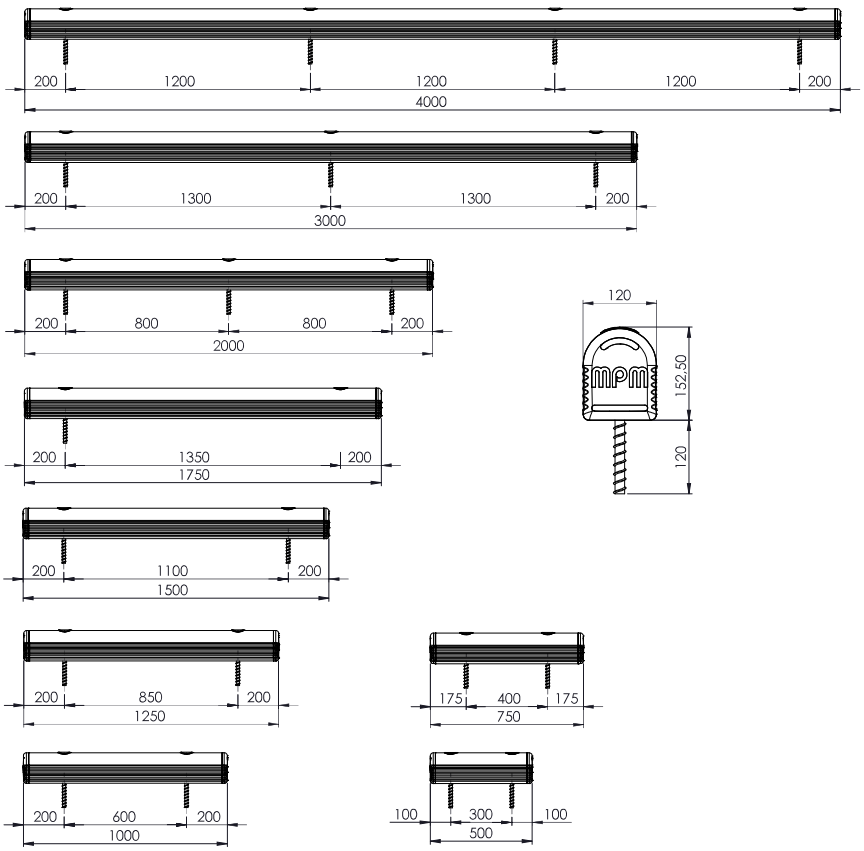


TRUCK LINE


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

WARNING

The distance of installation depends on speed and weight of vehicle


Ø16 mm

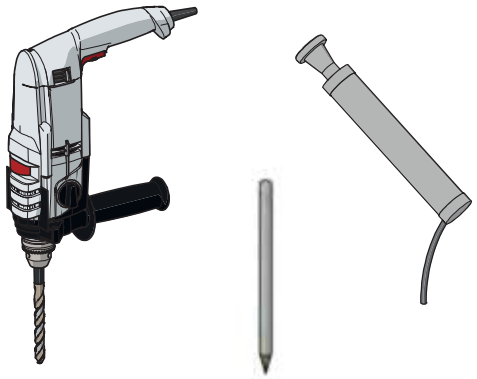

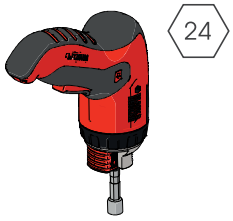


WARNING


The distance of installation depends on speed and weight of vehicle

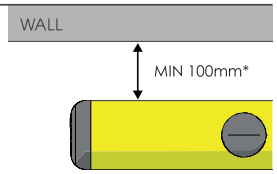


1

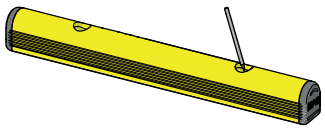


2

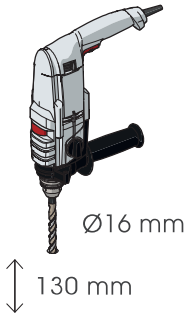


3

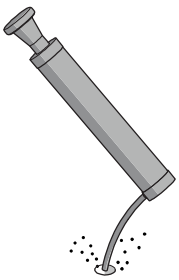


4

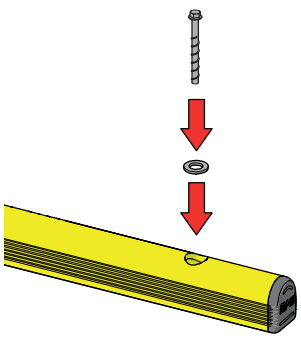

5

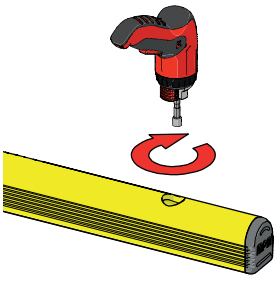


6

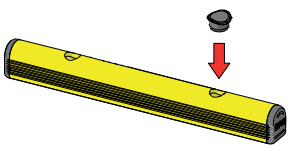



GRIN 90

GUARD RAIL CONTINUO
CONTINOUS GUARD RAIL

LIGHT LOAD / FOR HAND PALLET TRUCKS

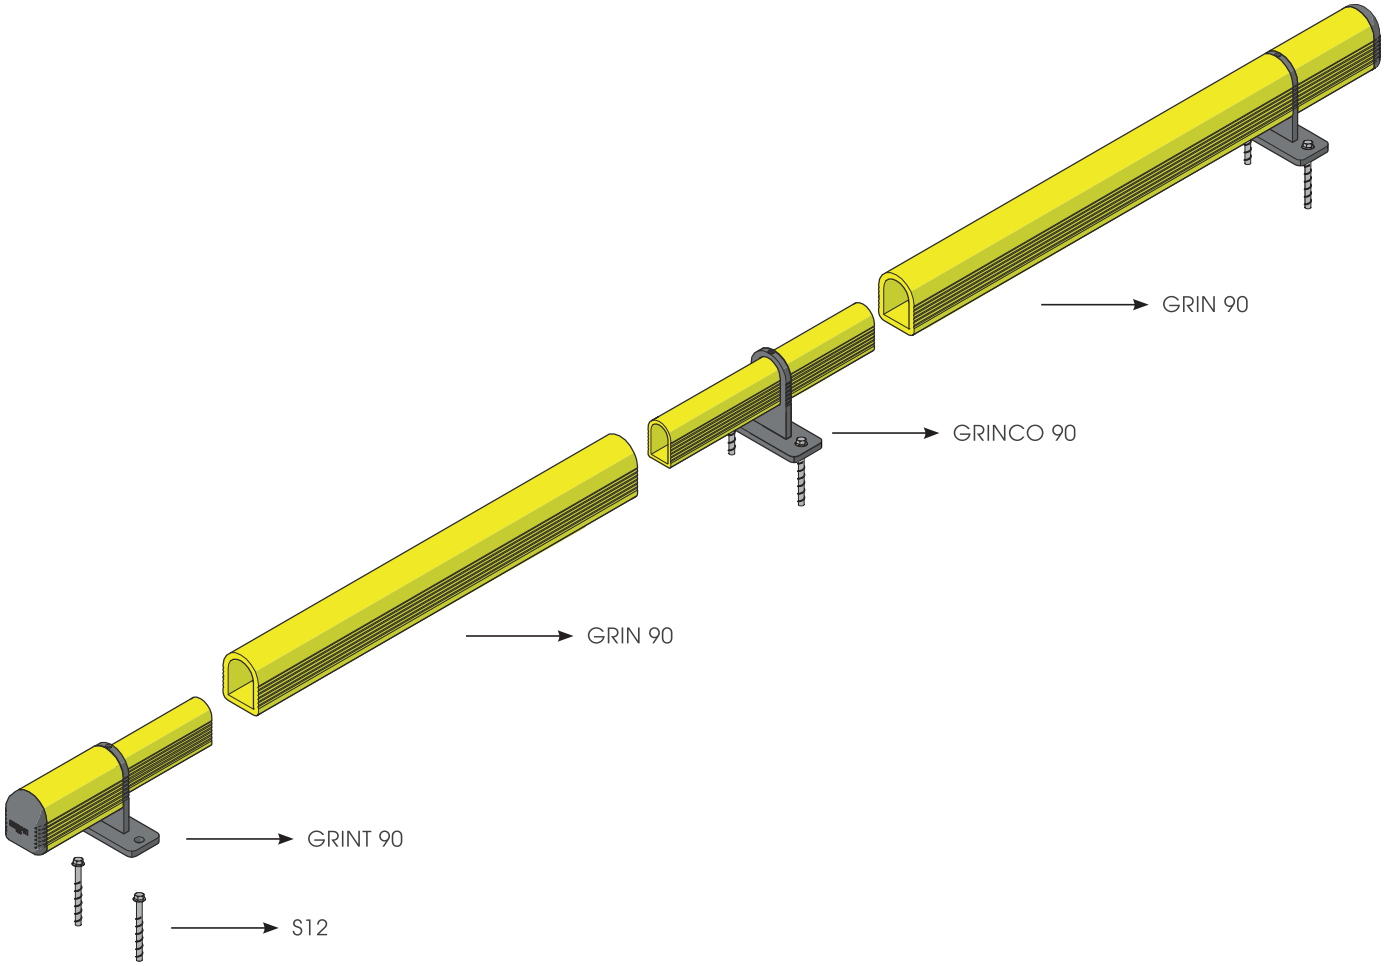

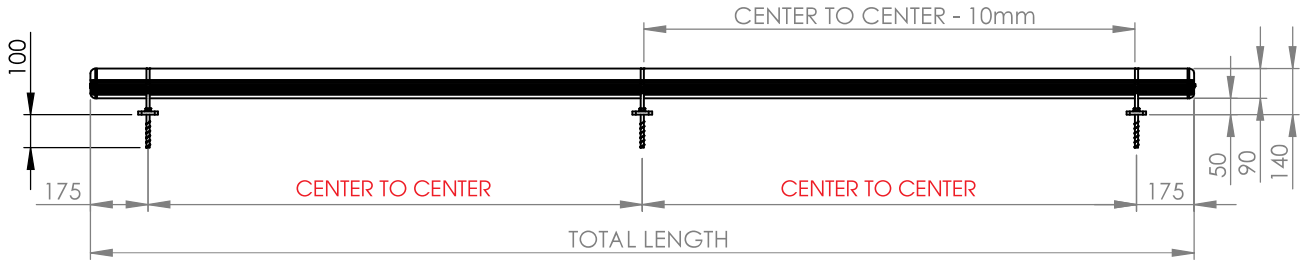

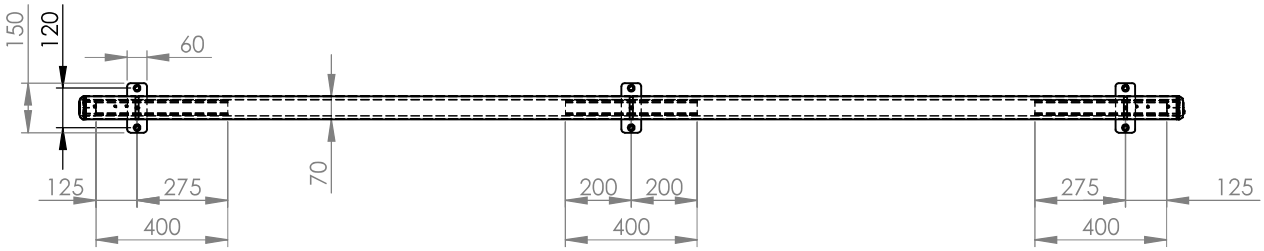



GRIN 150


GUARD RAIL CONTINUO
CONTINOUS GUARD RAIL

IMPACT TEST PASSED
according to
AFNORNP P98-310


HEAVY LOAD / FOR FORKLIFTS

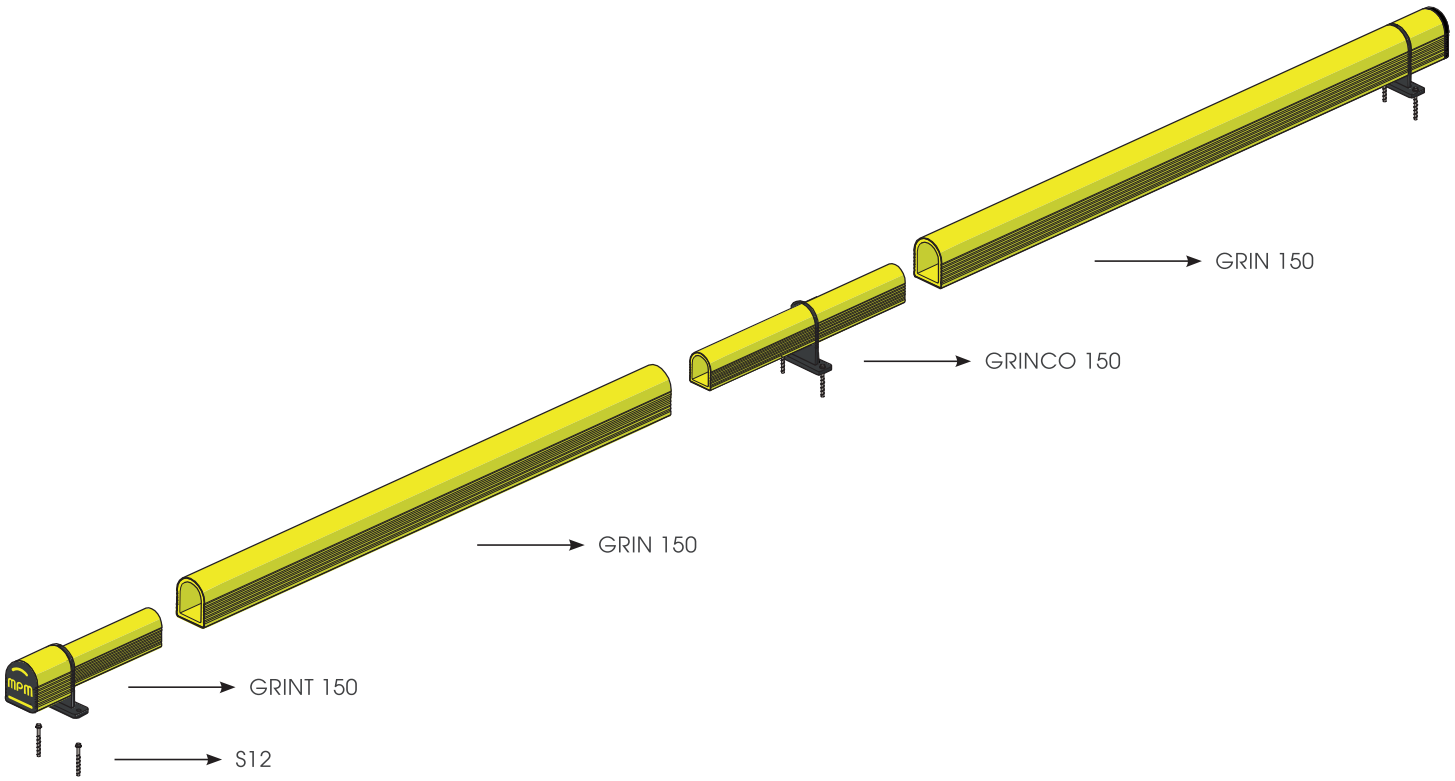


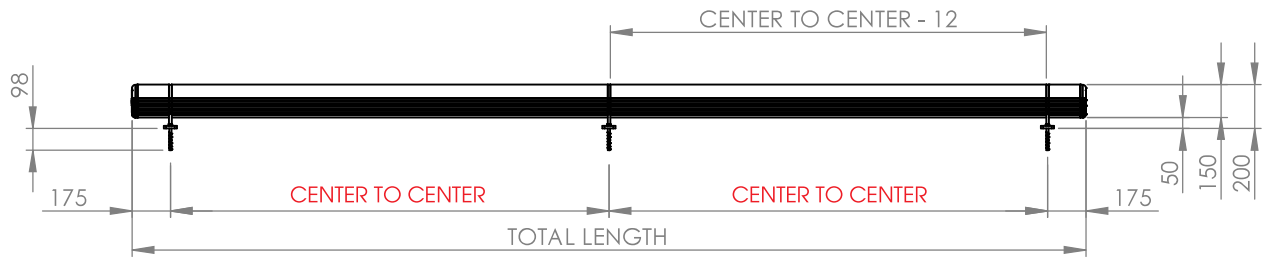

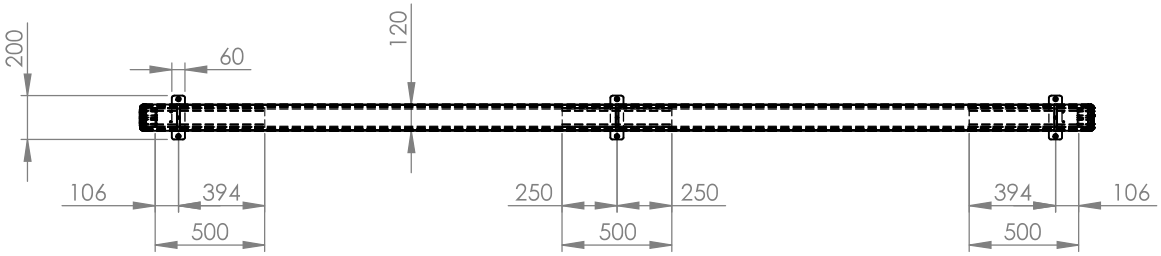


GRIN 90/150

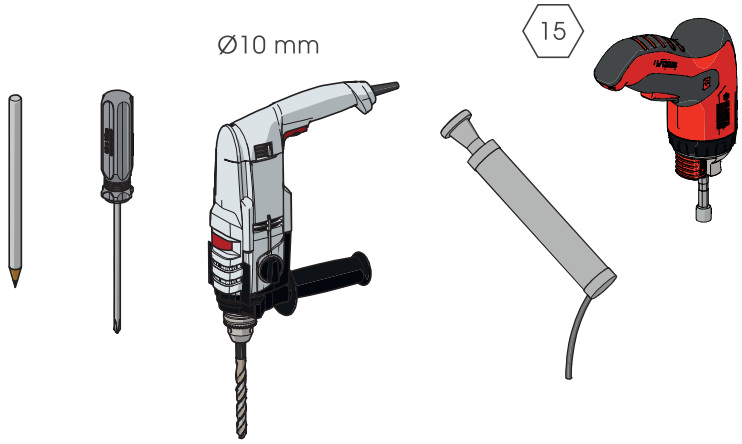

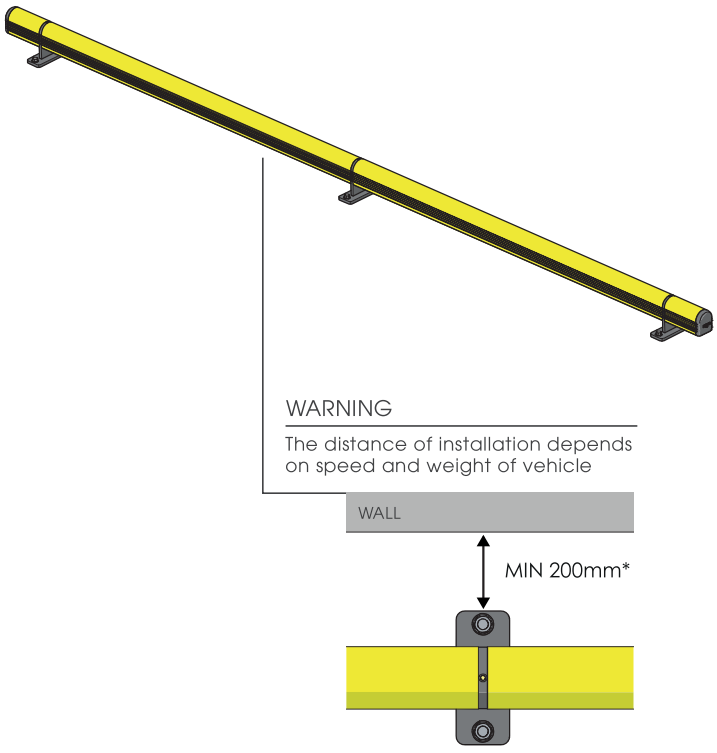


1

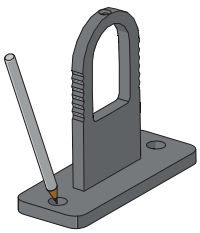


2




3

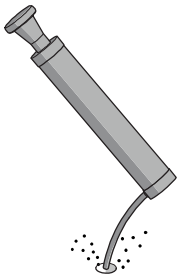

4

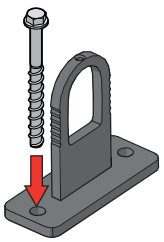


5

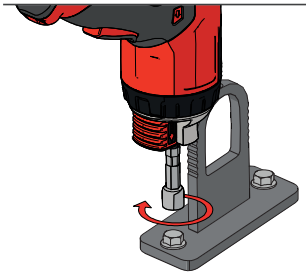


GRIN 90/150

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


6

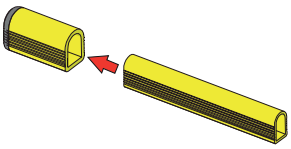


7

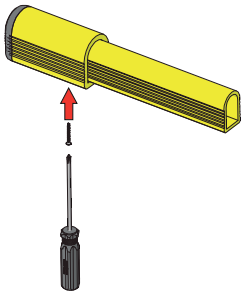


8

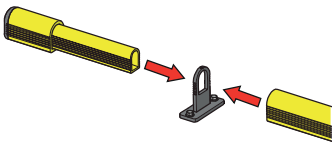


9

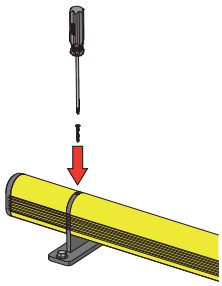


10

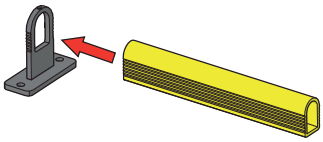


11

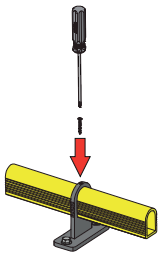


12

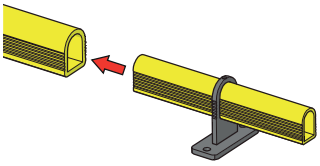


13

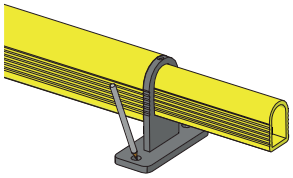


14

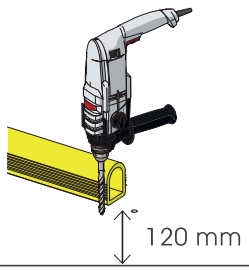


15

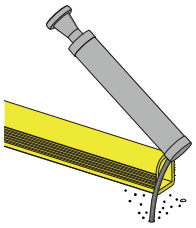


16

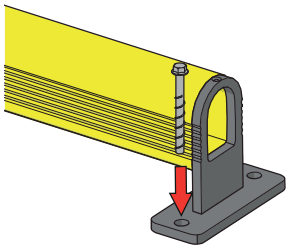


17

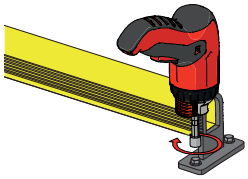


18

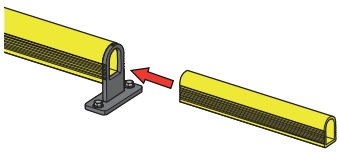

19

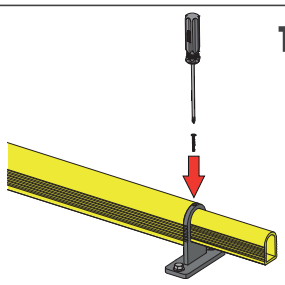


20

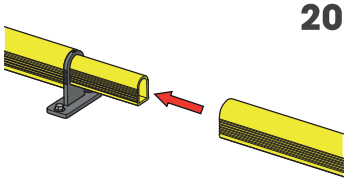


GUARDIAN 200


HEAVY LOAD / FOR FORKLIFTS

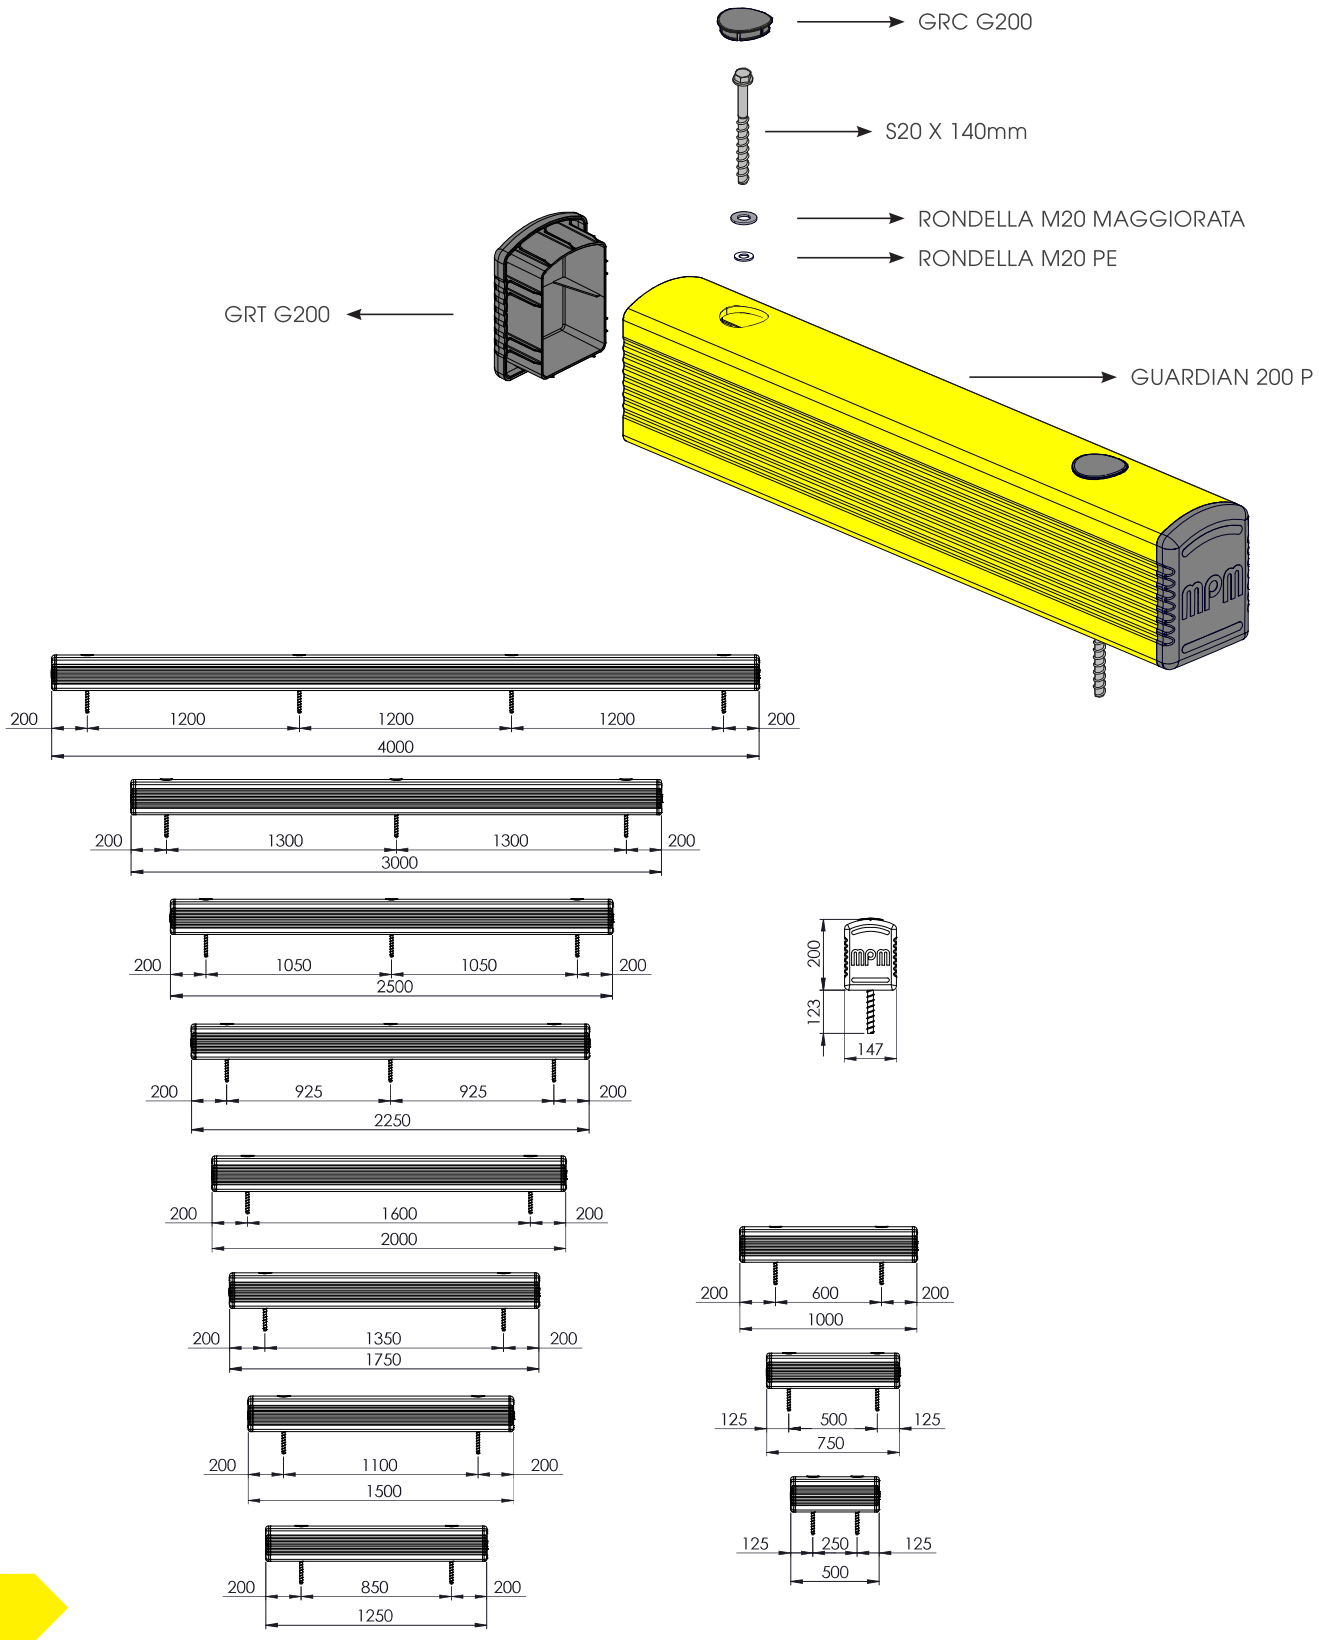


GUARDIAN 300

HEAVY LOAD / FOR FORKLIFTS

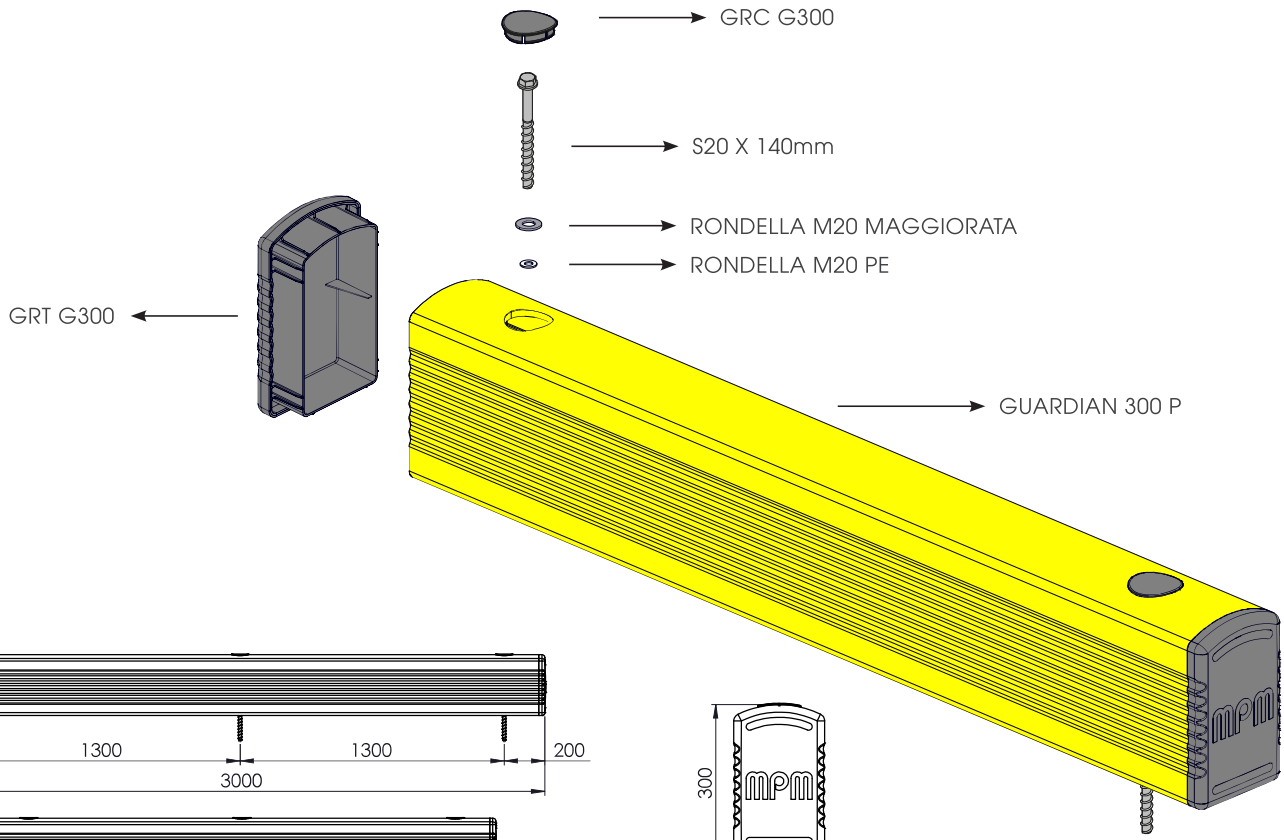

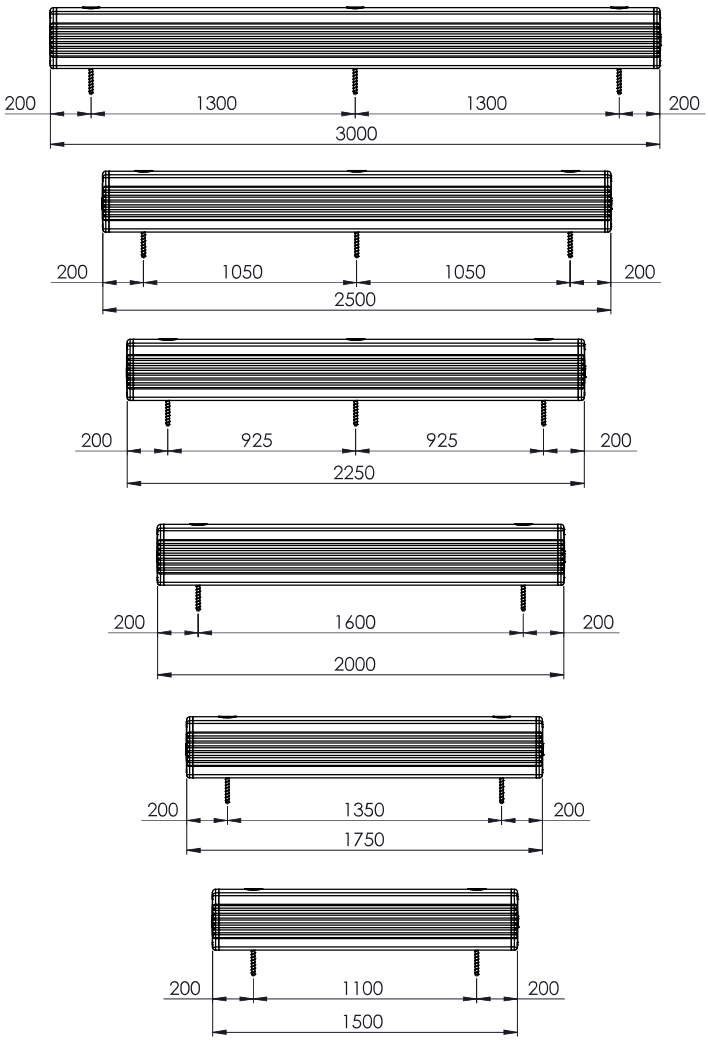

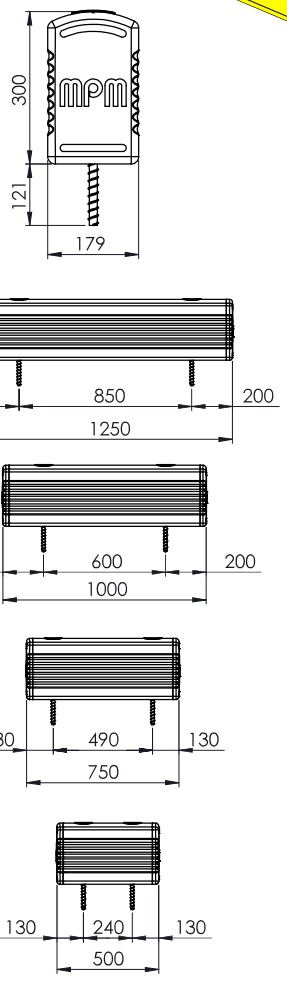



GUARDIAN 200/300

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

WARNING


The distance of installation depends on speed and weight of vehicle

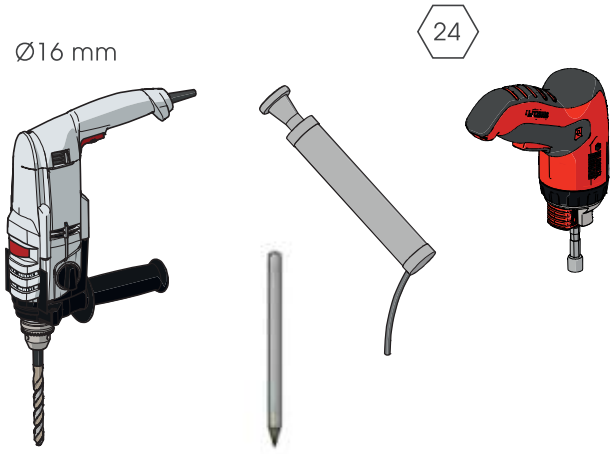

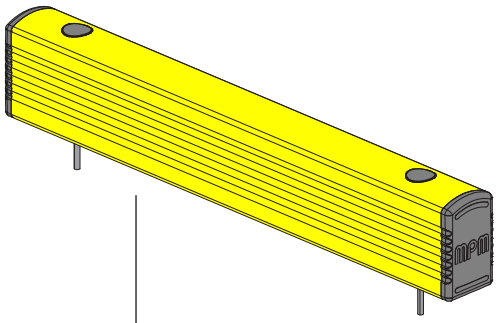


WARNING


The distance of installation depends on speed and weight of vehicle

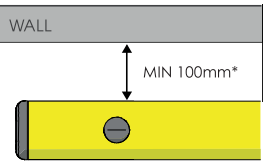


1

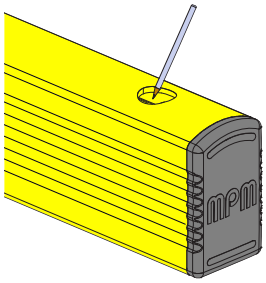


2

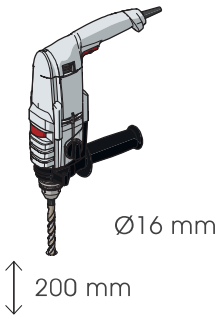


3

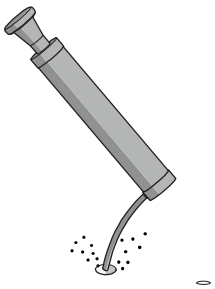


4

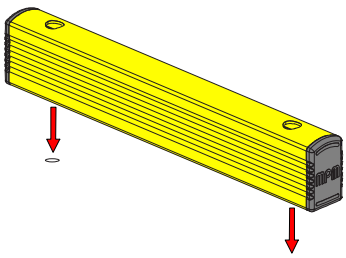


5

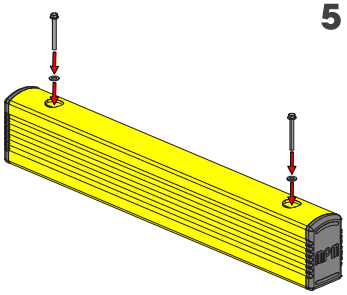

6

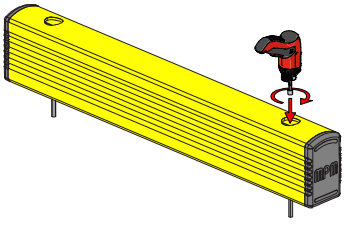


7

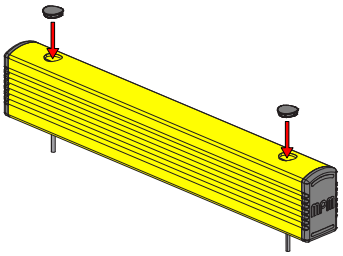



HR 90

BARRIERA PEDONALE
HAND RAIL BARRIER

LIGHT LOAD / FOR HAND PALLET TRUCKS

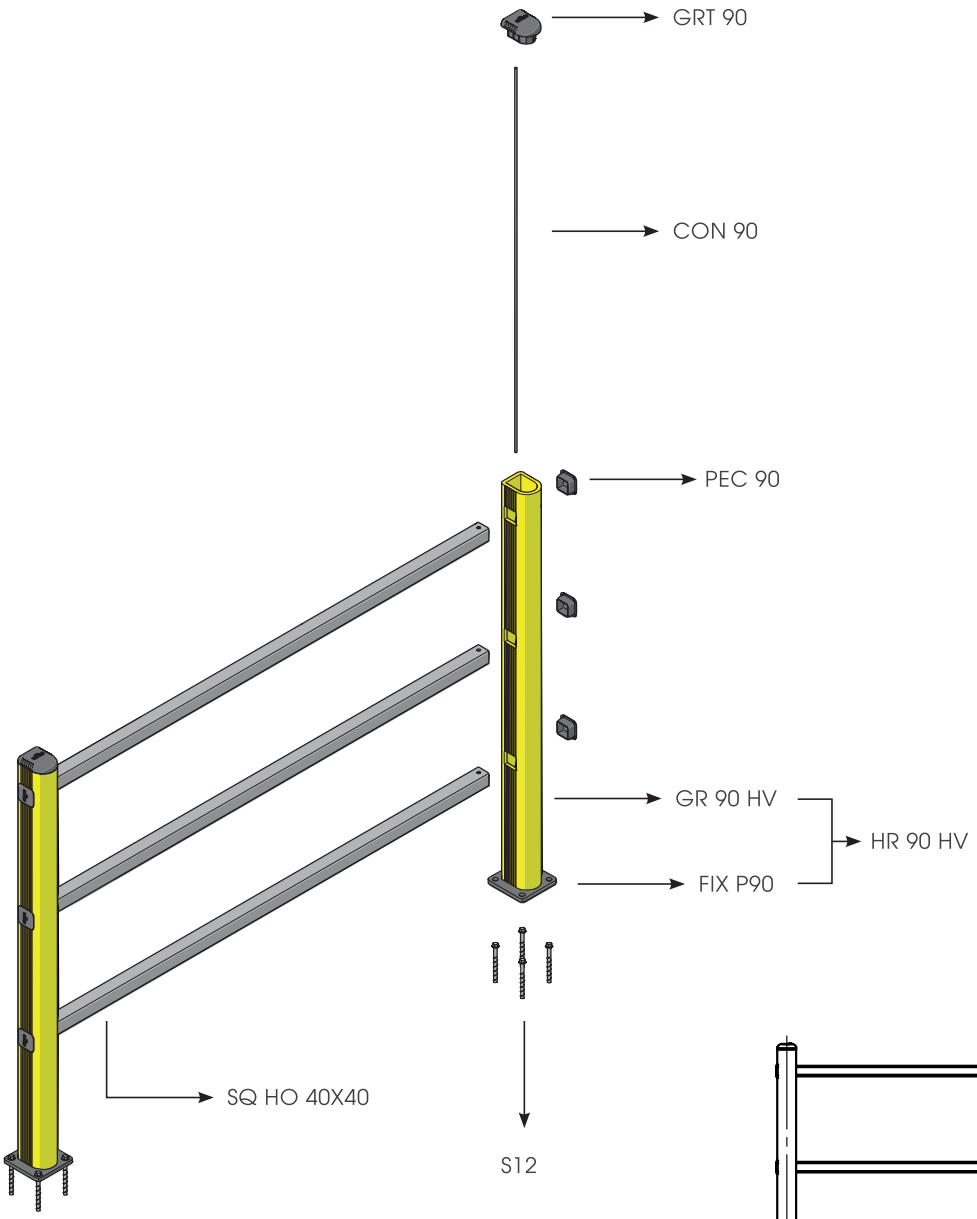


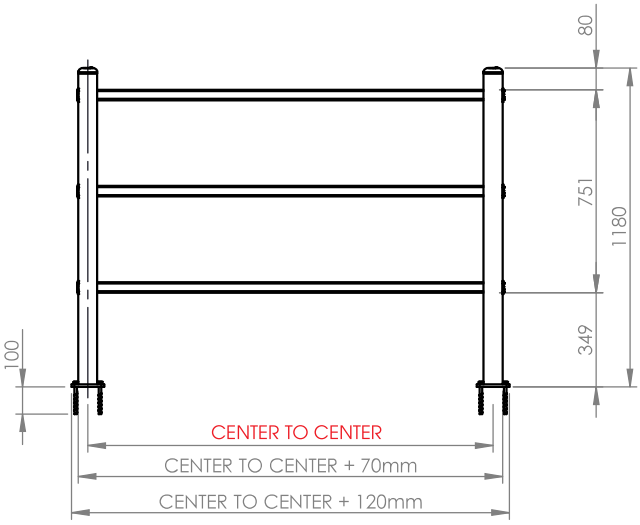




HR 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

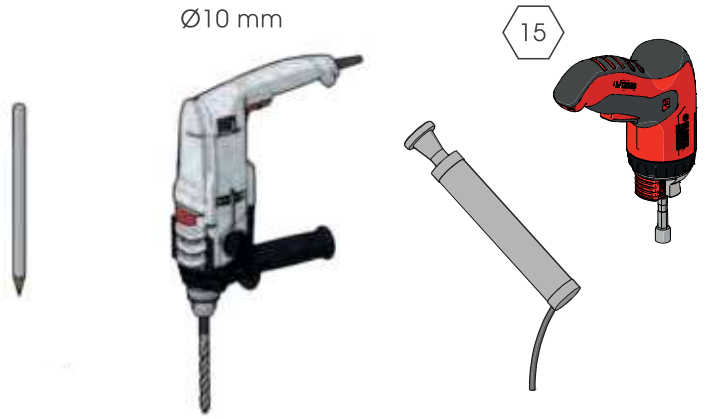





1

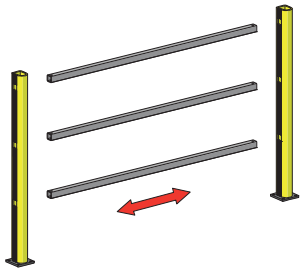


2

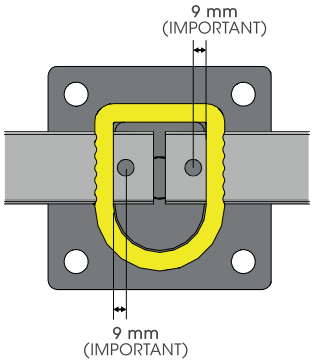

3

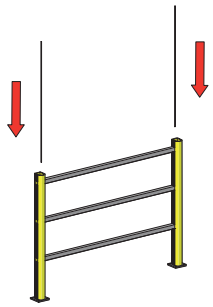


4

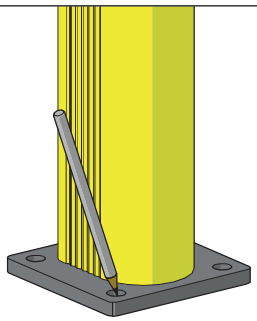

HR 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

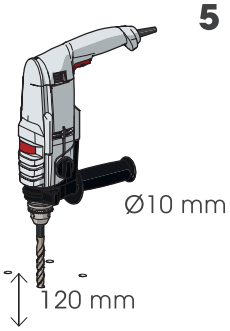


6




7

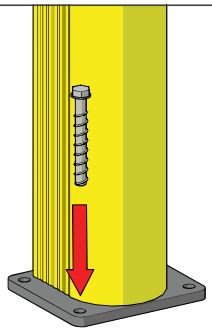


8

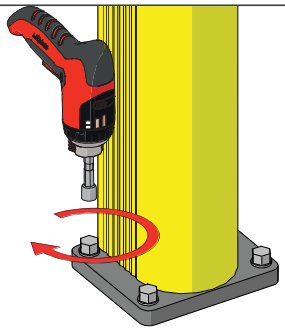

9

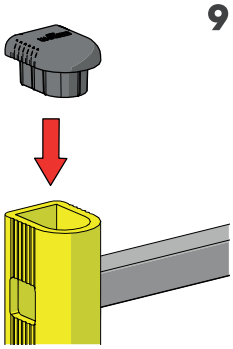


10

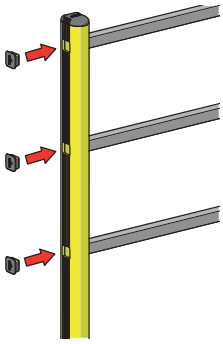



PED 90

BARRIERA DI SICUREZZA
SAFETY BARRIER

LIGHT LOAD / FOR HAND PALLET TRUCKS

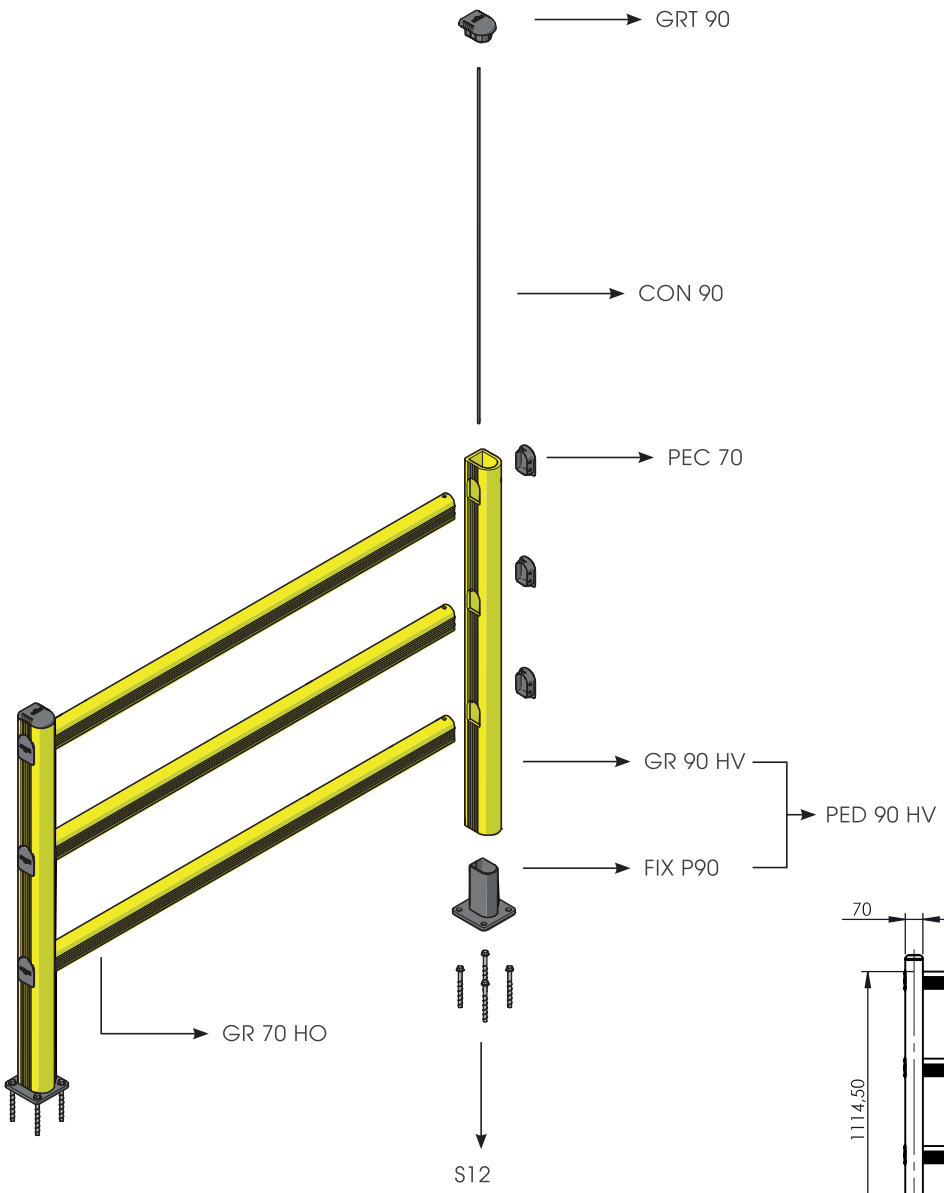


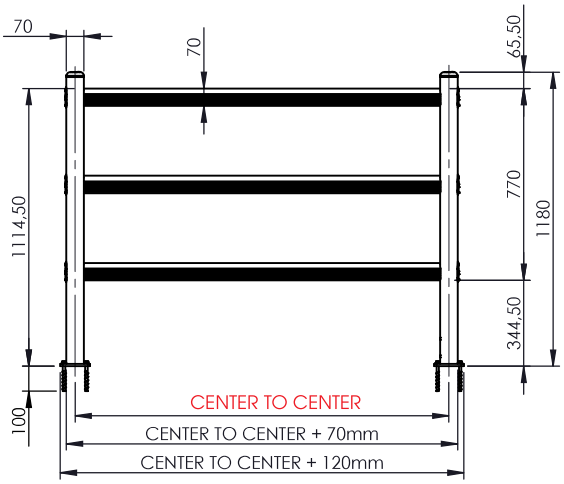


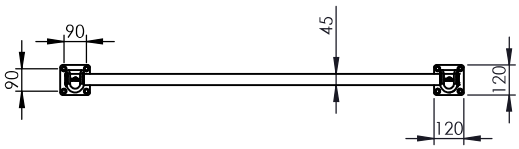


PED 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

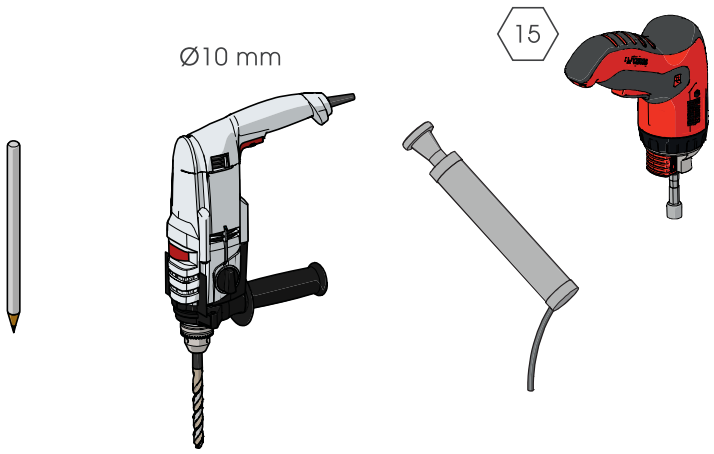


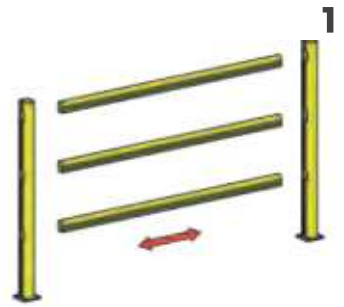

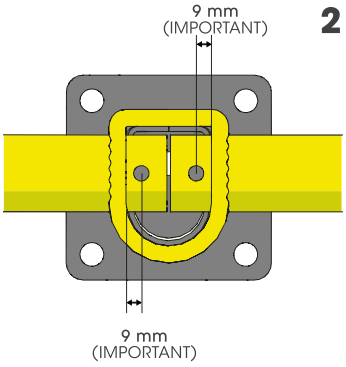






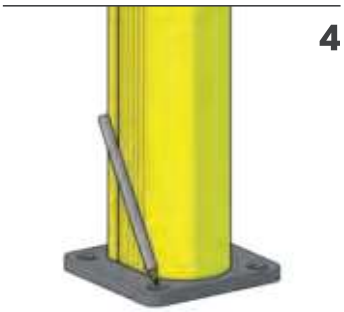


PED 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

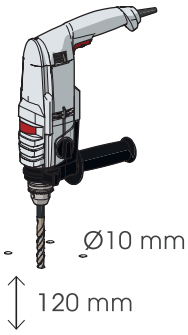


6

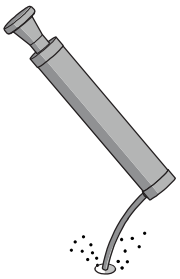


7

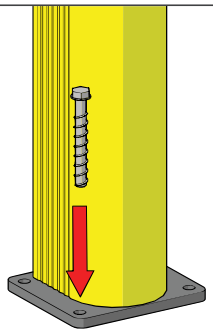


8

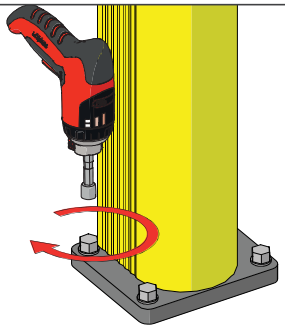

9

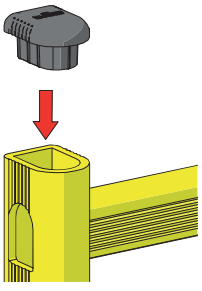


9

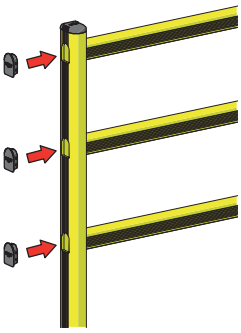



CORNER PED 90


BARRIERA DI SICUREZZA
SAFETY BARRIER

LIGHT LOAD / FOR HAND PALLET TRUCKS

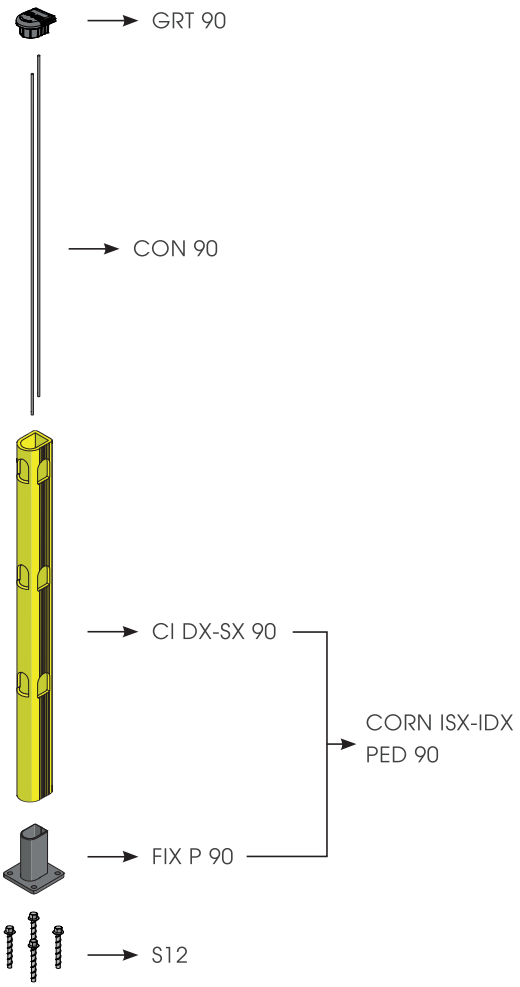

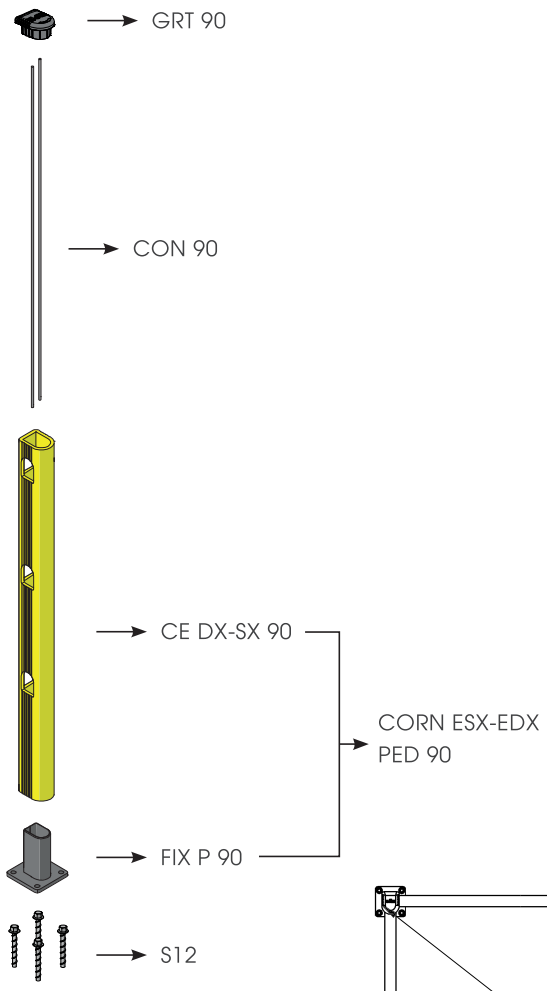

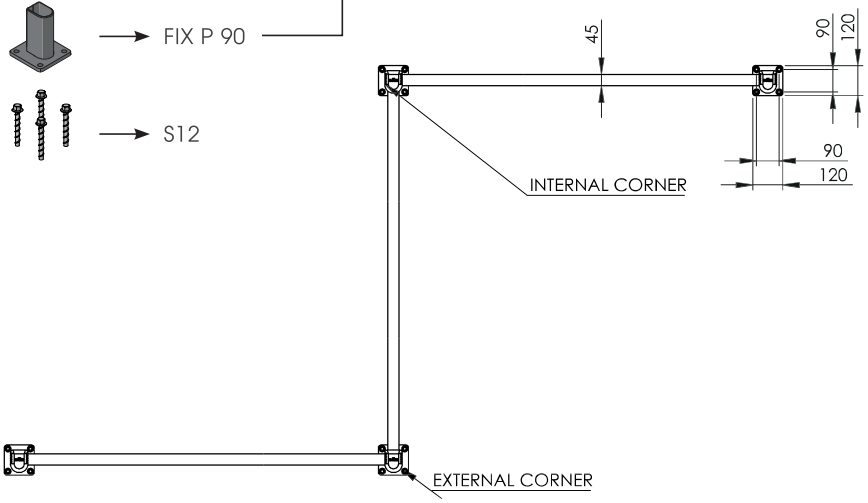

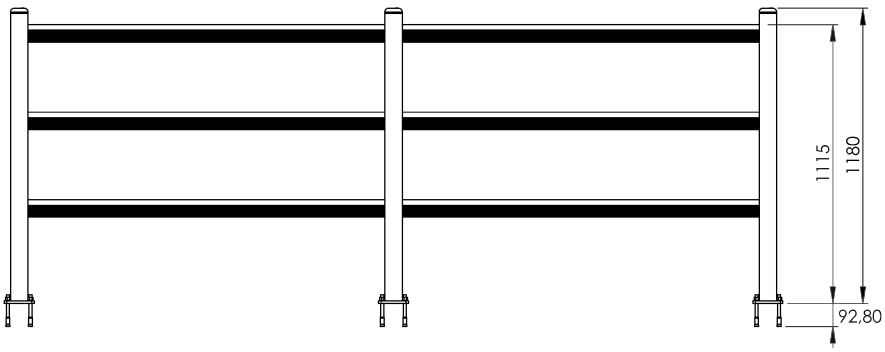


CORNER PED 90


BARRIERA DI SICUREZZA
SAFETY BARRIER

PLEASE CHECK HERE BELOW
WHICH POSITION OF THE CORNER YOU NEED


☐ EXTERNAL SX (L)

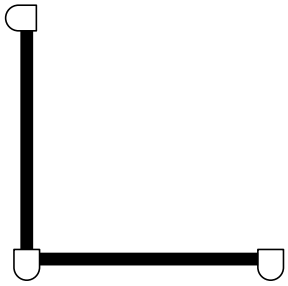


☐ EXTERNAL DX (R)

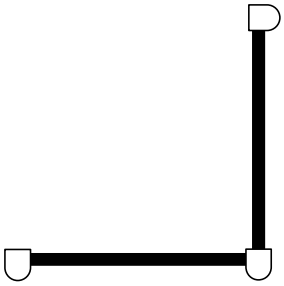

☐ INTERNAL SX (L)

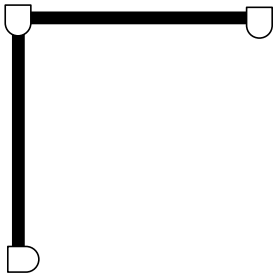



☐ INTERNAL DX (R)

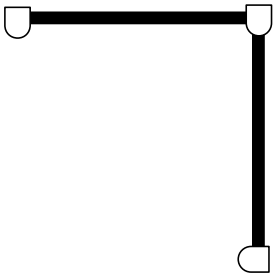



CORNER PED 90


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

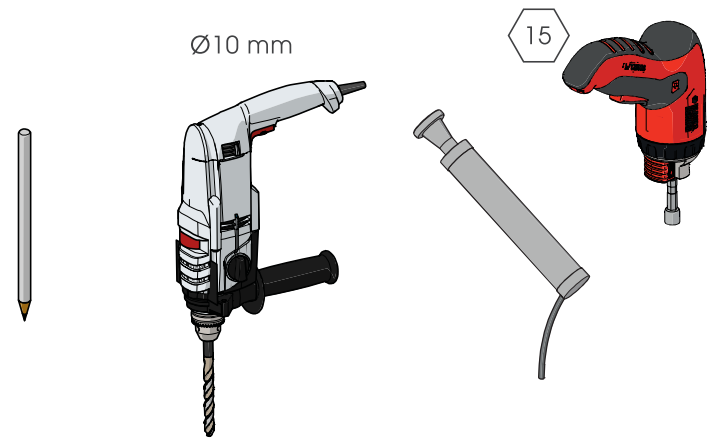


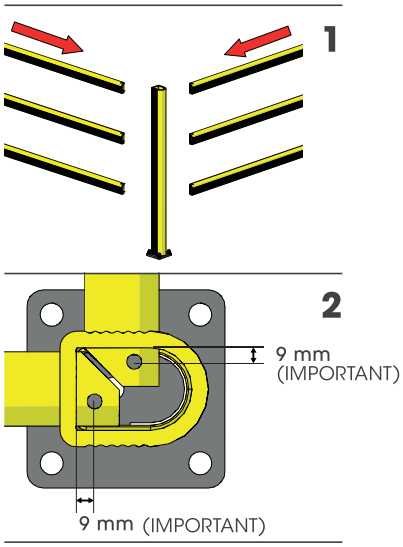

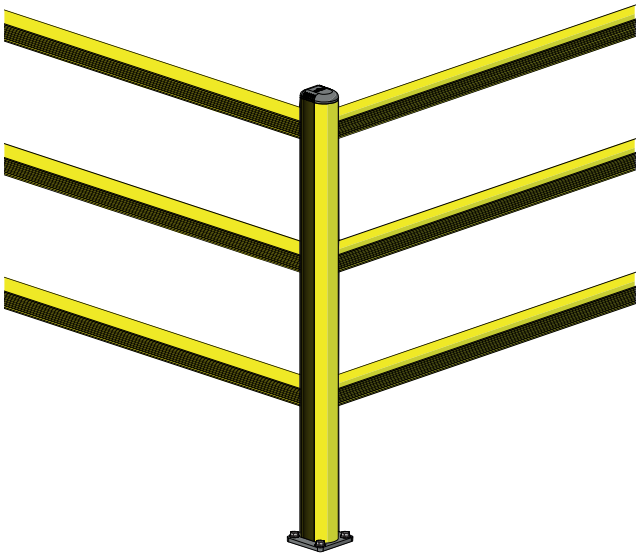

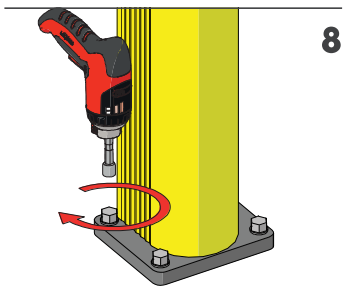

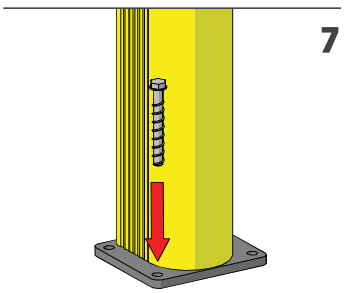


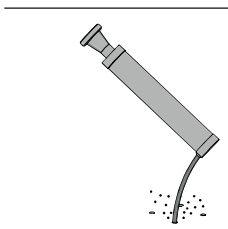


PED 90 GL REF

HEAVY LOAD / FOR FORKLIFTS


BARRIERA DI SICUREZZA
SAFETY BARRIER

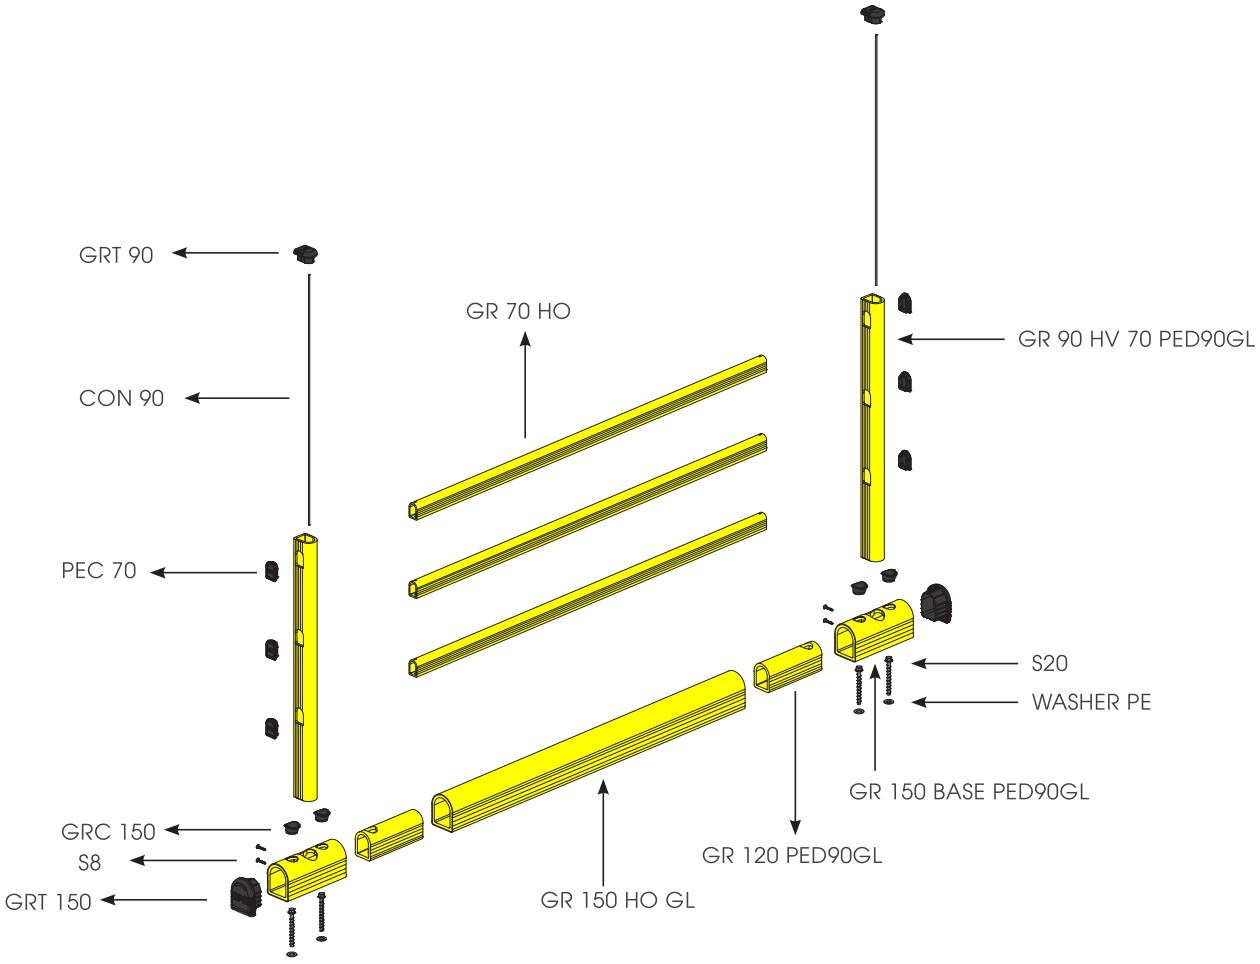

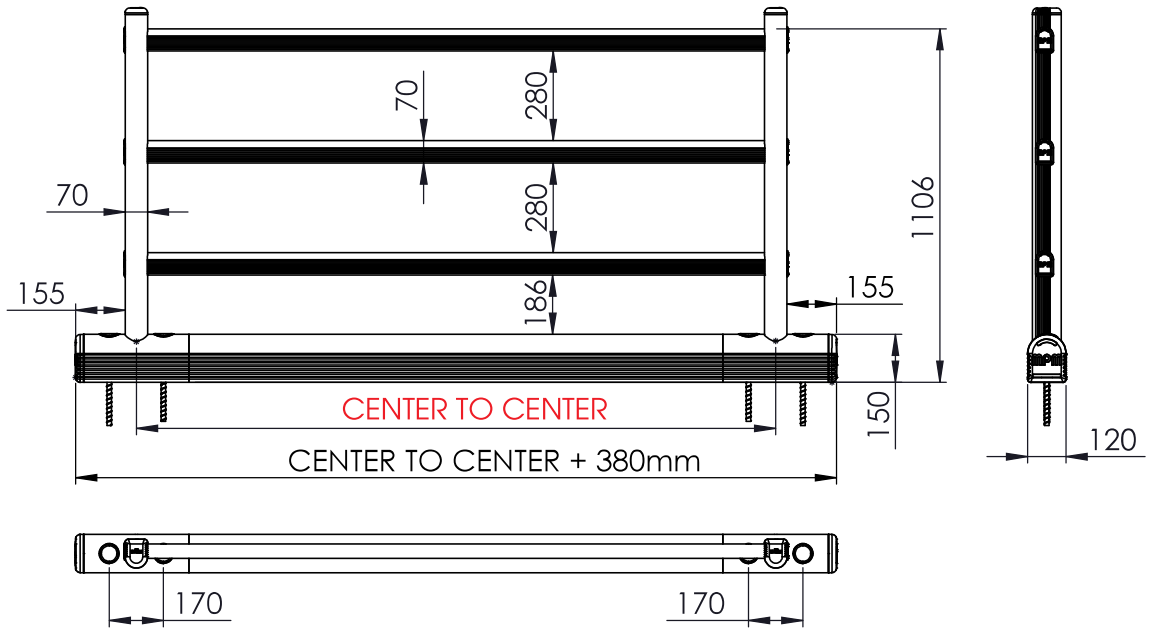


PED 90 GL REF


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

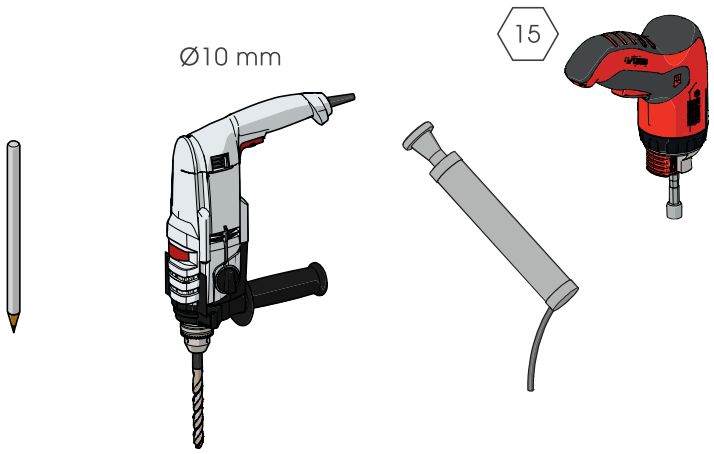


1

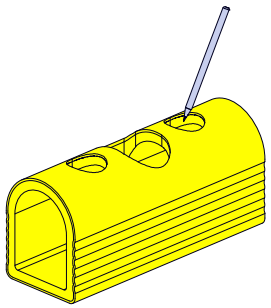


2

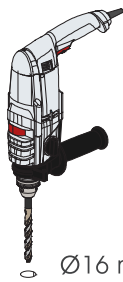


3

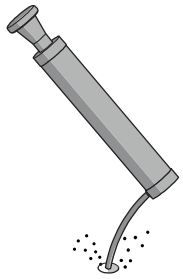

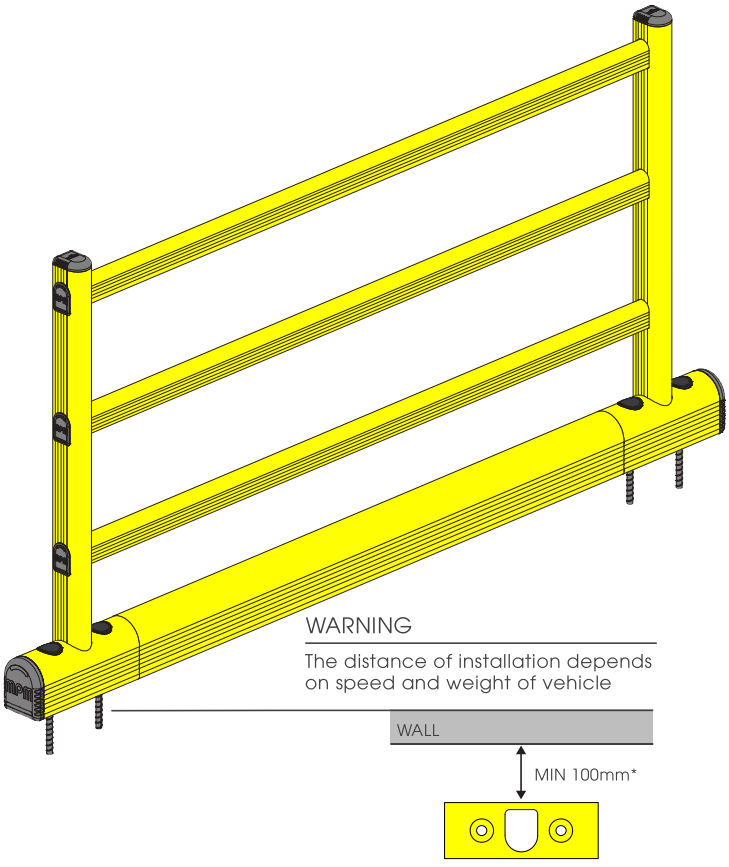


4

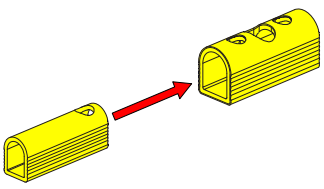


PED 90 GL REF

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

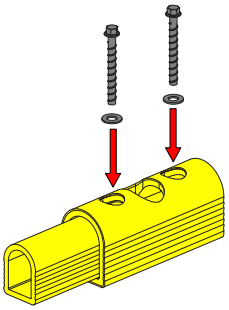


6

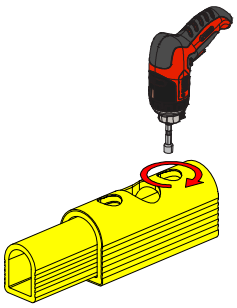


7

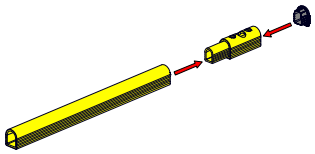


8

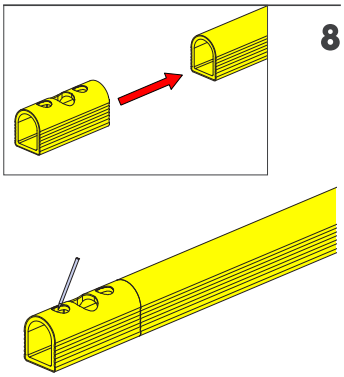


9

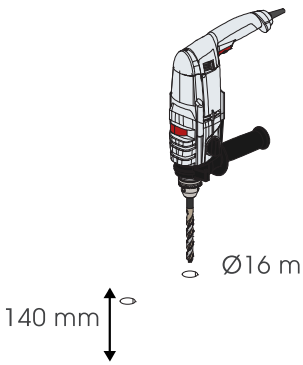


10

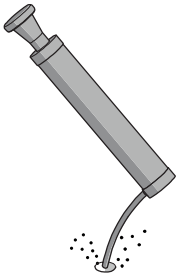


11

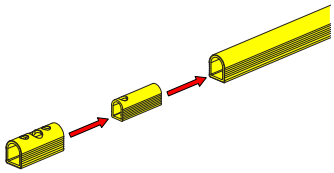


12

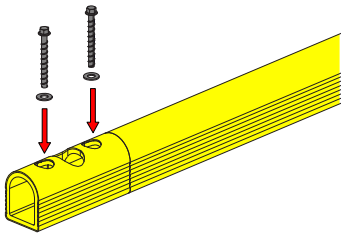


13

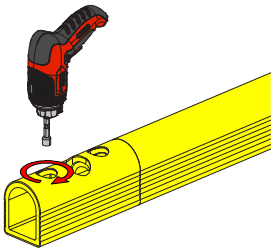


14

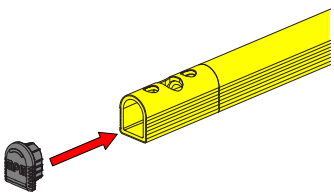

15

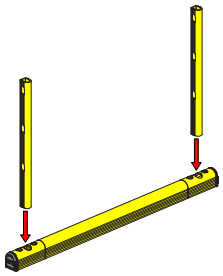


16

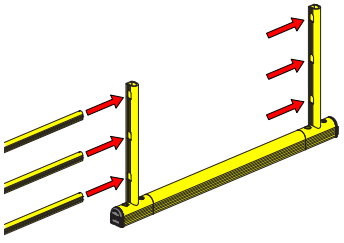


PED 90 GL REF

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


17

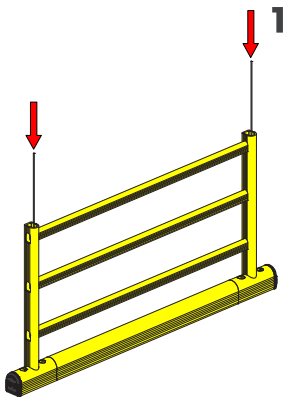

18

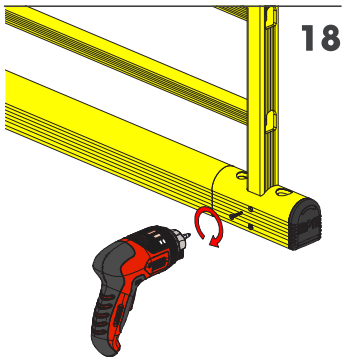


19

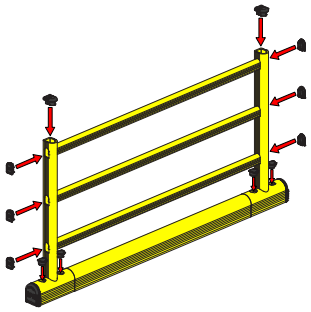


PED 90 LINK

BARRIERA DI SICUREZZA
SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

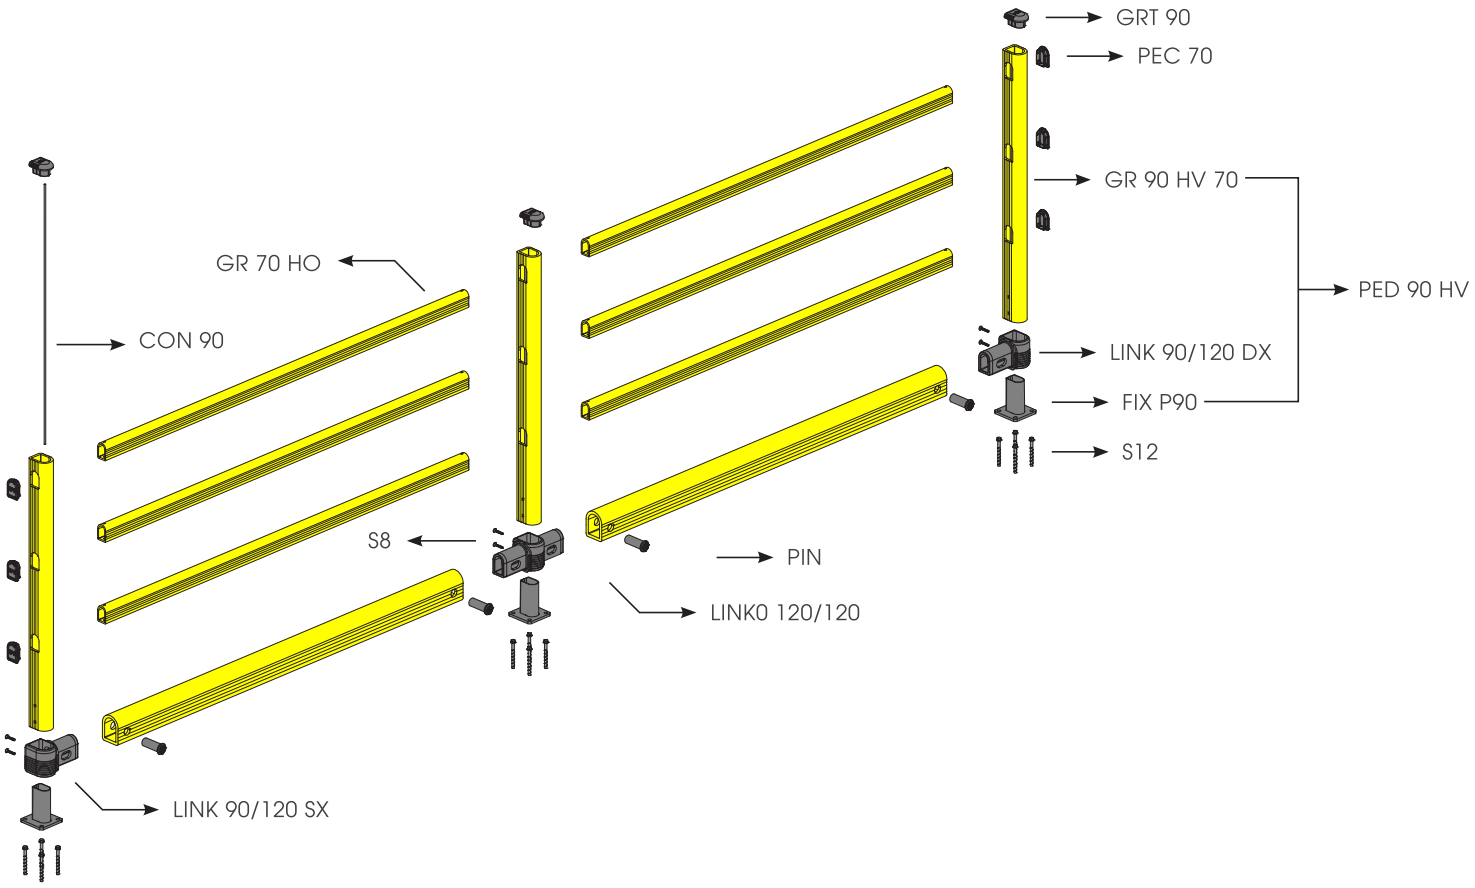


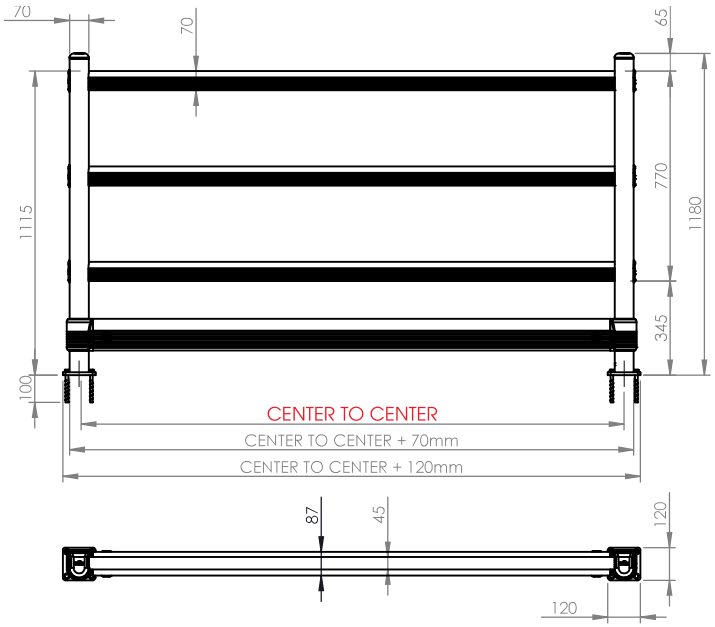


LINK 120/1

BARRIERA DI SICUREZZA REGOLABILE
ADJUSTABLE SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

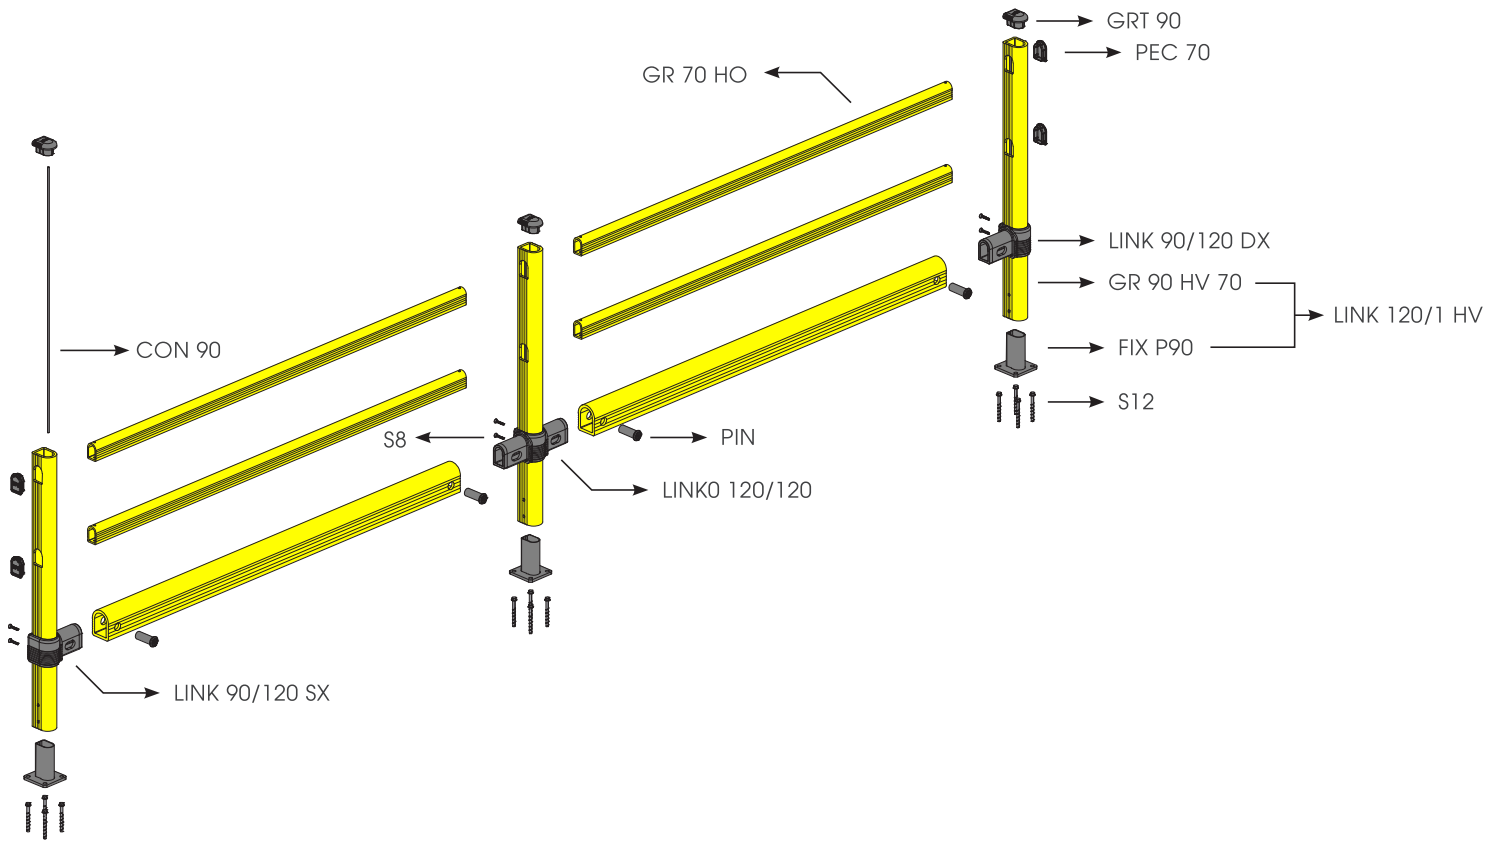


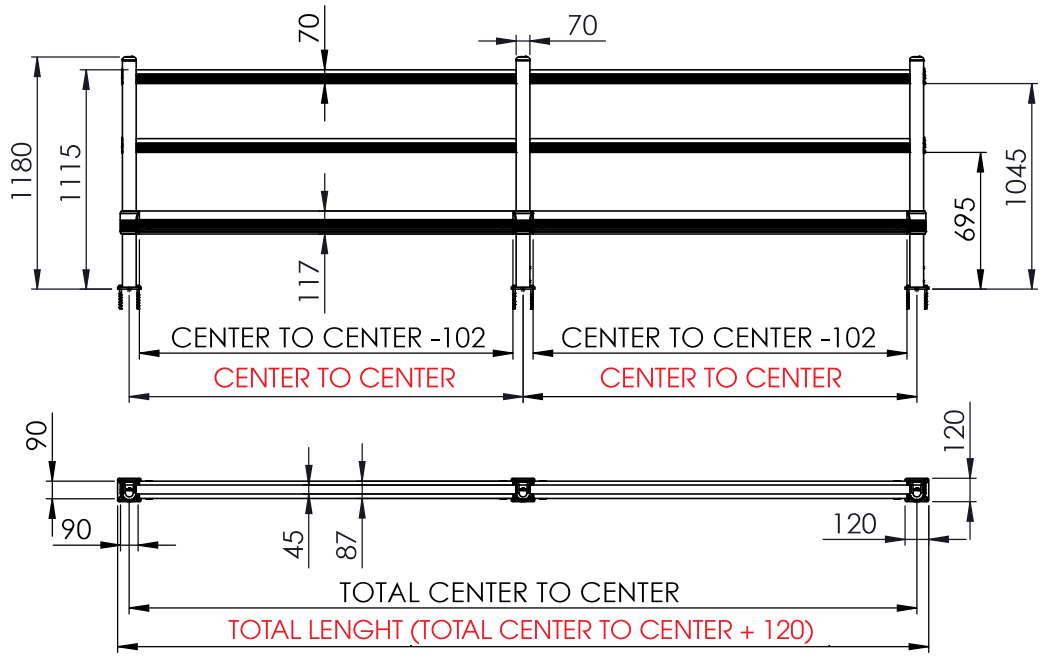



LINK 120/2

BARRIERA DI SICUREZZA REGOLABILE
ADJUSTABLE SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

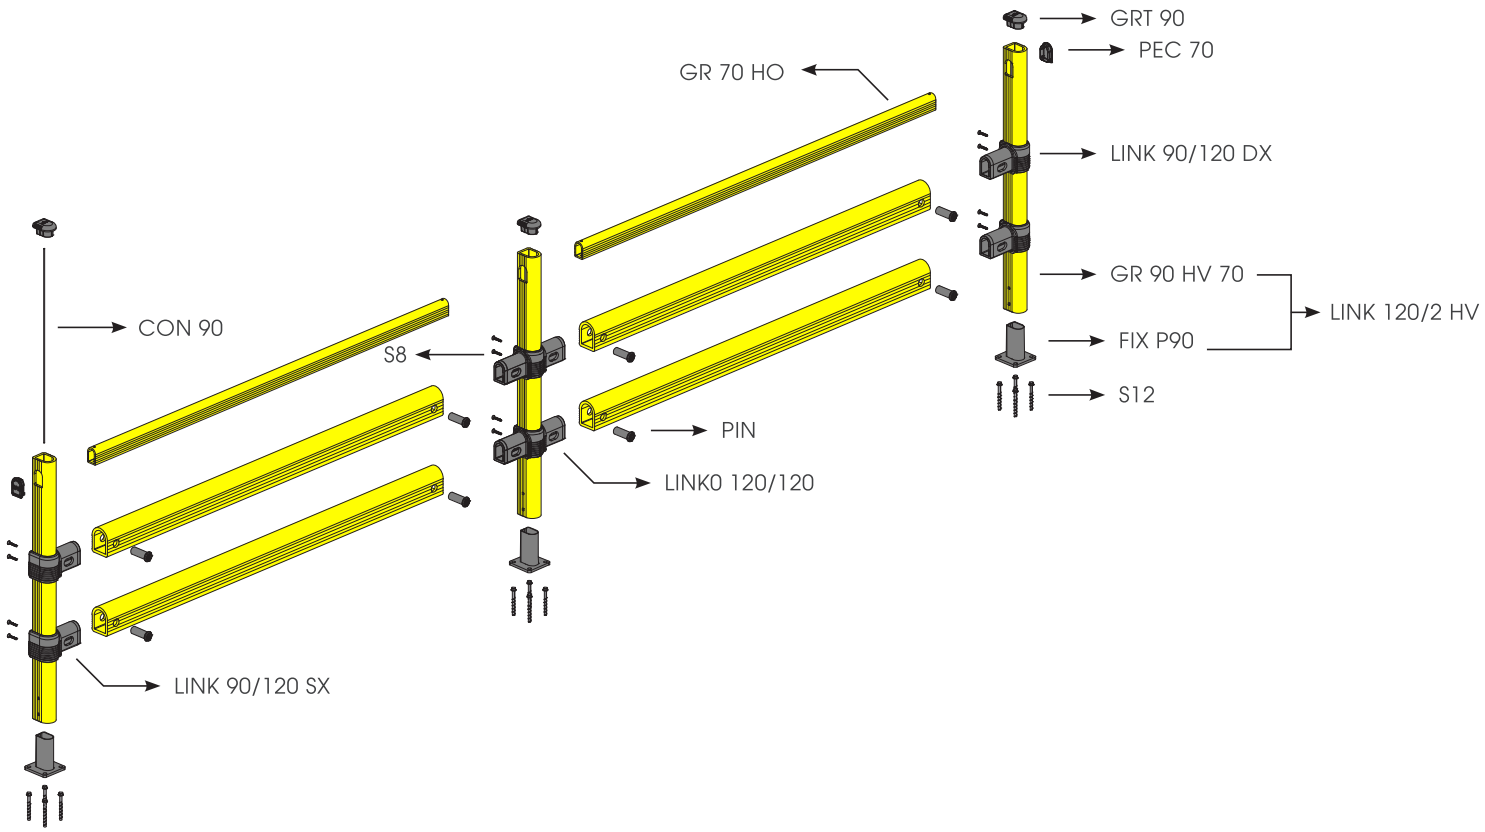

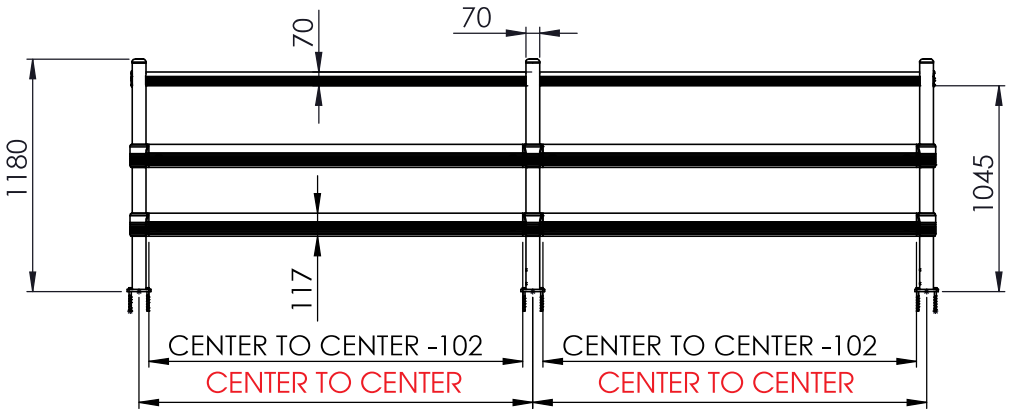


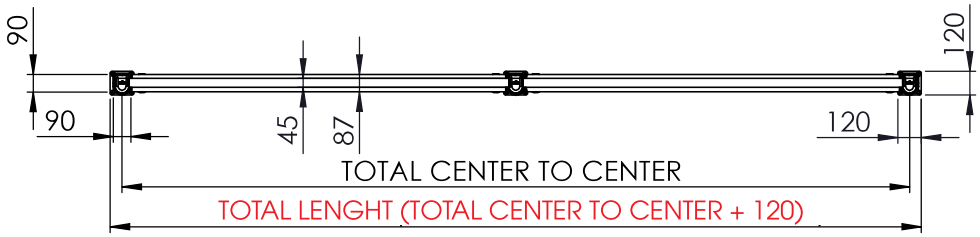



LINK 120/3

BARRIERA DI SICUREZZA REGOLABILE
ADJUSTABLE SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

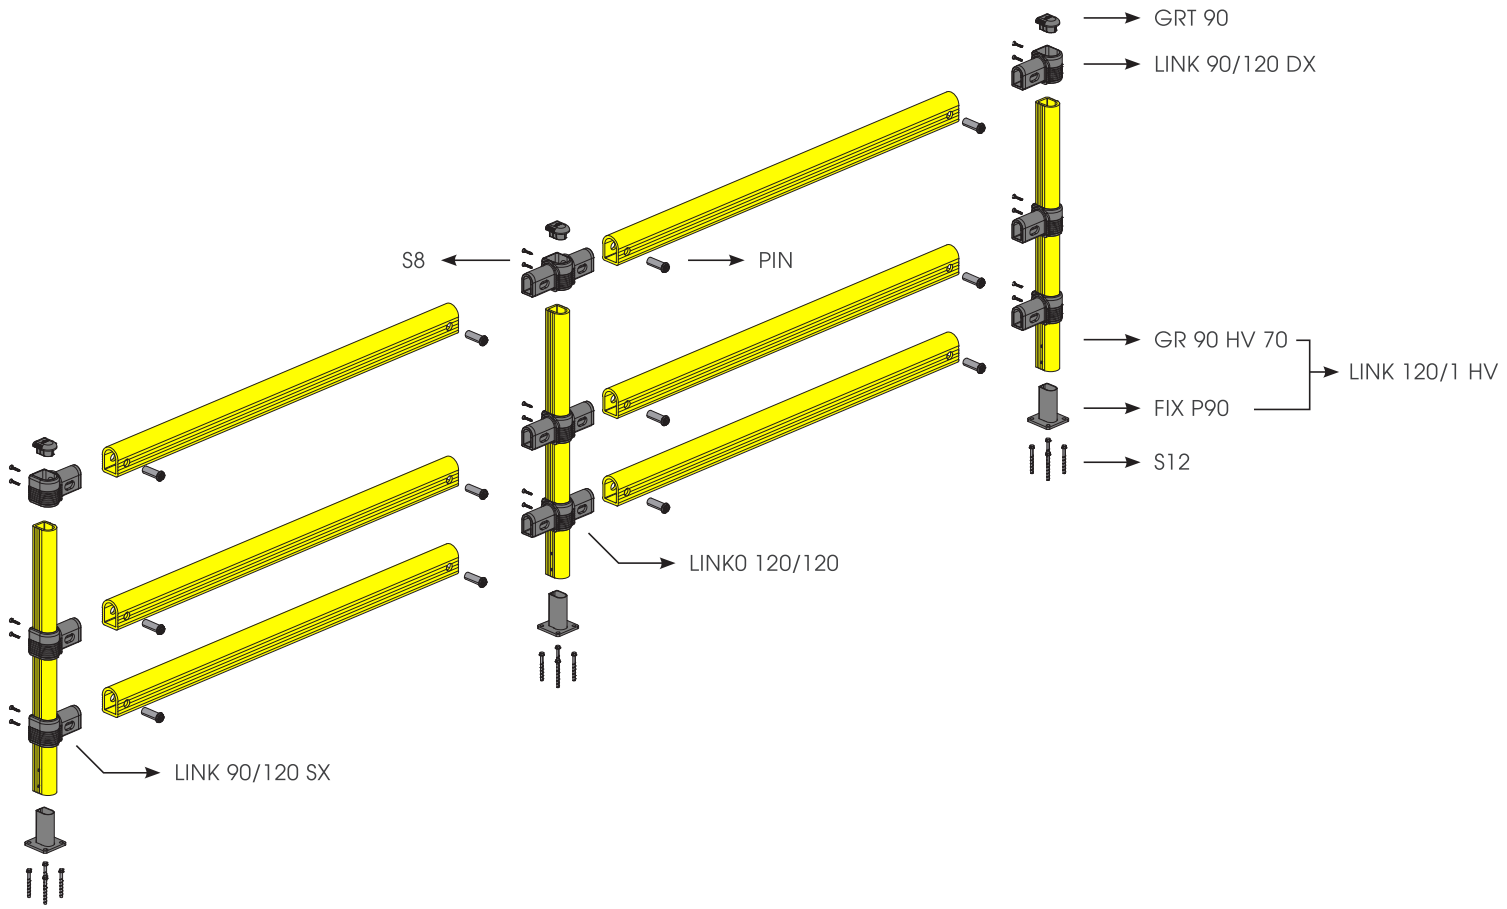

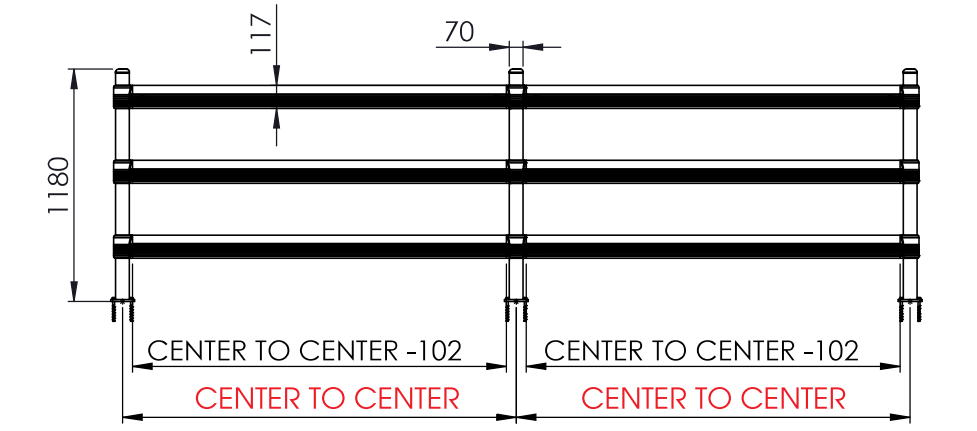

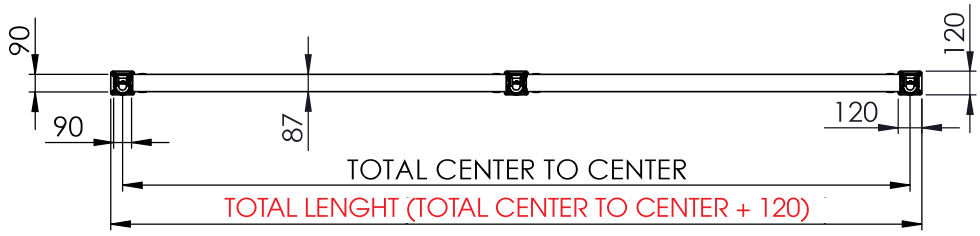


PED 90 LINK - LINK 120/1 - 120/2 - 120/3

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


WARNING


The number of standard crossbars and Links varies depending on the chosen model.

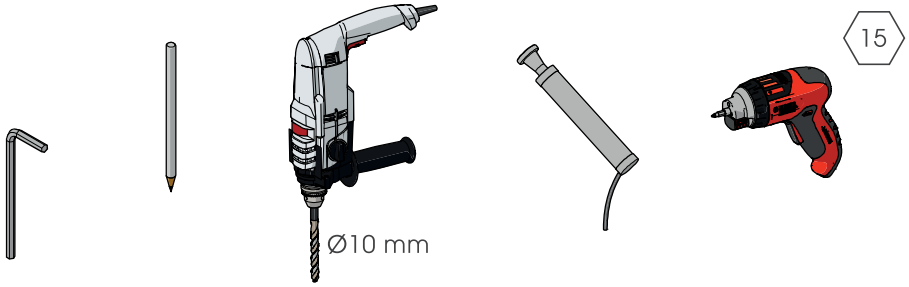



WARNING


The distance of installation depends on speed and weight of vehicle

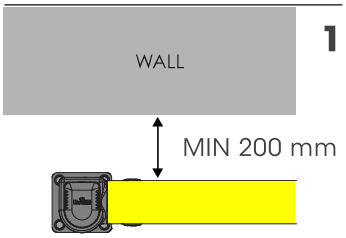

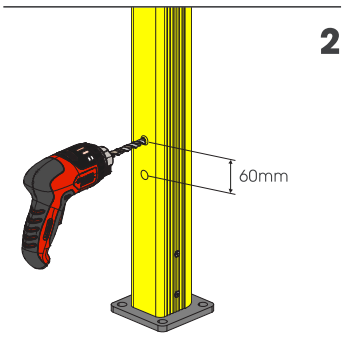

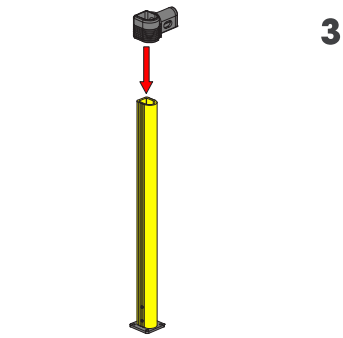

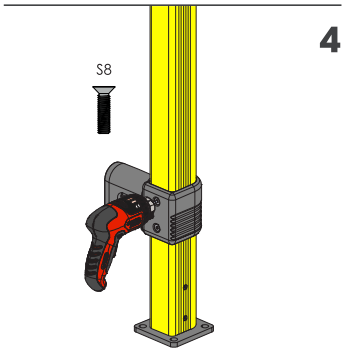

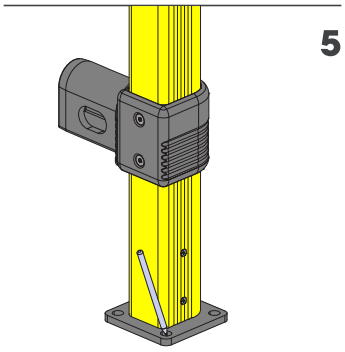





PED 90 LINK - LINK 120/1 - 120/2 - 120/3

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


7

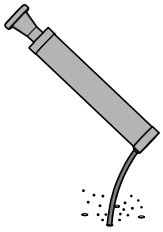


8

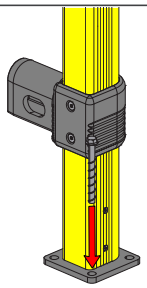


9

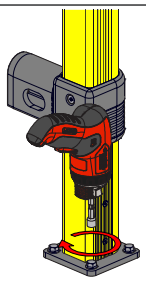


10

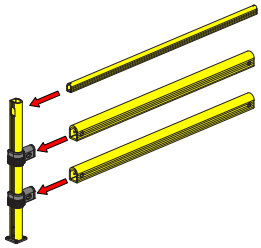


11

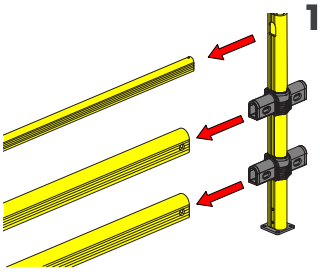


12

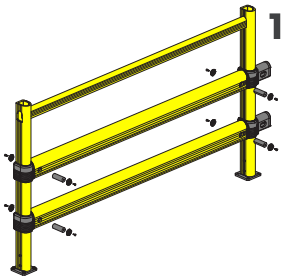

13

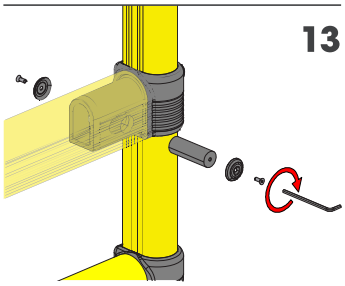


14

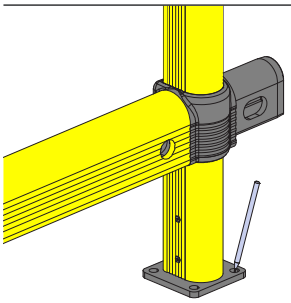


15




16

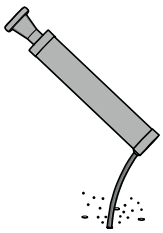


17

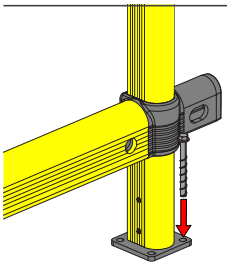


18

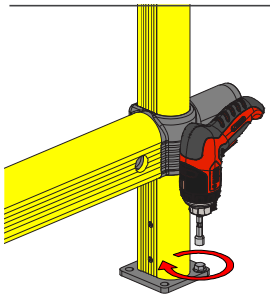


19

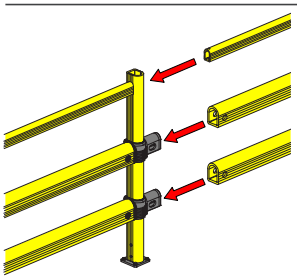

20

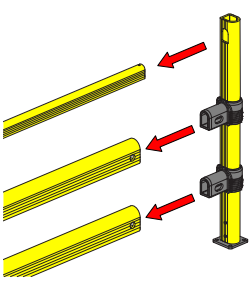


21

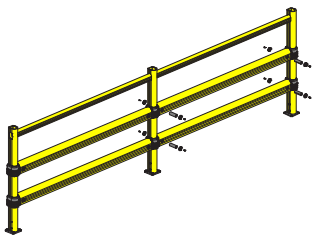


PED 90 LINK - LINK 120/1 - 120/2 - 120/3

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


22

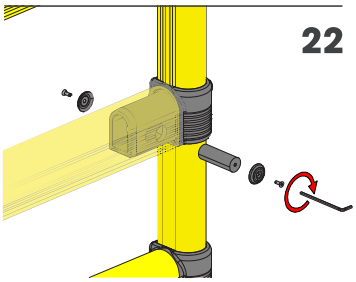


23

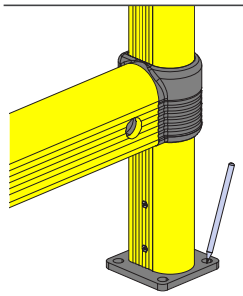


24

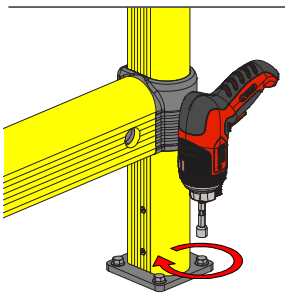


25

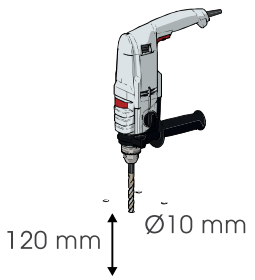


26

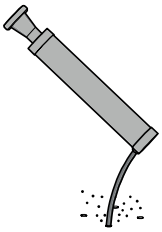

27

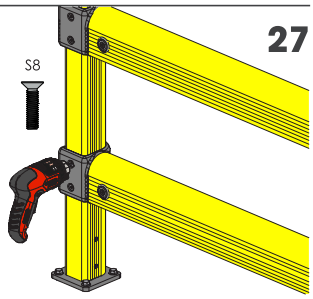


28

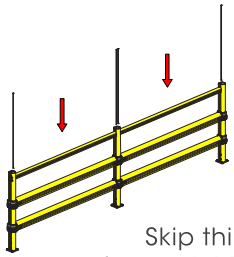


Skip this step
for model 120/3.


29

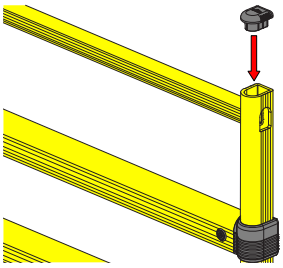

30

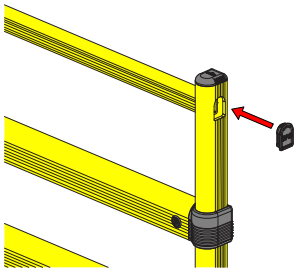


INSTALLATION TIP

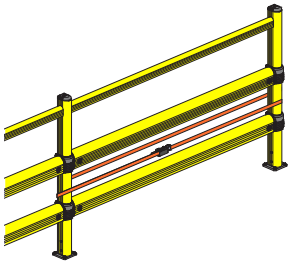


PED 150

BARRIERA DI SICUREZZA
SAFETY BARRIER


HEAVY LOAD / FOR FORKLIFTS

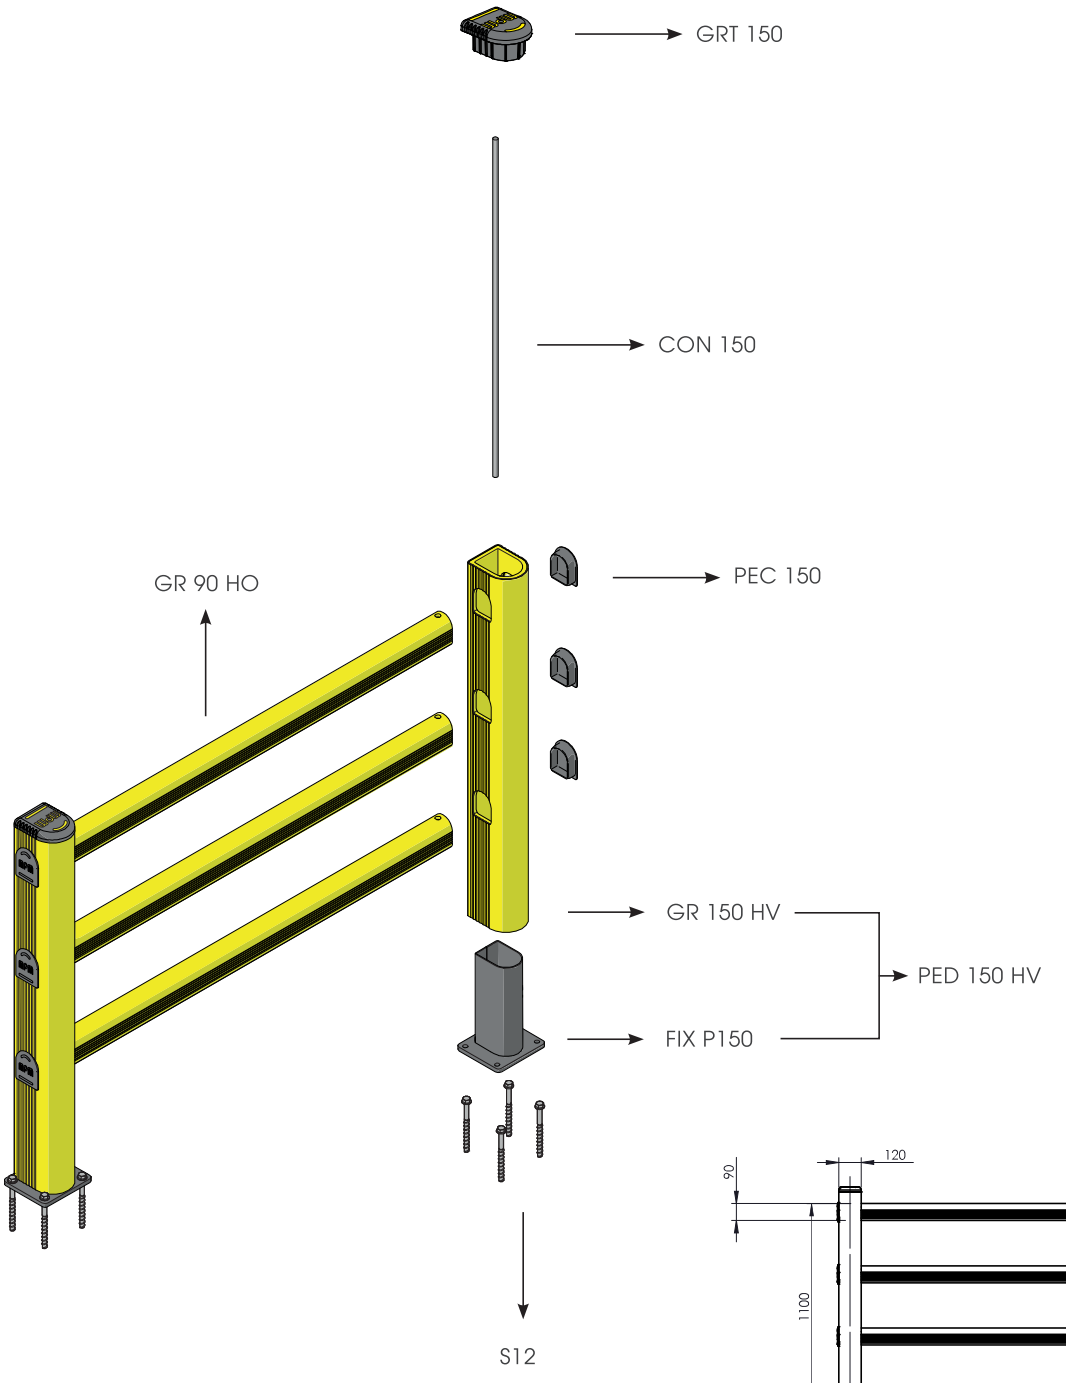


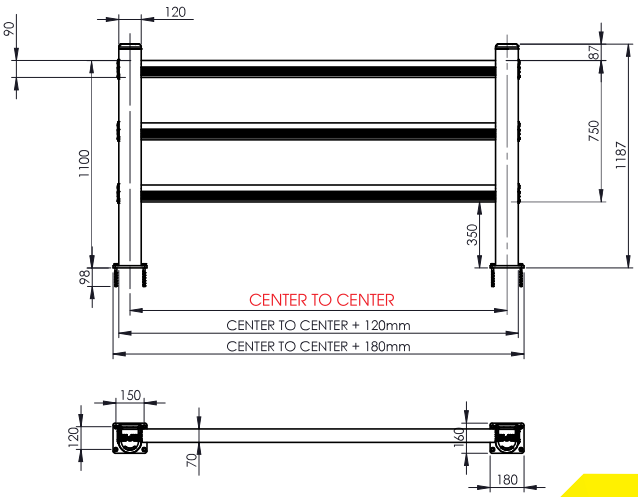

PED 150


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

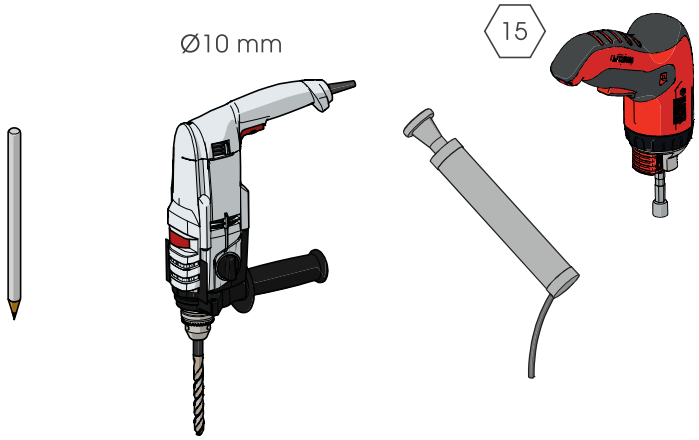

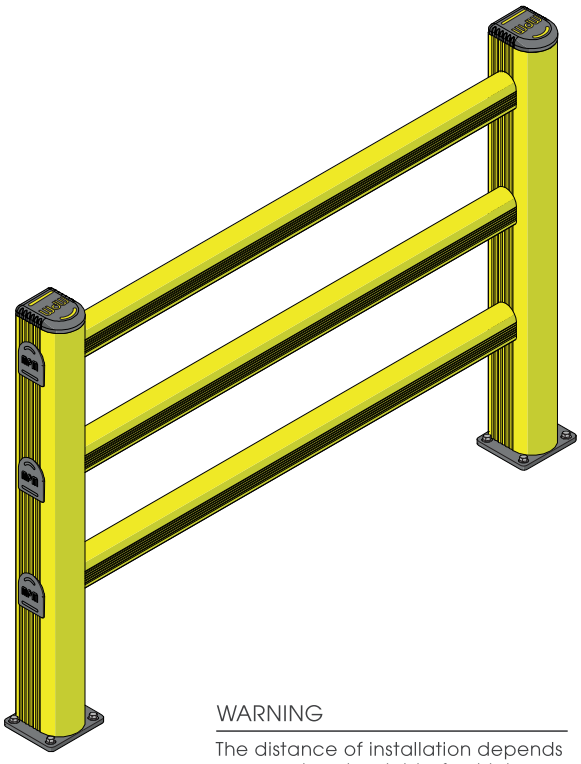


WARNING


The distance of installation depends on speed and weight of vehicle

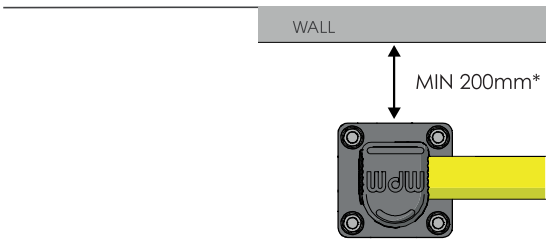


1

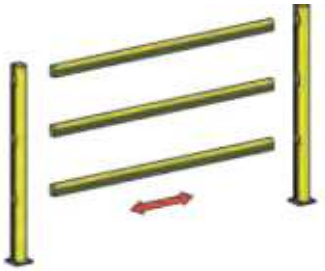

2

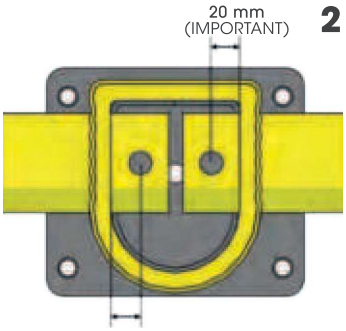

3

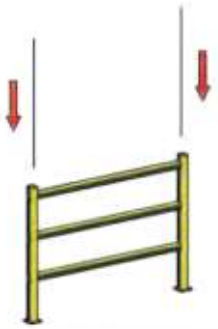


4




PED 150

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

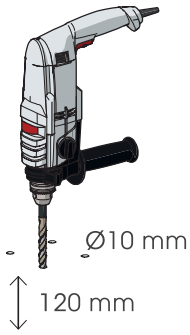


6

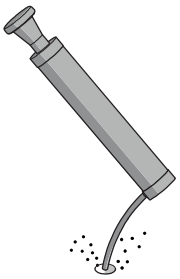


7

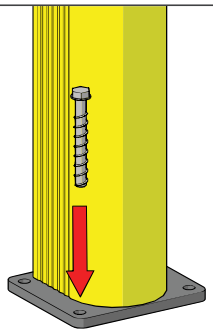


8

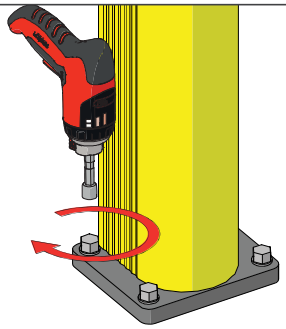

9

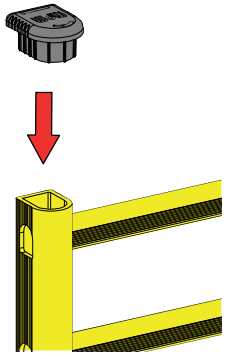


10

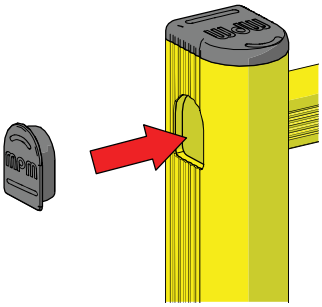



CORNER PED 150

BARRIERA DI SICUREZZA
SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

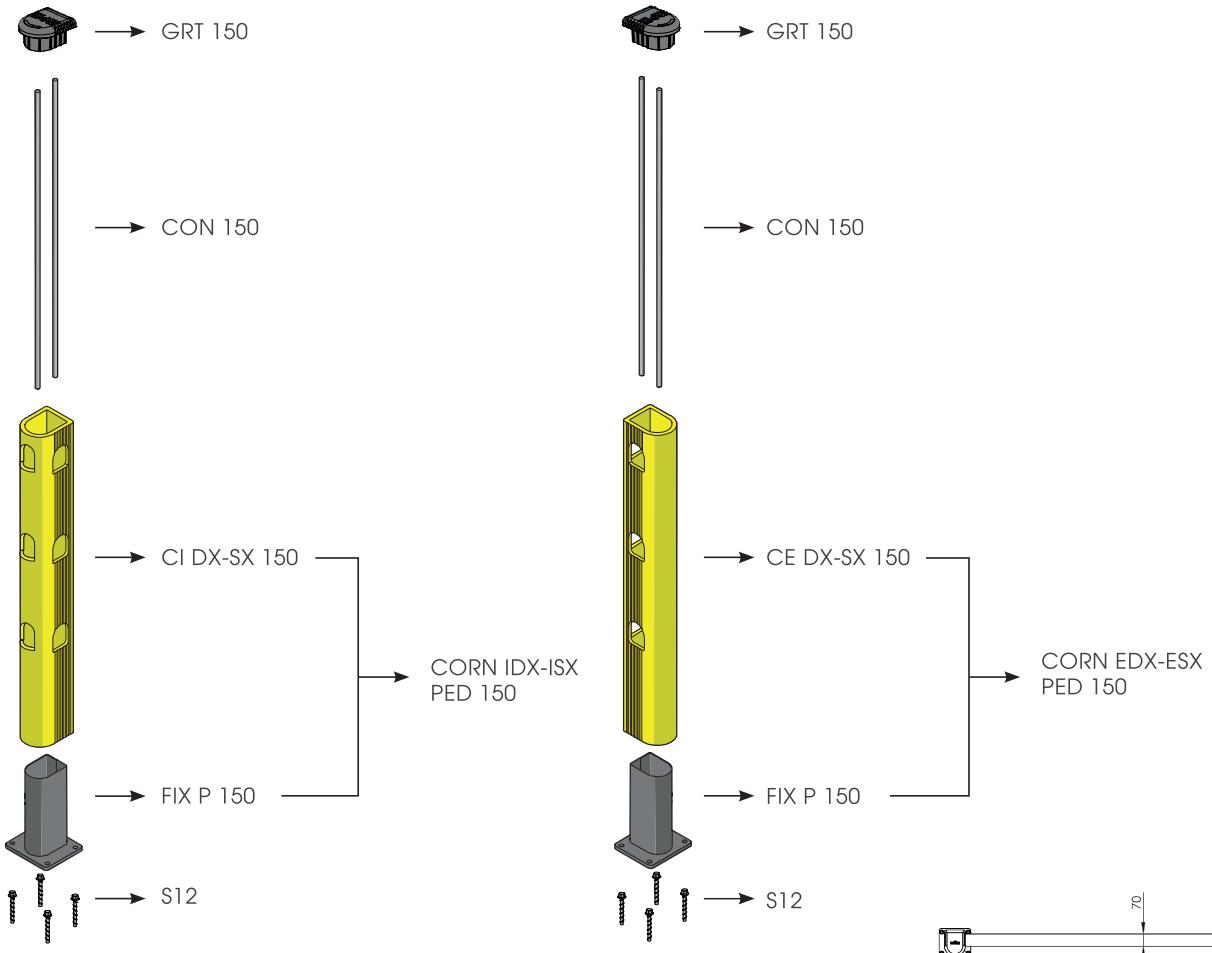

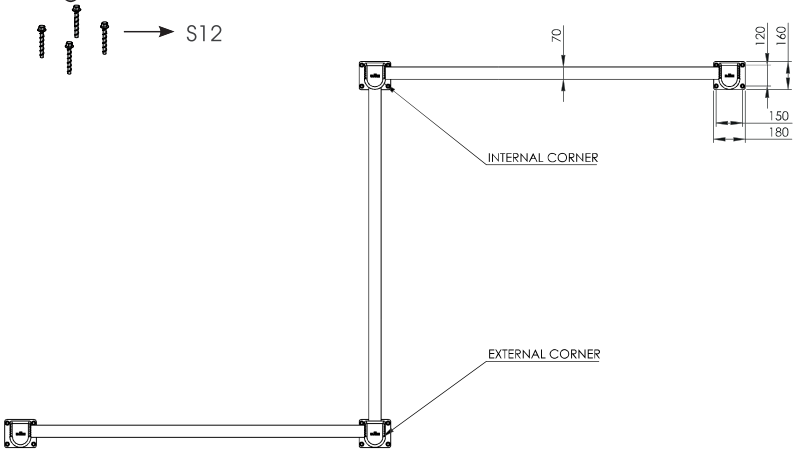

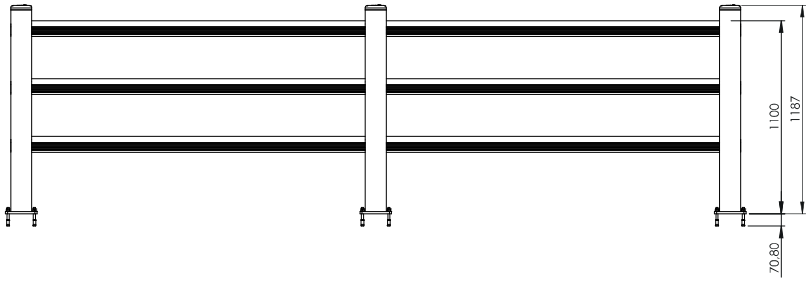


CORNER PED 150


BARRIERA DI SICUREZZA
SAFETY BARRIER

PLEASE CHECK HERE BELOW
WHICH POSITION OF THE CORNER YOU NEED


☐ EXTERNAL SX (L)

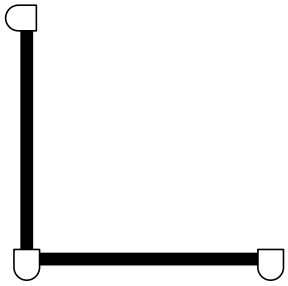


☐ EXTERNAL DX (R)

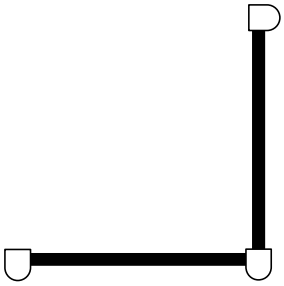

☐ INTERNAL SX (L)

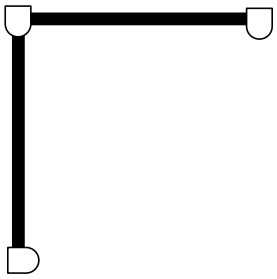


☐ INTERNAL DX (R)

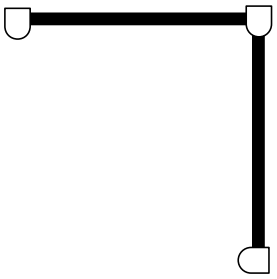



CORNER PED 150


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



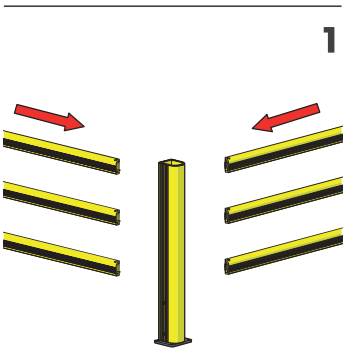

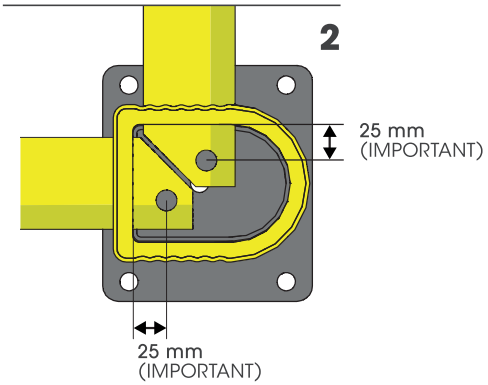

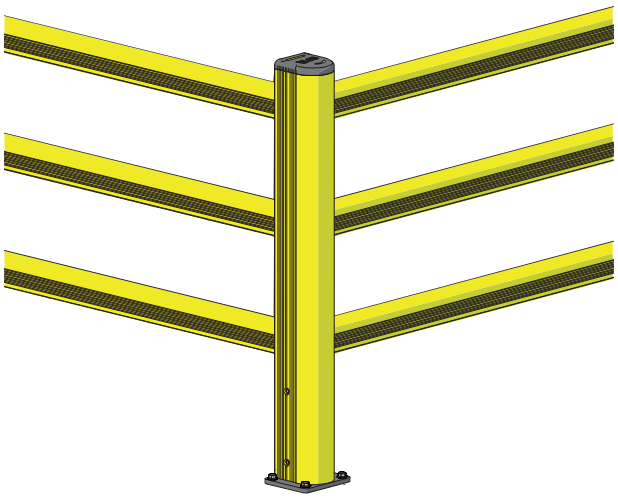


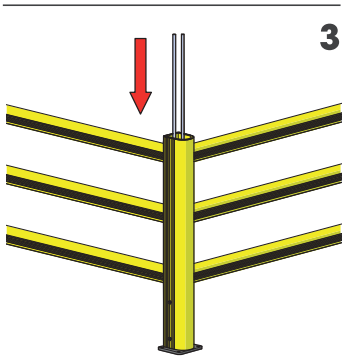


CORNER PED 150

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


4

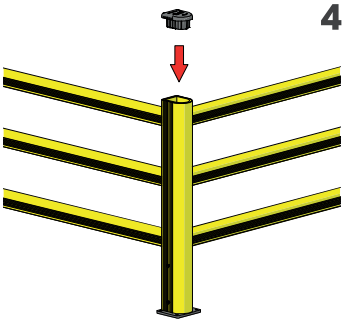


5

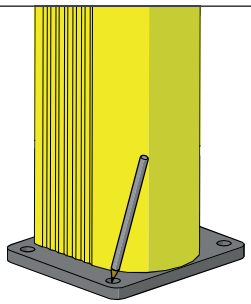


6

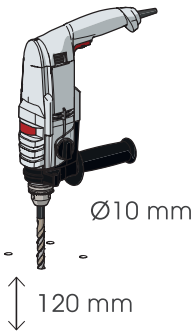


7

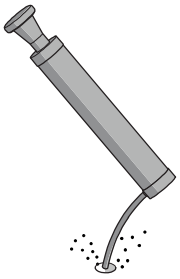

8

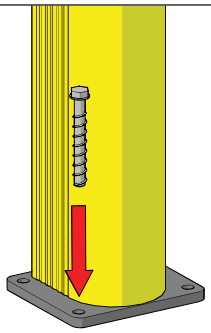


9

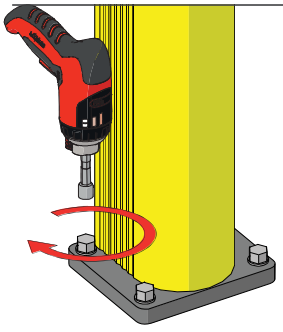


PED 150 TL

BARRIERA DI SICUREZZA
SAFETY BARRIER


HEAVY LOAD / FOR FORKLIFTS

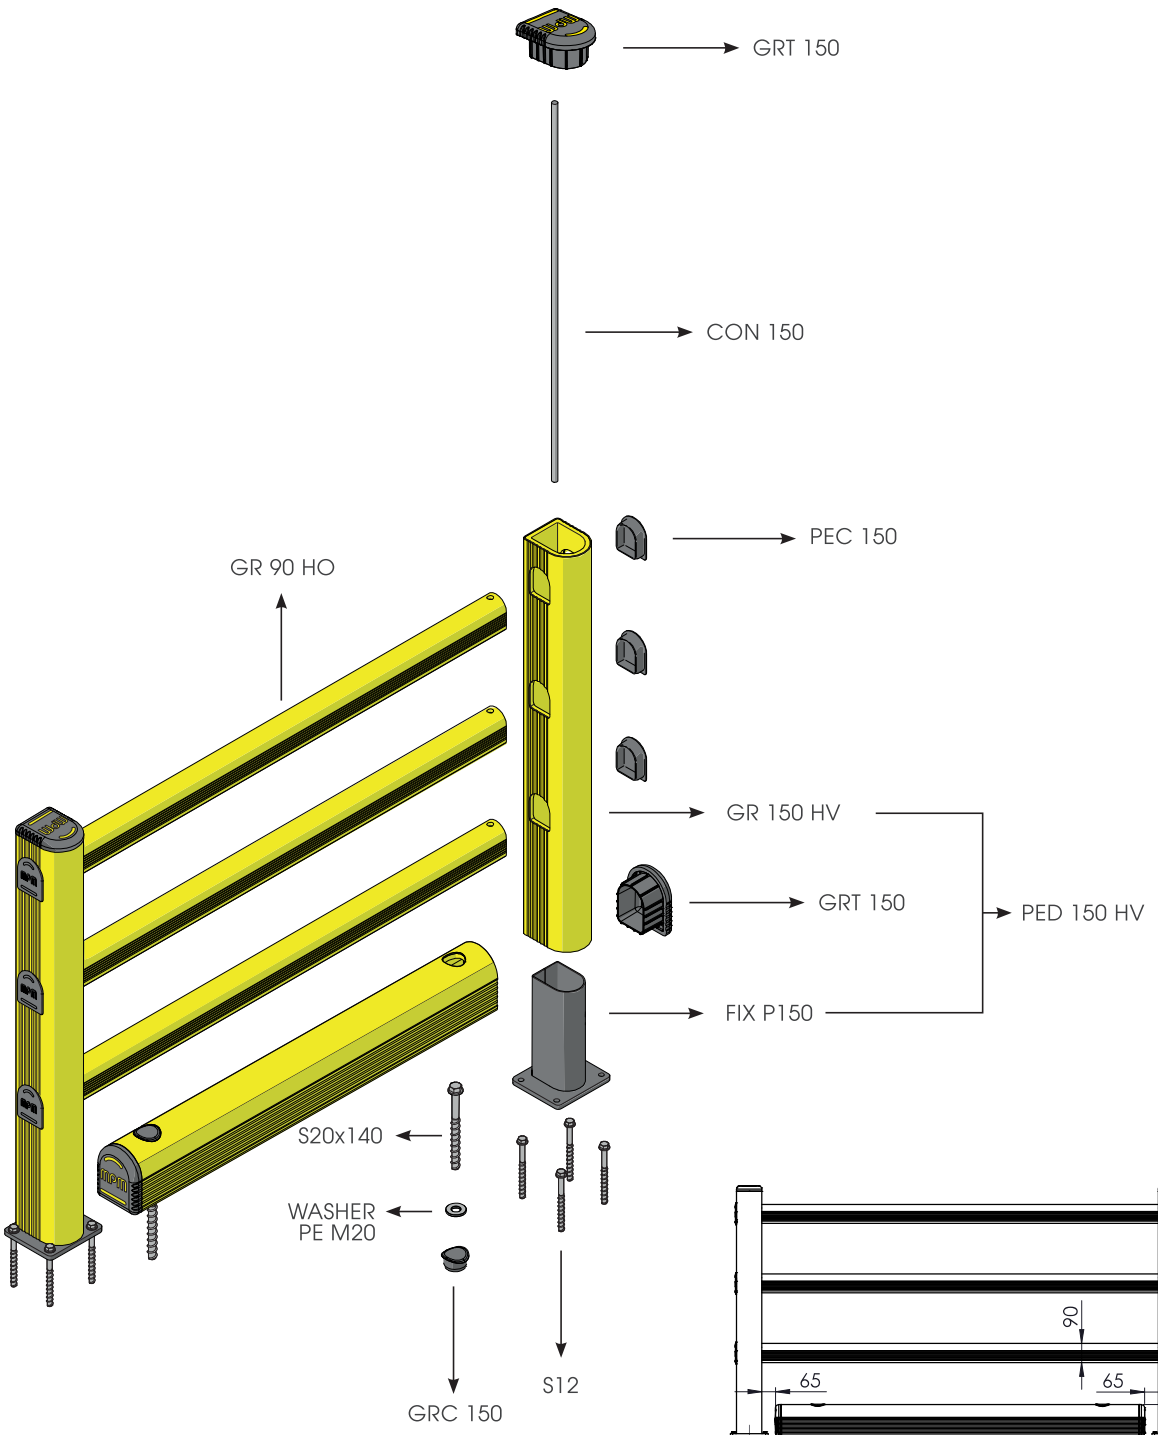

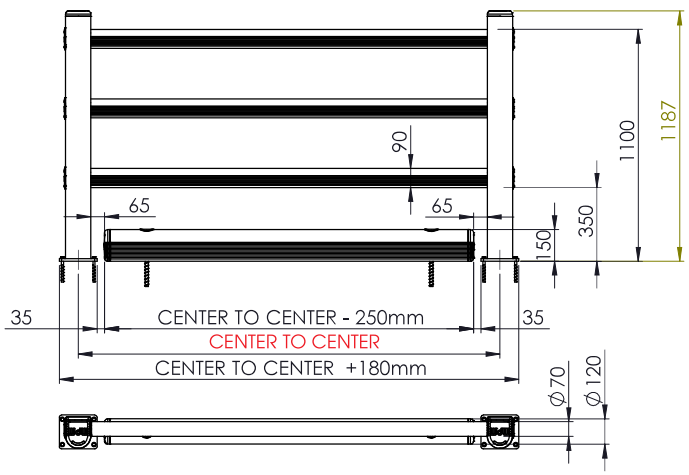

PED 150 TL


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

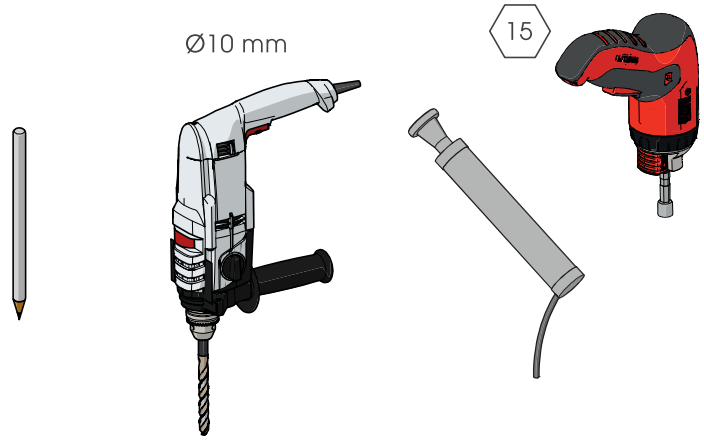




WARNING


The distance of installation depends on speed and weight of vehicle

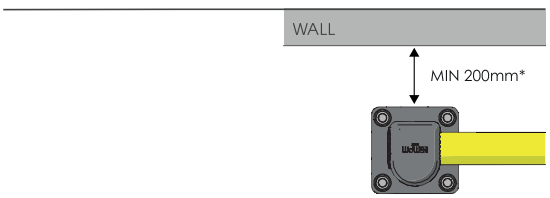


1

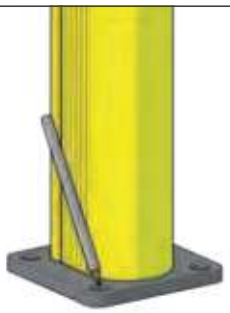


2

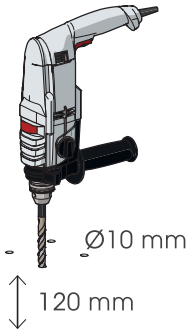

3

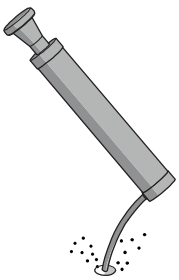


4

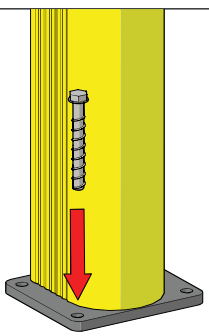


PED 150 TL

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

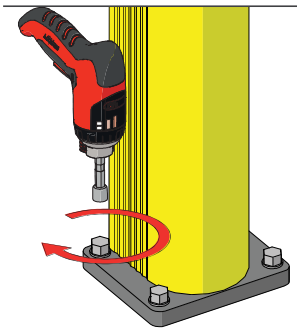


6

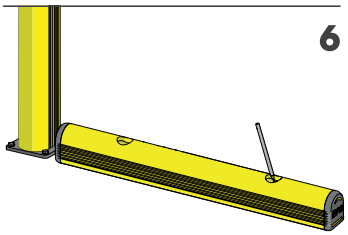


7

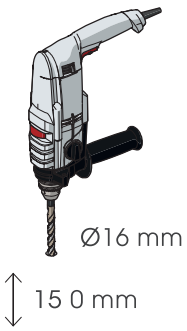


8

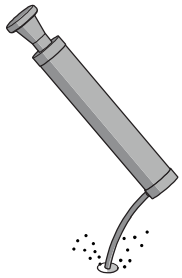


9

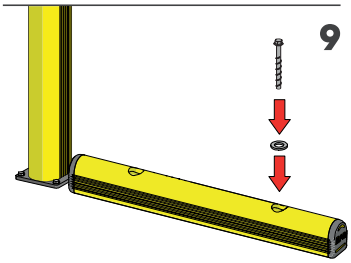


10

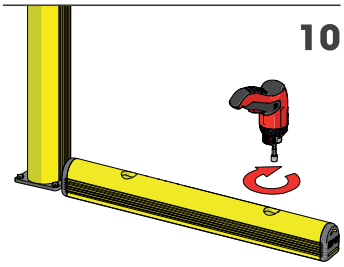


11

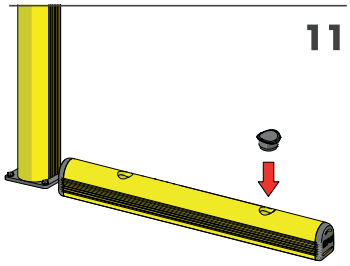


12

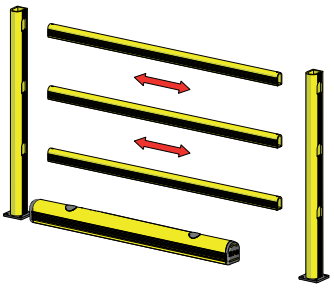


13

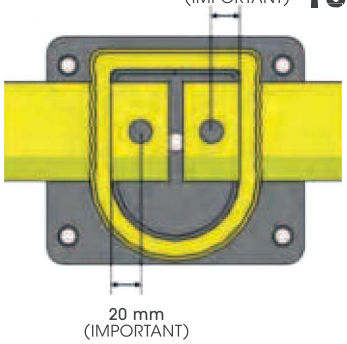


14

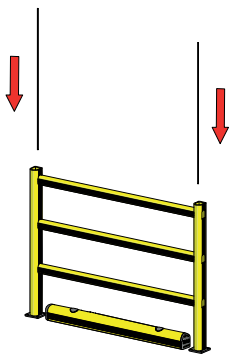

15

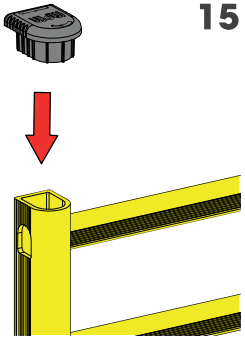


16

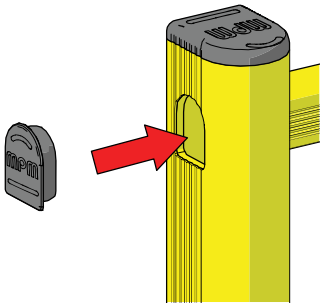


PED 150 LINK

BARRIERA DI SICUREZZA
SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

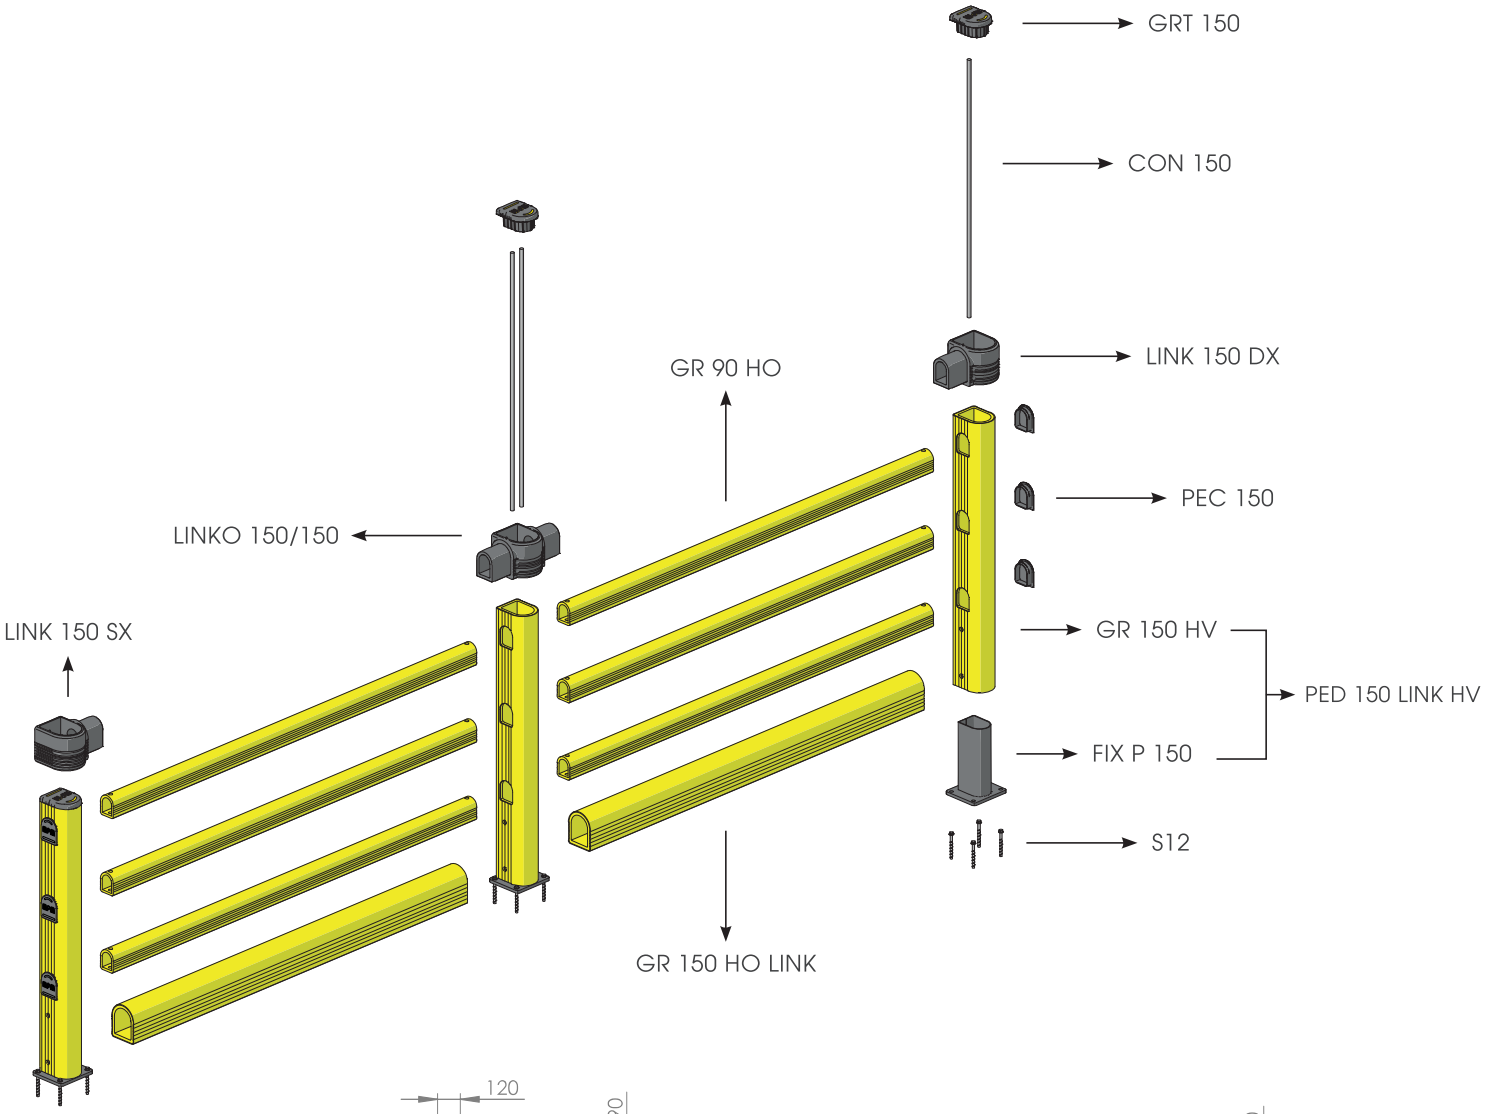


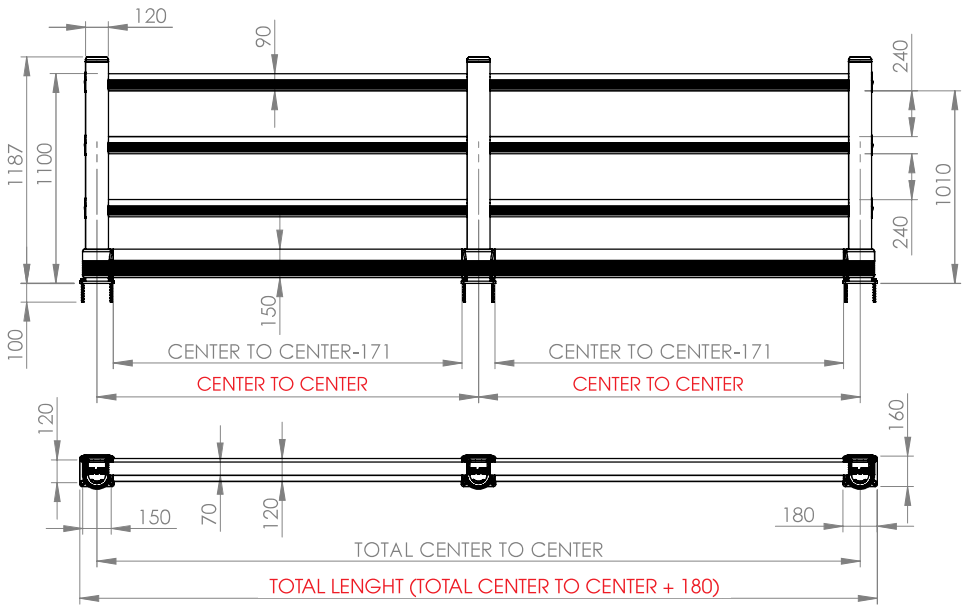


LINK 150/1

BARRIERA DI SICUREZZA REGOLABILE
ADJUSTABLE SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

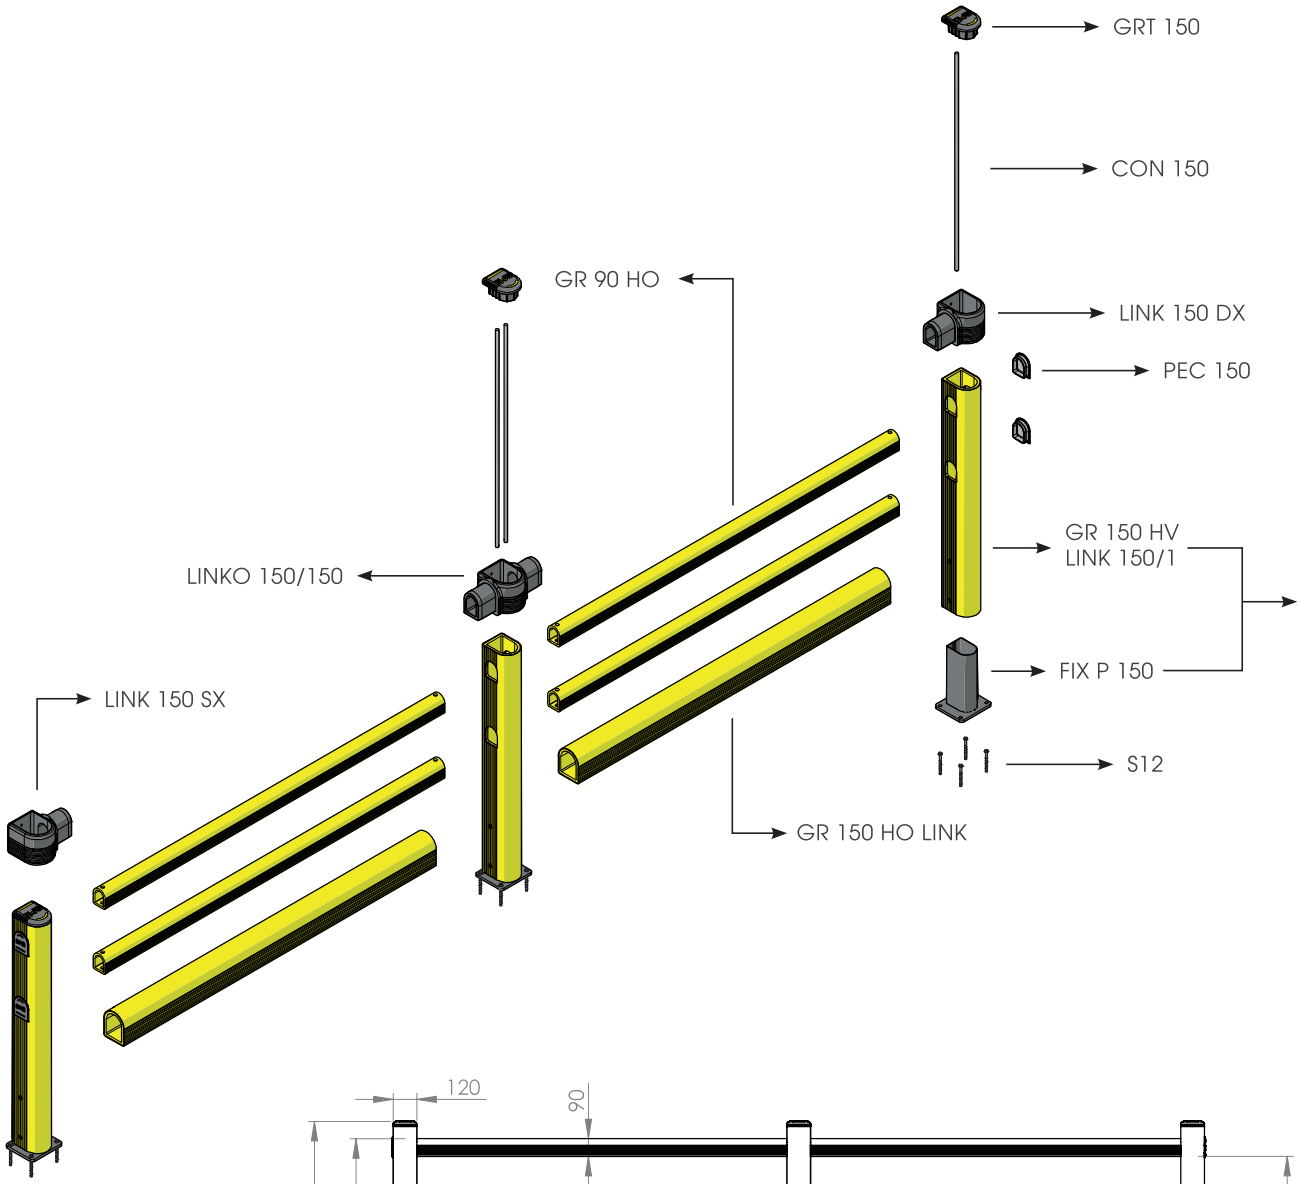


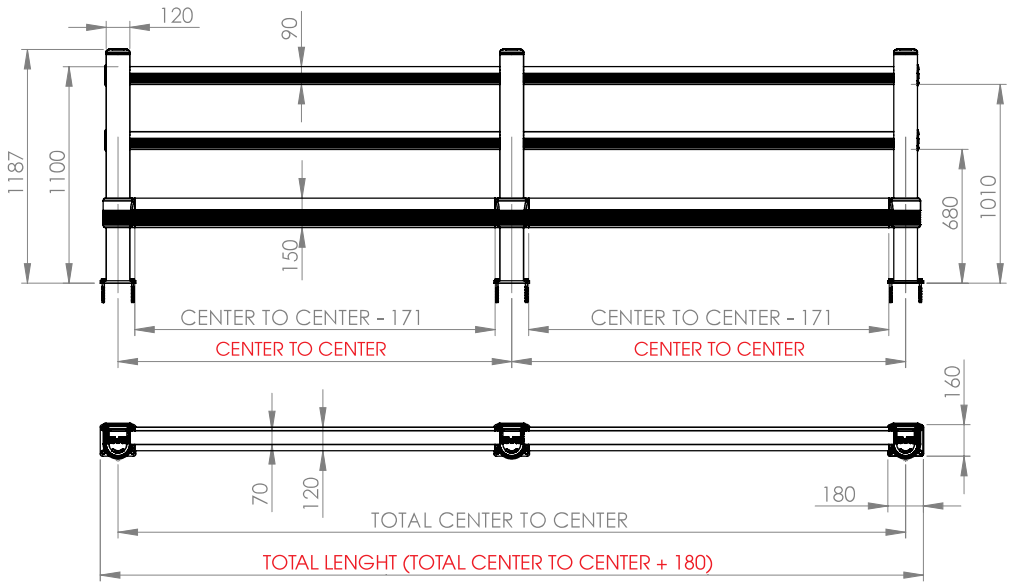


LINK 150/2

BARRIERA DI SICUREZZA REGOLABILE
ADJUSTABLE SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

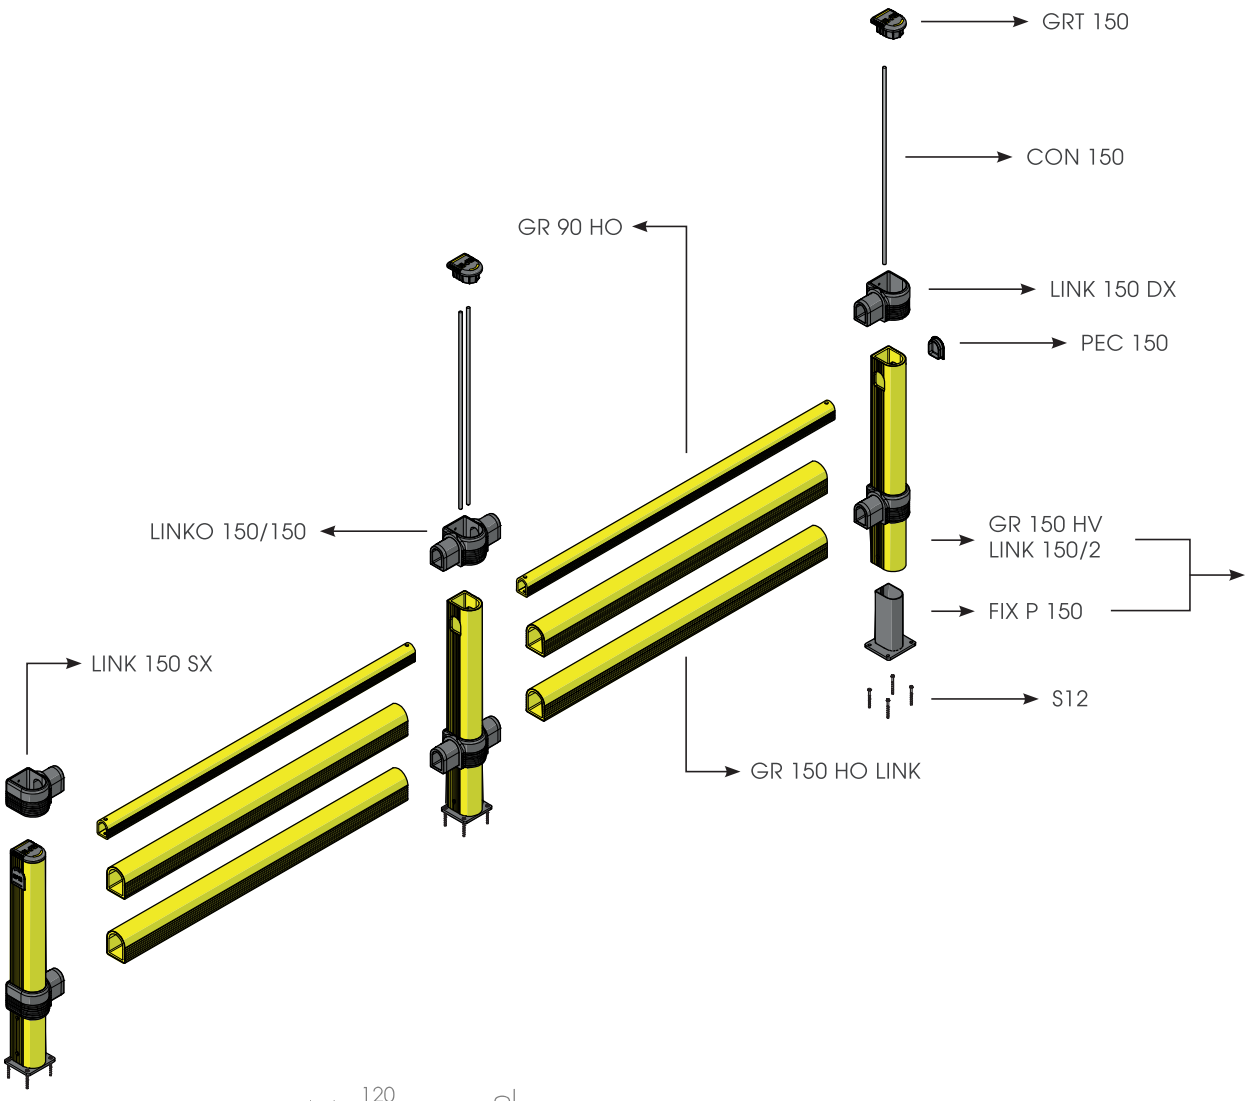

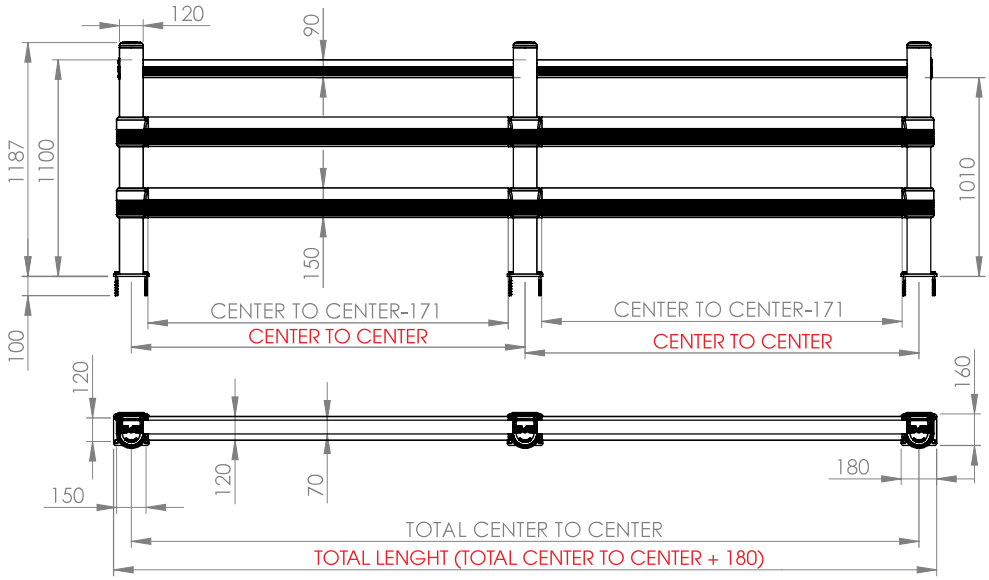


PED 150 LINK - LINK 150/1 - 150/2

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


WARNING


The number of standard crossbars and Links varies depending on the chosen model.

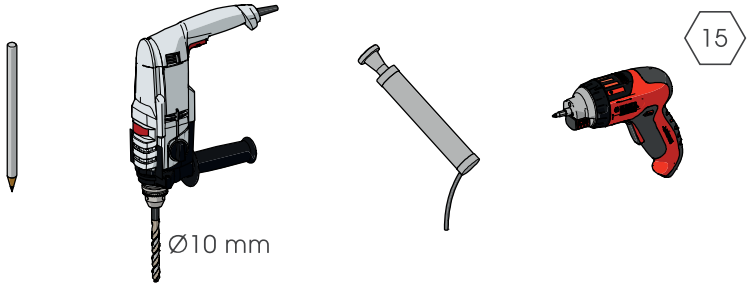



WARNING


The distance of installation depends on speed and weight of vehicle

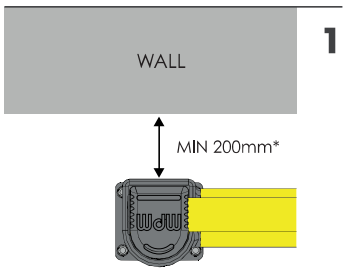

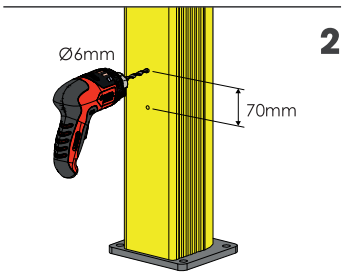

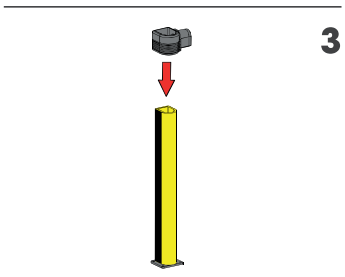

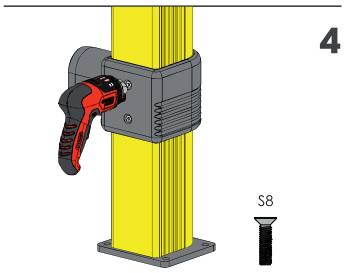

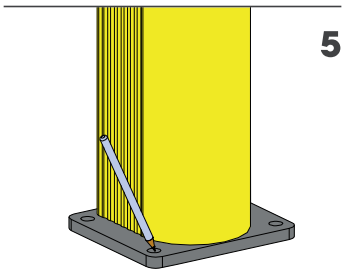





PED 150 LINK - LINK 150/1 - 150/2

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


7

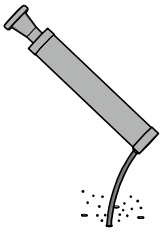


8

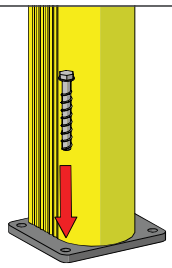


9

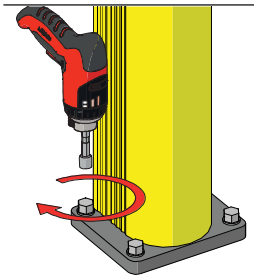


10

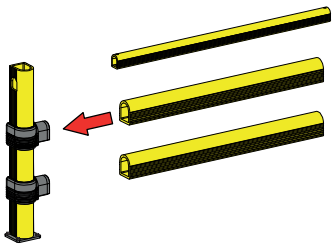


11

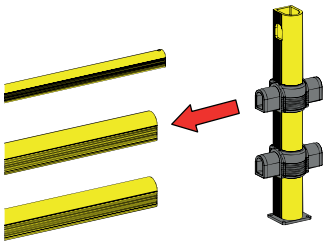


12

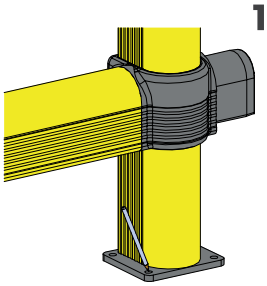


13

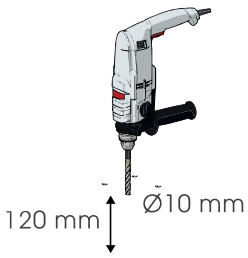


14

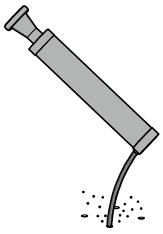


15

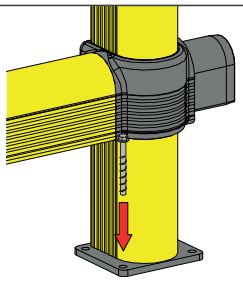


16

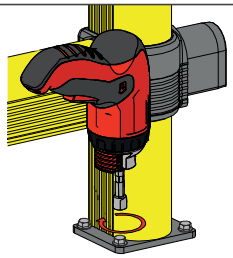

17

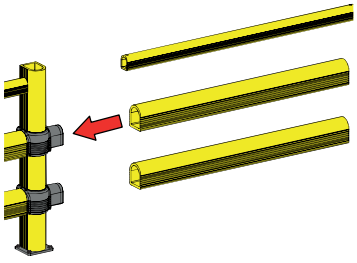


18

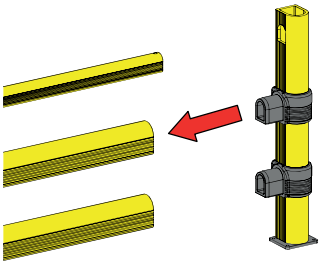

PED 150 LINK - LINK 150/1 - 150/2

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


19

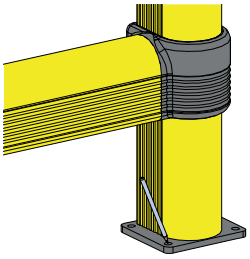


20




21

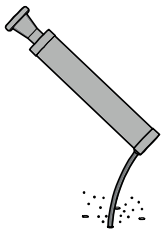


22

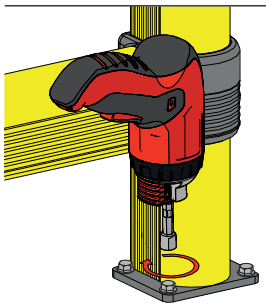


23

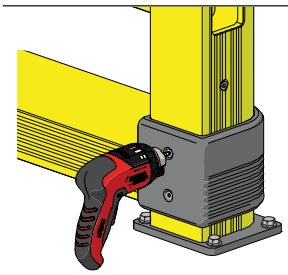


24

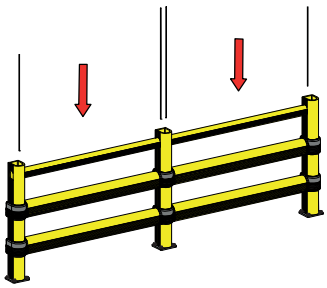


25

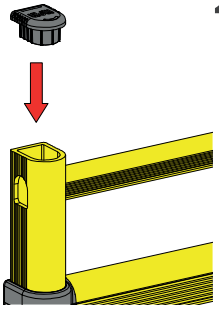

26

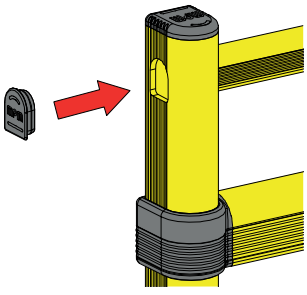


INSTALLATION TIP

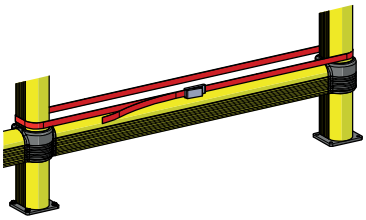



CORNER LINK 150


BARRIERA DI SICUREZZA
SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

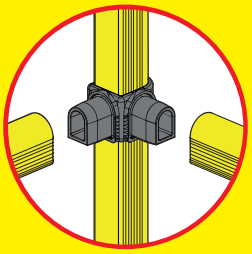

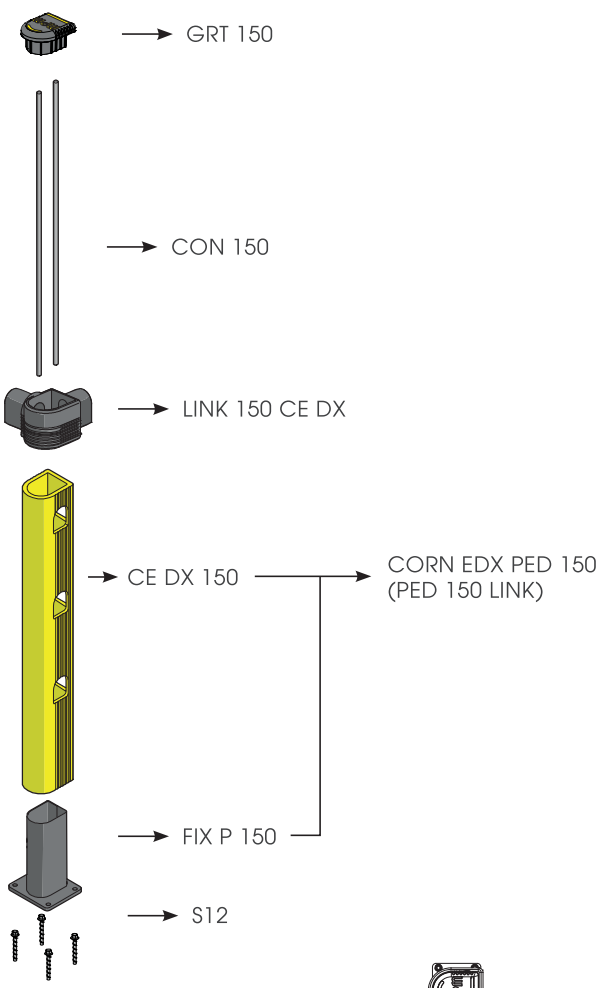


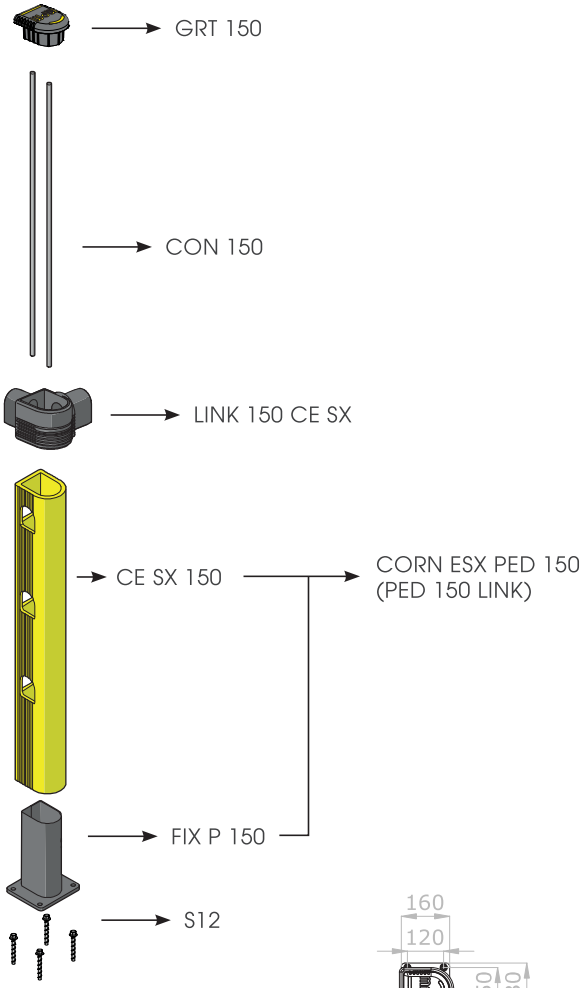

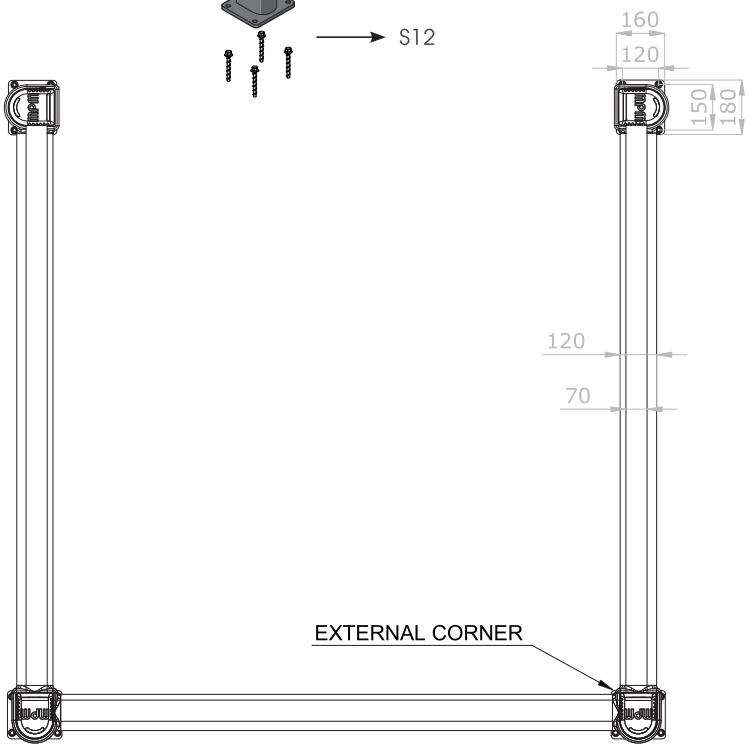


CORNER LINK 150

BARRIERA DI SICUREZZA
SAFETY BARRIER

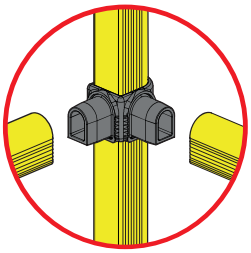


PLEASE CHECK HERE BELOW
WHICH POSITION OF THE CORNER YOU NEED

☐ EXTERNAL SX (L)

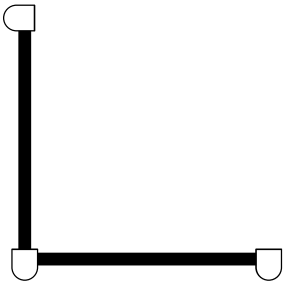


☐ EXTERNAL DX (R)

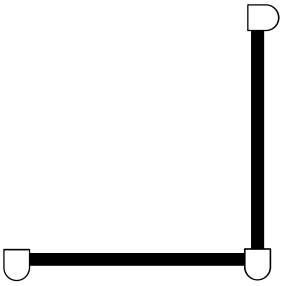



POST COMPONENTS	POST KIT NAME
CE DX 150 + FIX P 150 →	CORN EDX PED 150
GR 150 HV EDX 1P + FIX P 150 →	CORN EDX LINK 150/1
GR 150 HV EDX 2P + FIX P 150 →	CORN EDX LINK 150/2
CE SX 150 + FIX P 150 →	CORN ESX PED 150
GR 150 HV ESX 1P + FIX P 150 →	CORN ESX LINK 150/1
GR 150 HV ESX 2P + FIX P 150 →	CORN ESX LINK 150/2
GR 150 HV + FIX P 150 + GRT 150 →	GRD 150 (LINK 150/3)

CORNER LINK 150


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

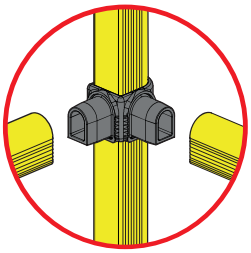

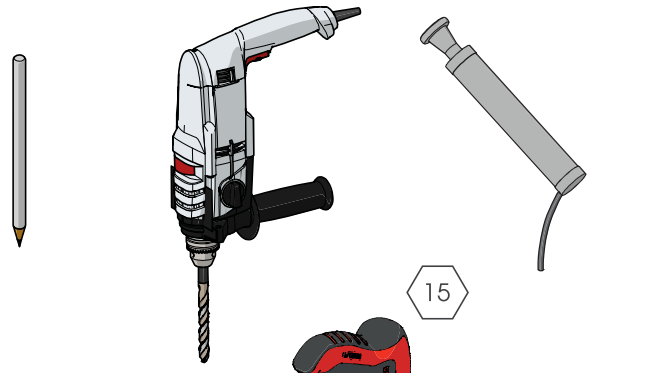


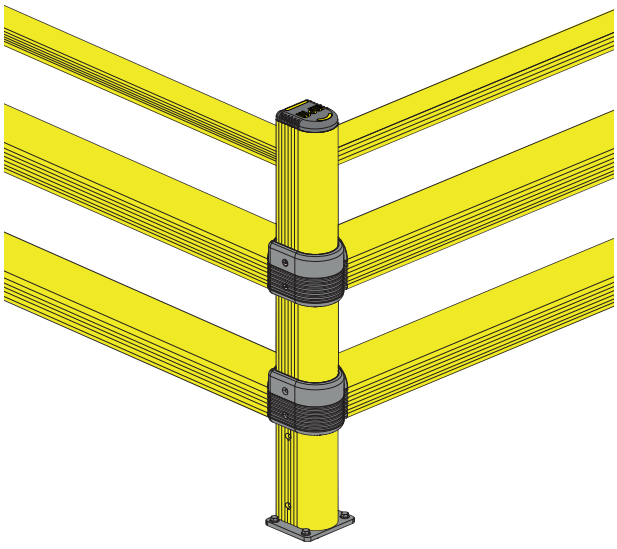


1




2

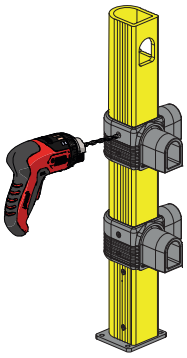

3

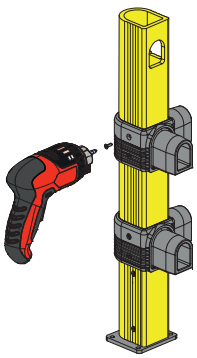


4

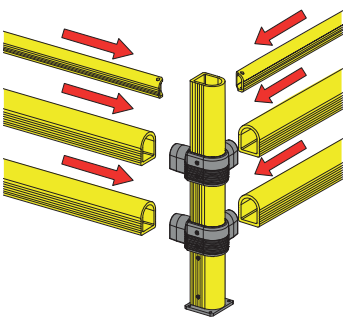


CORNER LINK 150


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

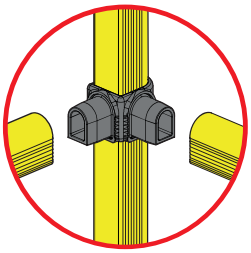


4

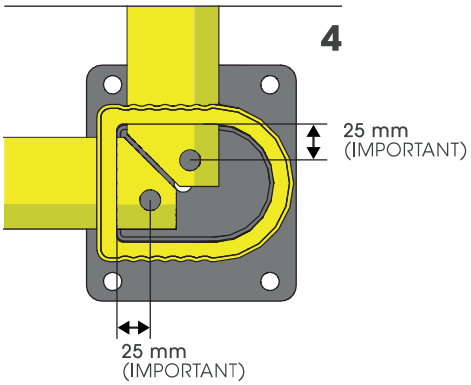


5

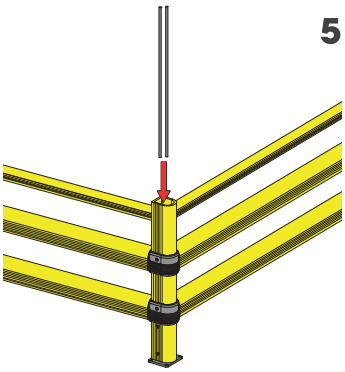


6

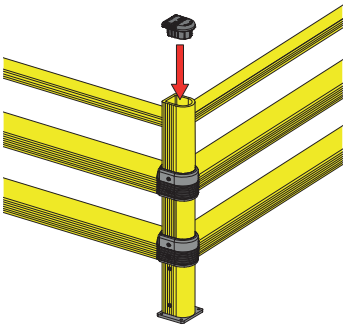


7

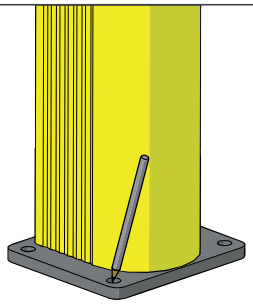


8

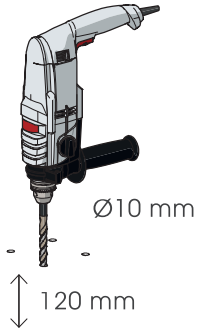


9

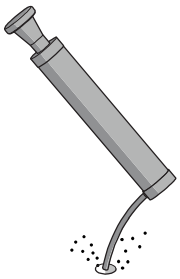


10

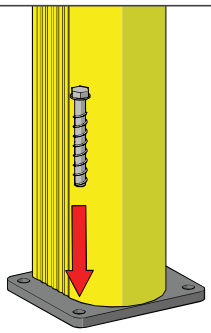


11

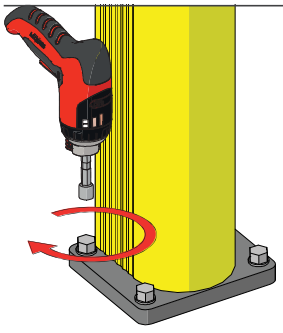


PED 150 LINK

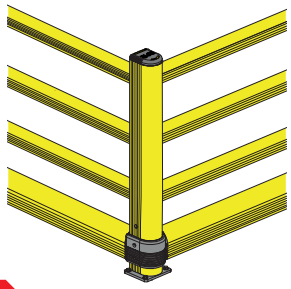

LINK 150/1

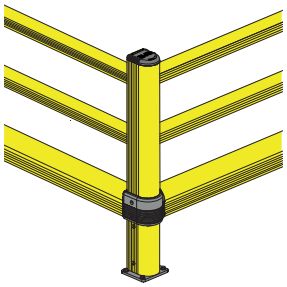


LINK 150/2

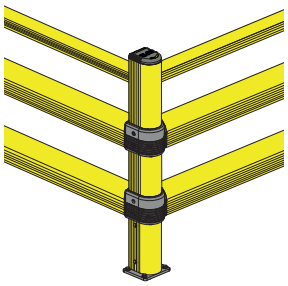


PED 150 PIN

BARRIERA DI SICUREZZA
SAFETY BARRIER


HEAVY LOAD / FOR FORKLIFTS

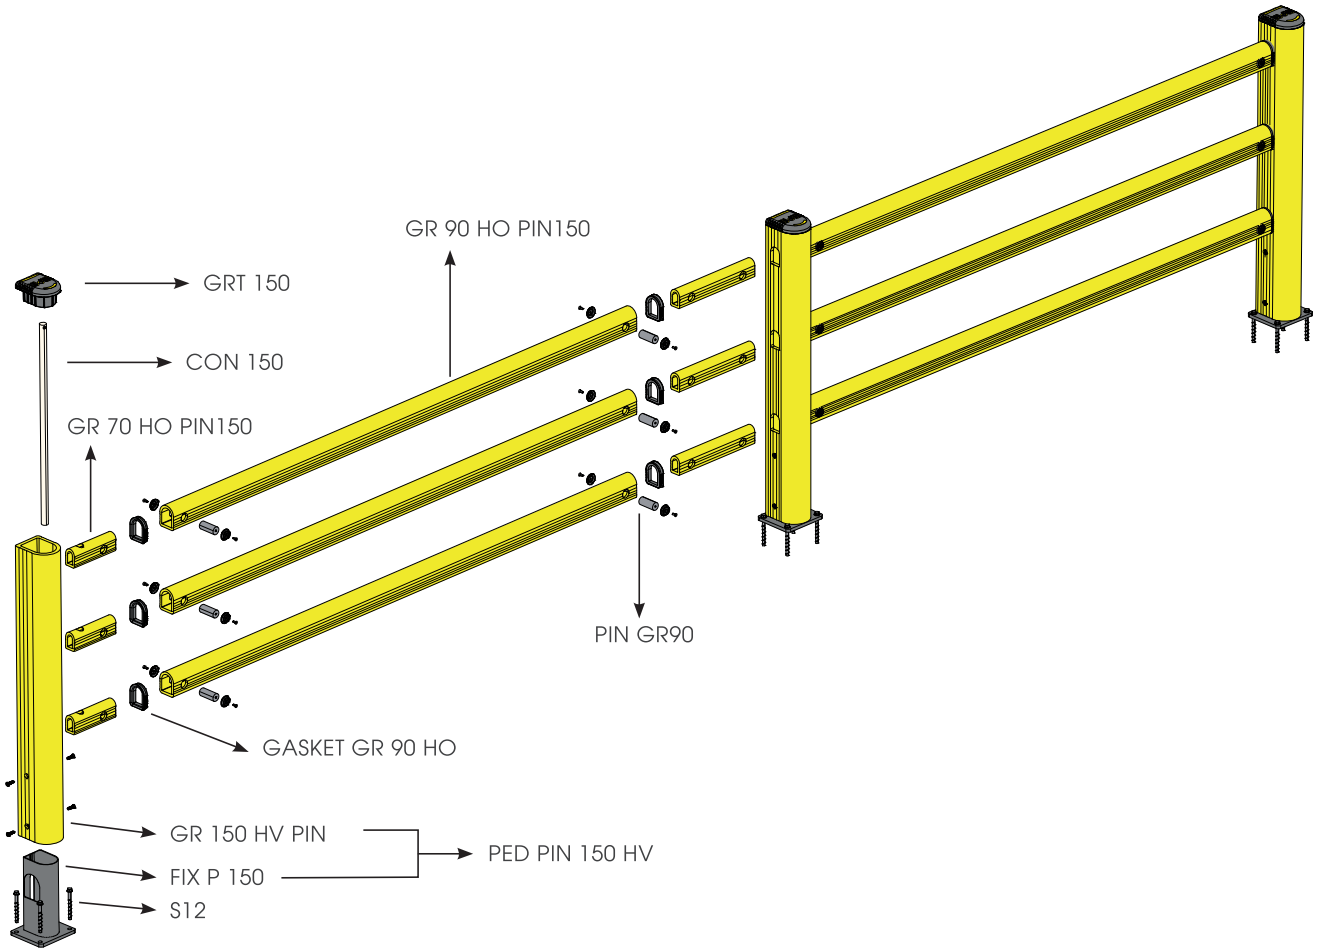


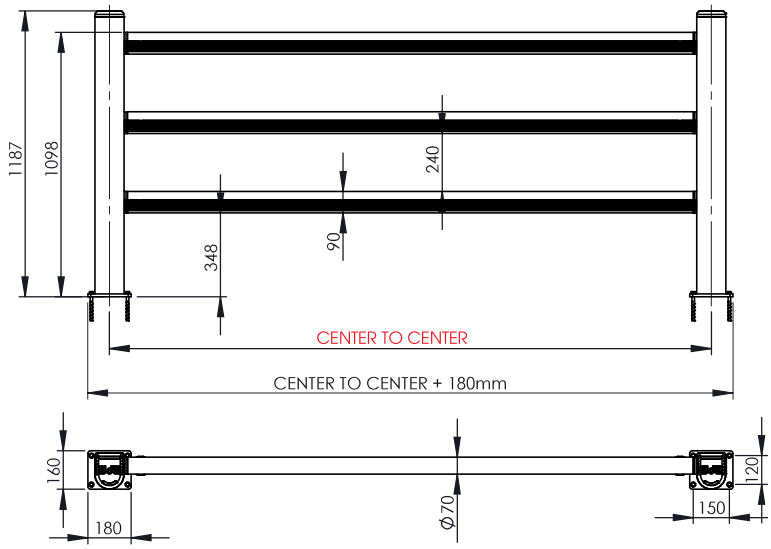

PED 150 PIN


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

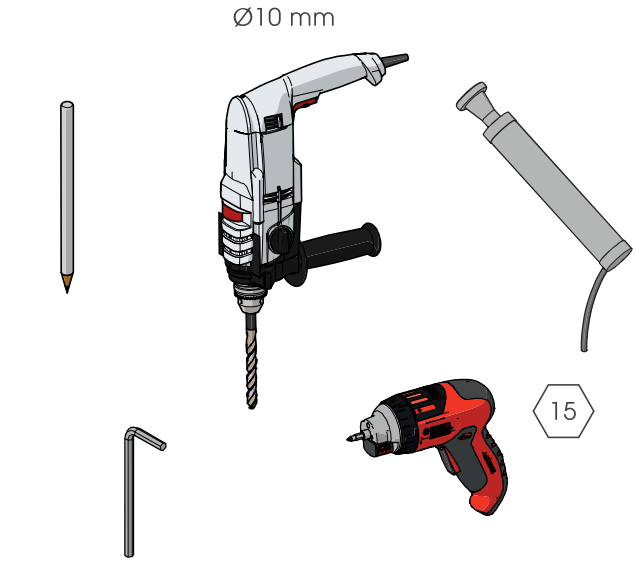

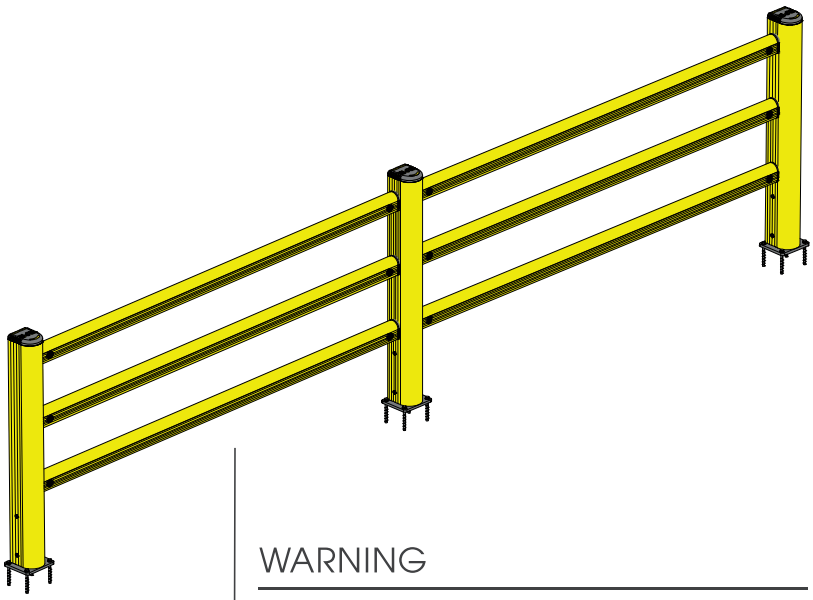


WARNING


The distance of installation depends on speed and weight of vehicle

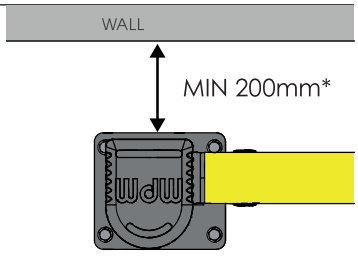


1

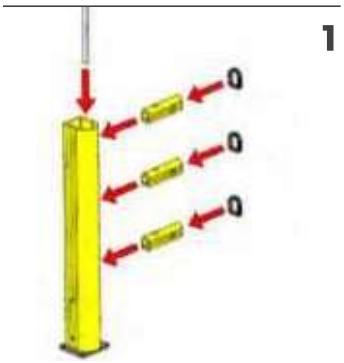


2

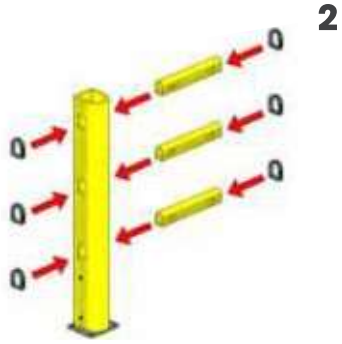

3

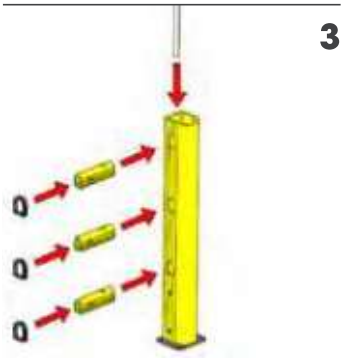


4

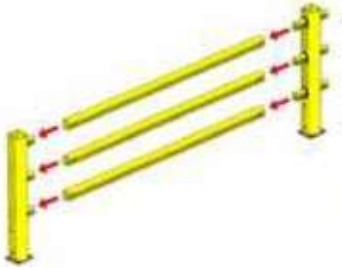


PED 150 PIN

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

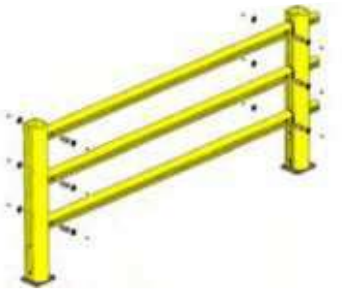


6

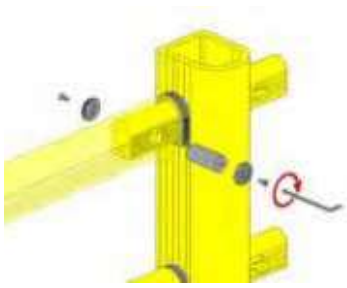

7

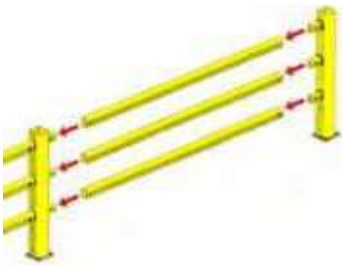


8

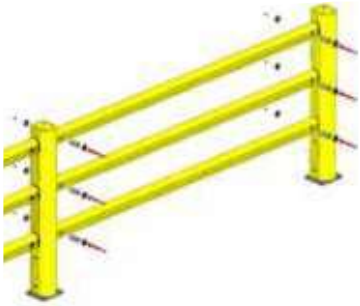


9



10

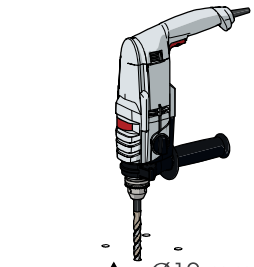

11

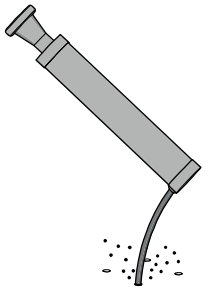

12




13





PED 200 PIN

BARRIERA DI SICUREZZA
SAFETY BARRIER

HEAVY LOAD / FOR FORKLIFTS

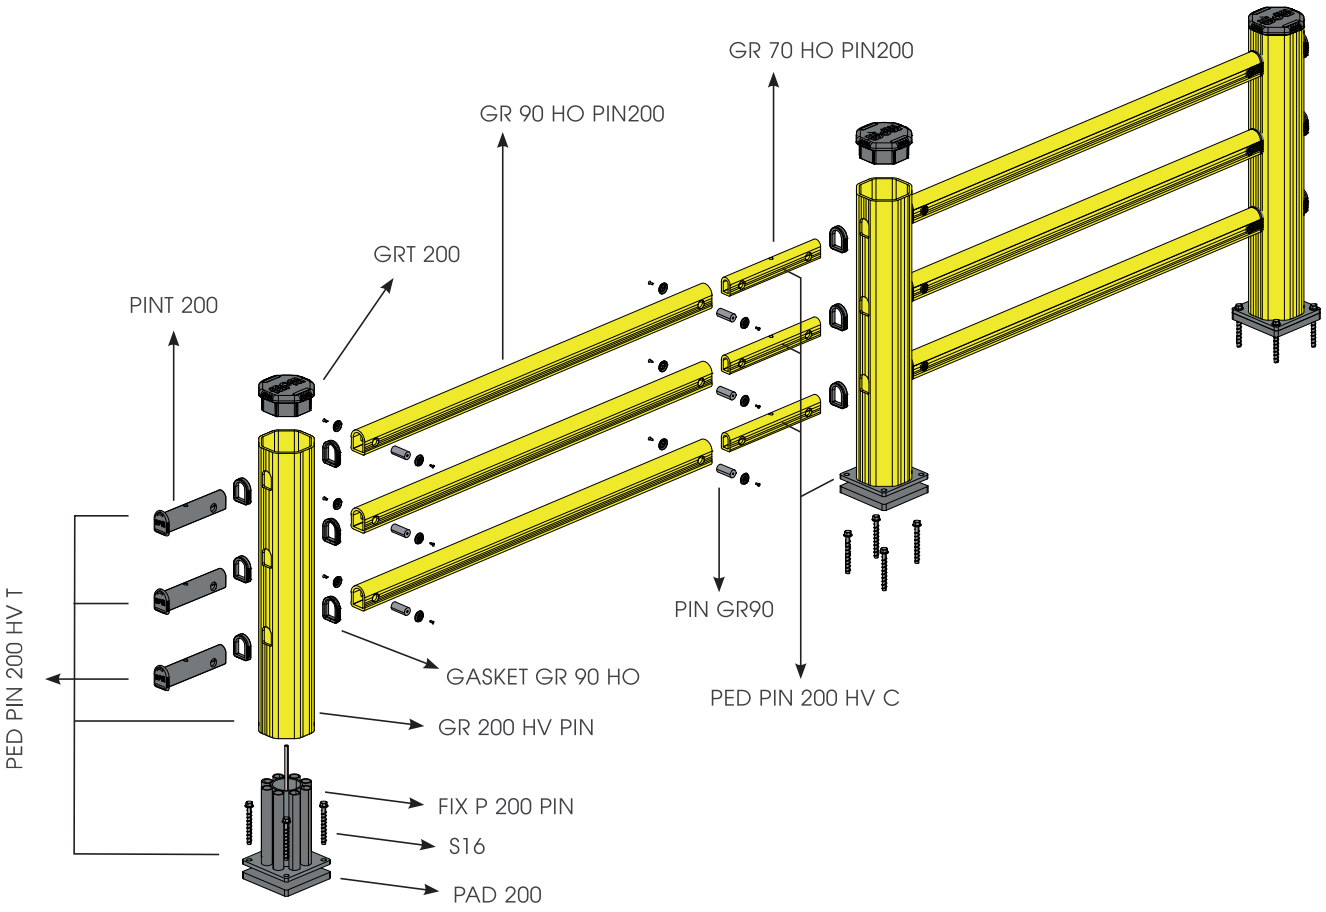


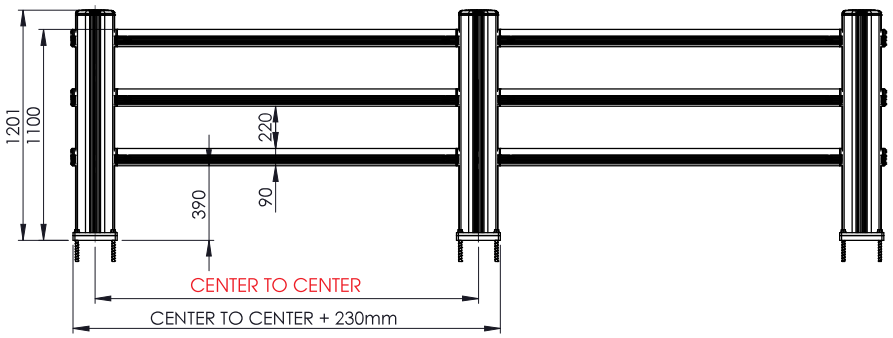


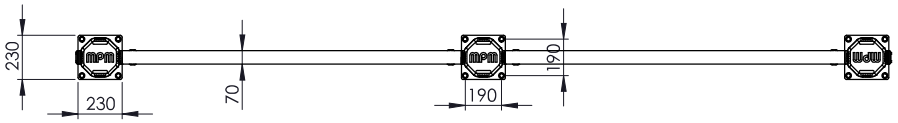

PED 200 PIN


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

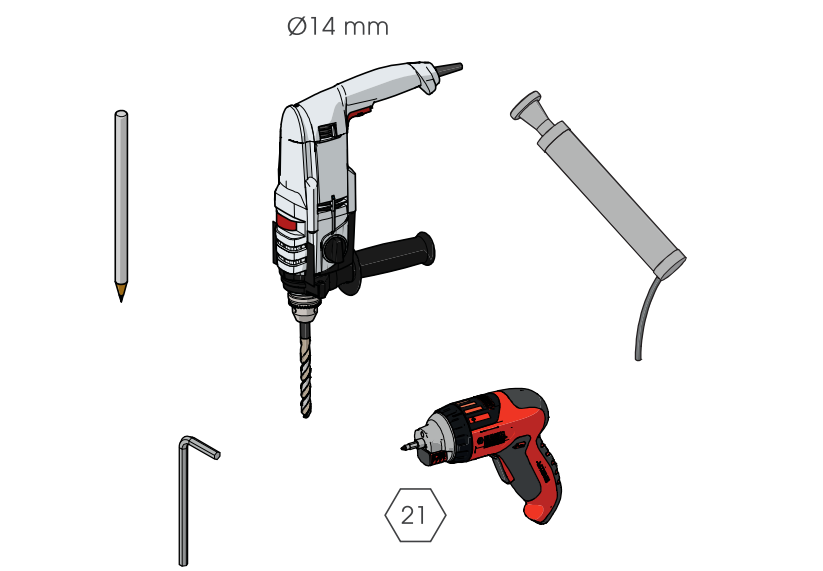

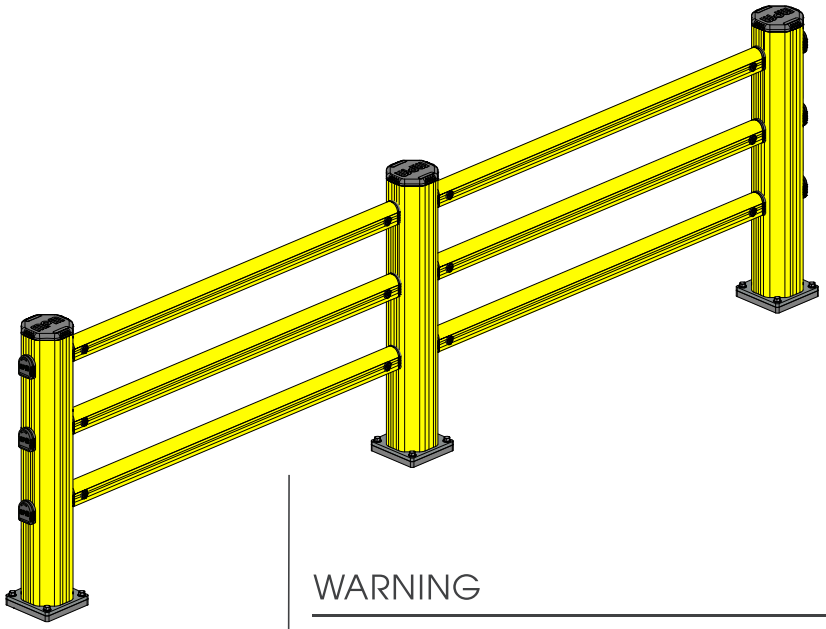


WARNING


The distance of installation depends on speed and weight of vehicle

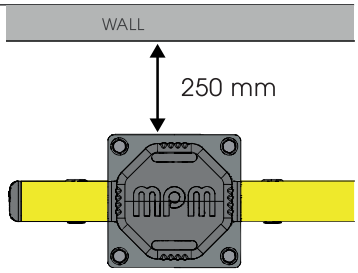


1

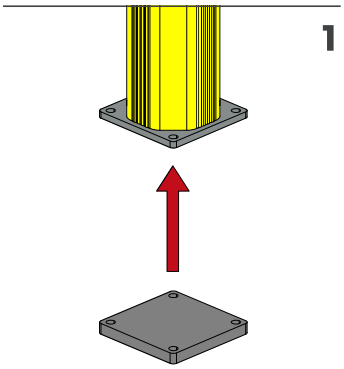


2

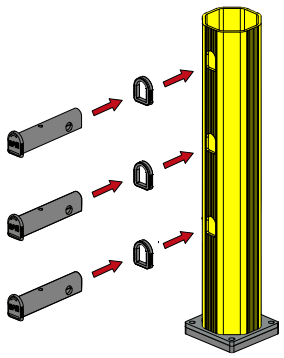

3

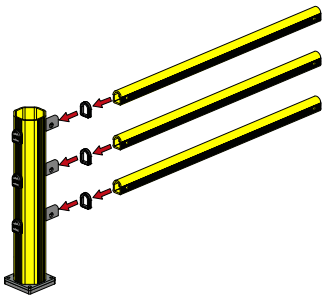


4

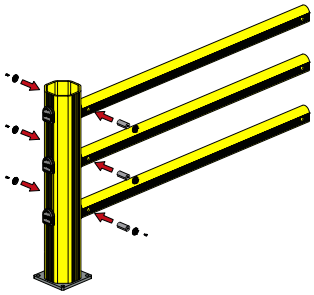


PED 200 PIN

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

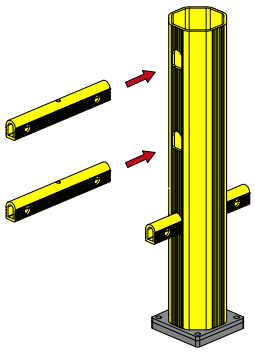


6

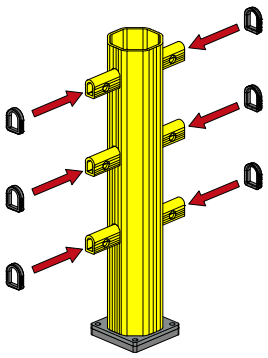


7

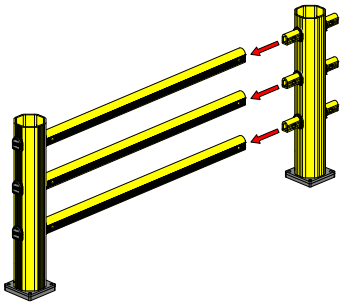


8

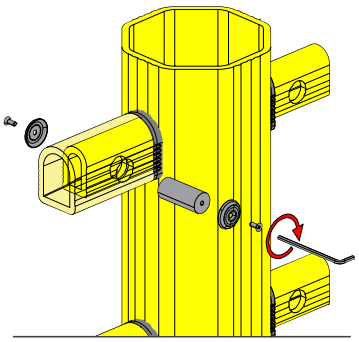


9

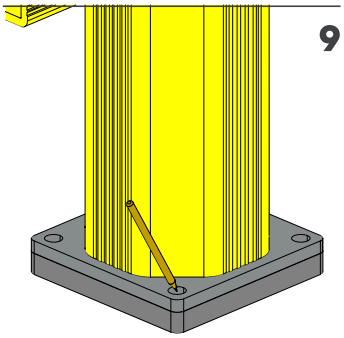


10

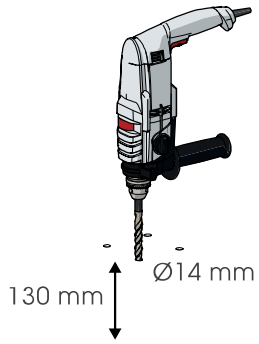


11

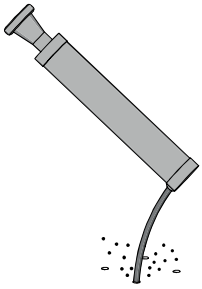


12

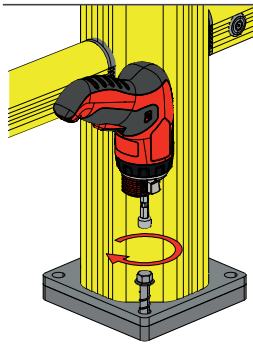


13

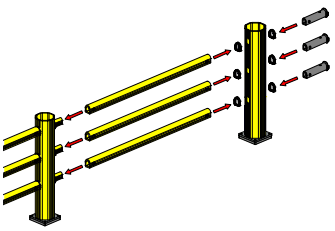

14

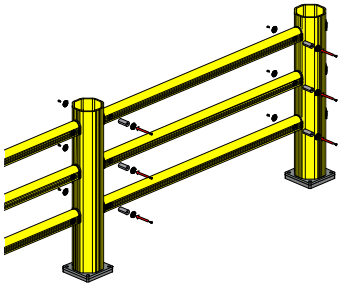


15

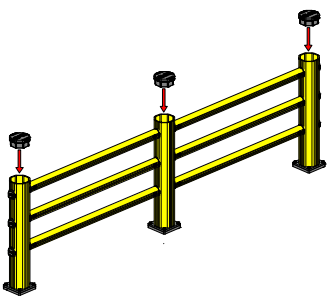



BFLEX.FRONT/2

BARRIERA DOPPIA FRONTALE – RACK END MODULO SINGOLO
FRONTAL DOUBLE RACK END BARRIER

HEAVY LOAD / FOR FORKLIFTS

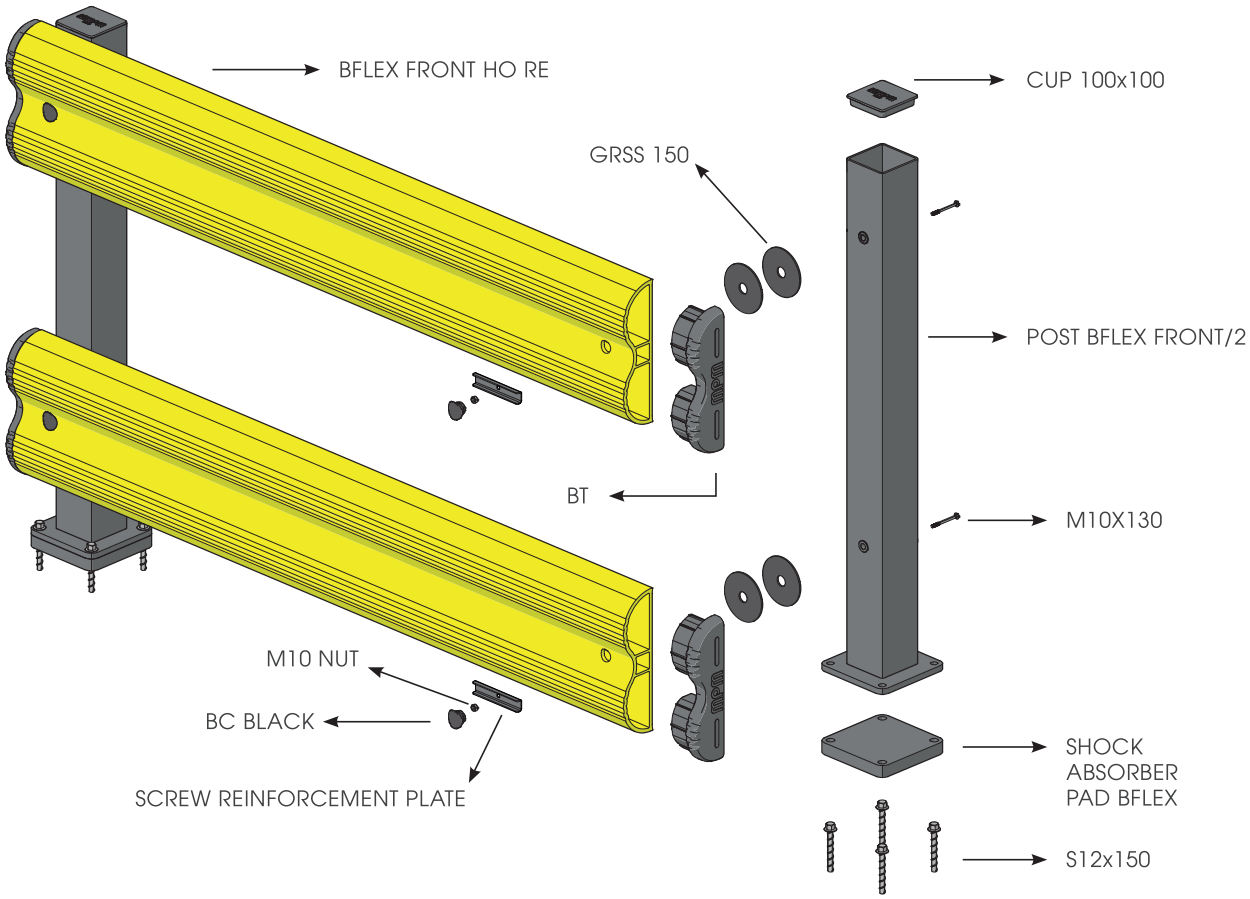


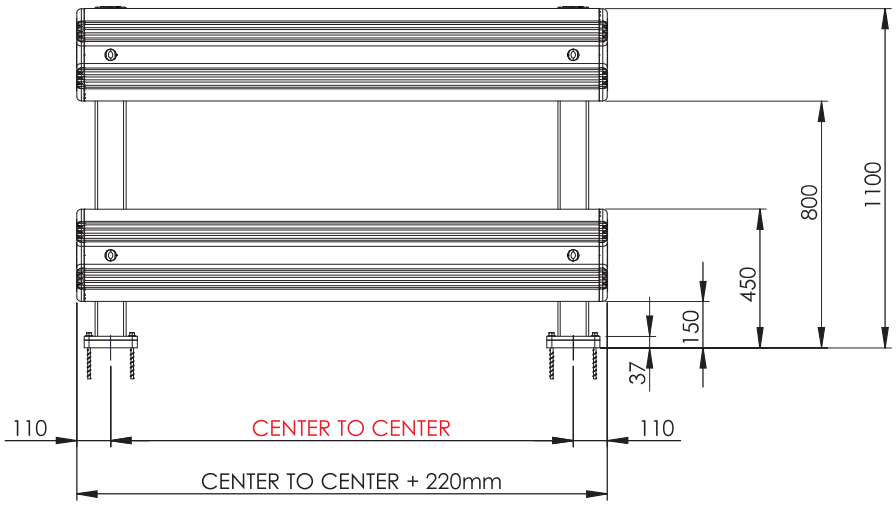

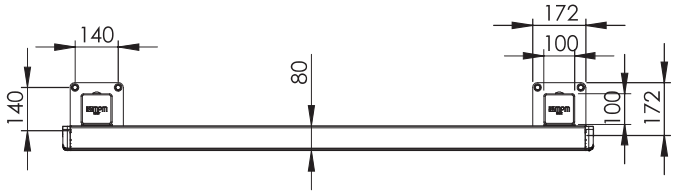


BFLEX.FRONT/2

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

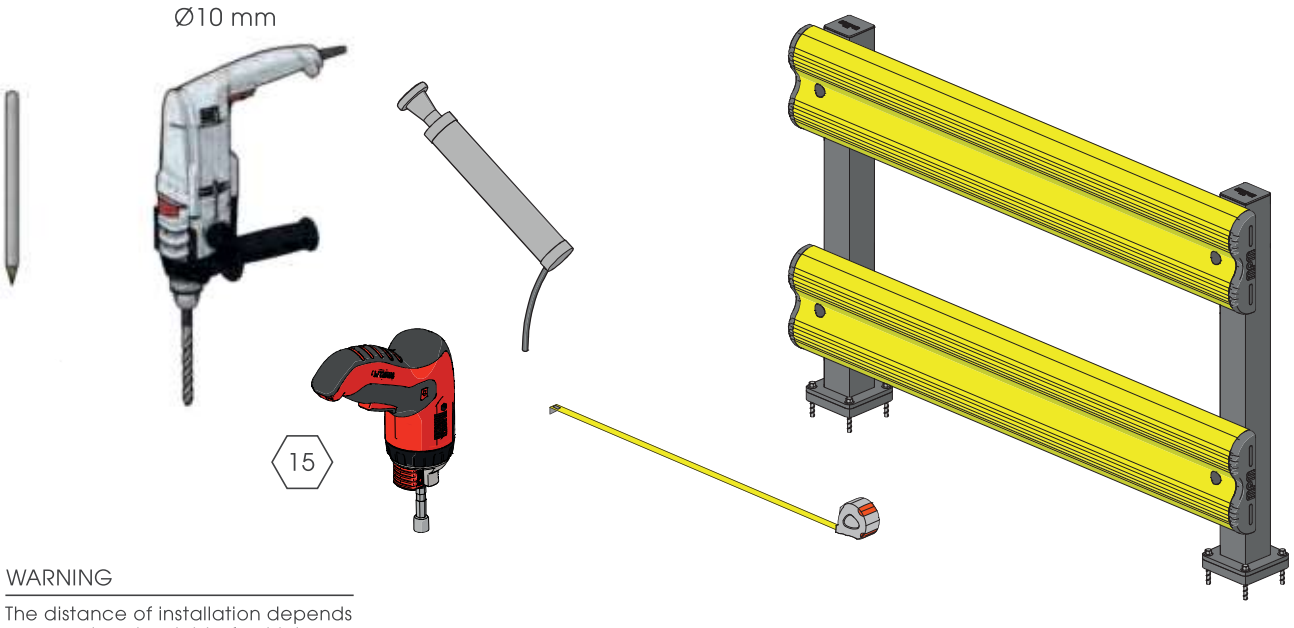


WARNING


The distance of installation depends on speed and weight of vehicle

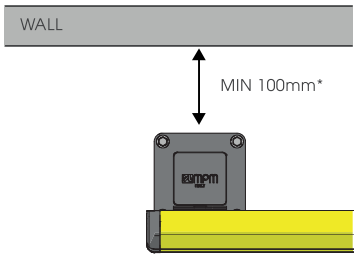


1

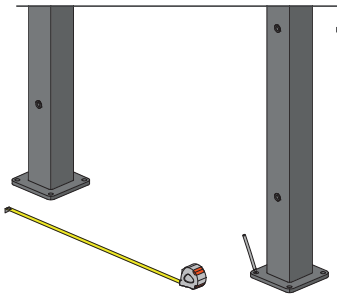


2

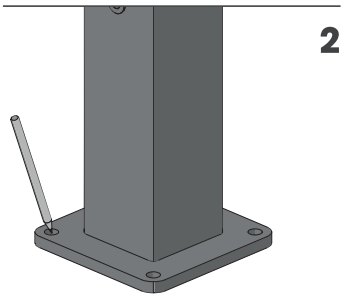


3

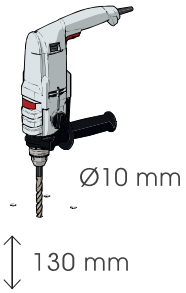


4

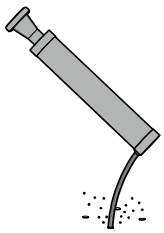


5




6

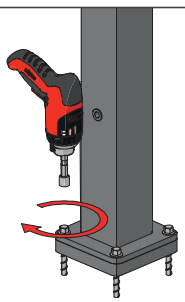

7

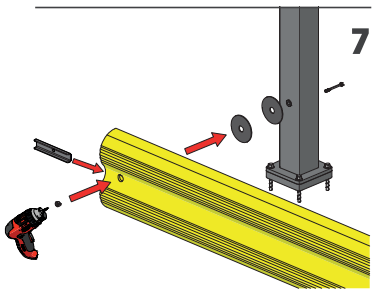


8

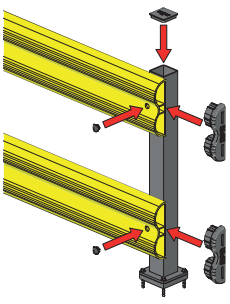


BFLEX.FRONT/2 MODULAR

BARRIERA DOPPIA FRONTALE MODULARE
FRONTAL DOUBLE BARRIER MODULAR


HEAVY LOAD / FOR FORKLIFTS

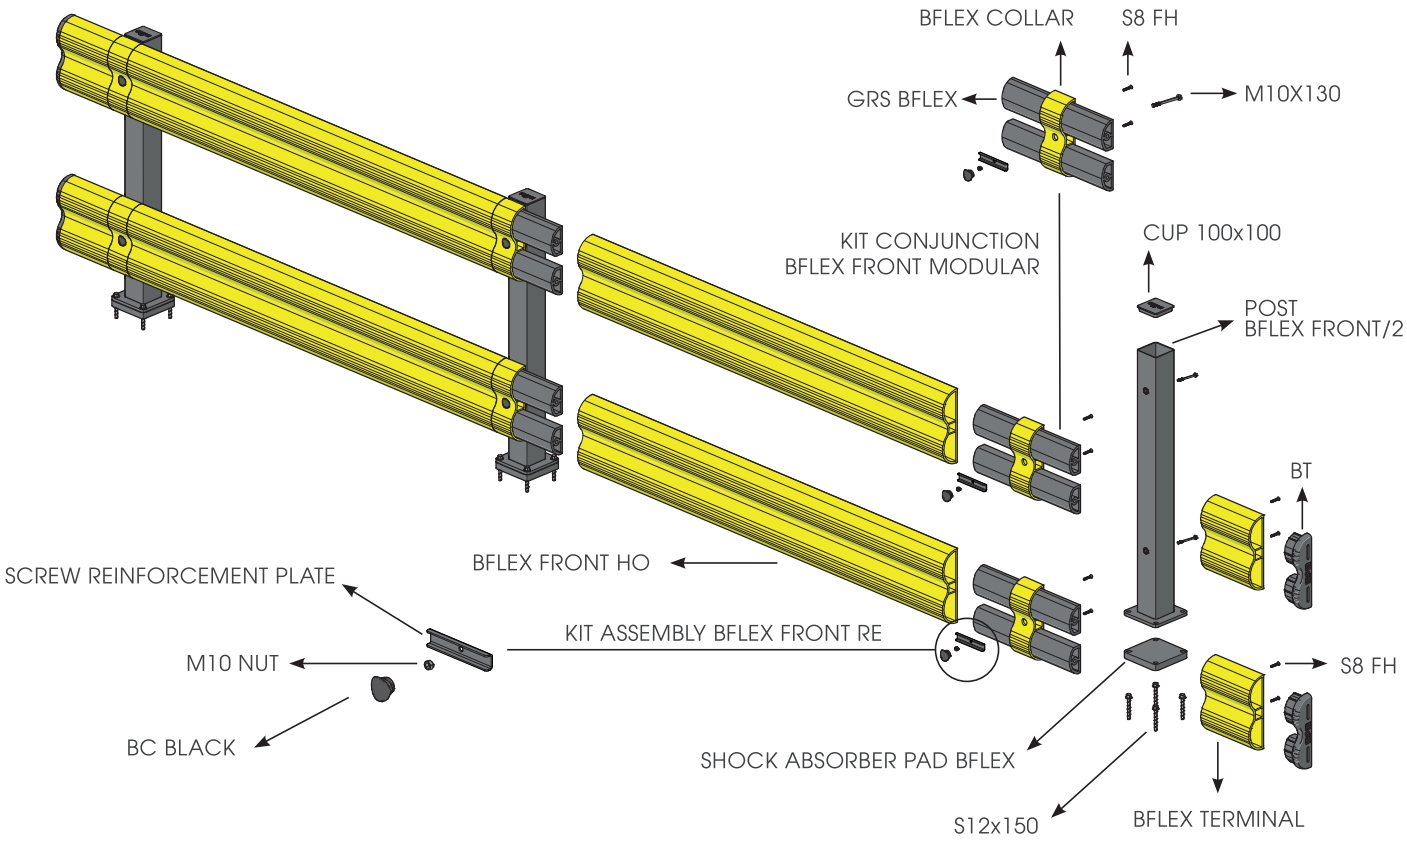

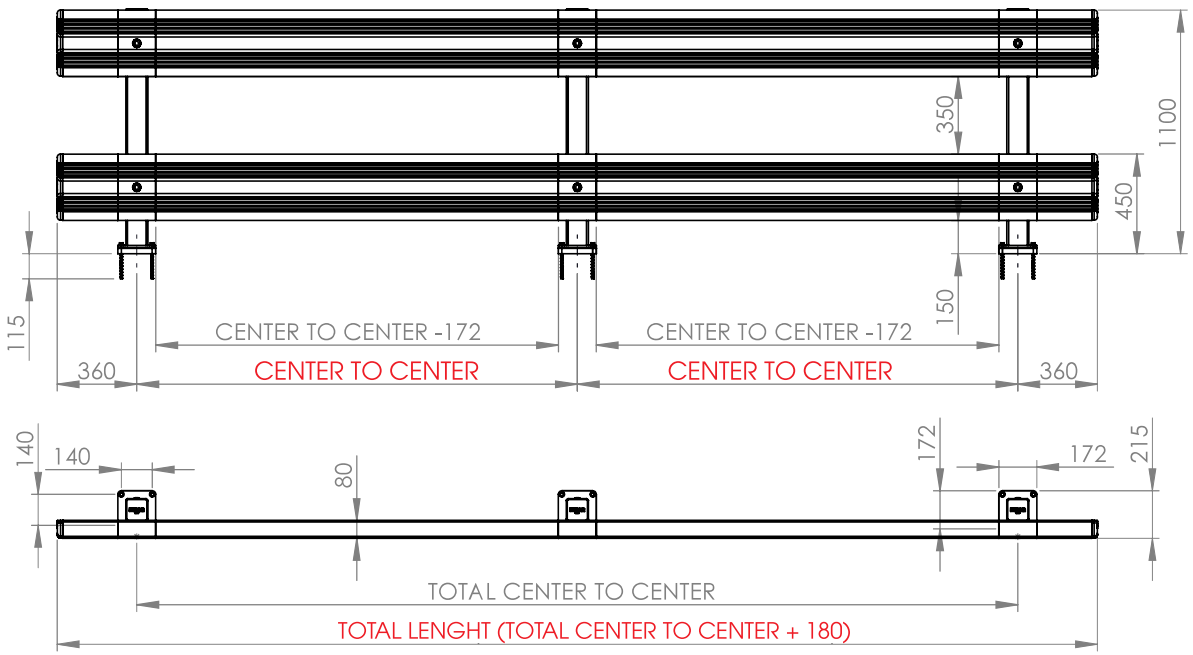


BFLEX.FRONT/2 MODULAR

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

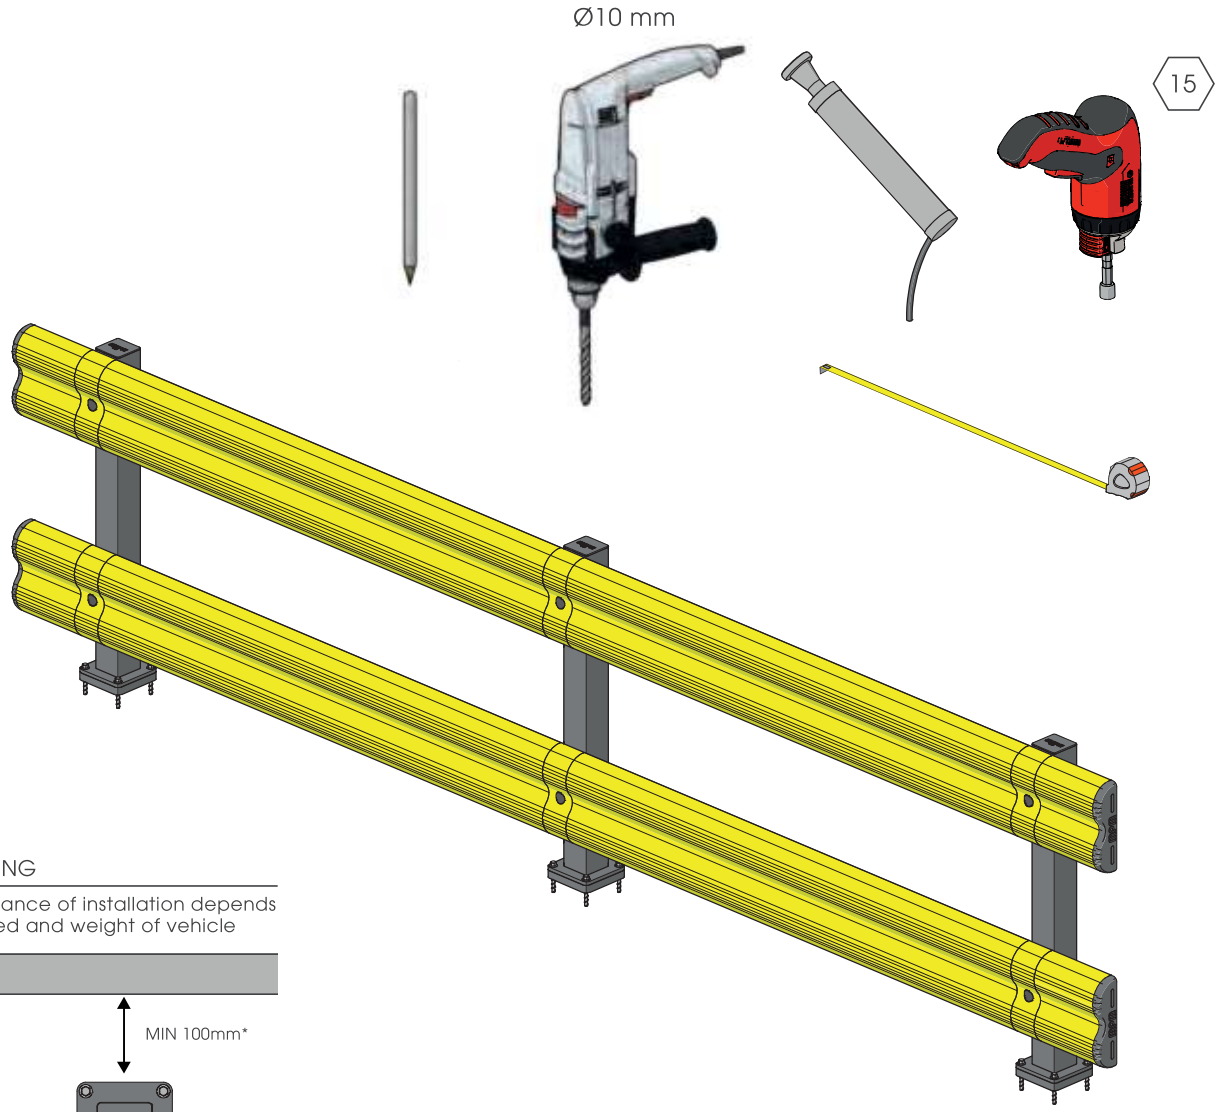


WARNING

The distance of installation depends on speed and weight of vehicle

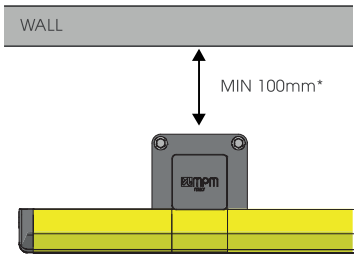


1

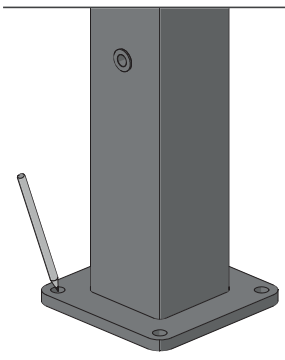

2




3

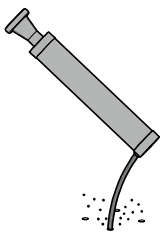


BFLEX.FRONT/2 MODULAR

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


4




5

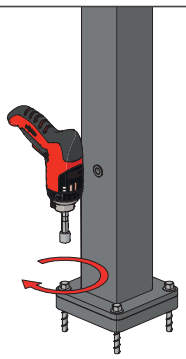


6

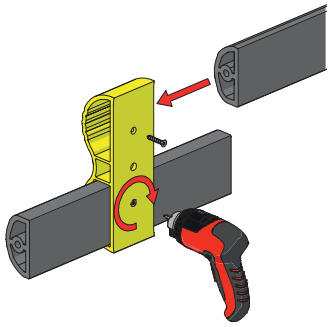


7

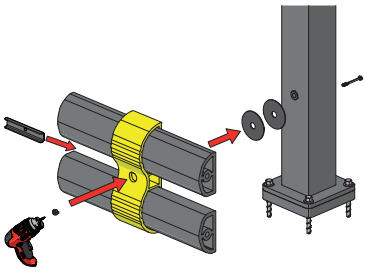


8

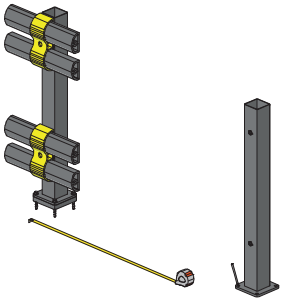


9

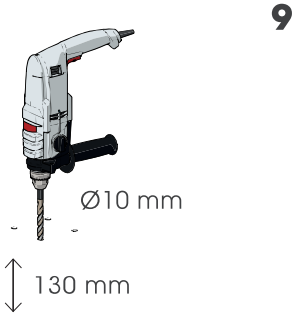


10

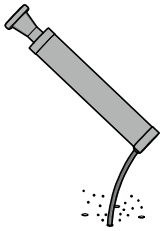


11




12

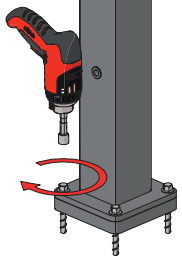


13

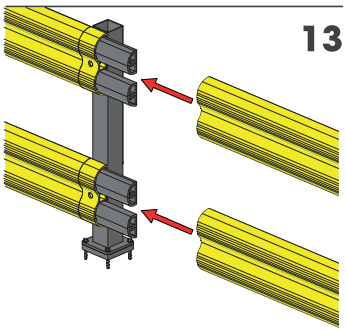

14

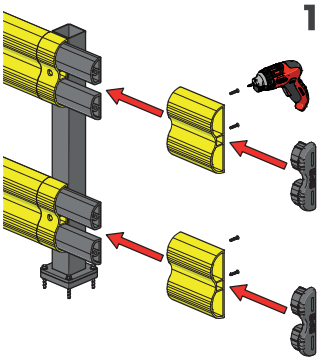


15

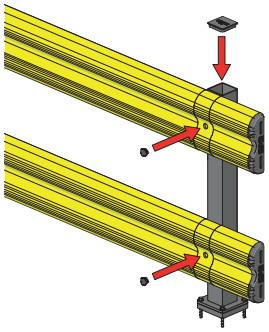


BFLEX.COM/2

BARRIERA DOPPIA COMPATTA
COMPACT DOUBLE BARRIER


HEAVY LOAD / FOR FORKLIFTS

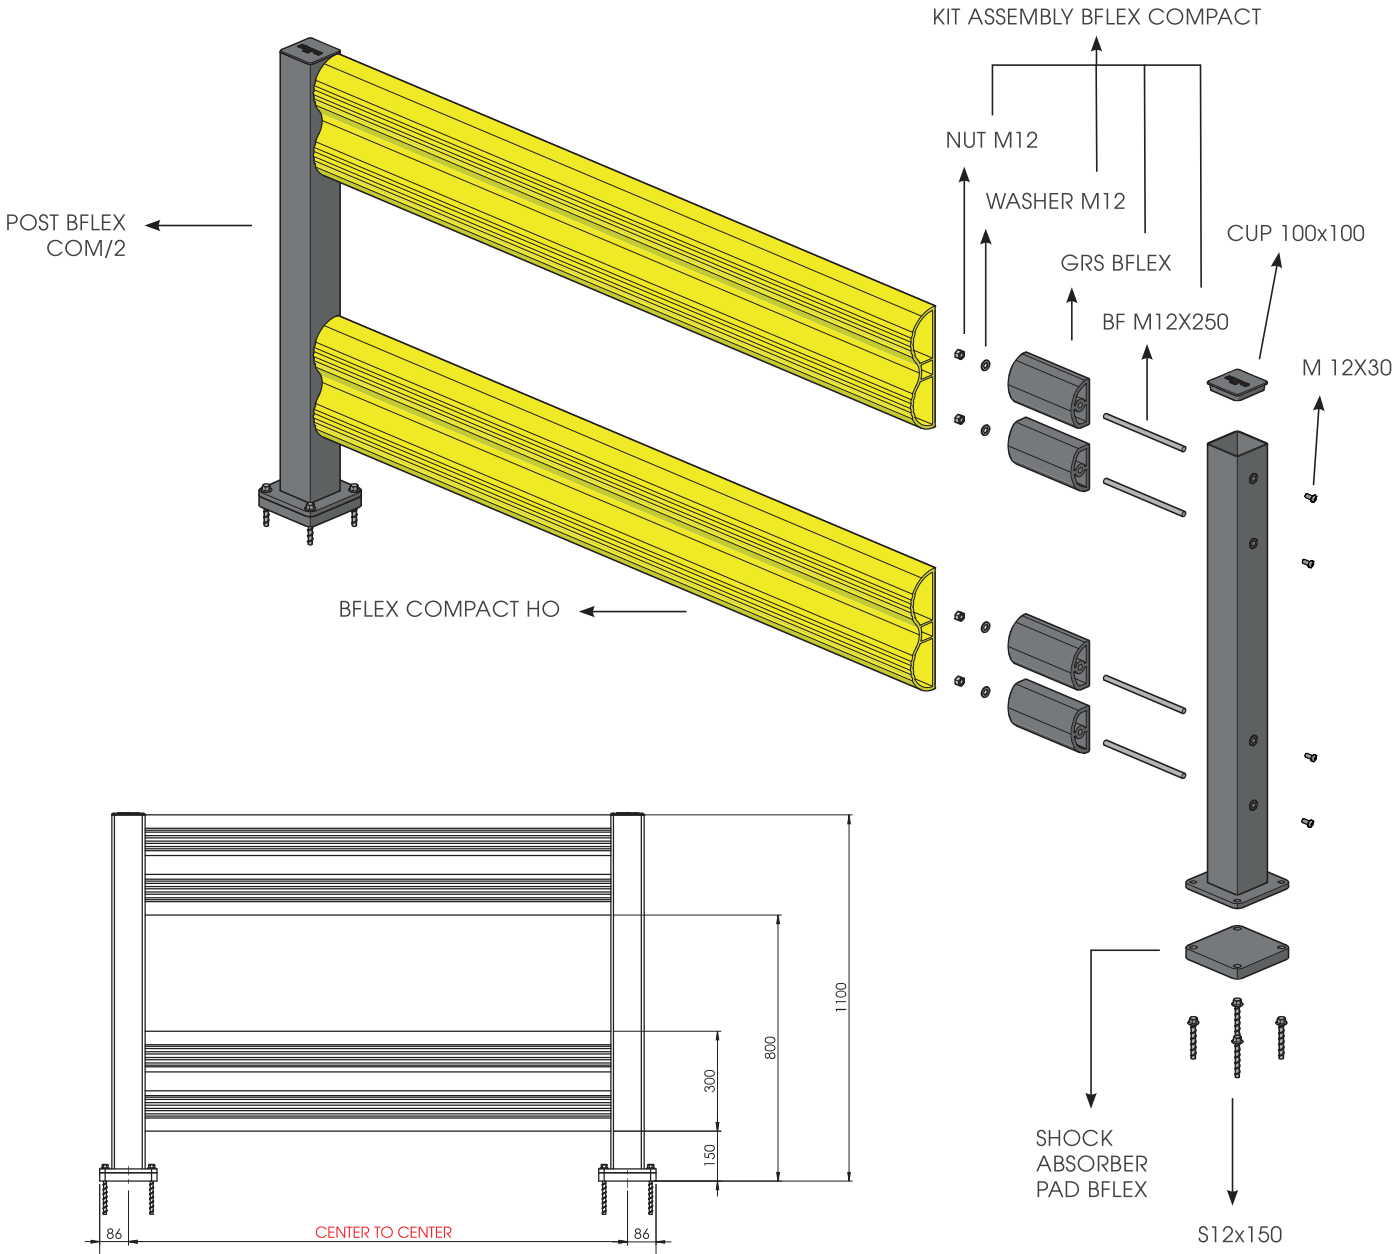

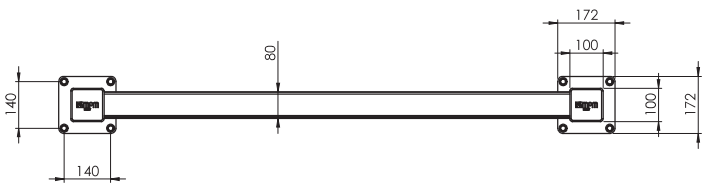


BFLEX.COM/2

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

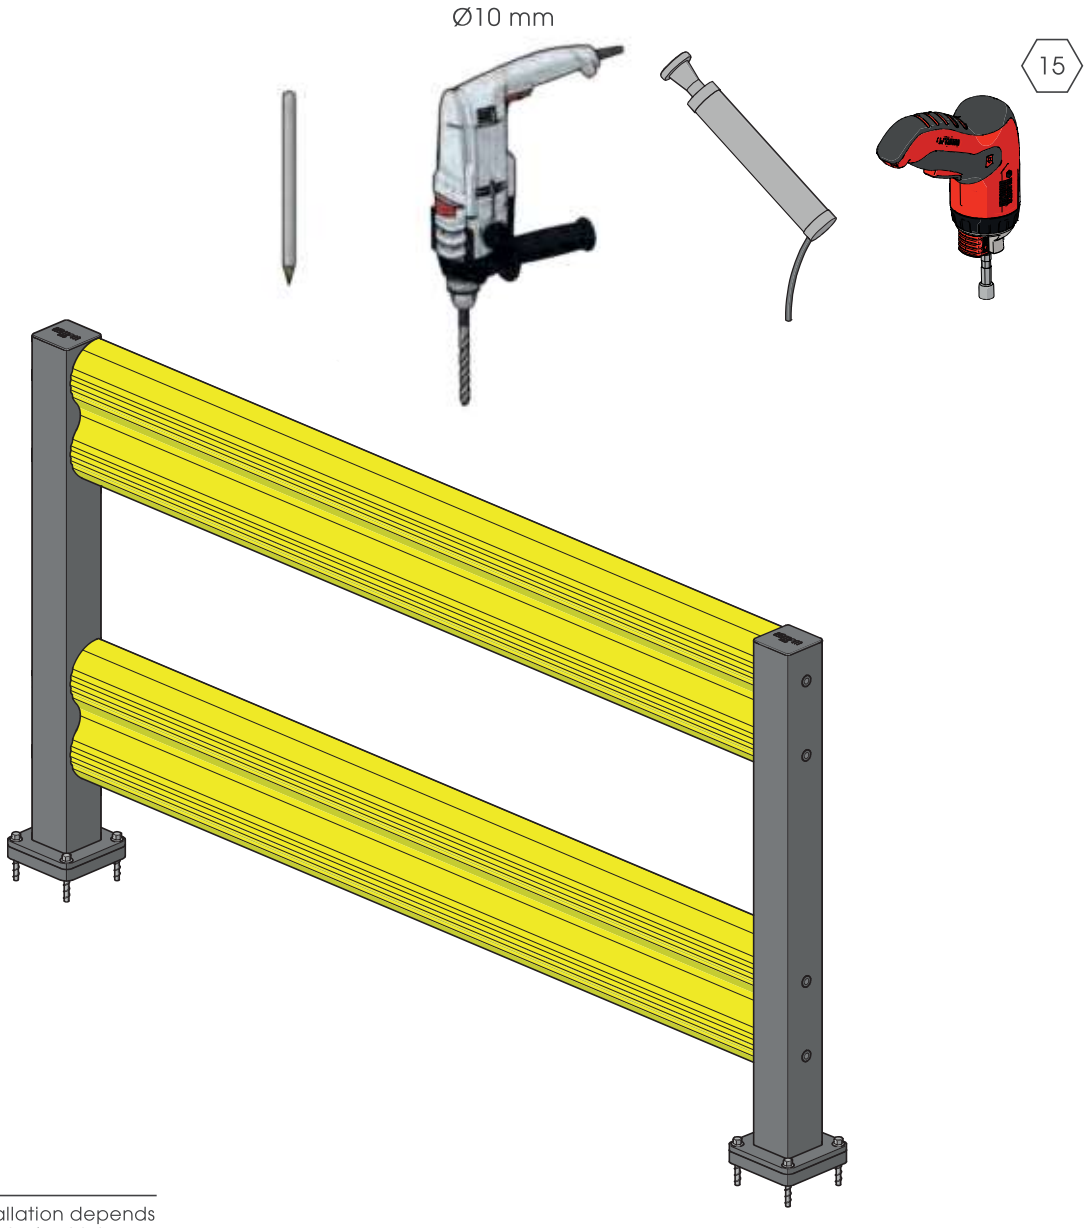


WARNING


The distance of installation depends on speed and weight of vehicle

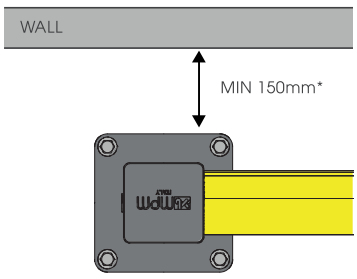

1

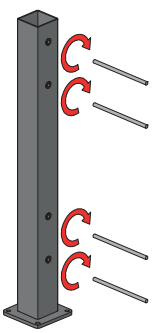


2

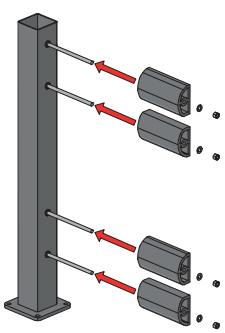


BFLEX.COM/2

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


3

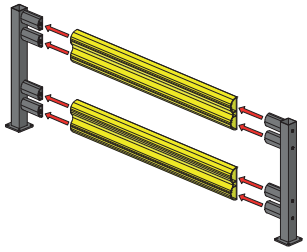


4

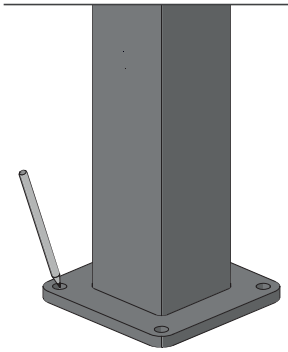


5

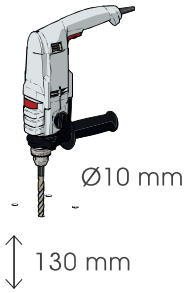


6

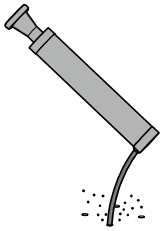


7




8

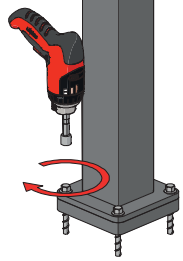


9

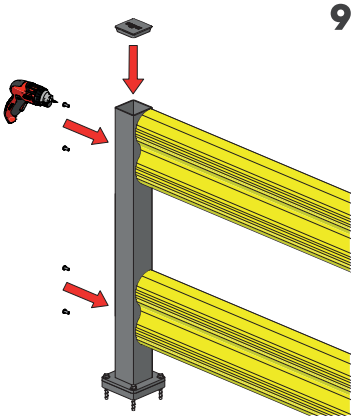

BFLEX.COM/2 MODULAR

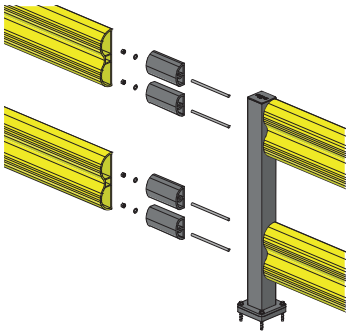


BFLEX.COM/2 MODULAR CORNER

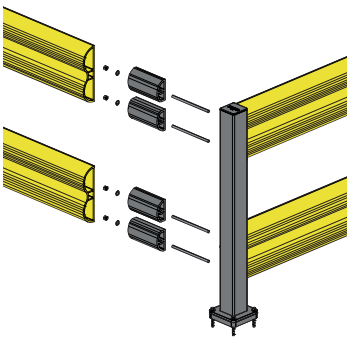


DP 90 ONE WAY


PORTA PEDESTRIAN 90
DOOR PEDESTRIAN 90

LIGHT LOAD / FOR HAND PALLET TRUCKS

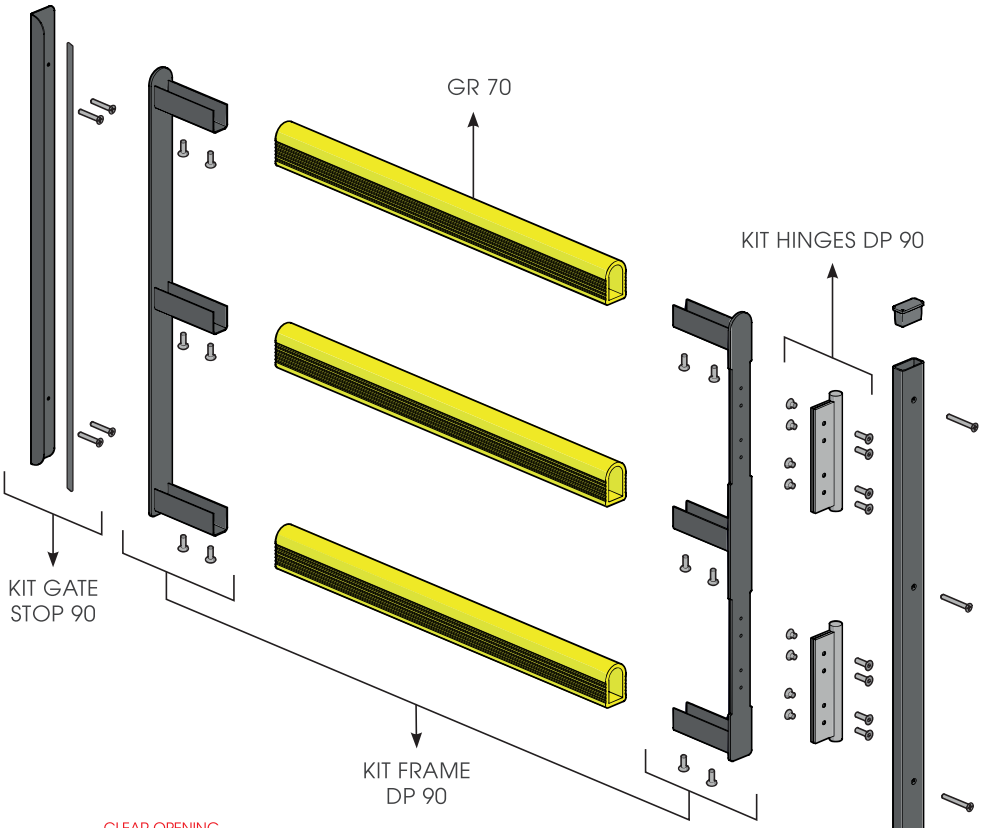

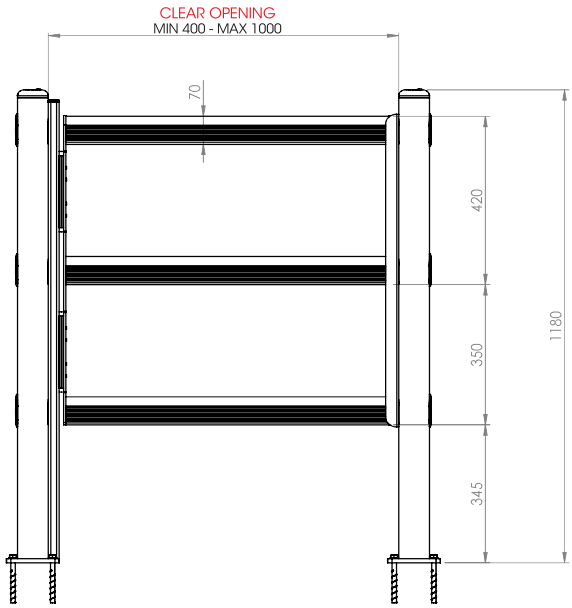




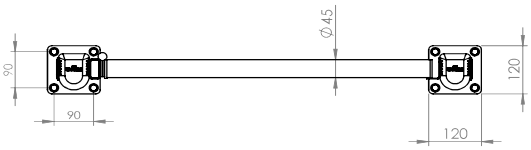


DP 90 ONE WAY

PORTA PEDESTRIAN 90
DOOR PEDESTRIAN 90

PLEASE CHECK HERE BELOW
HOW THE SIZE OF THE DOOR IS TO BE MEASURED

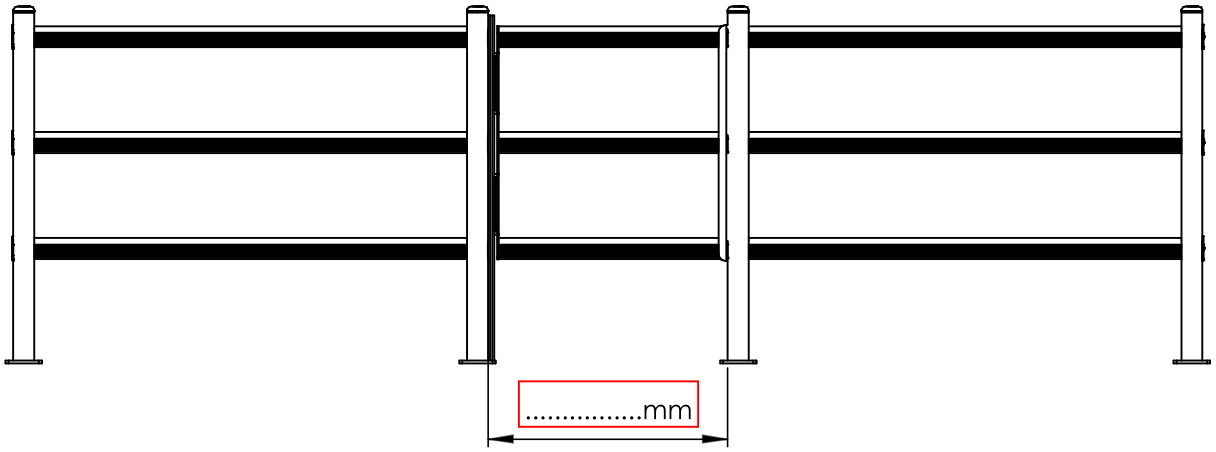

PLEASE CHECK HERE BELOW
WHICH DIRECTION OF OPENING YOU NEED

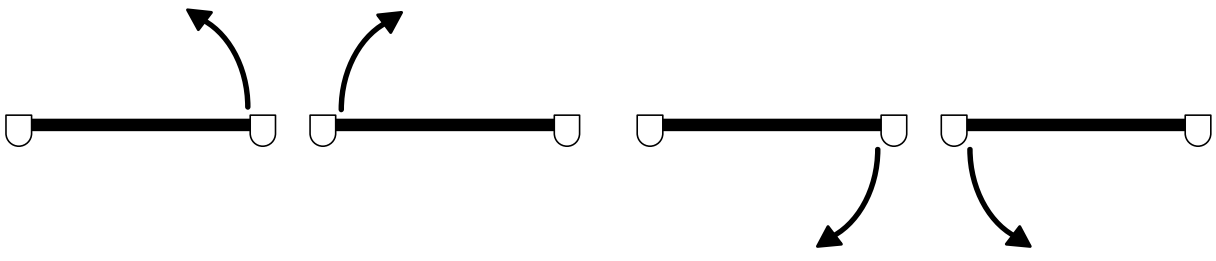



☐ A ☐ B ☐ C ☐ D


DP 90 ONE WAY

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




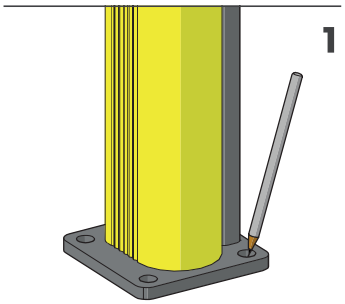

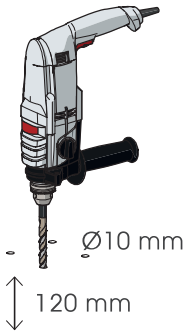

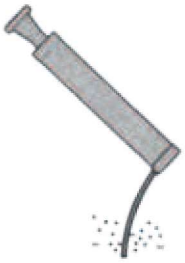




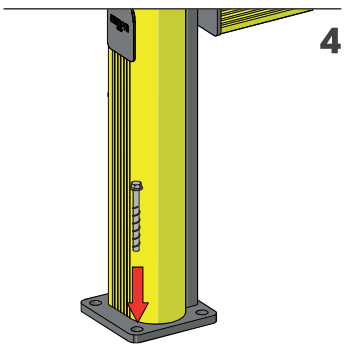


DP 90 ONE WAY

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

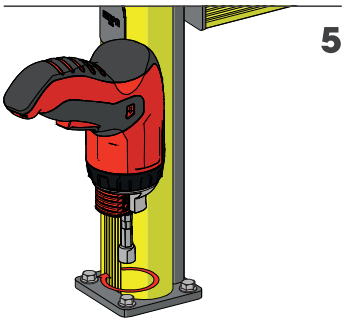


6

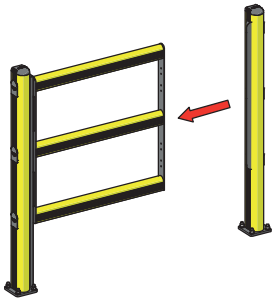


7

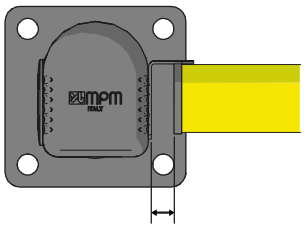


8

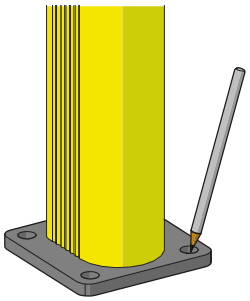


9

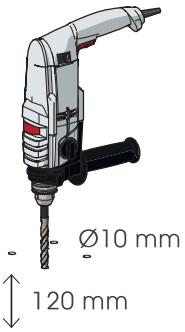


10

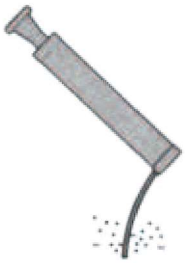

11

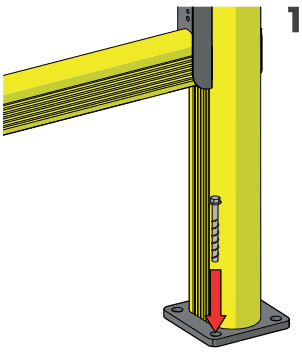


12

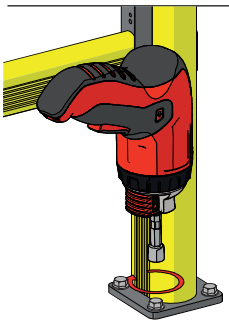



DP 90 SWING


PORTA PEDESTRIAN 90
DOOR PEDESTRIAN 90


LIGHT LOAD / FOR HAND PALLET TRUCKS

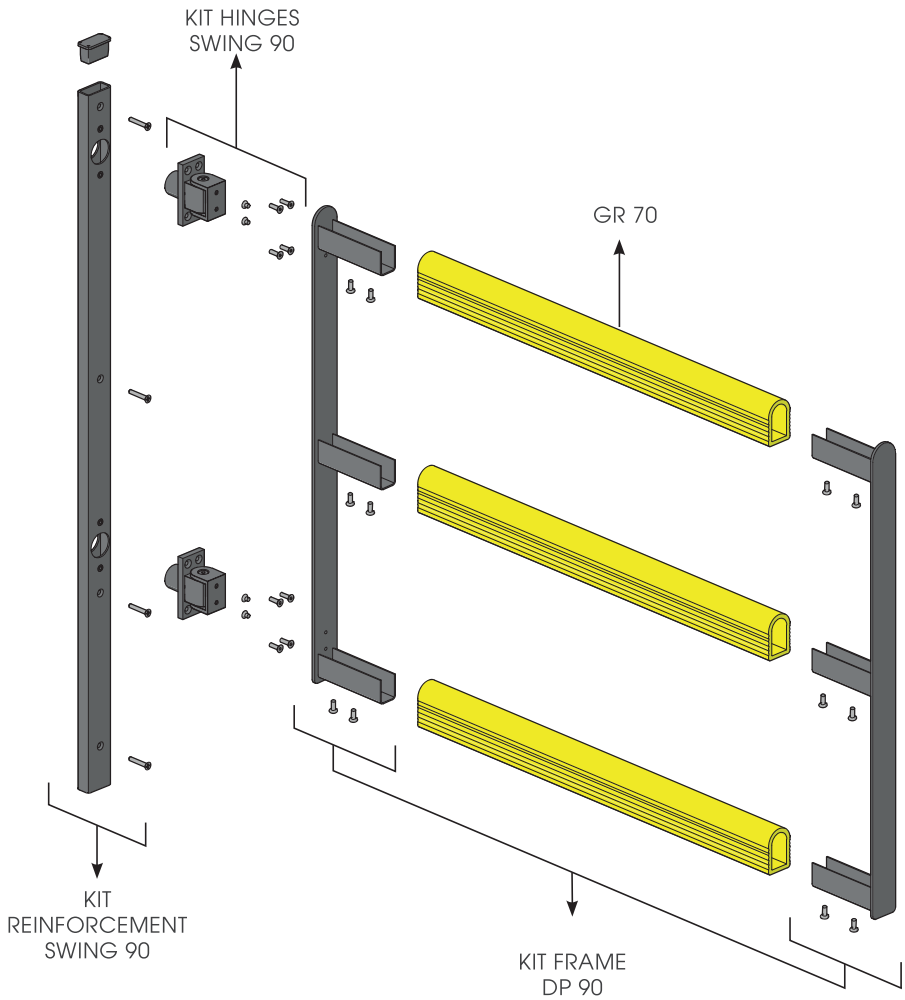

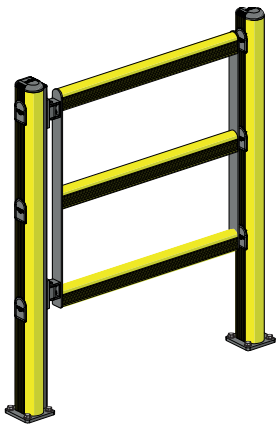

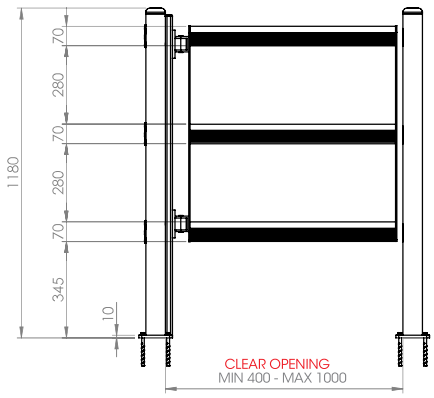

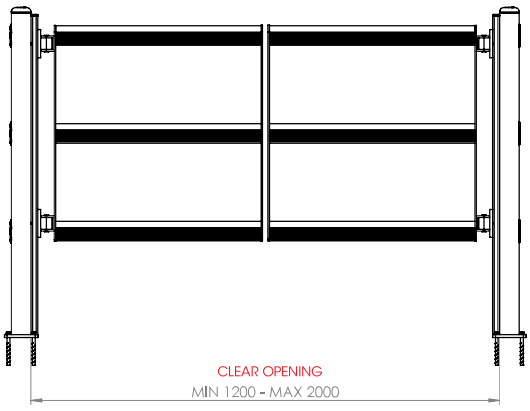


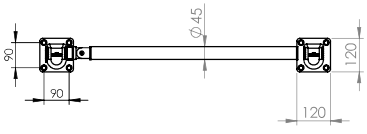


DP 90 SWING

PORTA PEDESTRIAN 90
DOOR PEDESTRIAN 90

PLEASE CHECK HERE BELOW
HOW THE SIZE OF THE DOOR IS TO BE MEASURED

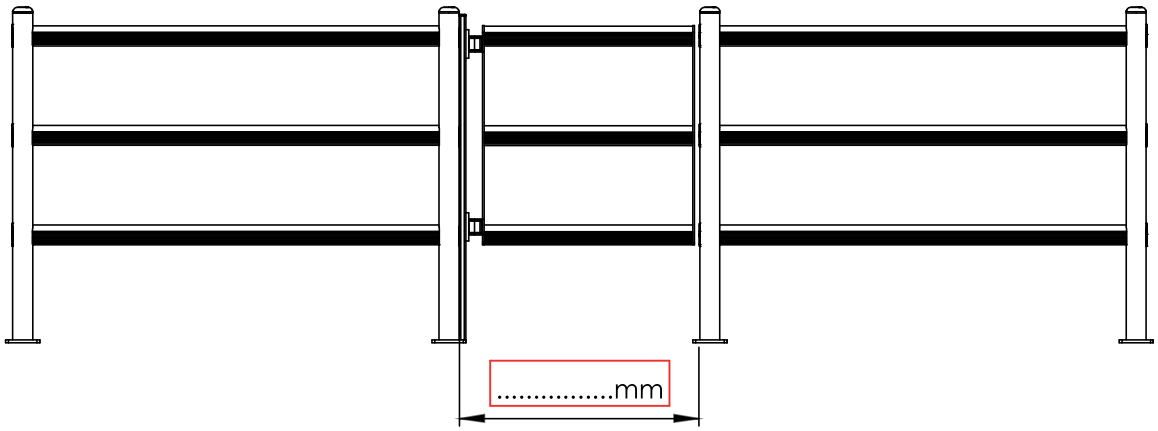

PLEASE CHECK HERE BELOW
WHICH DIRECTION OF OPENING YOU NEED

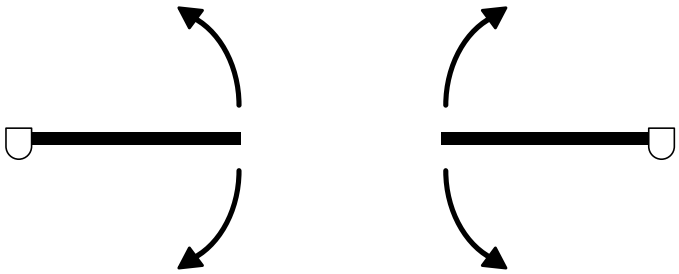


☐ A ☐ B


DP 90 SWING

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



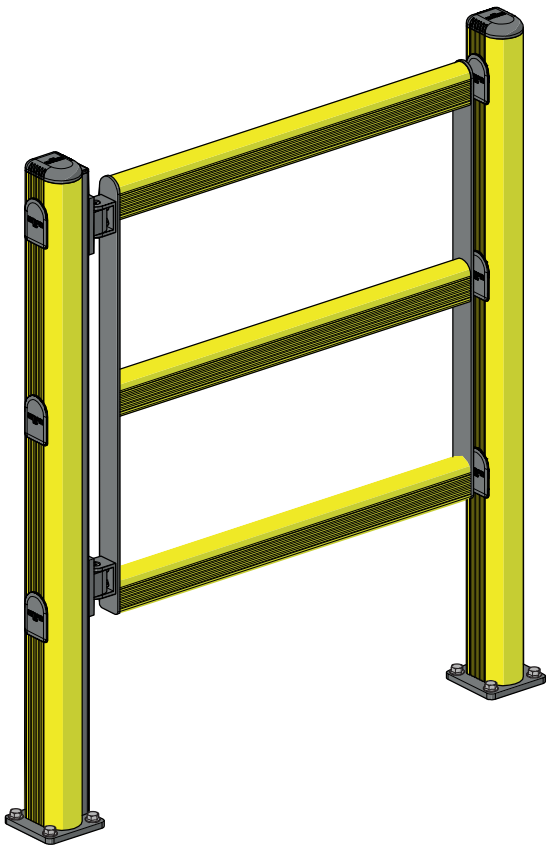

1

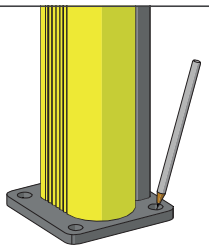


2




3



4

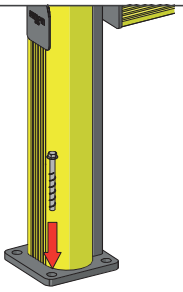


5

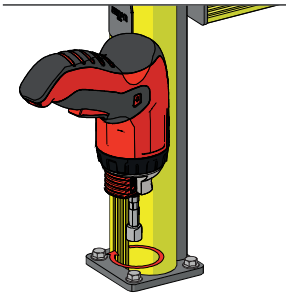


DP 90 SWING

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


6

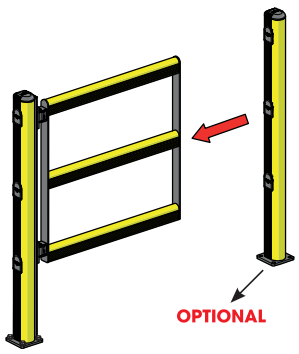


7

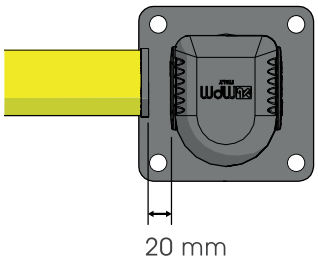


8

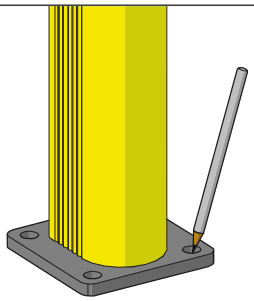


9

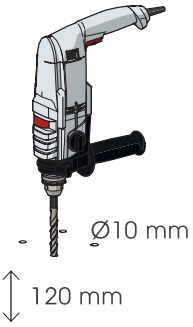


10

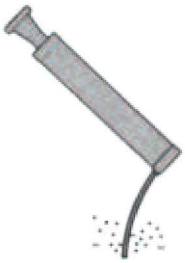


11

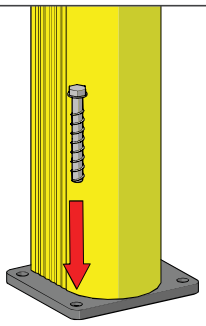

12

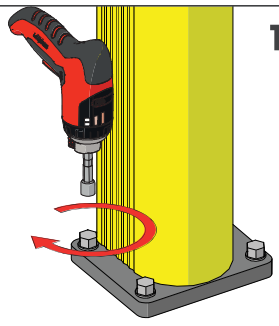


DOUBLE GATE

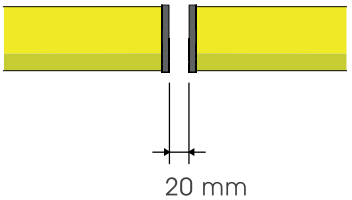


LIFT GATE 90

CANCELLO PEDESTRIAN 90
GATE FOR PEDESTRIAN 90


LIGHT LOAD / FOR HAND PALLET TRUCKS

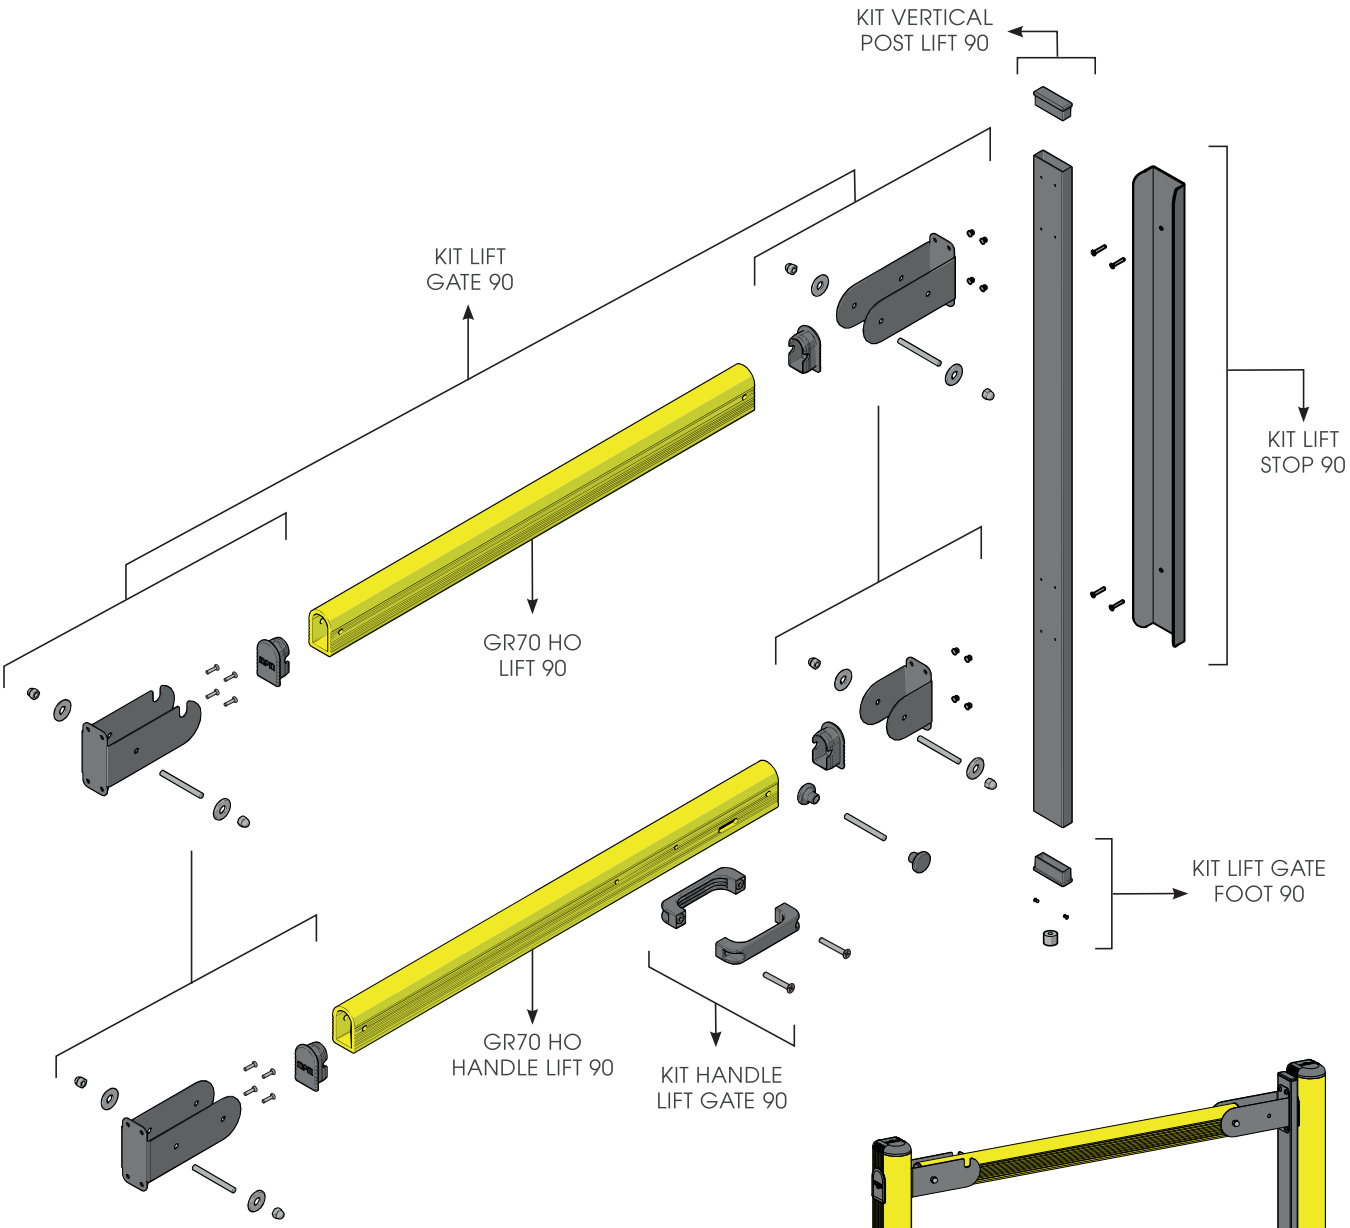


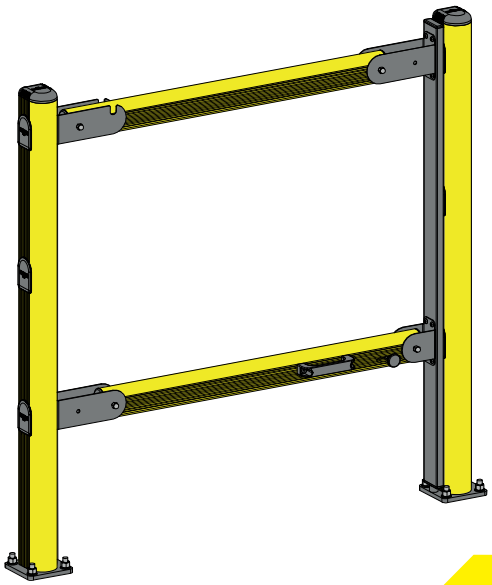

LIFT GATE 90

CANCELLO PEDESTRIAN 90
GATE FOR PEDESTRIAN 90

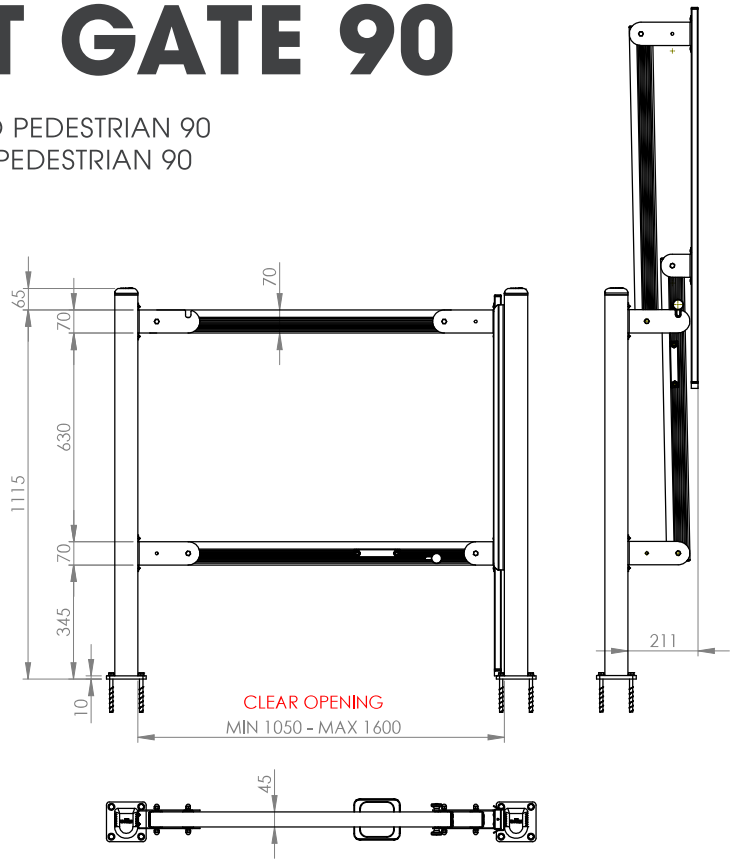

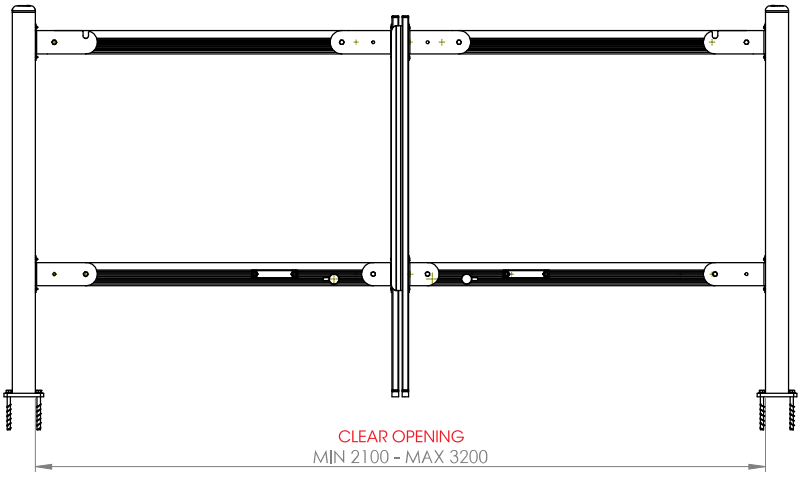

OPENING OPTIONS:



A

B




E

LIFT GATE 90


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

WARNING


The distance of installation depends on speed and weight of vehicle

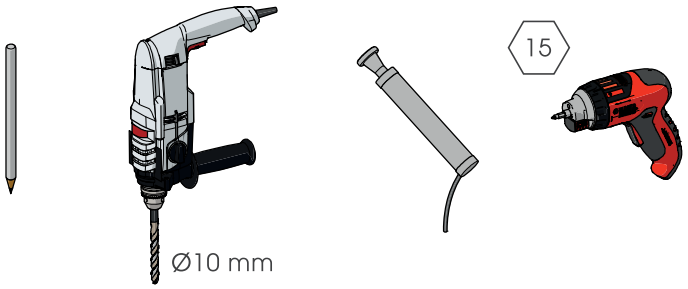


1

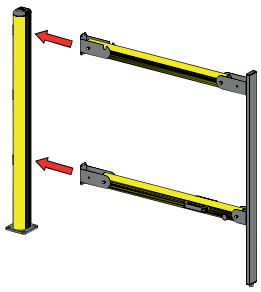

2

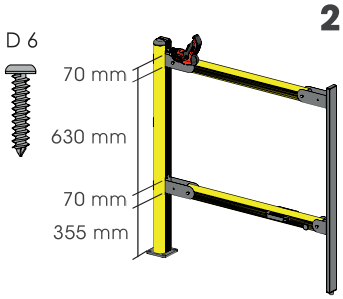


3

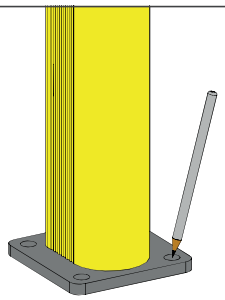


4



5

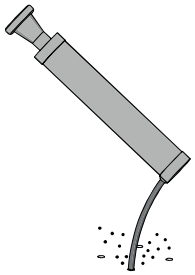


6

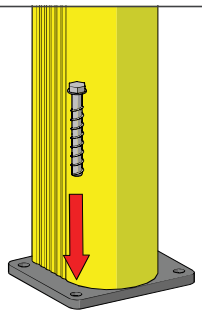


LIFT GATE 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


7

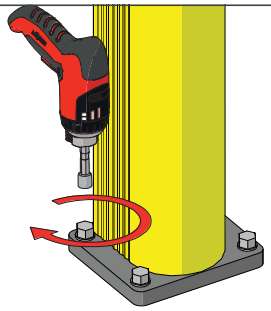


8

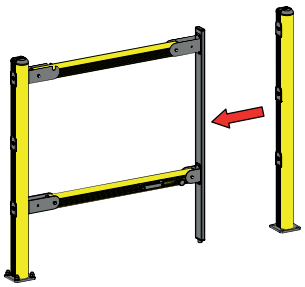


9

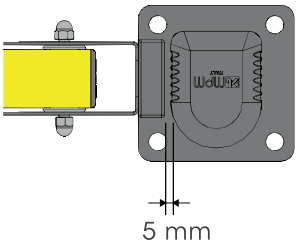


10

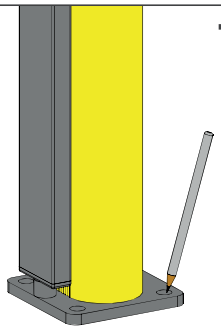


11

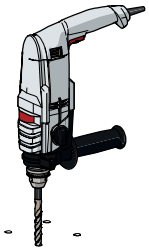


12

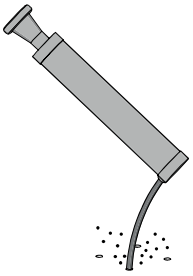


13

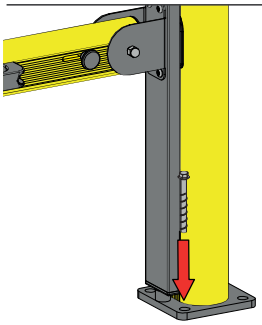

14

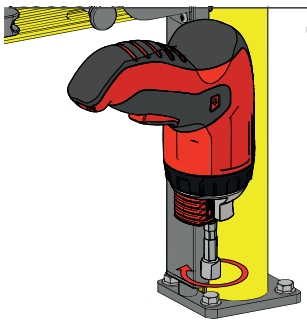


DOUBLE GATE

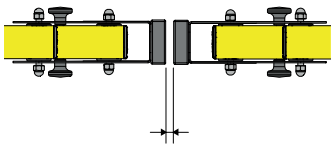


DP 150 ONE WAY

PORTA PEDESTRIAN 150
DOOR PEDESTRIAN 150

HEAVY LOAD / FOR FORKLIFTS

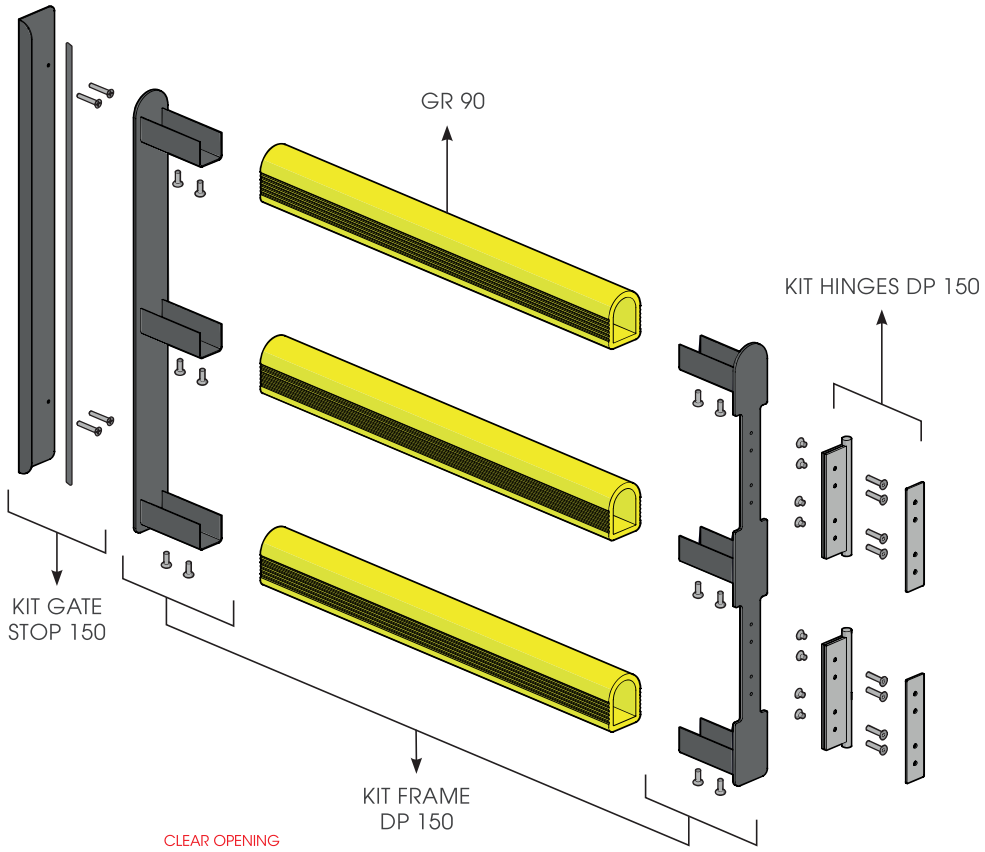

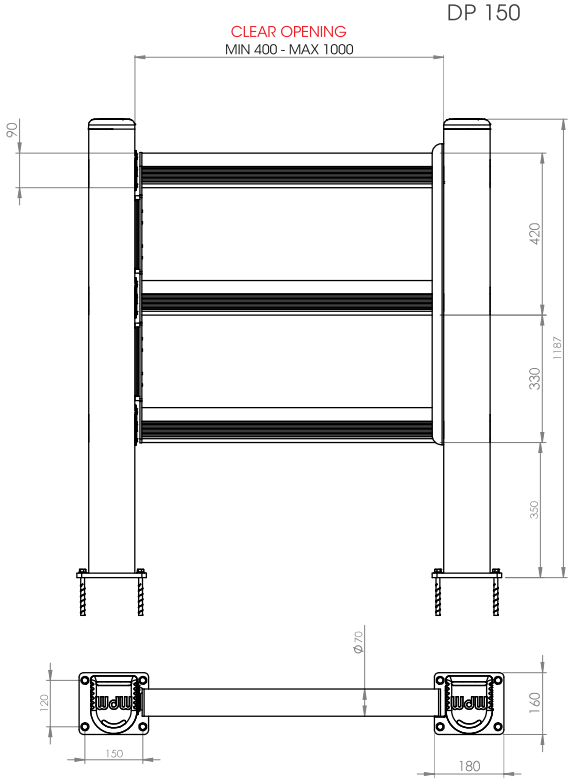





DP 150 ONE WAY

PORTA PEDESTRIAN 150
DOOR PEDESTRIAN 150

PLEASE CHECK HERE BELOW
HOW THE SIZE OF THE DOOR IS TO BE MEASURED

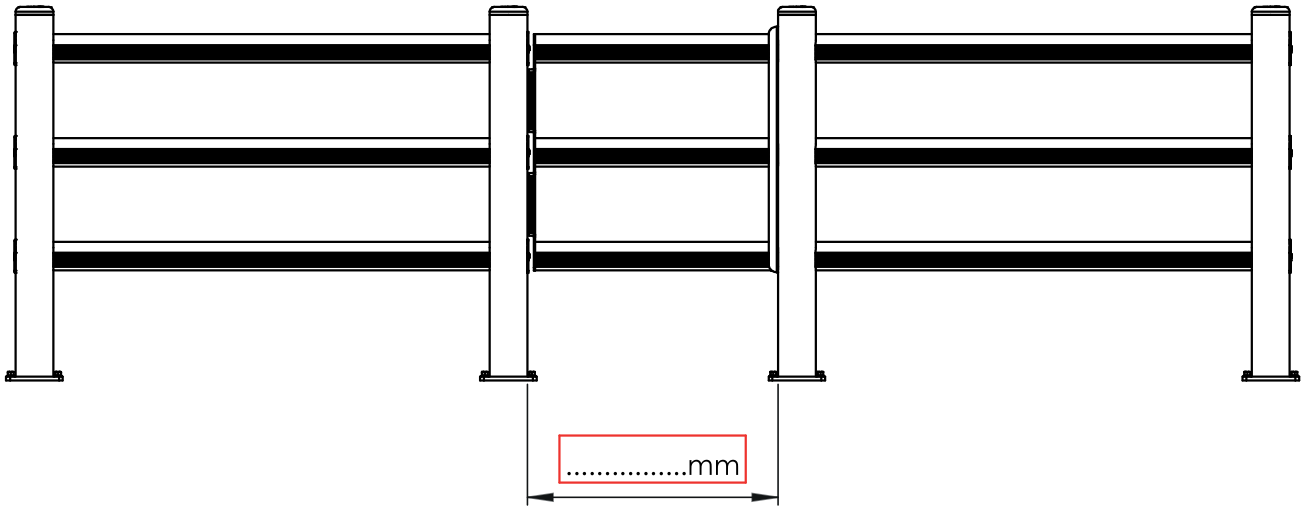



PLEASE CHECK HERE BELOW
WHICH DIRECTION OF OPENING YOU NEED

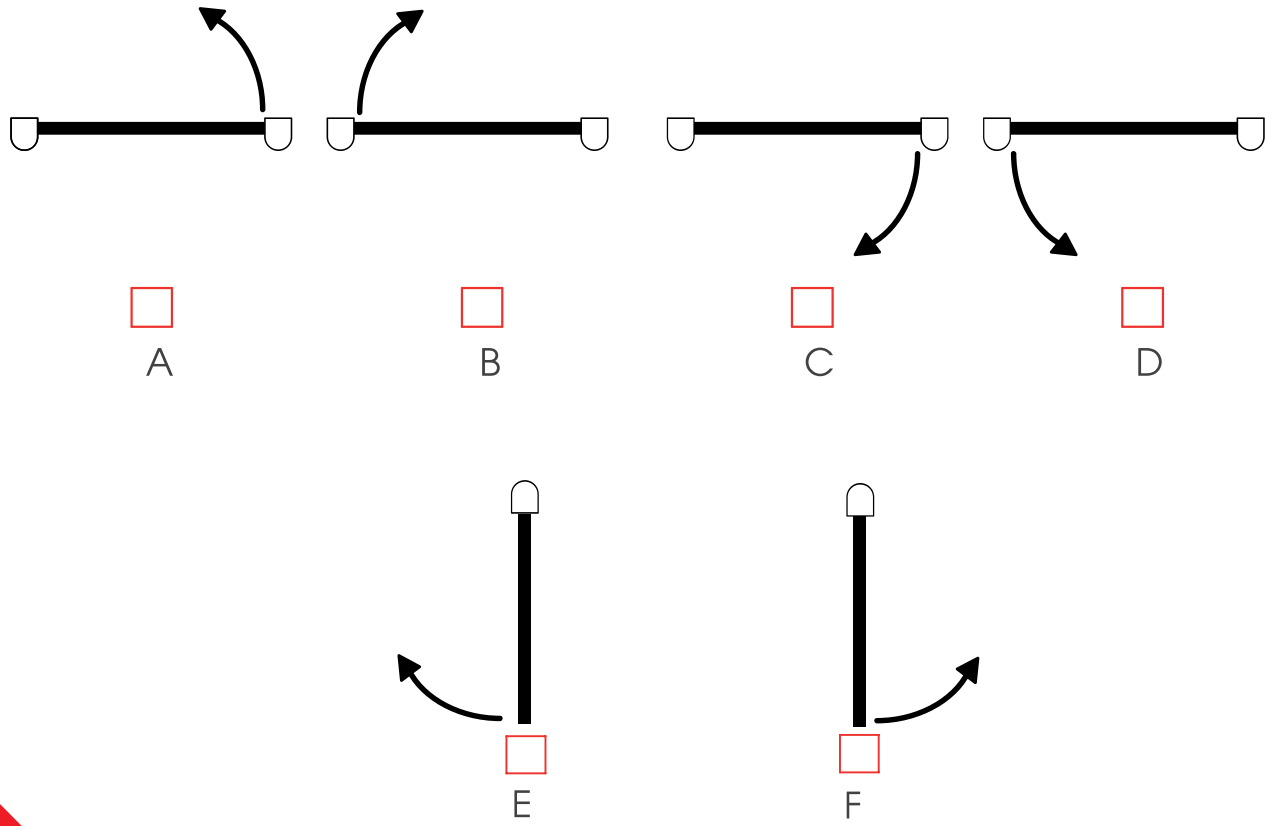


DP 150 ONE WAY

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

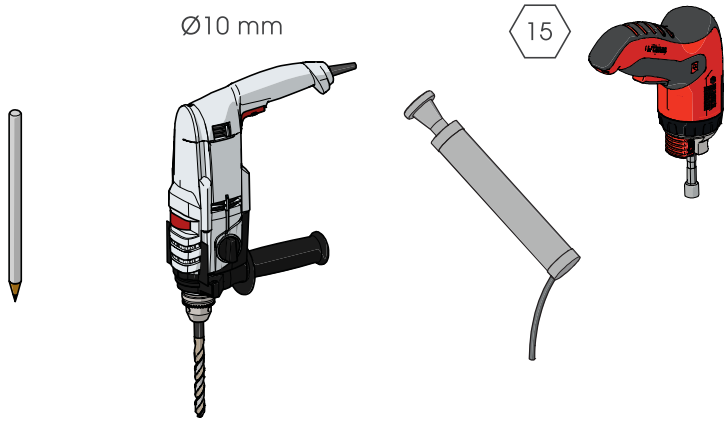


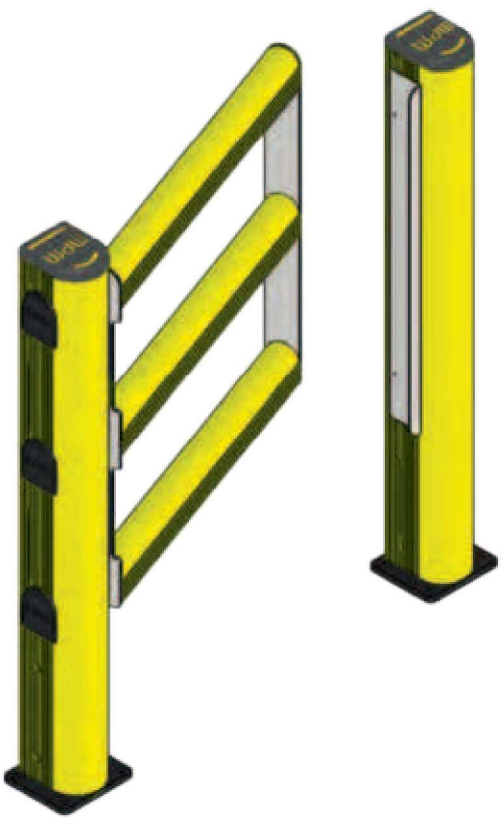


1

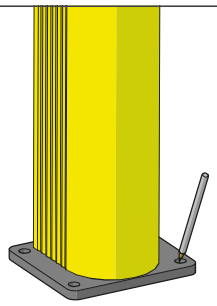


2

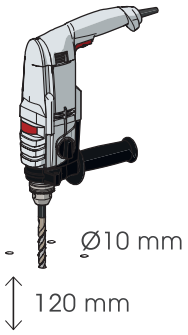

3

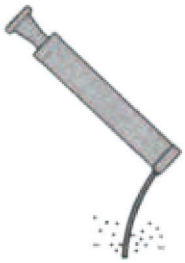


4

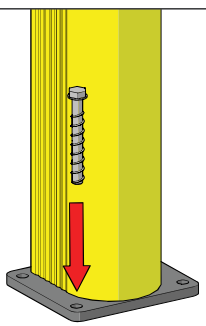


DP 150 ONE WAY

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

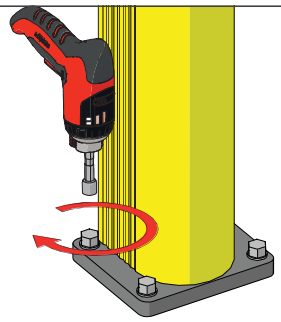


6

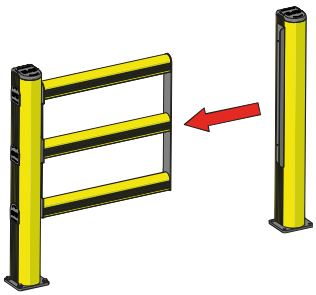


7

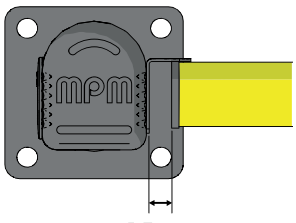


8

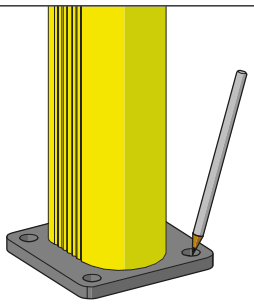


9

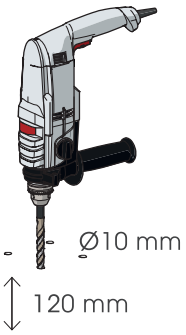


10

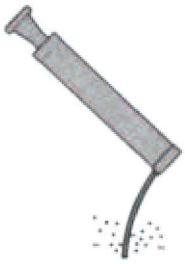

11

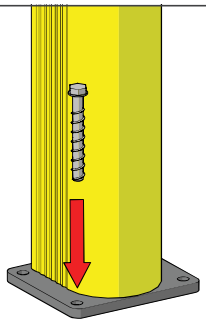


12

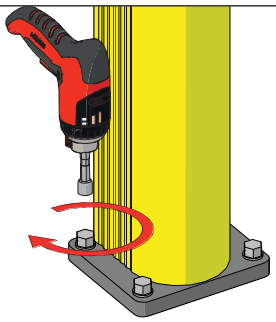



DP 150 SWING


PORTA PEDESTRIAN 90
DOOR PEDESTRIAN 90

HEAVY LOAD / FOR FORKLIFTS

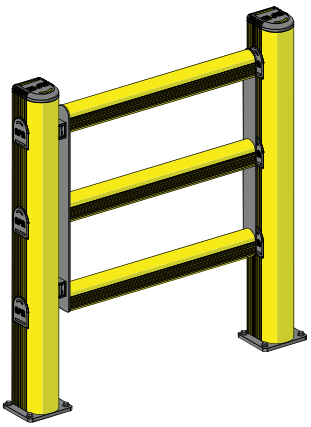

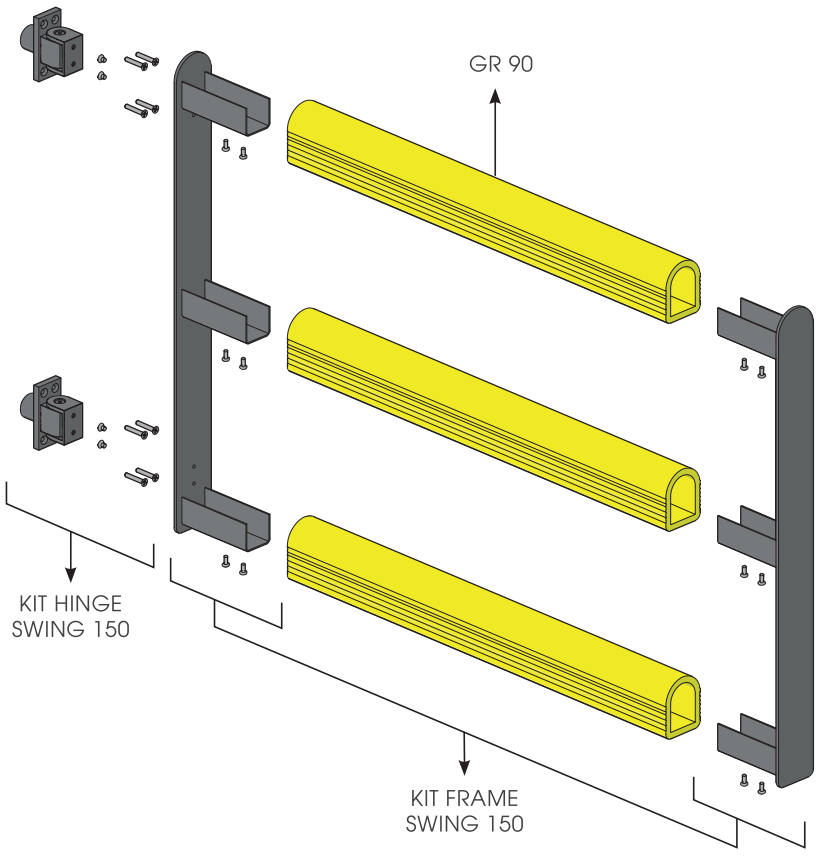

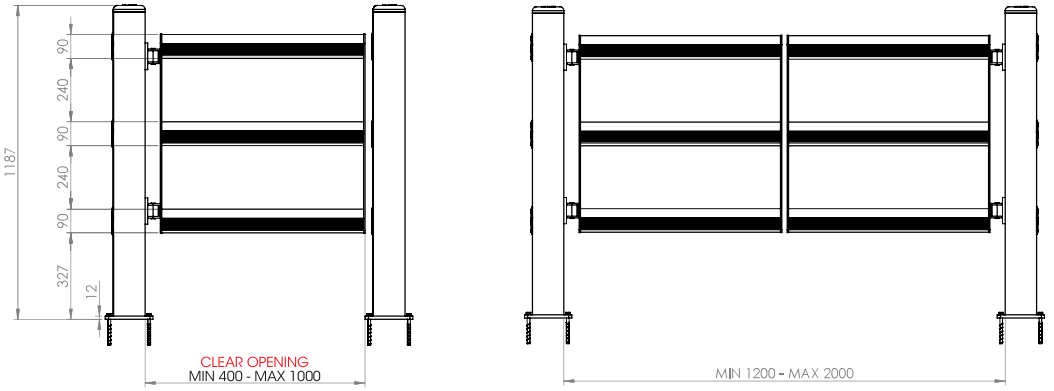


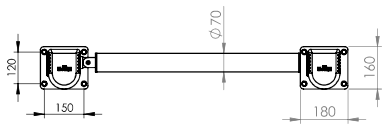


DP 150 SWING

PORTA PEDESTRIAN 150
DOOR PEDESTRIAN 150

PLEASE CHECK HERE BELOW
HOW THE SIZE OF THE DOOR IS TO BE MEASURED

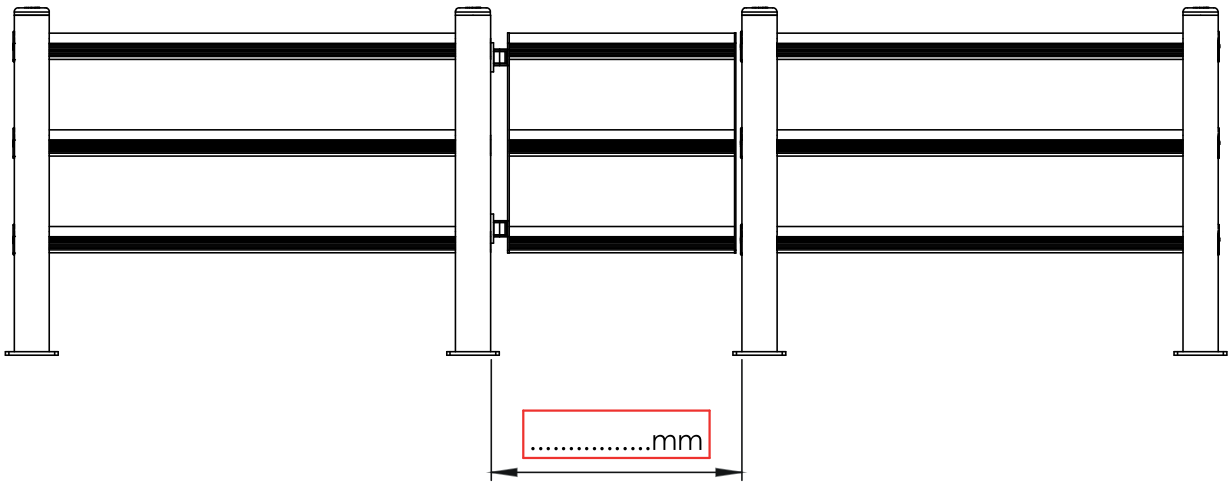

PLEASE CHECK HERE BELOW
WHICH DIRECTION OF OPENING YOU NEED

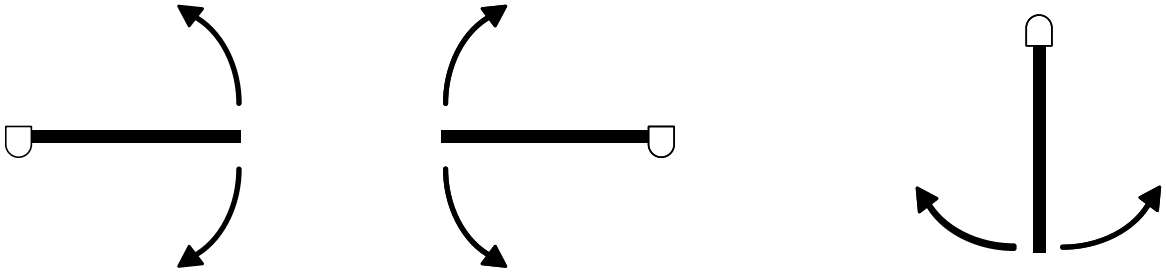


☐ A ☐ B ☐ E


DP 150 SWING

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




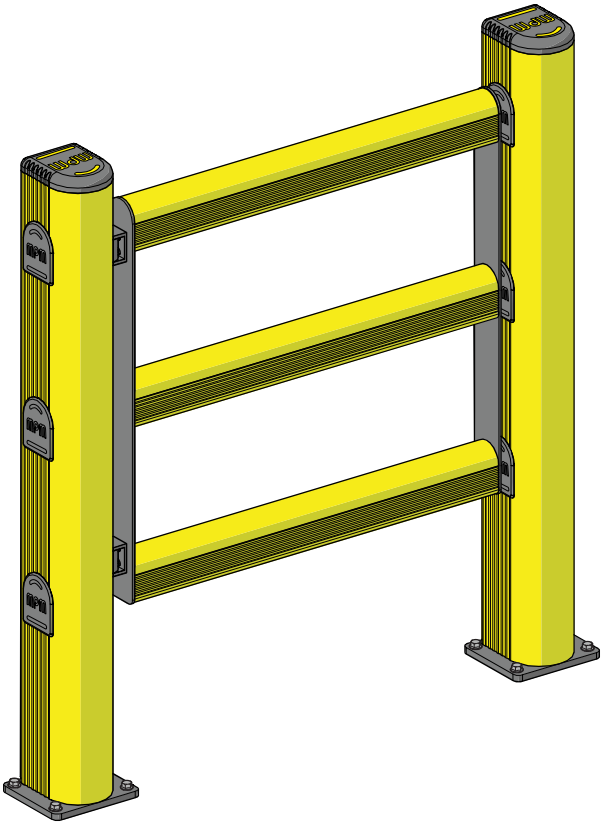

1

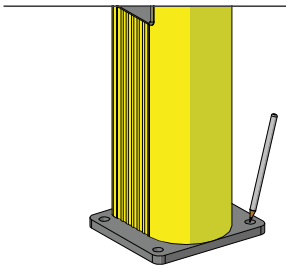


2

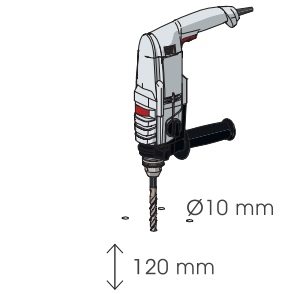


3



4

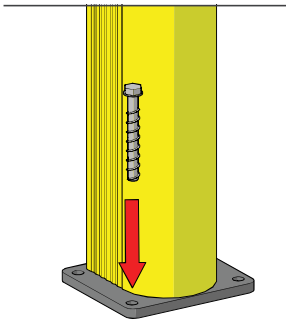


5

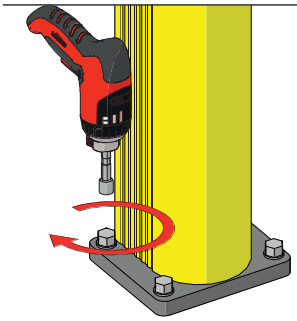


DP 150 SWING

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


6

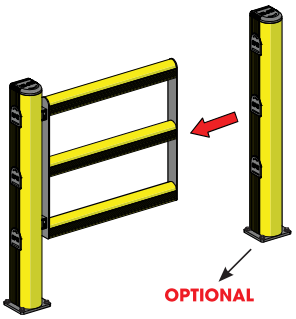


7

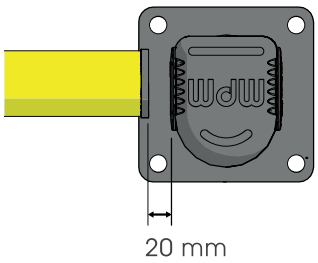


8

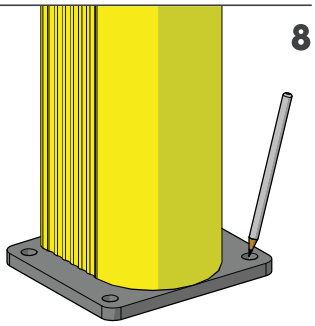


9

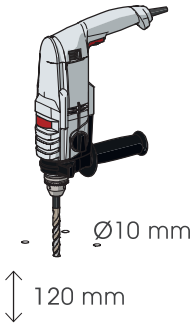


10

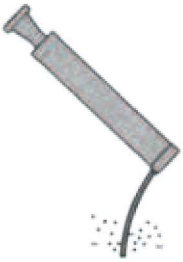


11

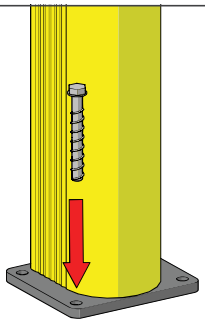

12

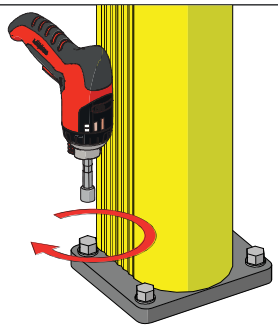


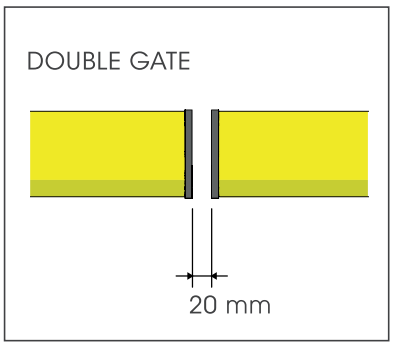


LIFT GATE 150

CANCELLO PEDESTRIAN 150
GATE FOR PEDESTRIAN 150


HEAVY LOAD / FOR FORKLIFTS

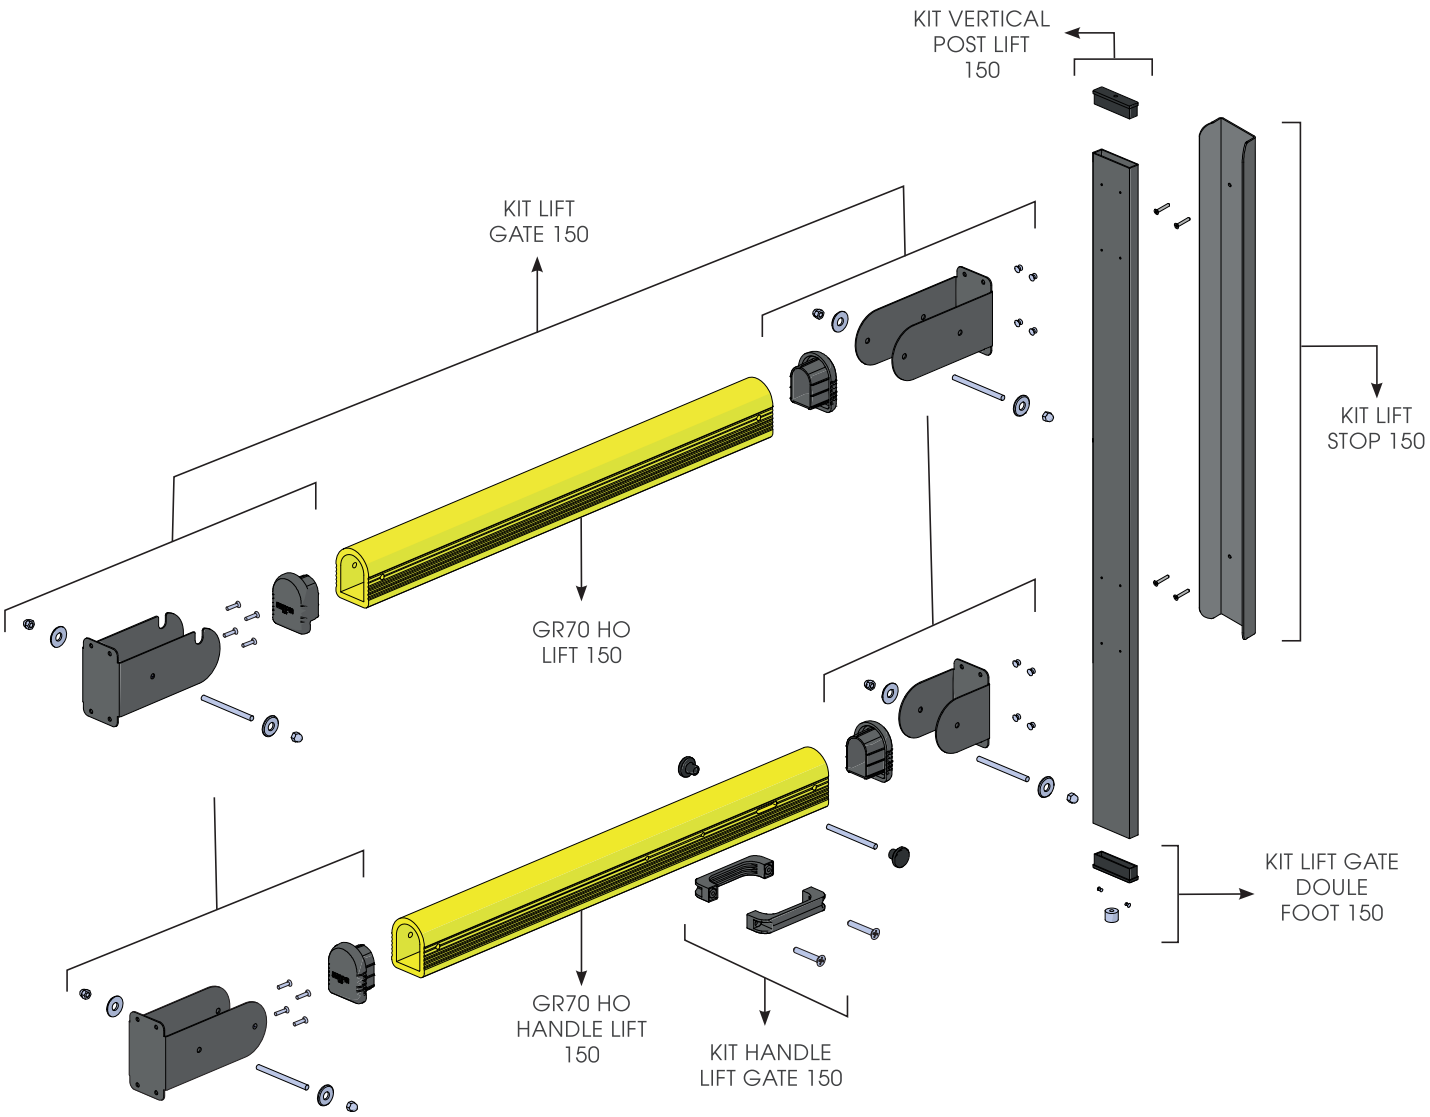


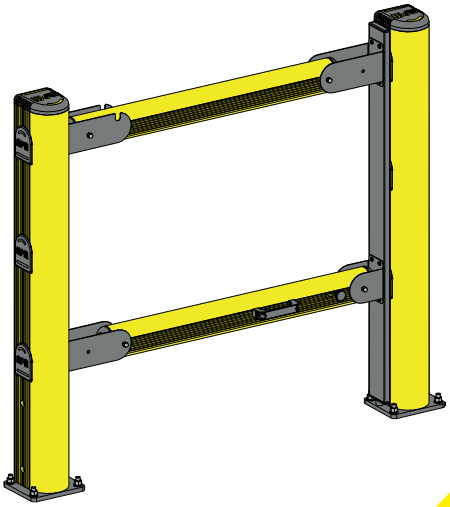


LIFT GATE 150

CANCELLO PEDESTRIAN 150
GATE FOR PEDESTRIAN 150

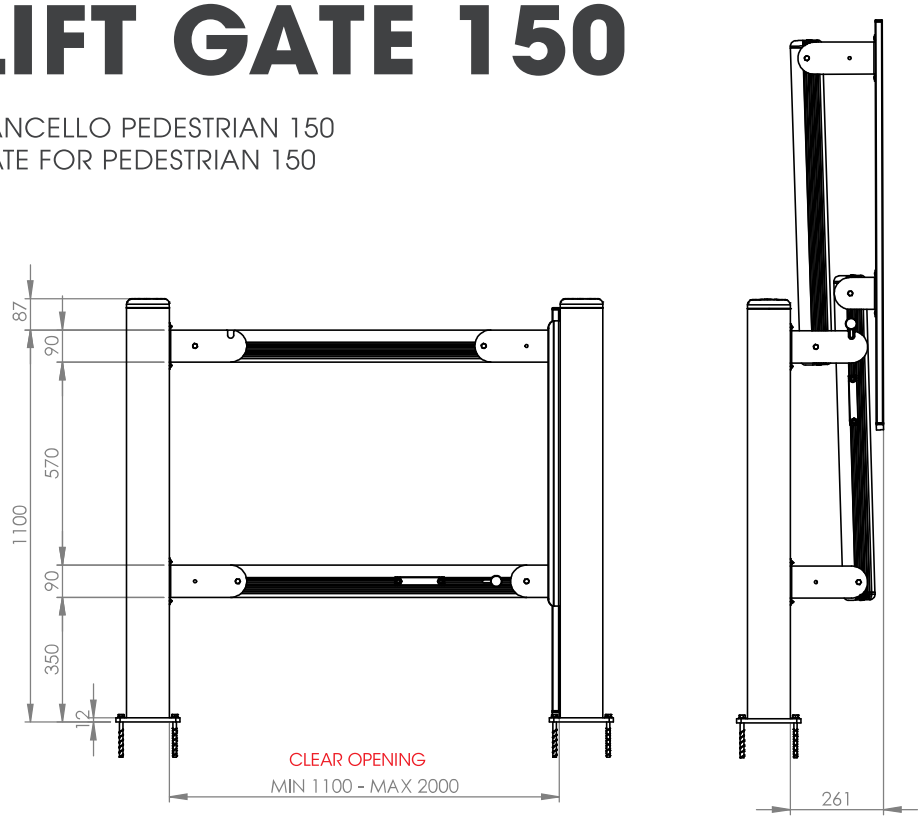

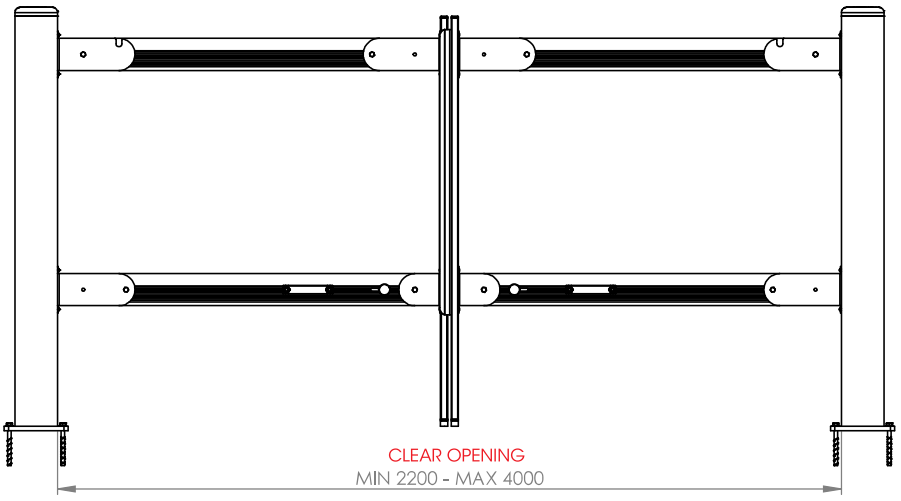


OPENING OPTIONS:

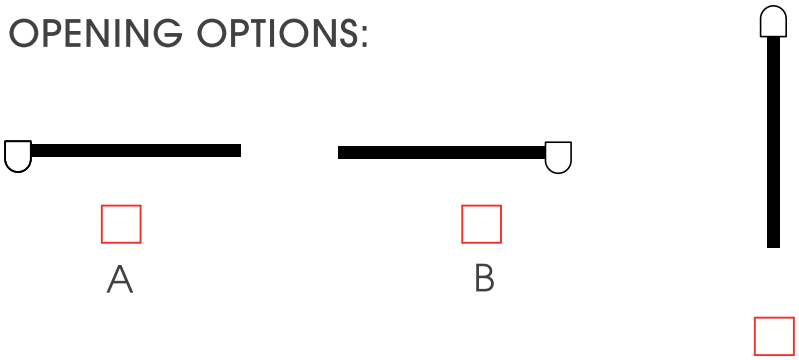


LIFT GATE 150


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

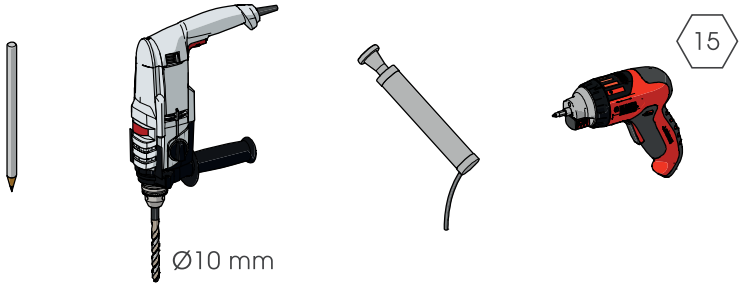


1

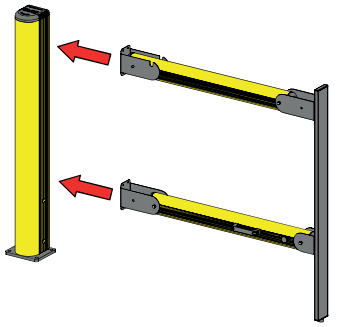


2

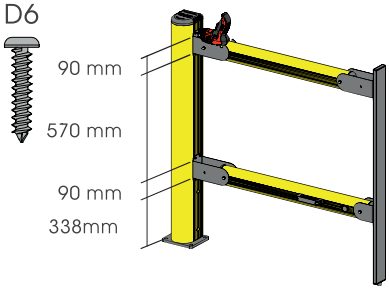


3

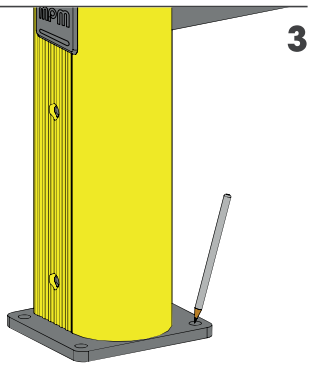


4

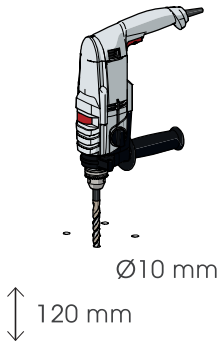

5

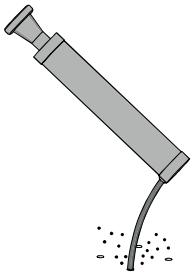


6

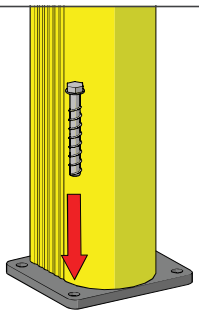


LIFT GATE 150

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


7

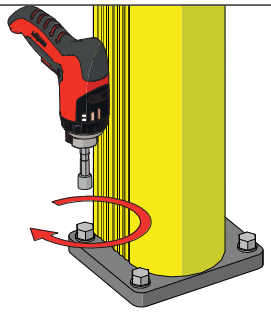


8

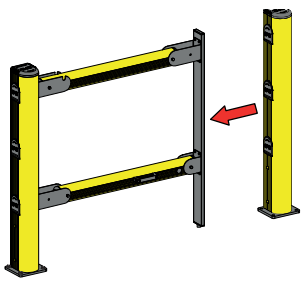


9

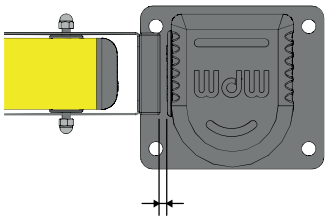


10

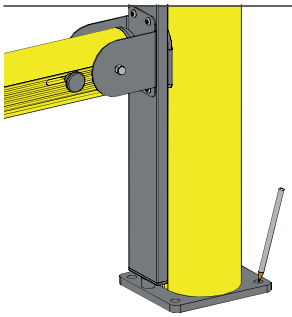


11

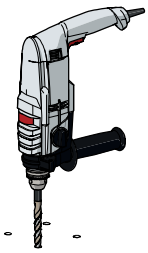


12

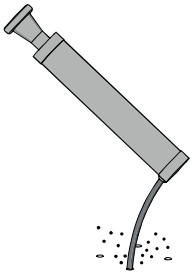


13

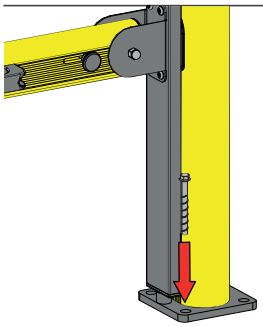

14

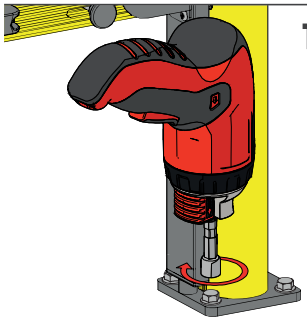


DOUBLE GATE

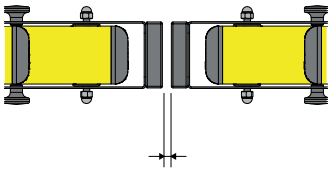


WARNING BAR

WARNING BAR

HEAVY LOAD / FOR FORKLIFTS

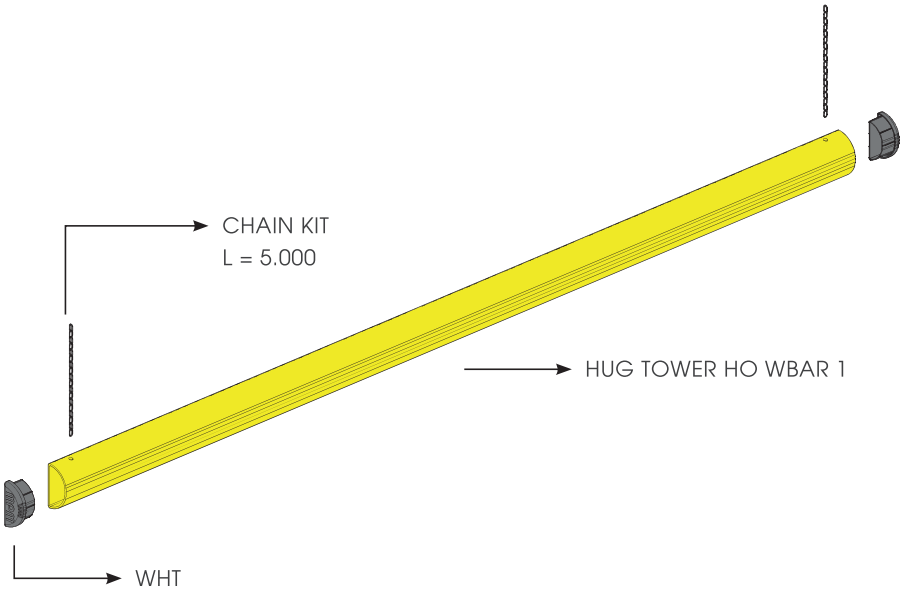


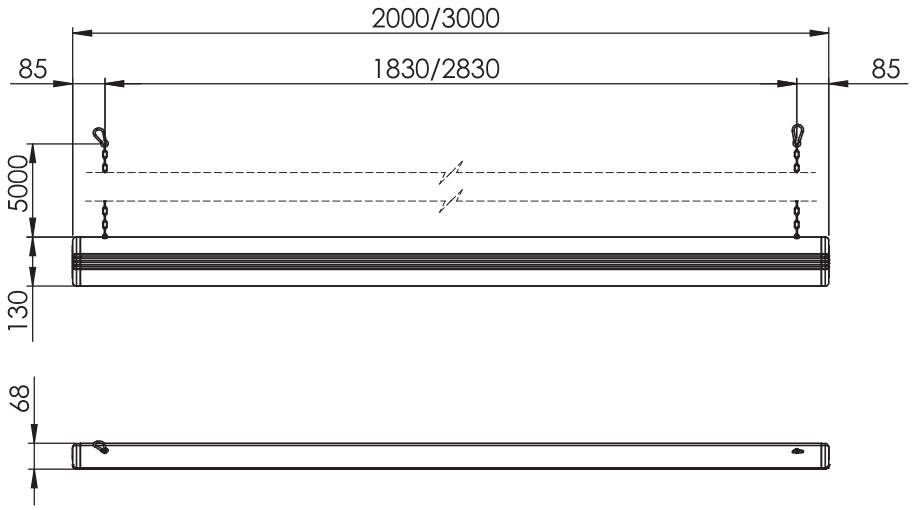


WARNING BAR
INFORMATION SIGN

WARNING BAR

HEAVY LOAD / FOR FORKLIFTS

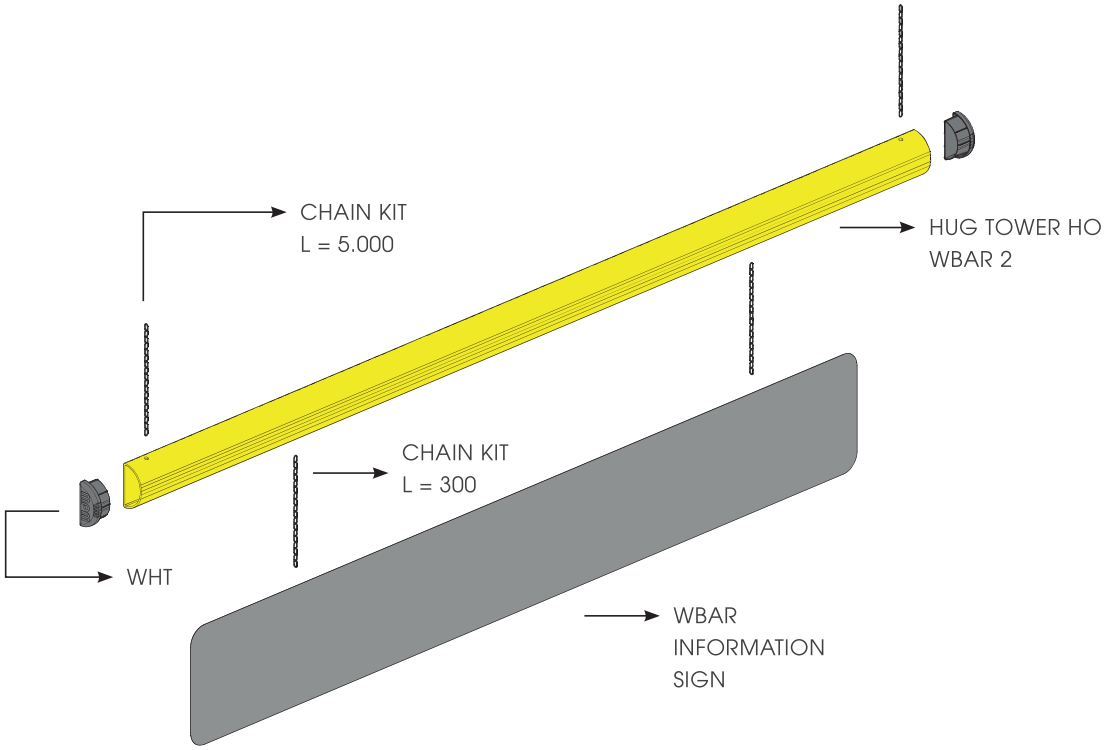


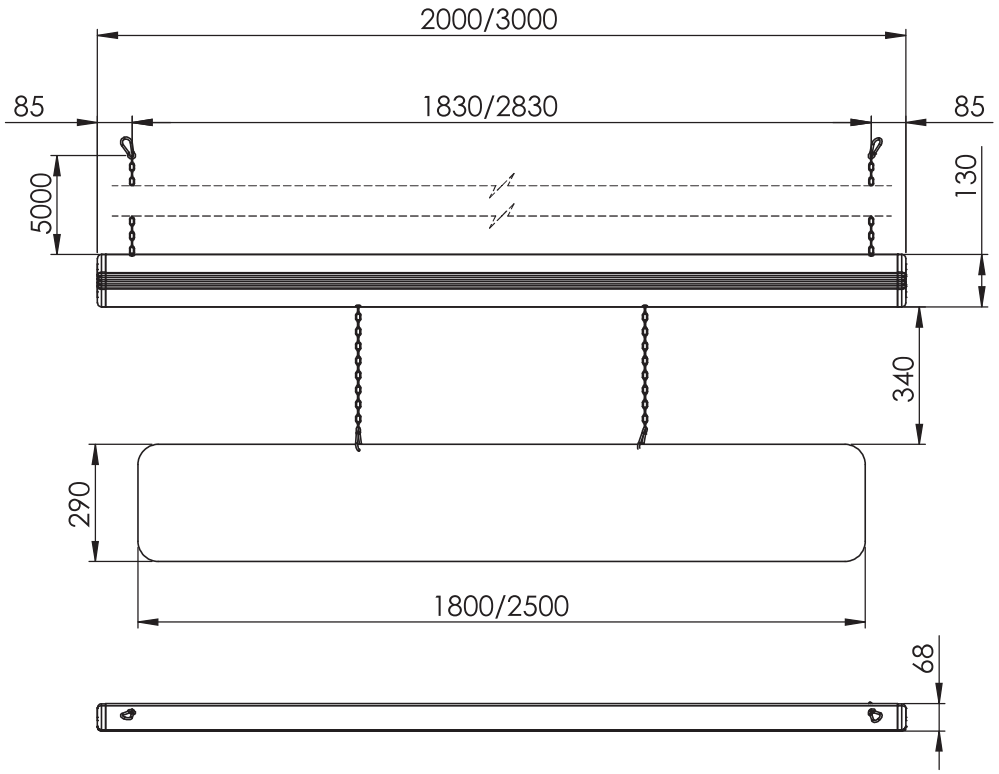


WARNING BAR
LIGHT & SOUND

HEAVY LOAD / FOR FORKLIFTS

WARNING BAR

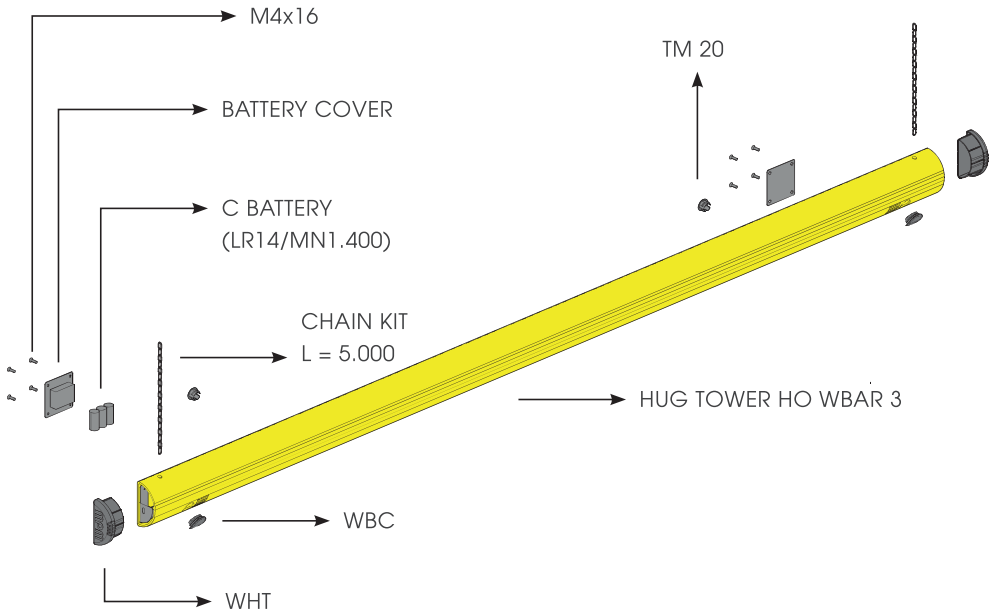


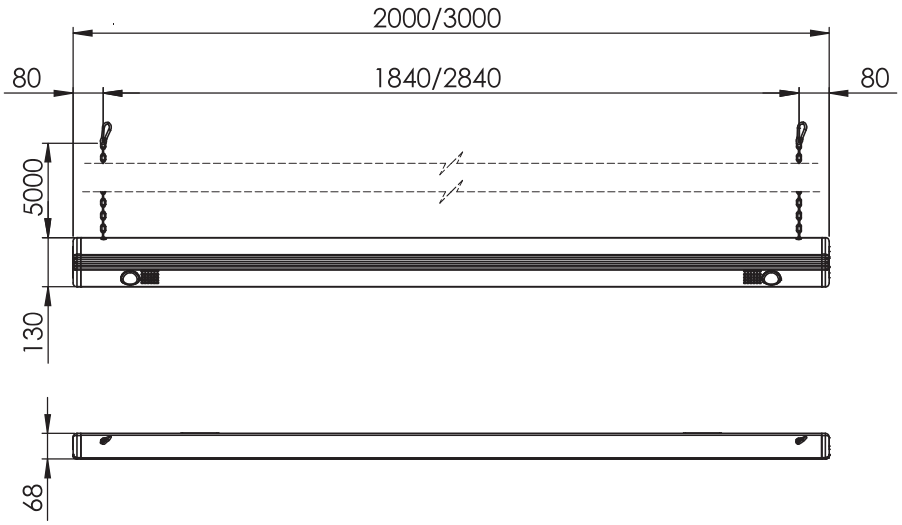



WARNING BAR
LIGHT & SOUND


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




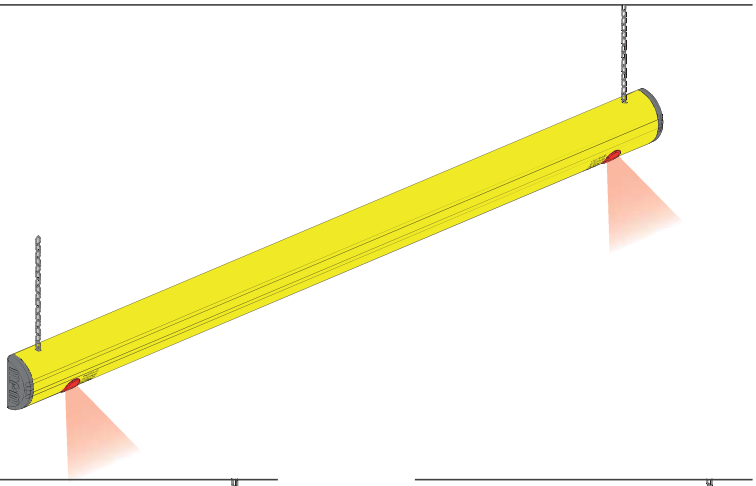


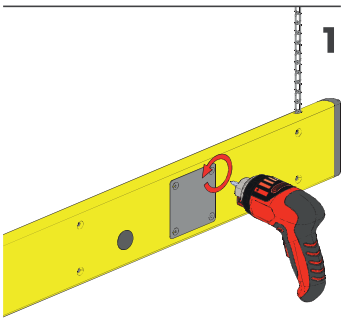

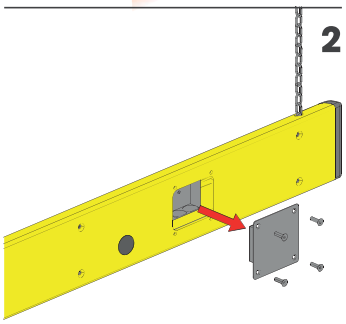


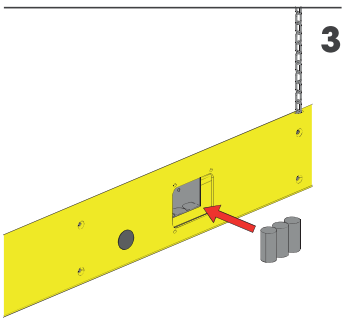

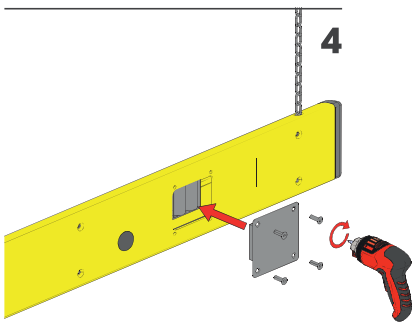

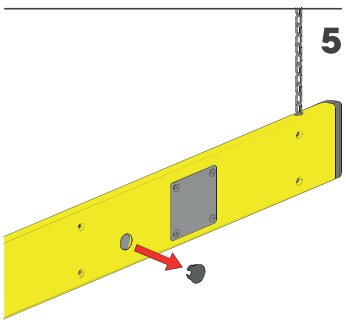




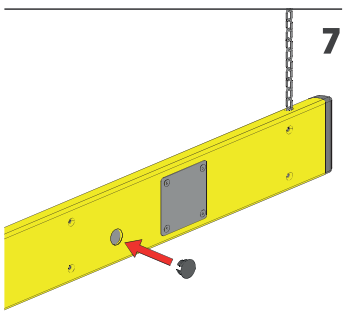


FULL FRAME SELF STANDING

PROTEZIONE PORTA FULL FRAME
FULL FRAME DOOR PROTECTION


HEAVY LOAD / FOR FORKLIFTS

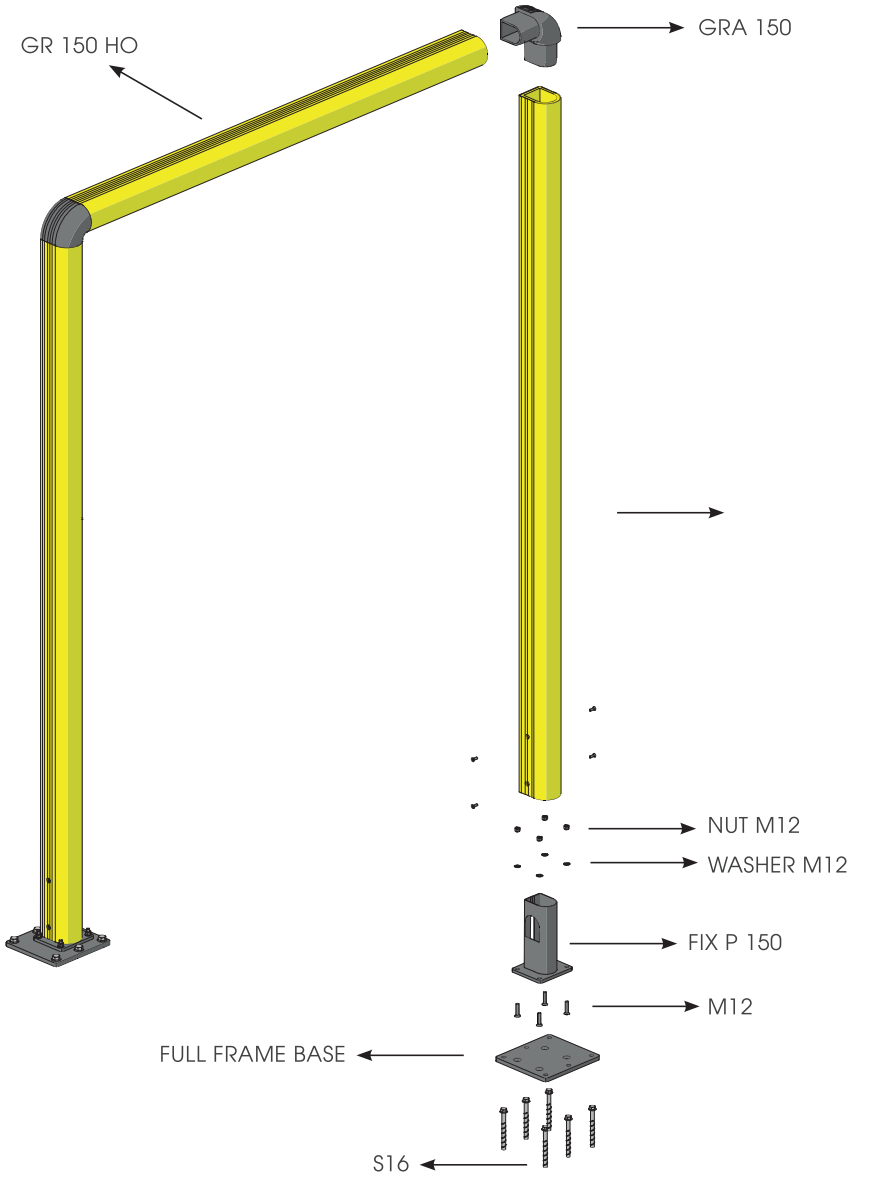

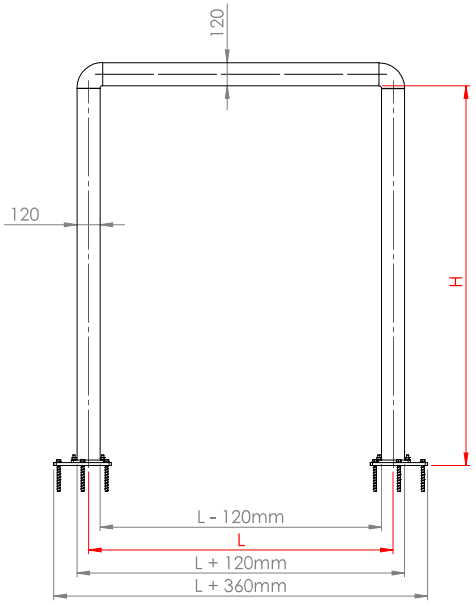

WARNING SELF STANDING


Full Frame up to 5000mm high and 4500mm wide can be used without being mounted to the wall

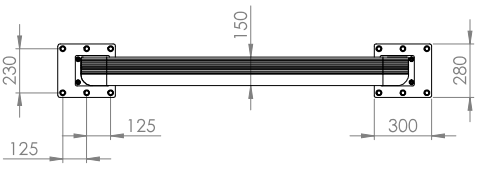



FULL FRAME SELF STANDING


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




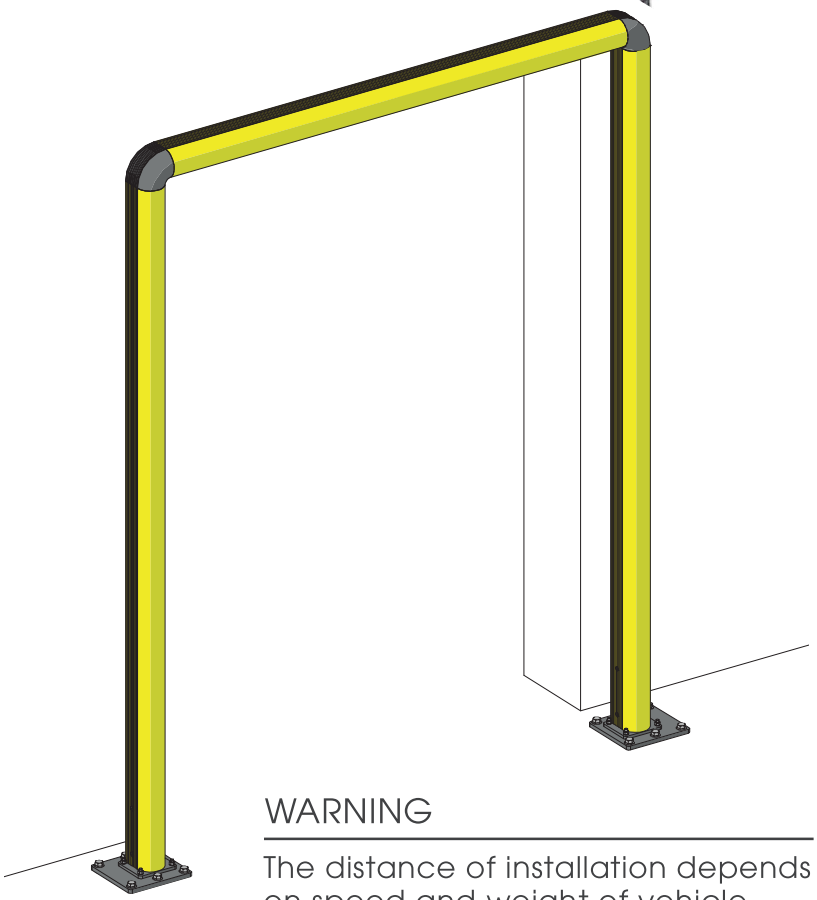


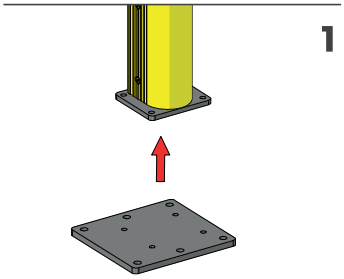

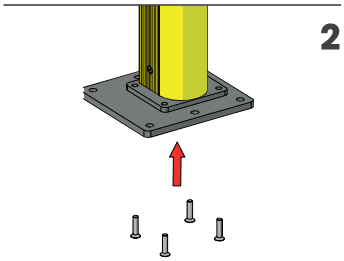

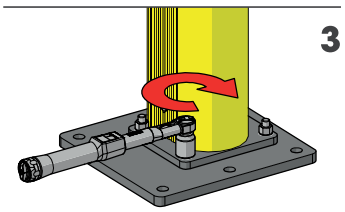


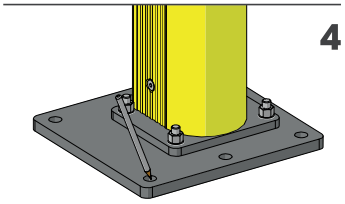

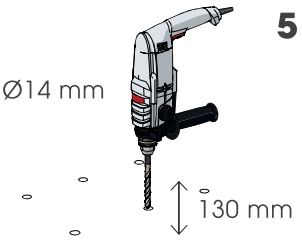

WARNING


The distance of installation depends on speed and weight of vehicle and also on the dimension of the full frame

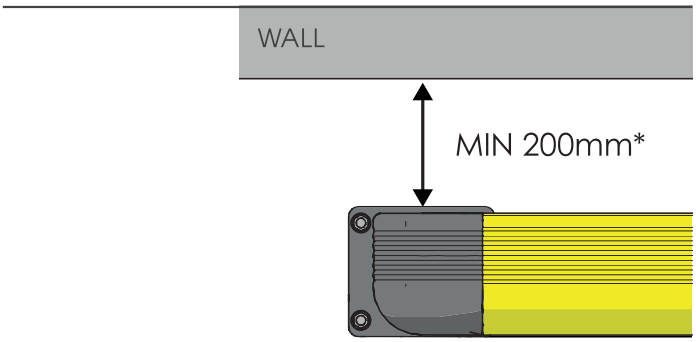


FULL FRAME SELF STANDING

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


6

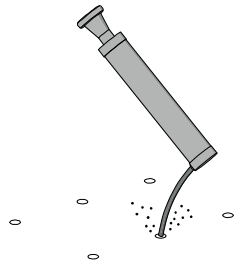

7

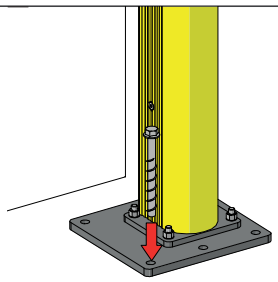


8

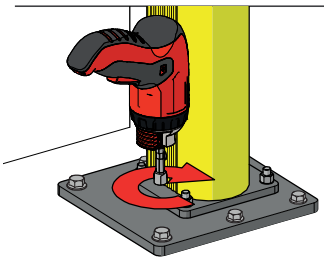



FULL FRAME WALL FIXING

PROTEZIONE PORTA FULL FRAME
FULL FRAME DOOR PROTECTION

HEAVY LOAD / FOR FORKLIFTS

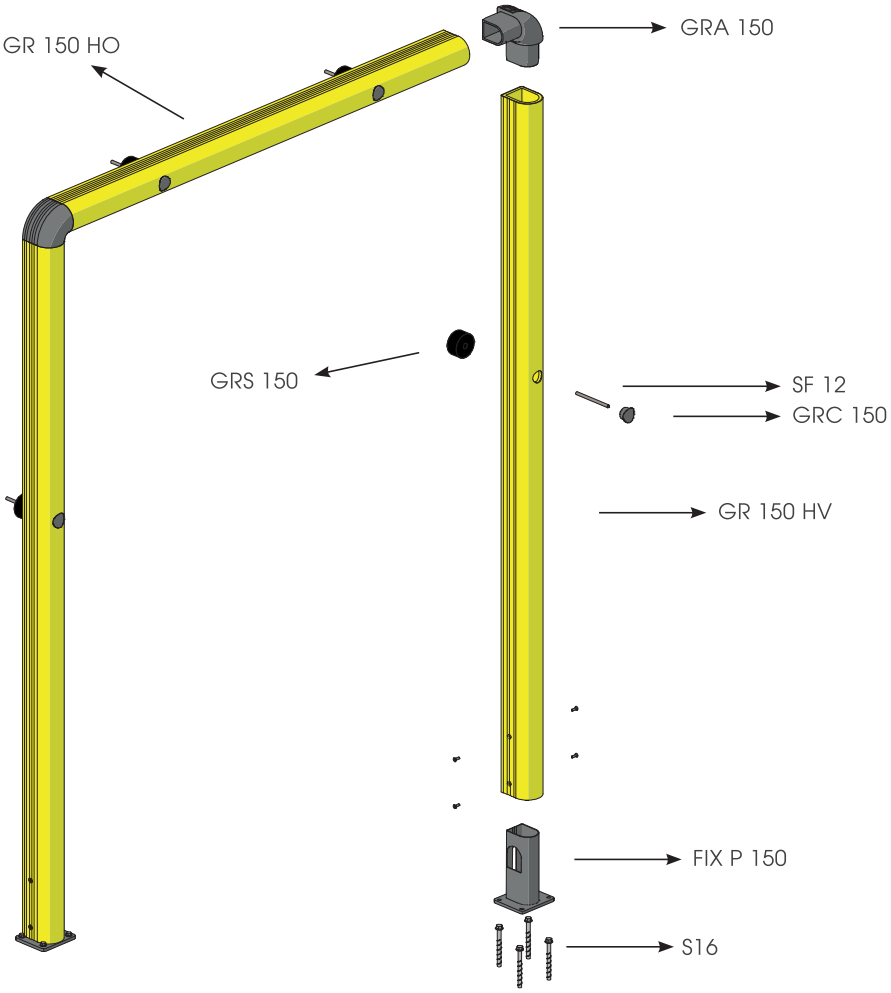


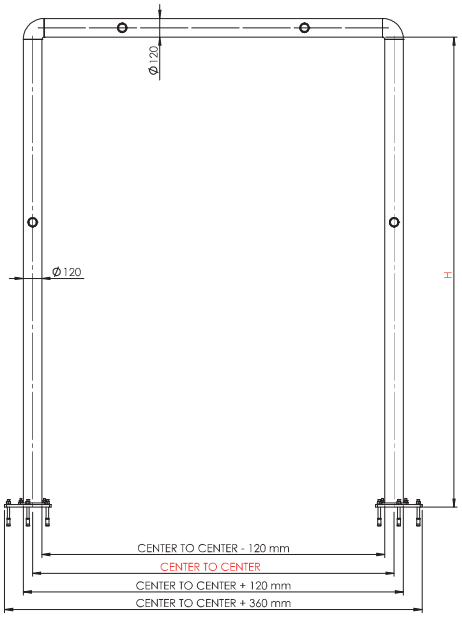


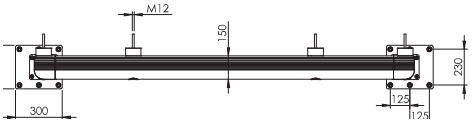


FULL FRAME WALL FIXING

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

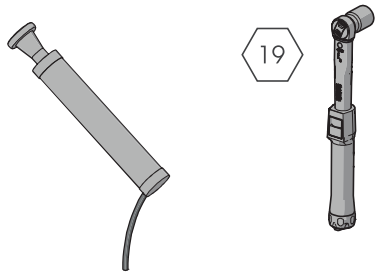


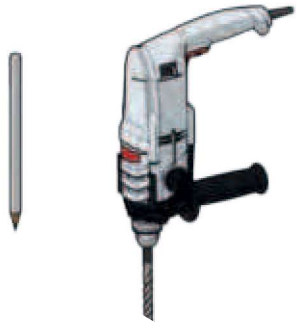

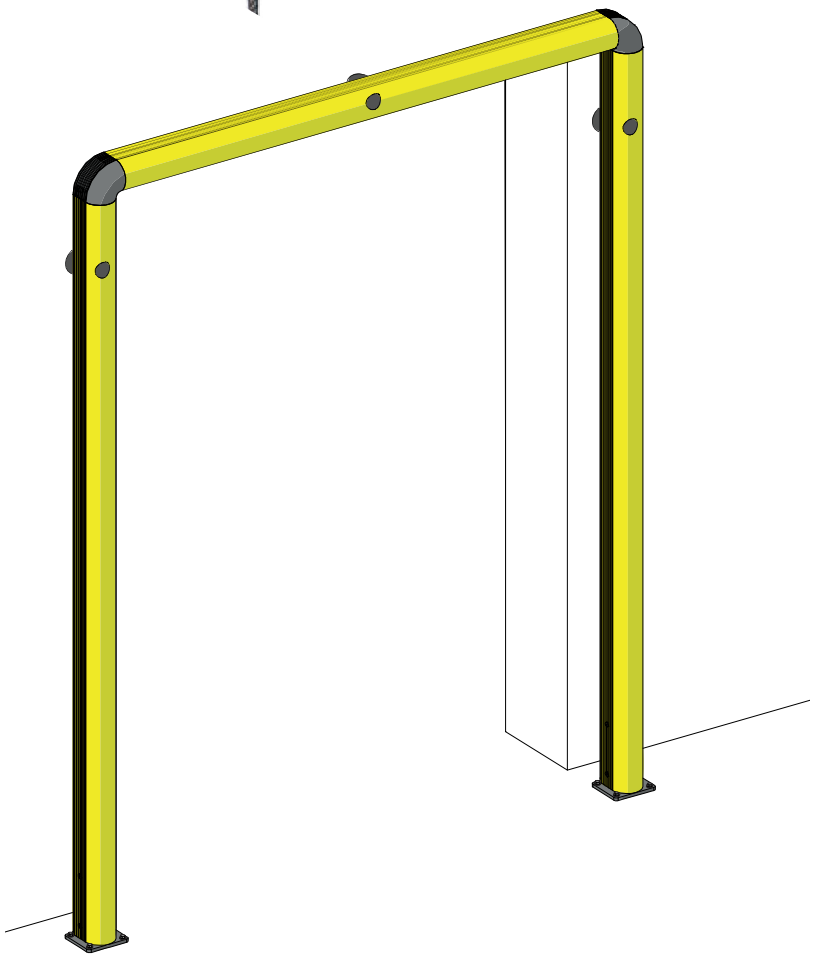

* Fixings for solid walls included

1

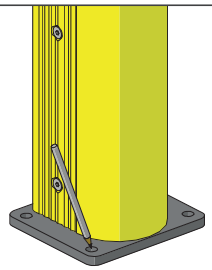


2




3



4

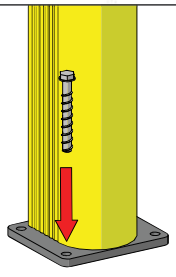



5

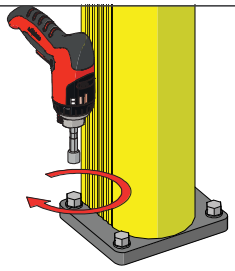



FULL FRAME WALL FIXING


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

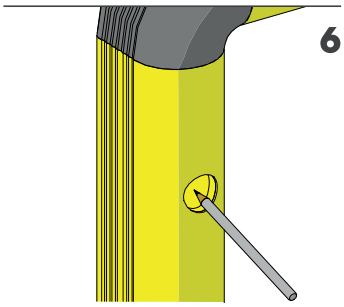


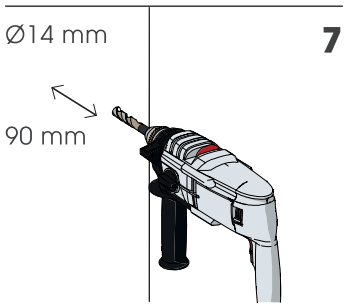


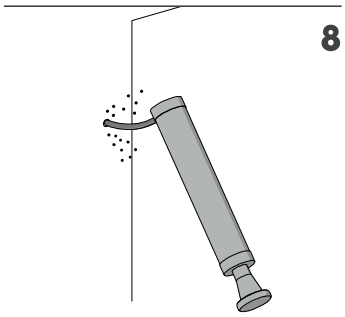


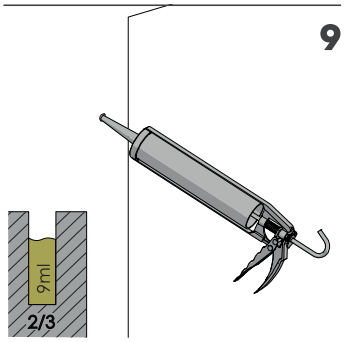


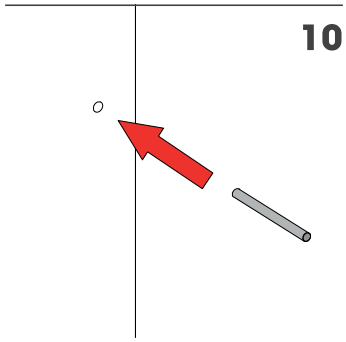

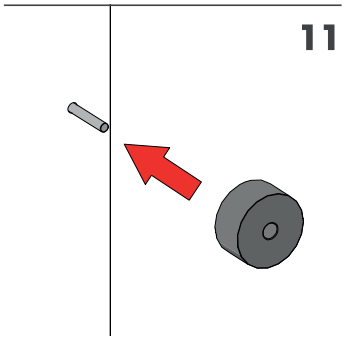

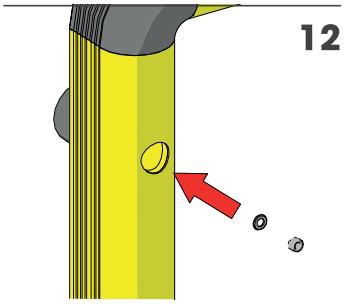

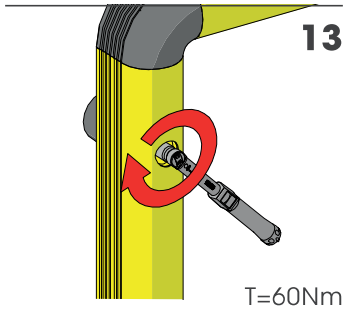


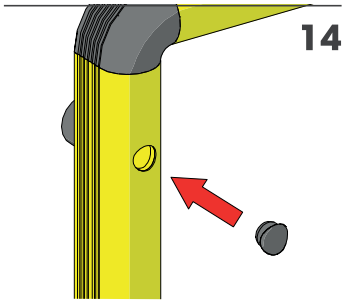


HUG GATE

PROTEZIONE BAIE DI CARICO
LOADING BAYS PROTECTIONS

LIGHT LOAD / FOR HAND PALLET TRUCKS

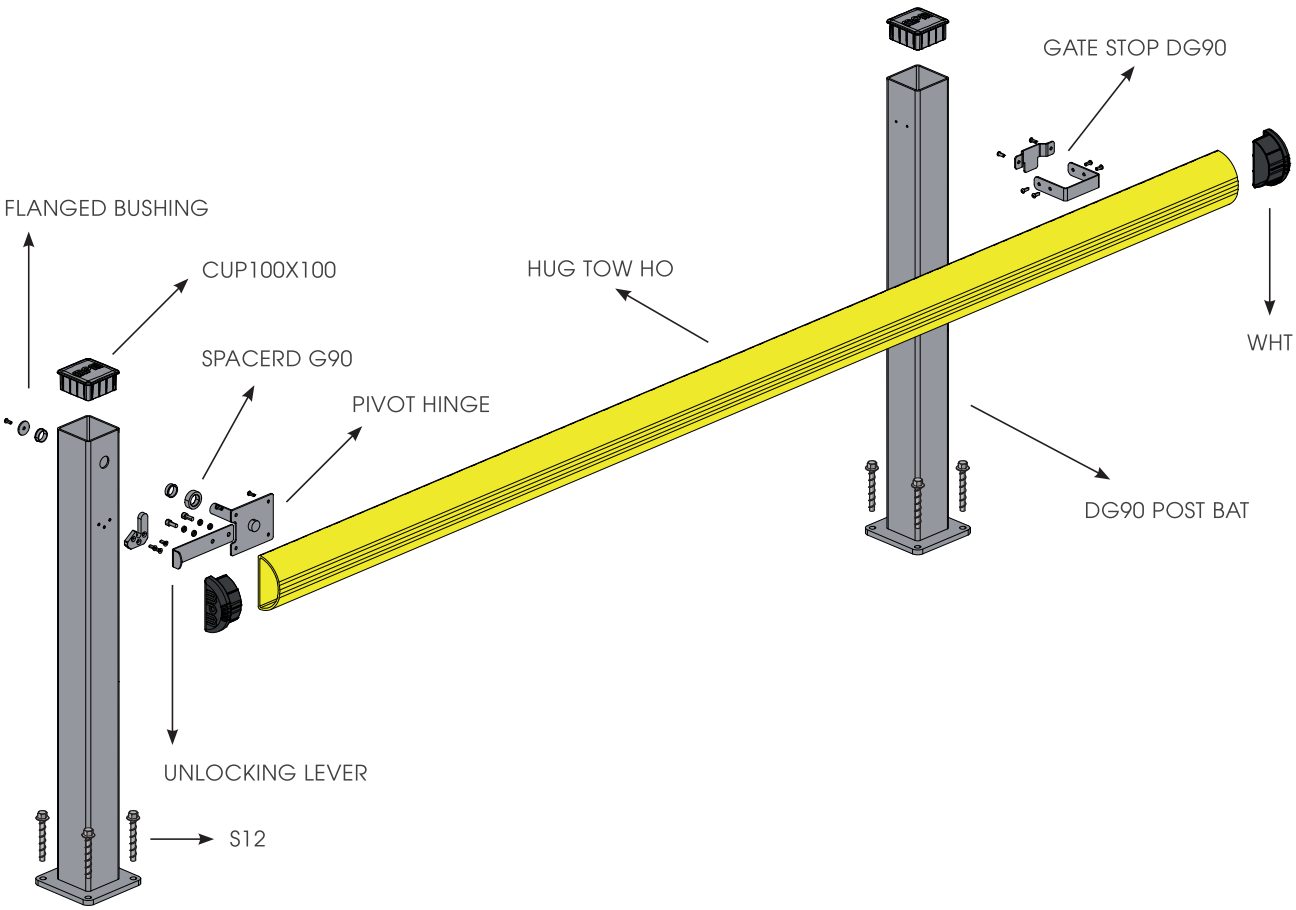


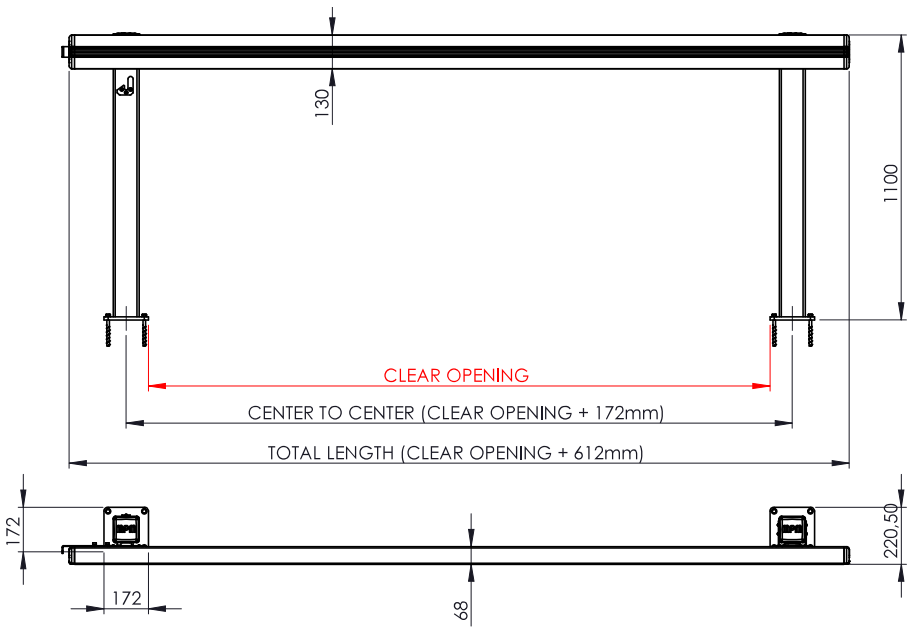


HUG GATE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


1

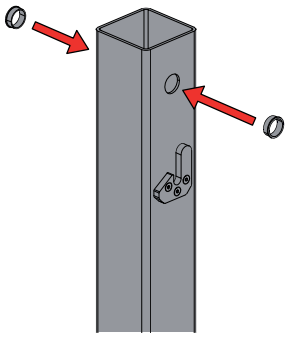


2

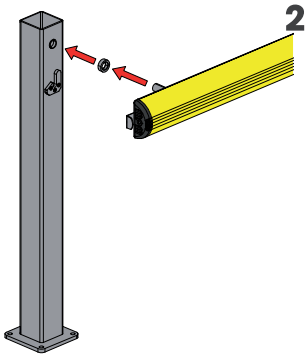


3

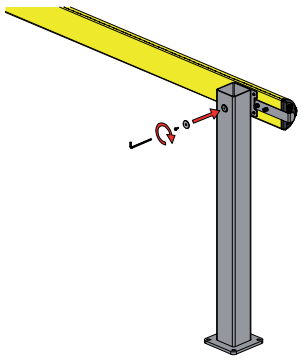


4

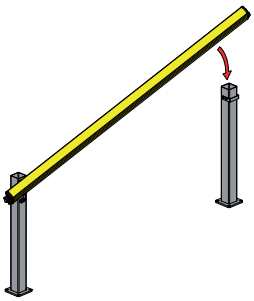


5

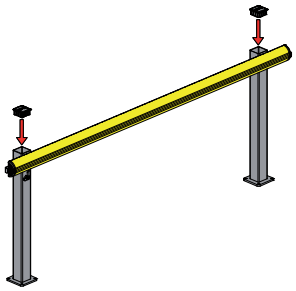


6

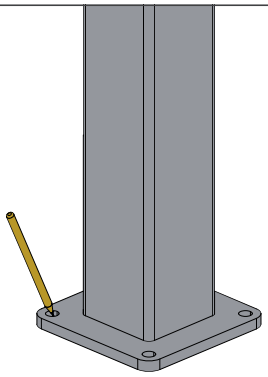


7

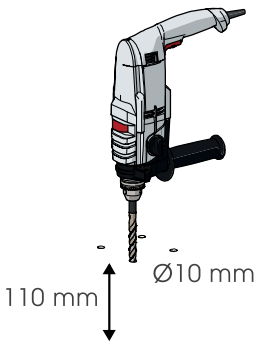

8

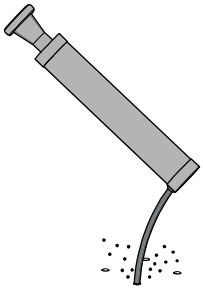

9

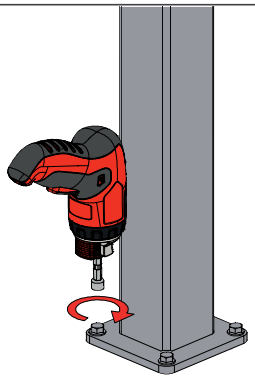


10




DOCK GATE

PROTEZIONE BAIE DI CARICO
LOADING BAYS PROTECTIONS


HEAVY LOAD / FOR FORKLIFTS

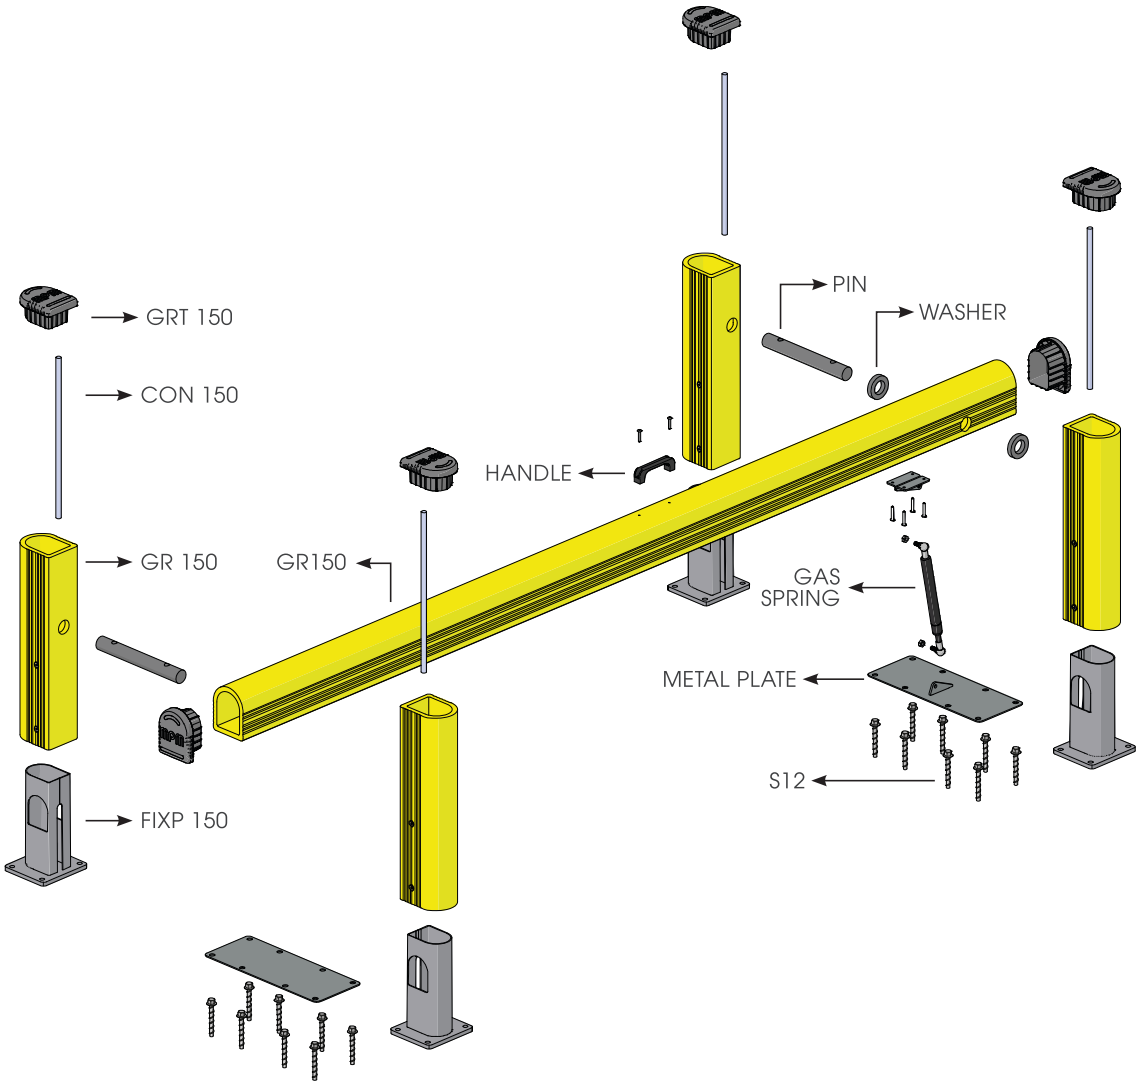


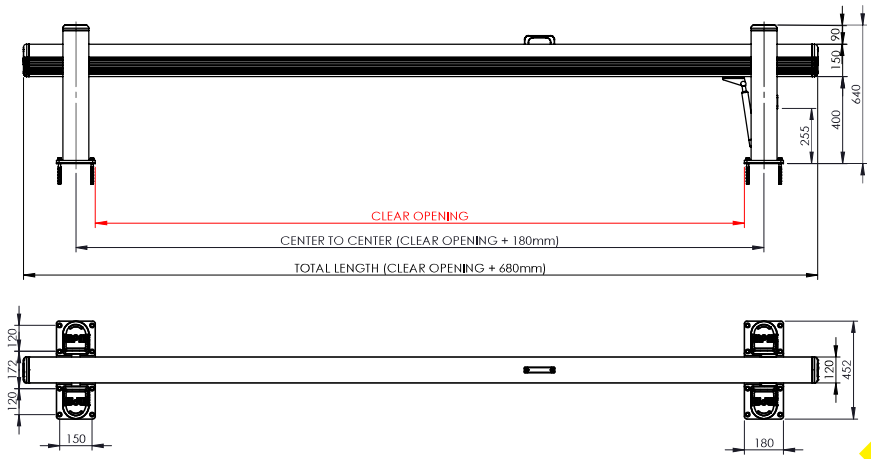

DOCK GATE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

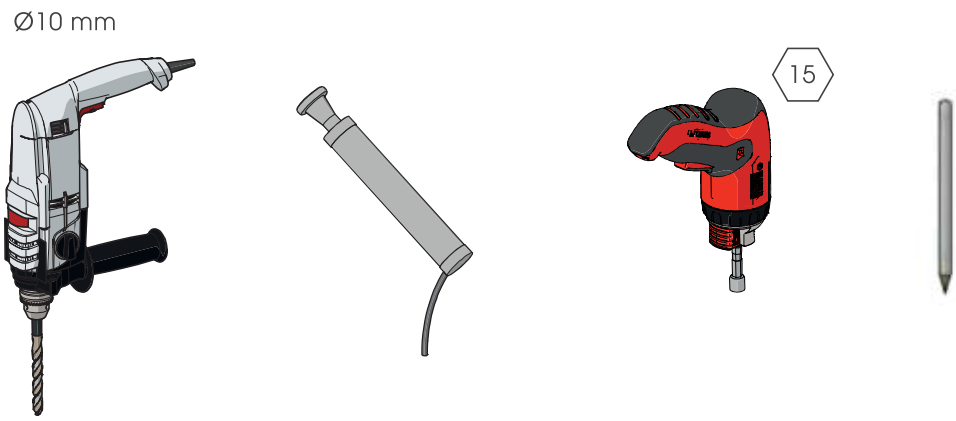


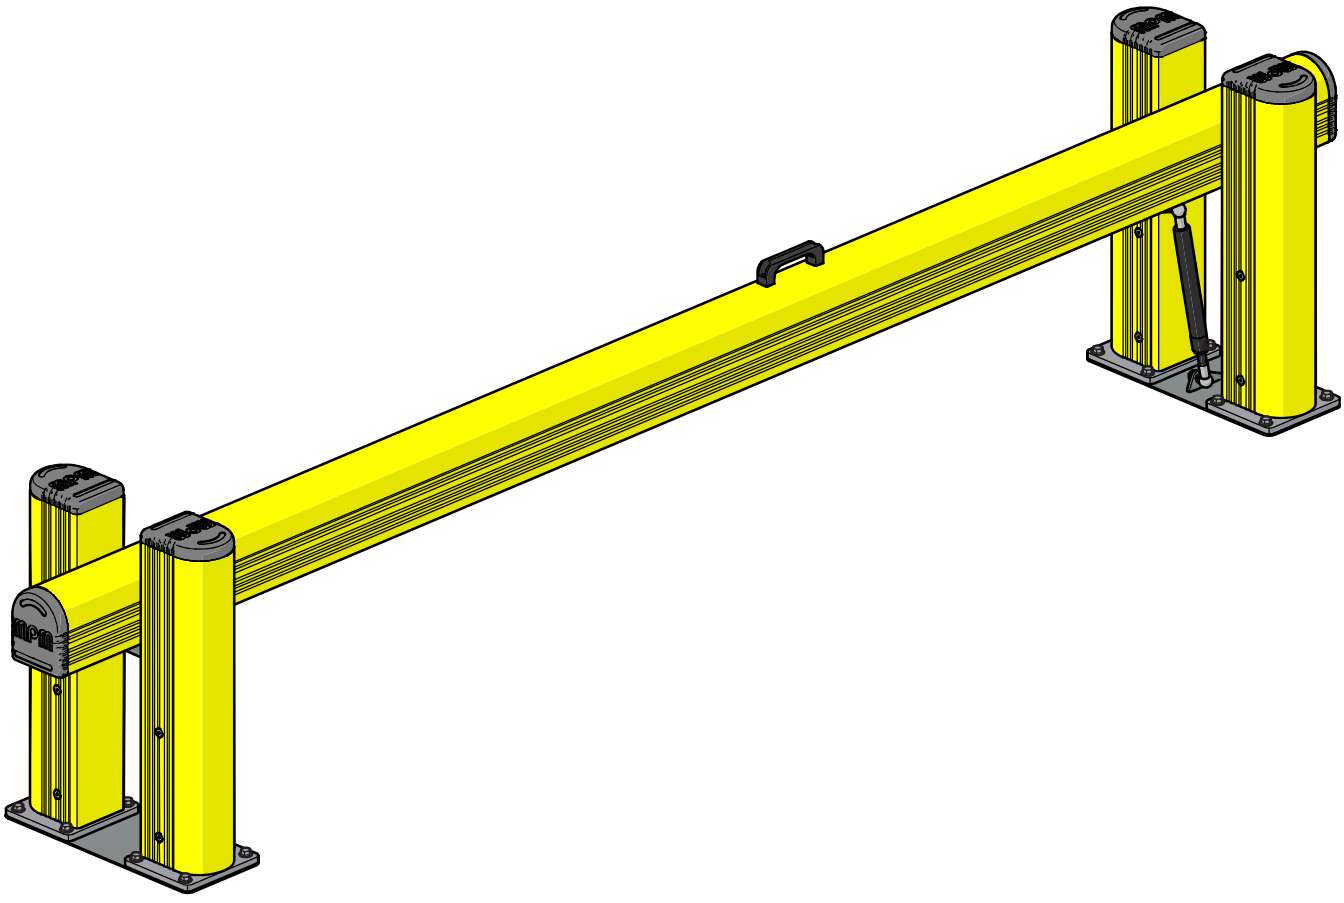


DOCK GATE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


1

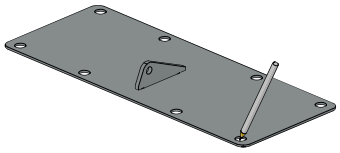


2

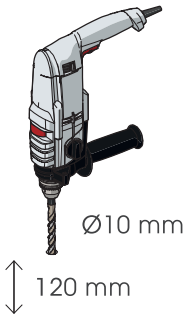


3

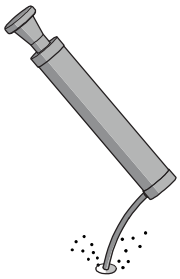


4

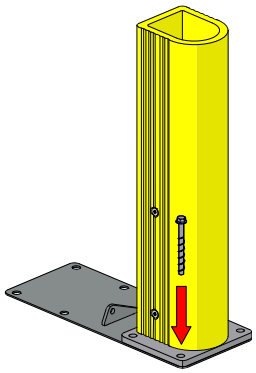


5

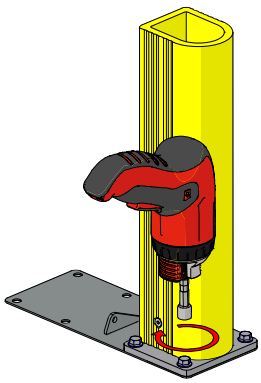


6

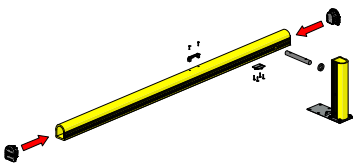


7

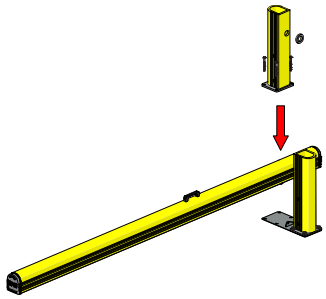

8

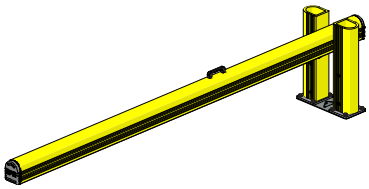


9

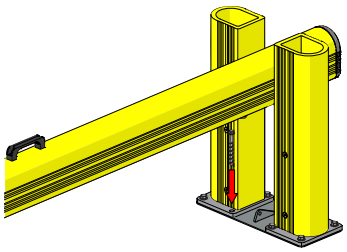


DOCK GATE

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


10

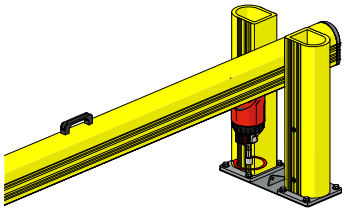


11

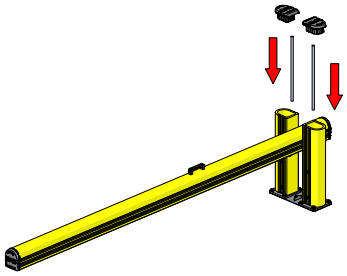


12

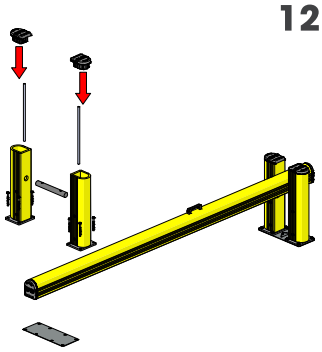


13

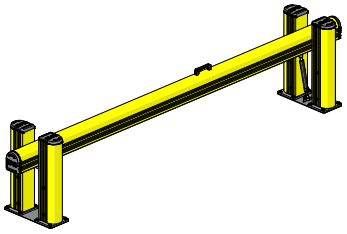

14

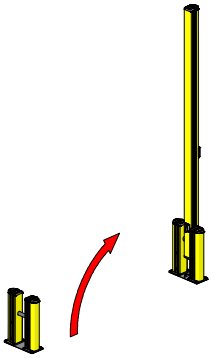


15

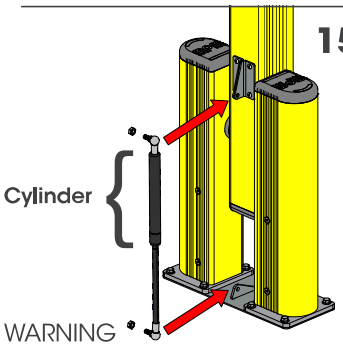


WARNING
Cylinder in the upper part.


16

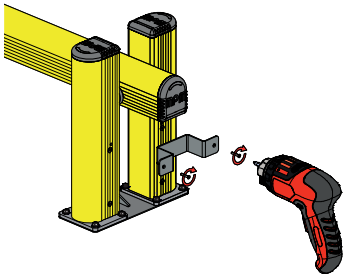

CAR STOP

FERMARUOTE
WHEEL STOP

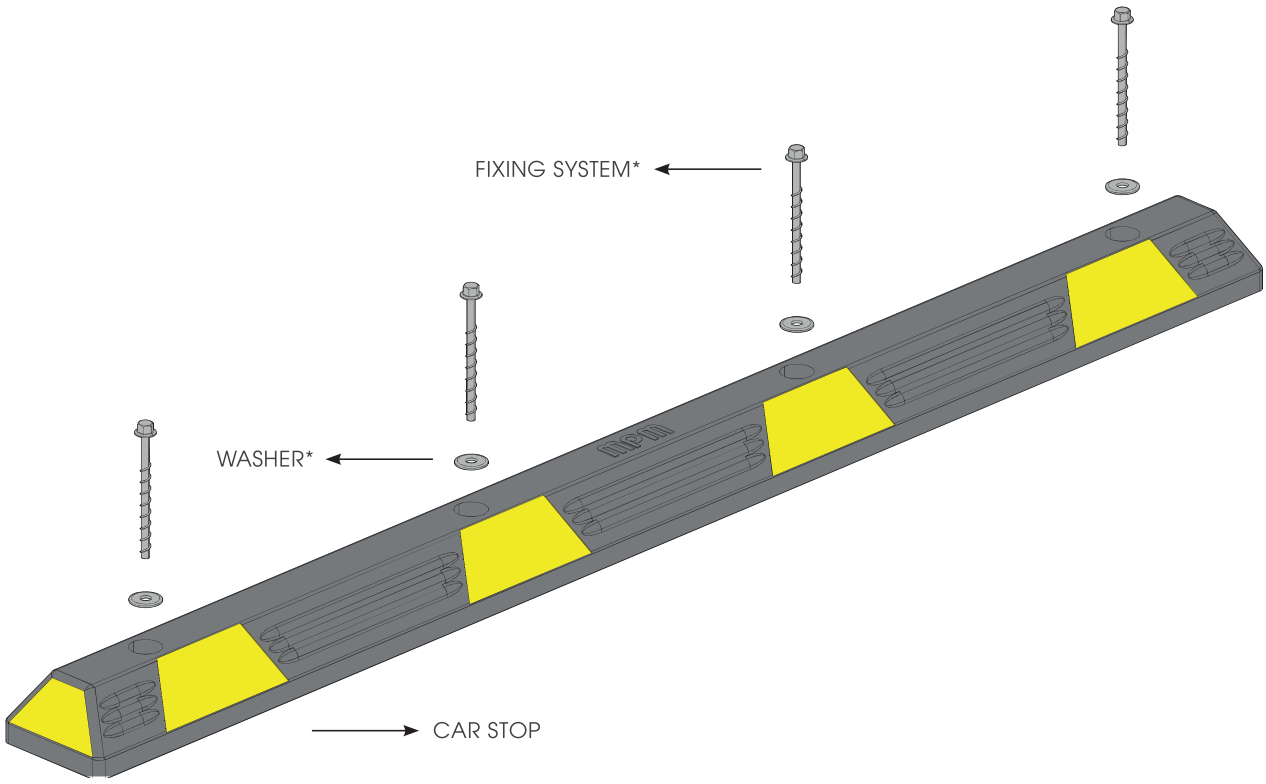

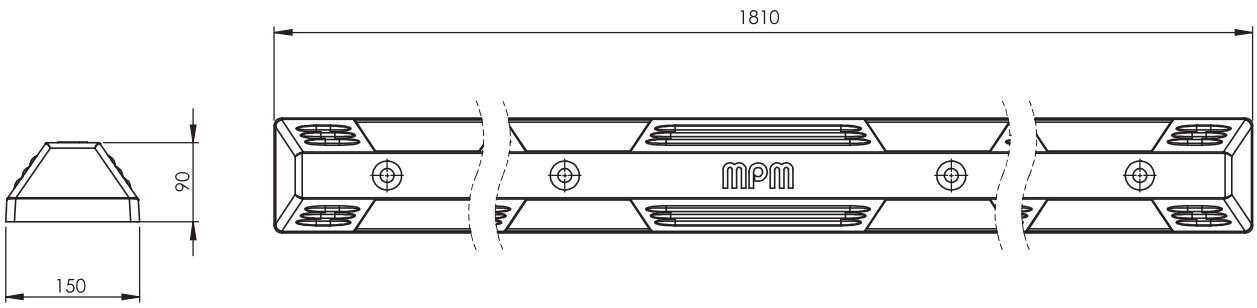


*WARNING


The product is not equipped with fixing accessories.

CAR STOP


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

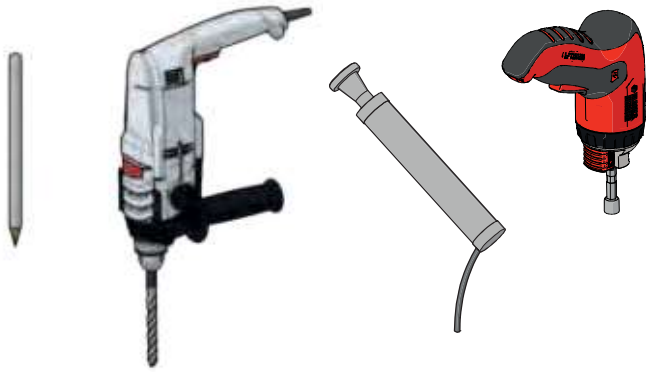

1

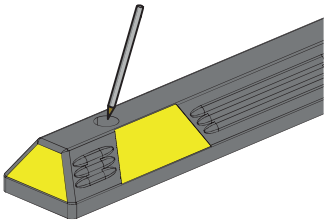


2

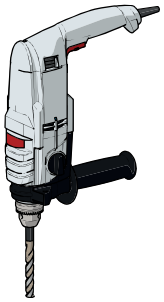



concrete fixings: Ø10 x 90mm
asphalt fixings: Ø14 x 100mm

3

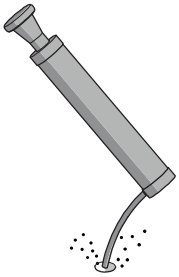


4

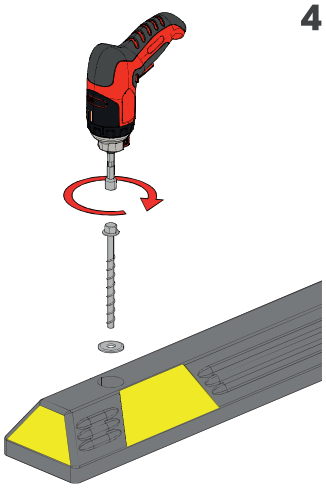


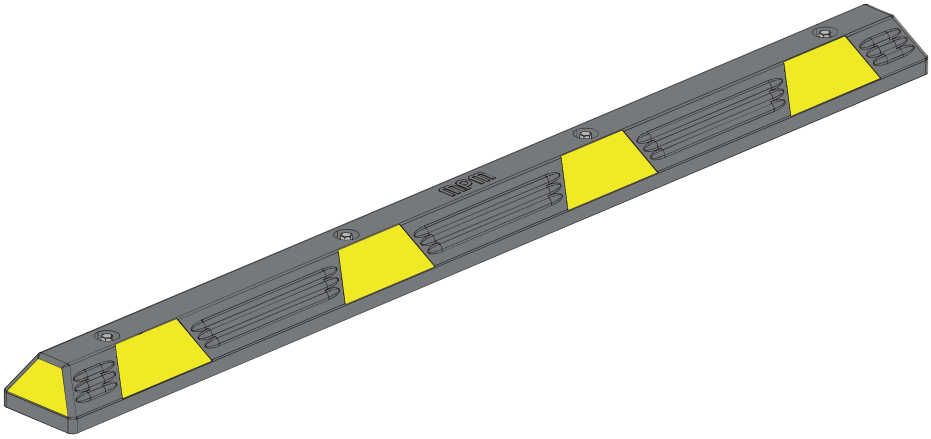

TRUCK STOP

FERMARUOTE
WHEEL STOP

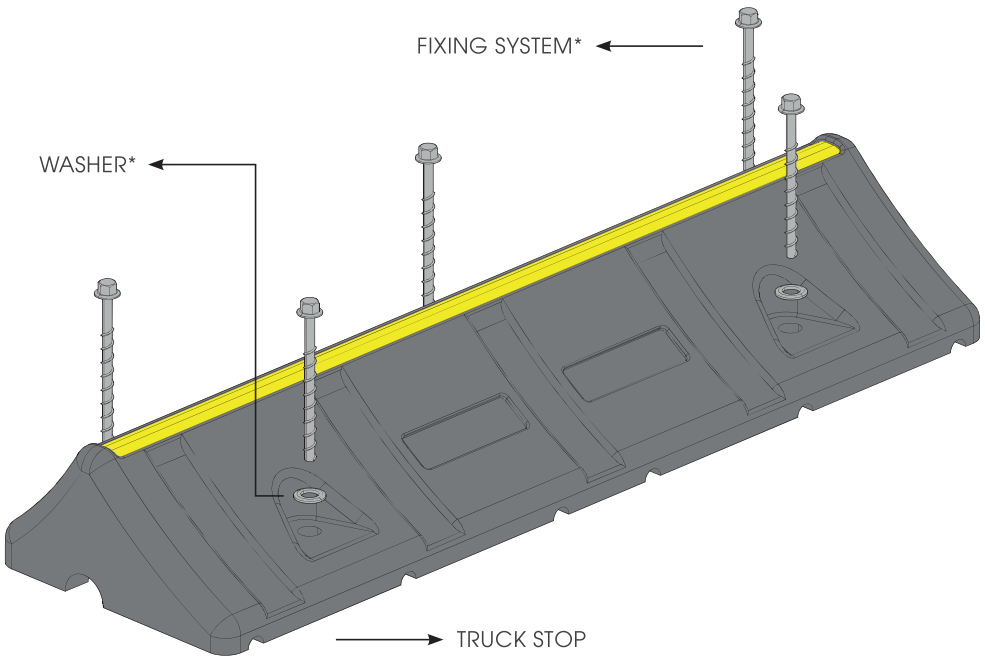

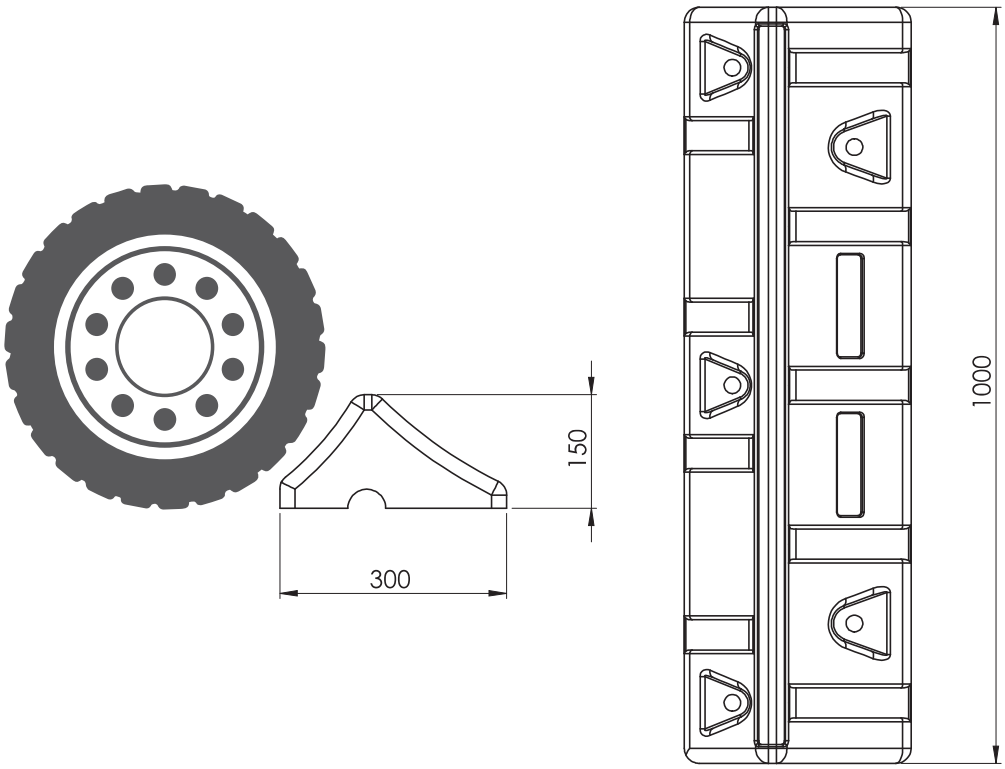


*WARNING


The product is not equipped with fixing accessories.

TRUCK STOP


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

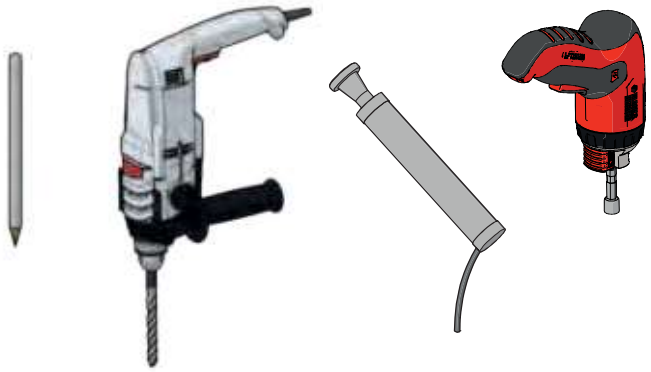


1

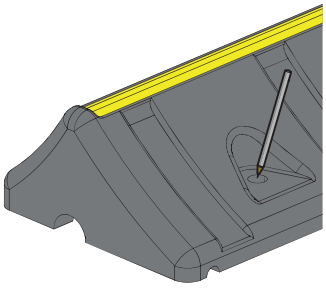


2

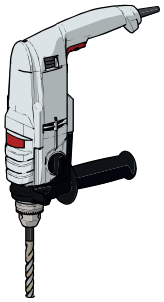


3

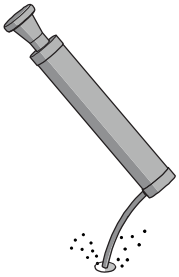

4

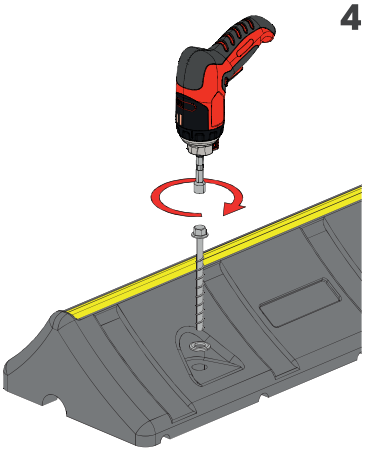


Concrete fixings: Ø10 x 110mm
Asphalt fixings: Ø14 x 110mm

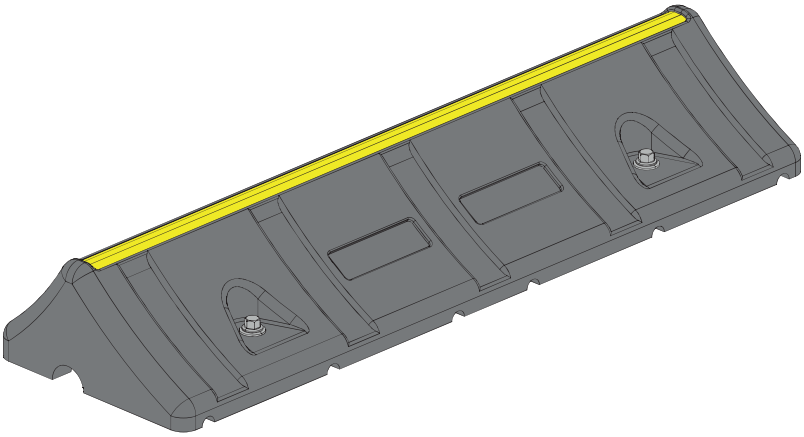

DOCK BUMPER S

PROTEZIONE BAIE DI CARICO
LOADING BAYS PROTECTIONS

HEAVY LOAD / FOR FORKLIFTS

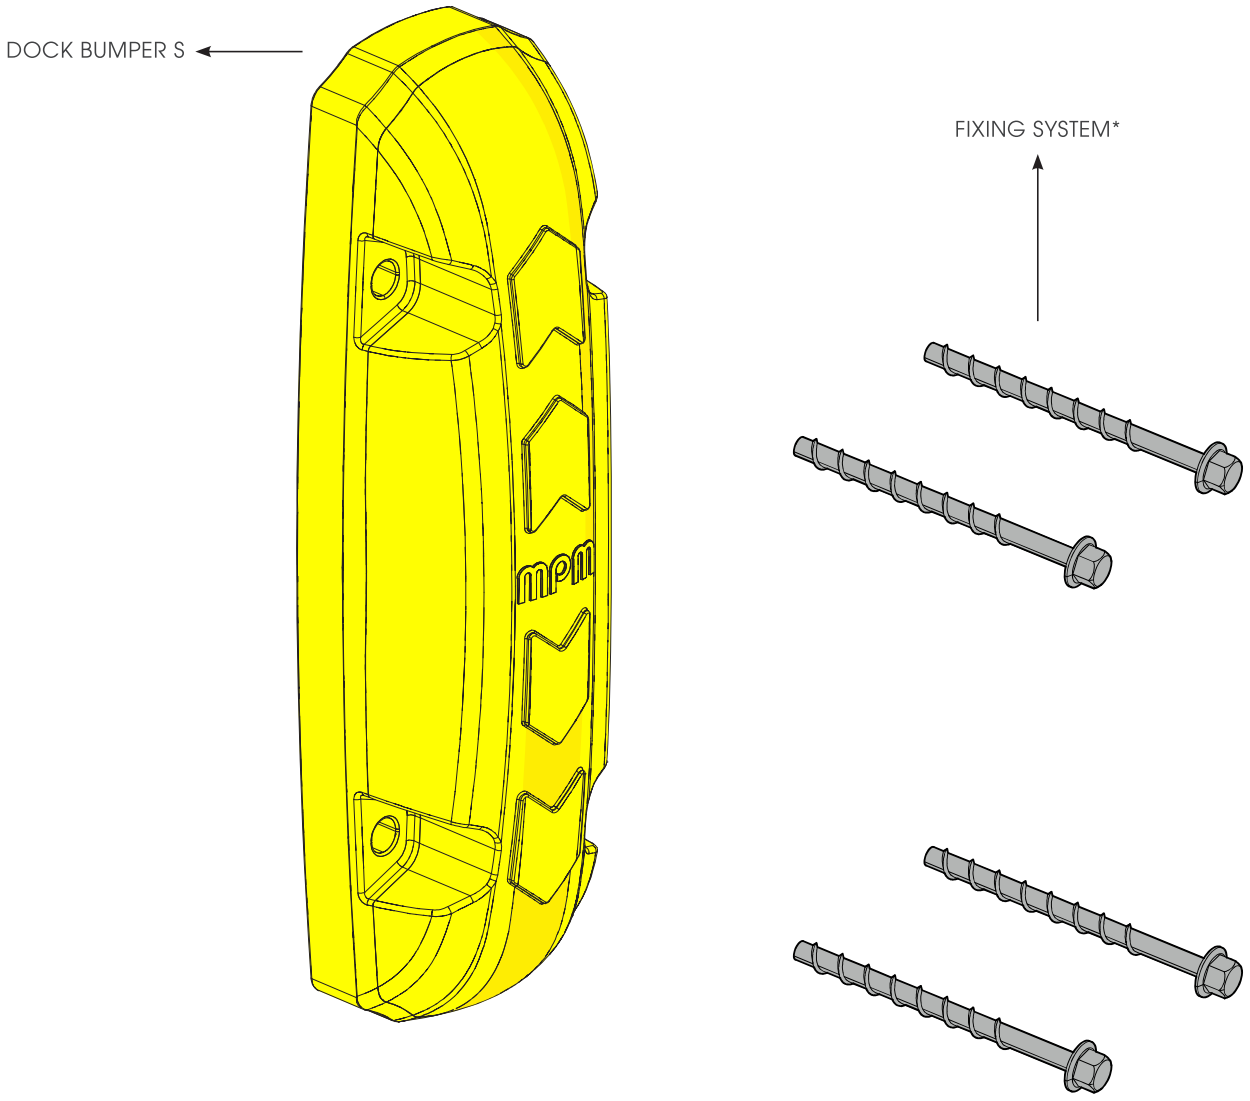


*WARNING


The product is not equipped with fixing accessories.


DOCK BUMPER S


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



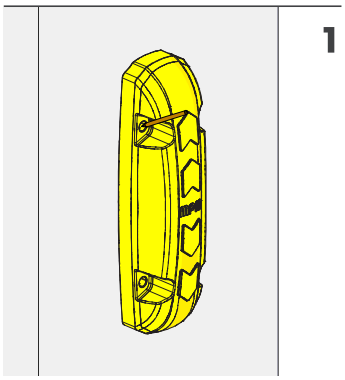

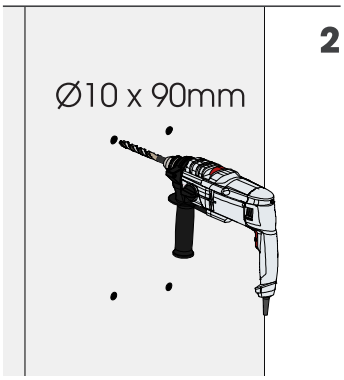

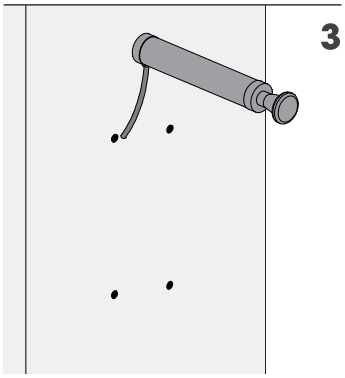


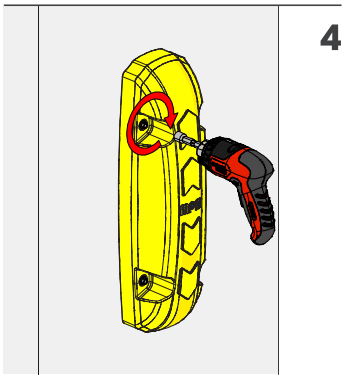

DOCK BUMPER

PROTEZIONE BAIE DI CARICO
LOADING BAYS PROTECTIONS

HEAVY LOAD / FOR FORKLIFTS

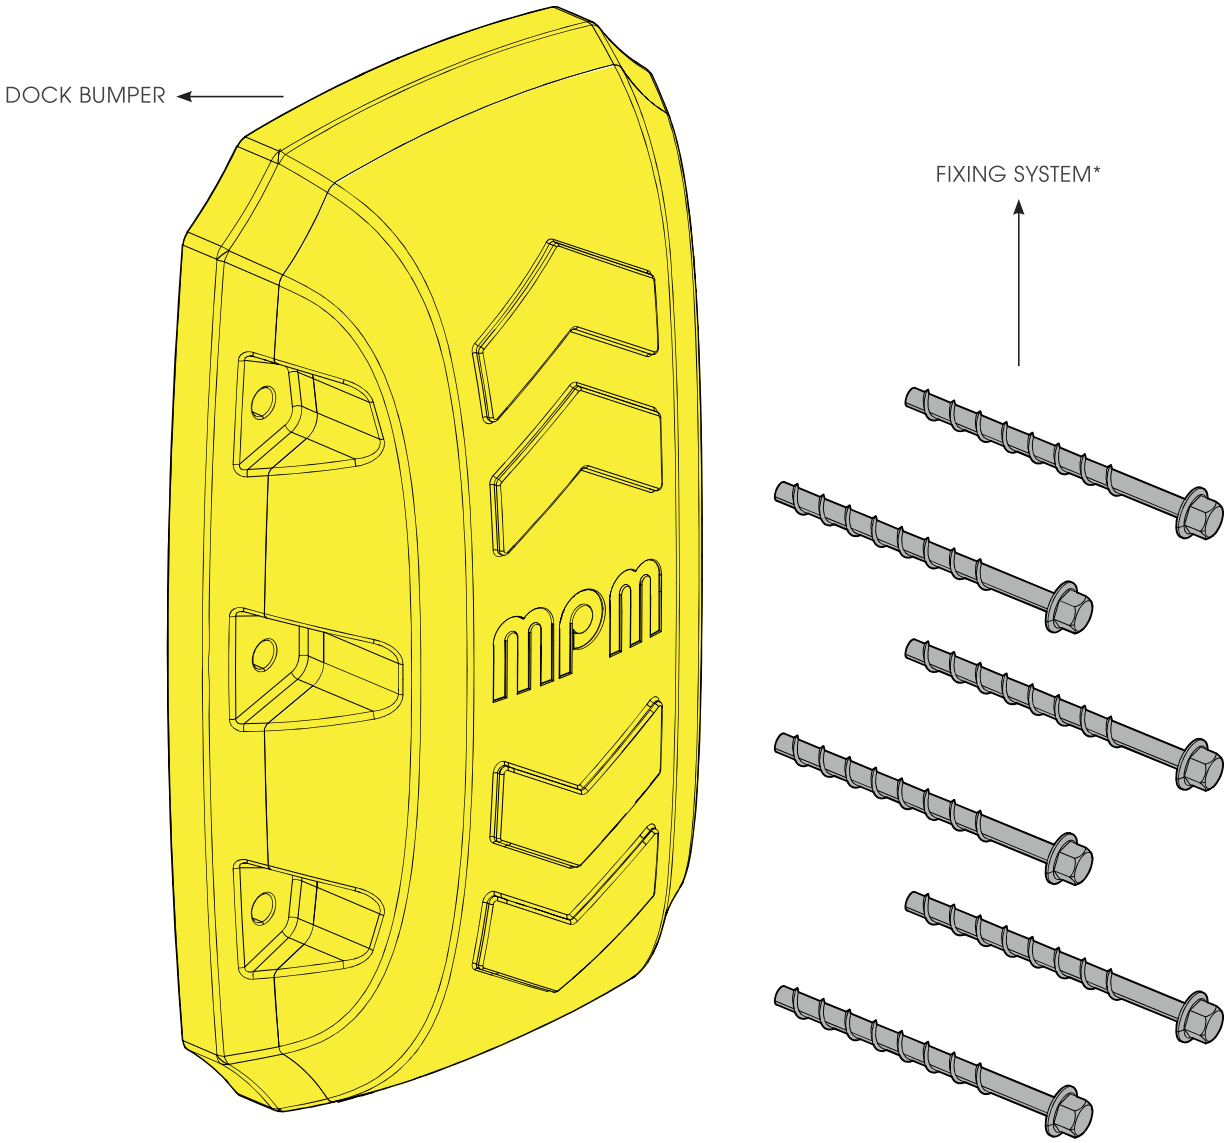

*WARNING

The product is not equipped with fixing accessories.

DOCK BUMPER


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




1




2

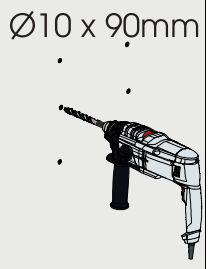

3

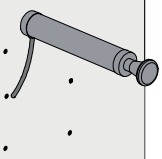



4

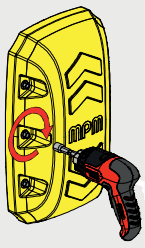



MINI HUG TOWER


PROTEZIONE COLONNA
COLUMN PROTECTION

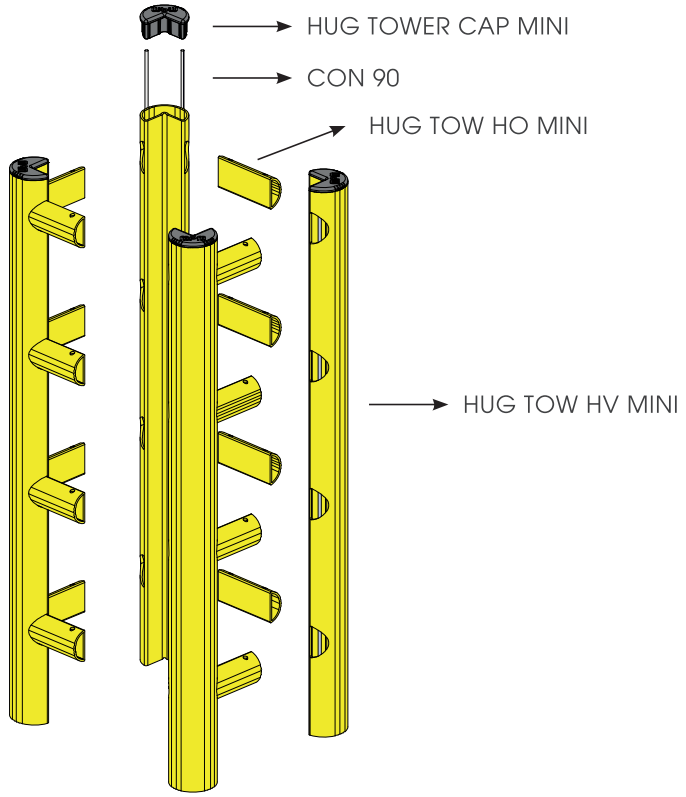


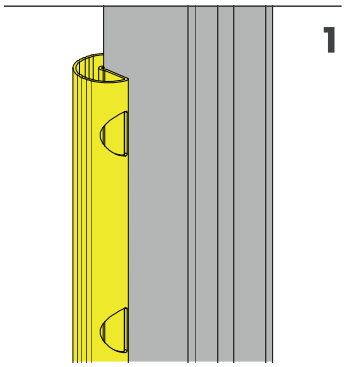


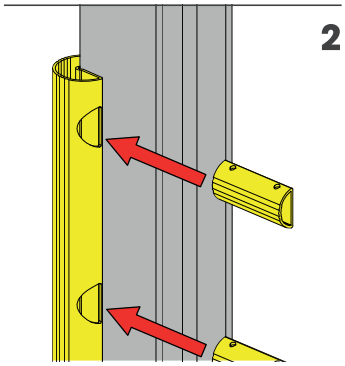

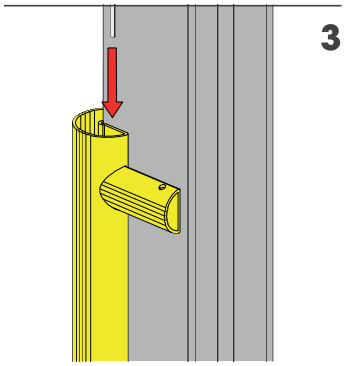

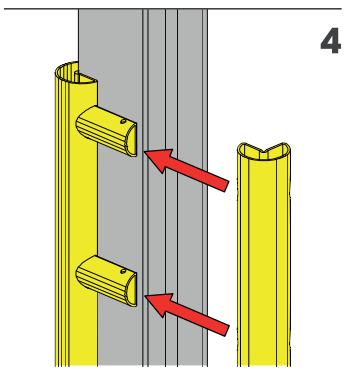


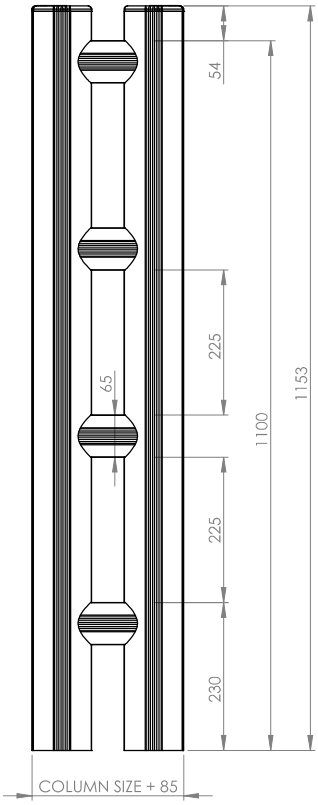


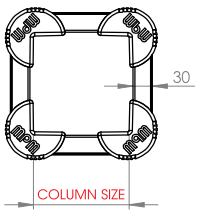



MINI HUG TOWER


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

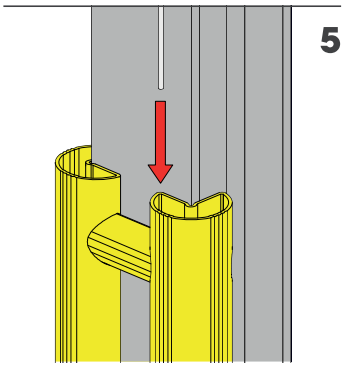


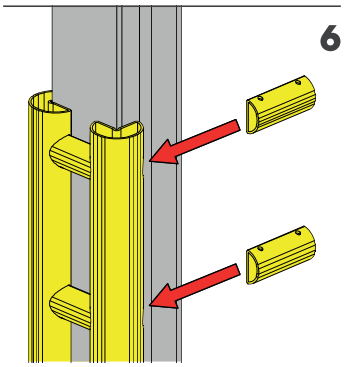


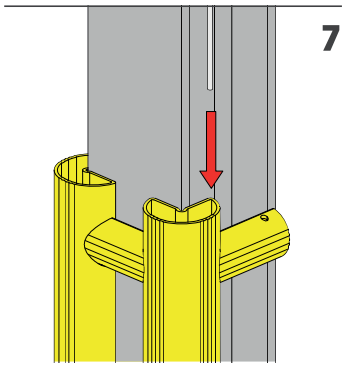


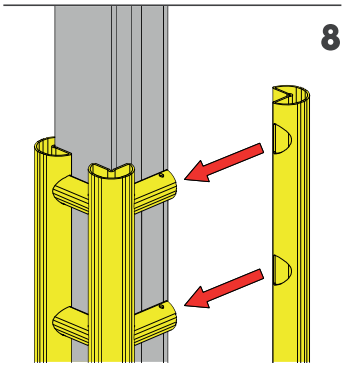


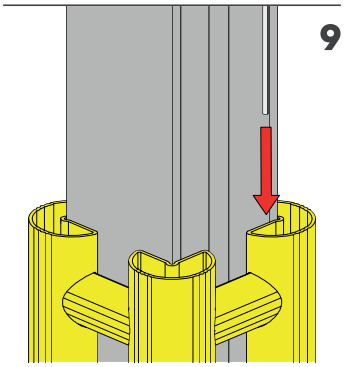


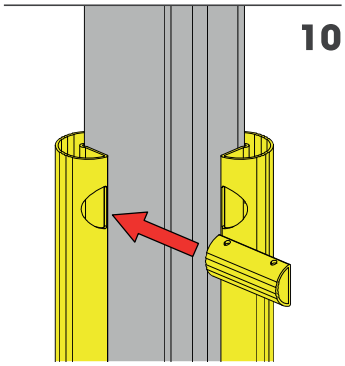


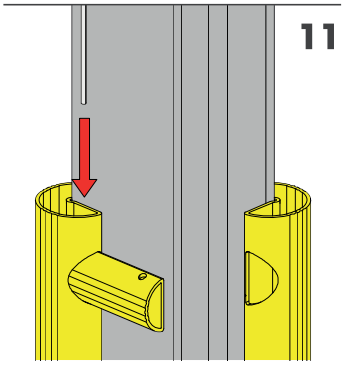


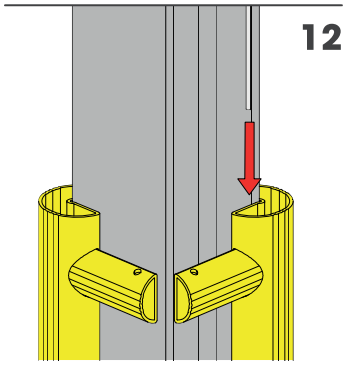

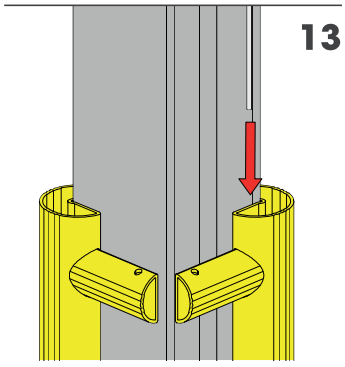

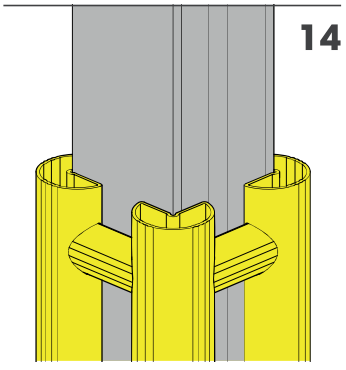

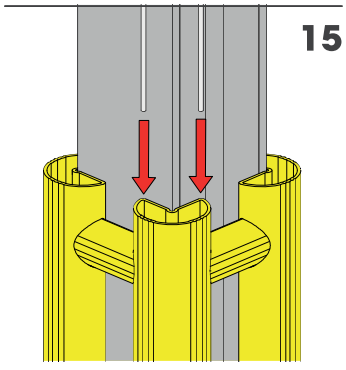


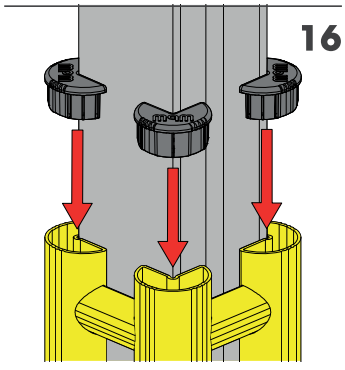



HUG TOWER 3 SIDES


PROTEZIONE COLONNA
COLUMN PROTECTION

HEAVY LOAD / FOR FORKLIFTS

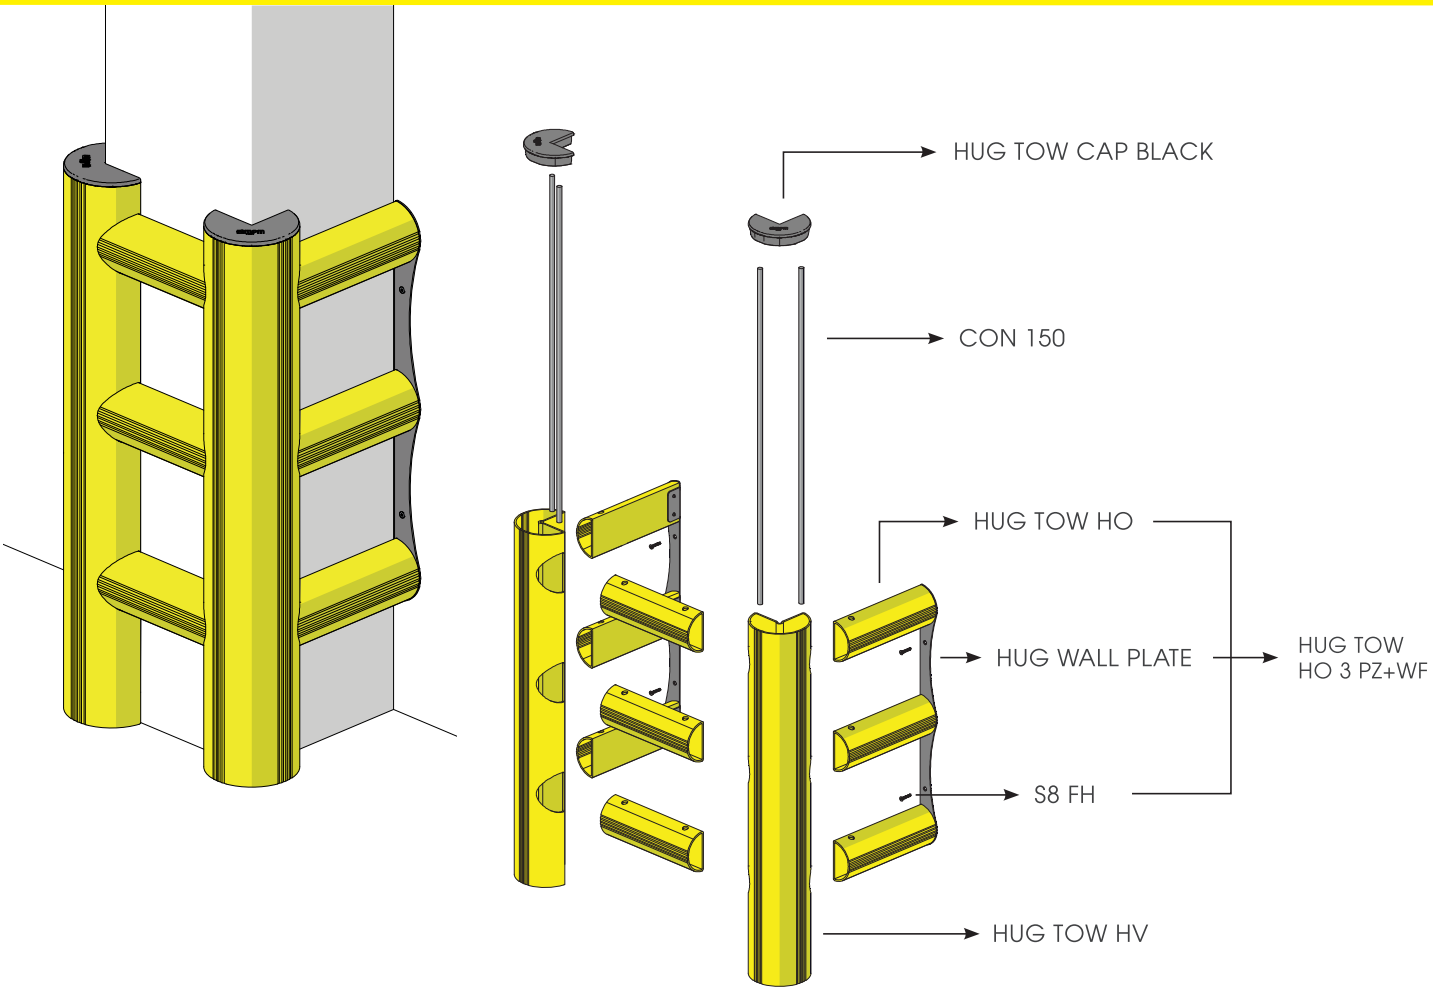

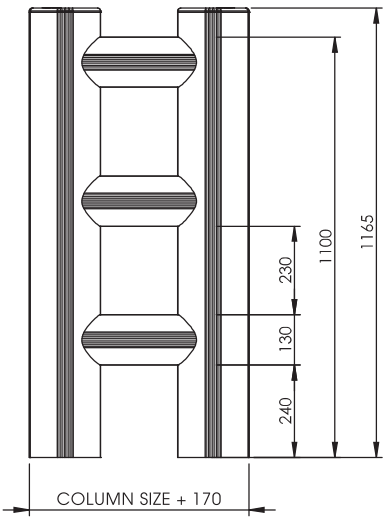

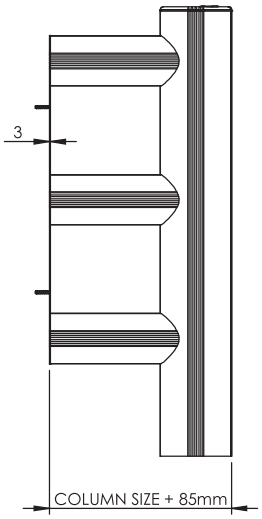


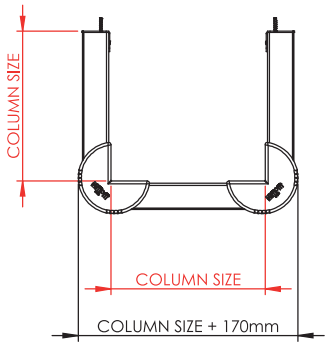


HUG TOWER 3 SIDES


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

Ø6 mm

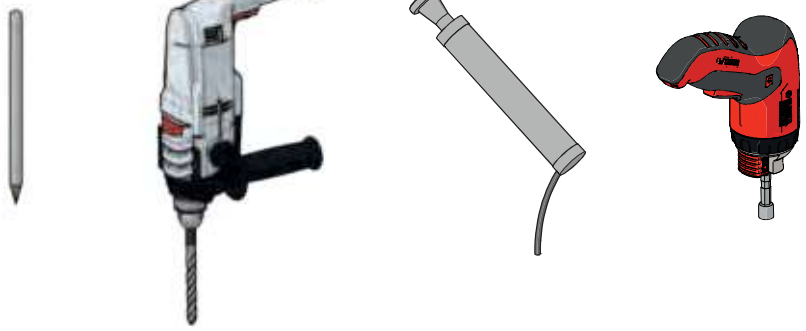


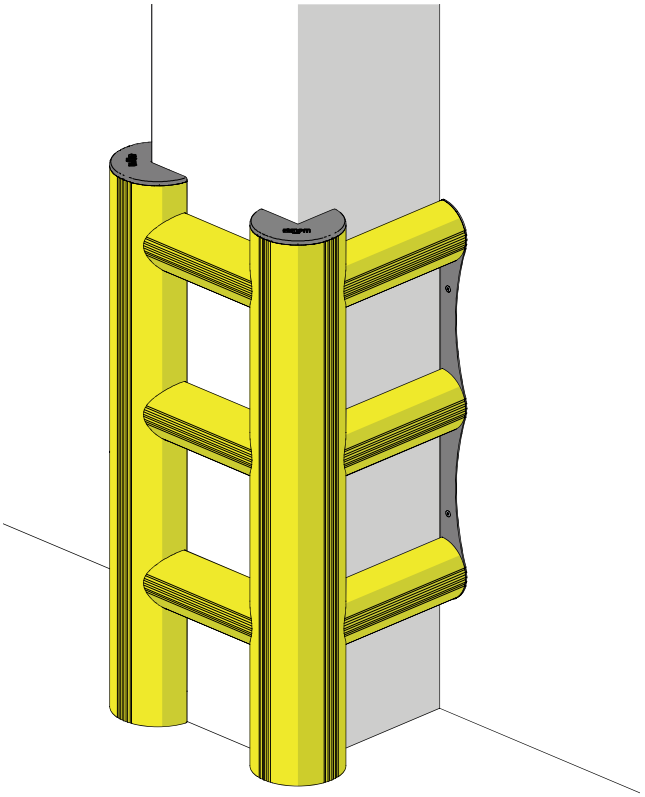


1

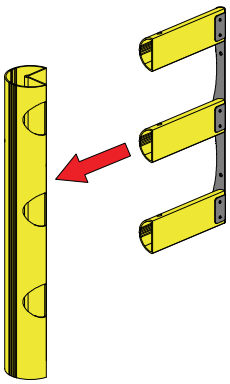

2

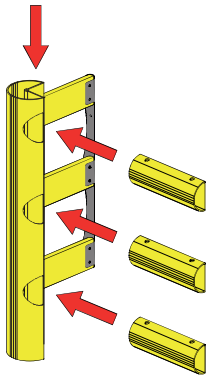


3

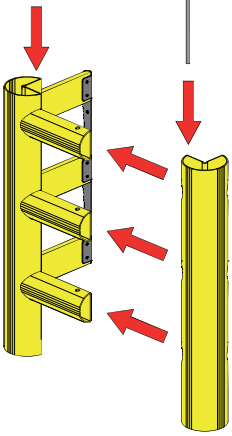


HUG TOWER 3 SIDES

ISTRUZIONI DI INSTALLAZIONE
ASSEMB LY INSTRUCTIONS


4

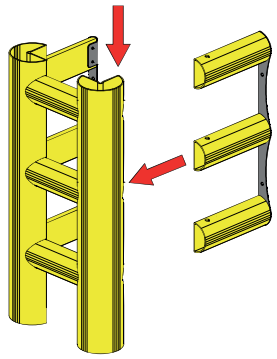


5

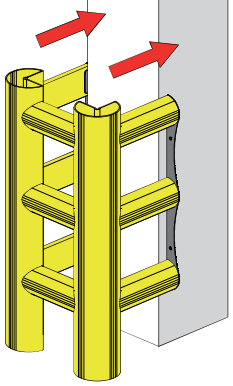


6

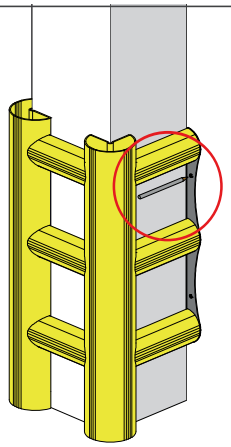


7

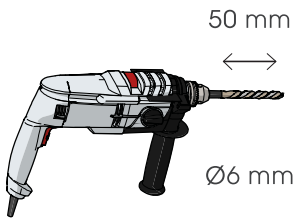


8

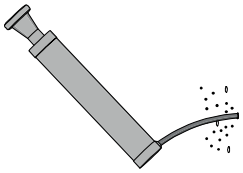

9

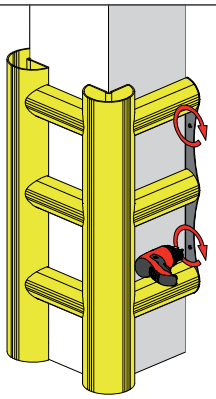


10

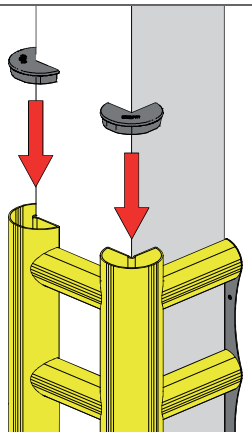



HUG TOWER


PROTEZIONE COLONNA
COLUMN PROTECTION

HEAVY LOAD / FOR FORKLIFTS

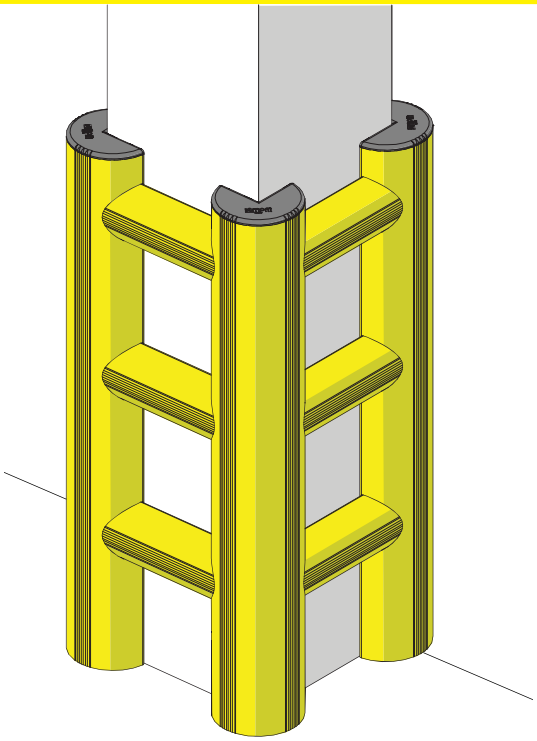

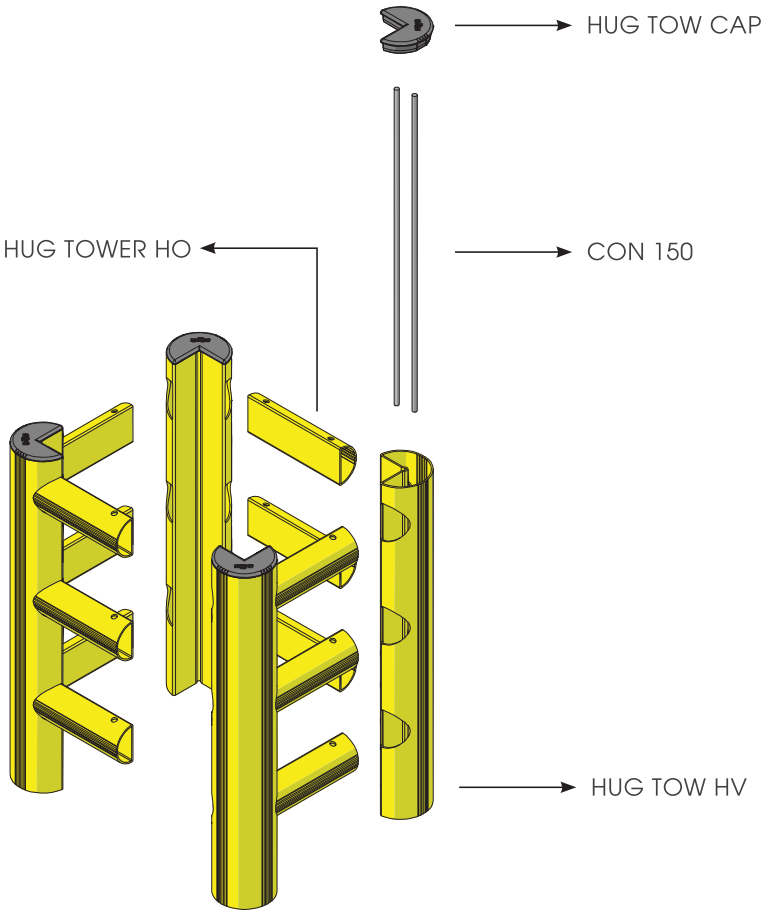


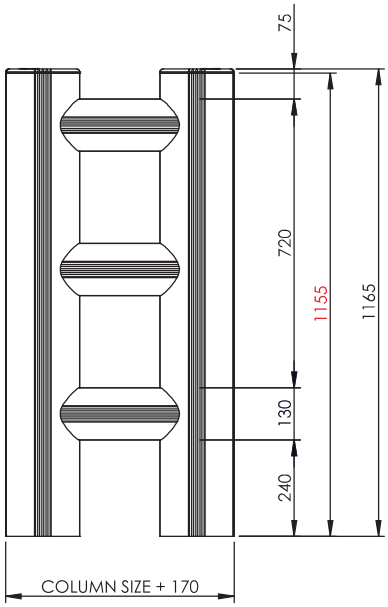


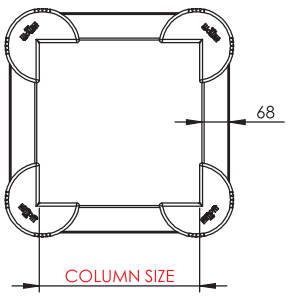



HUG TOWER


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

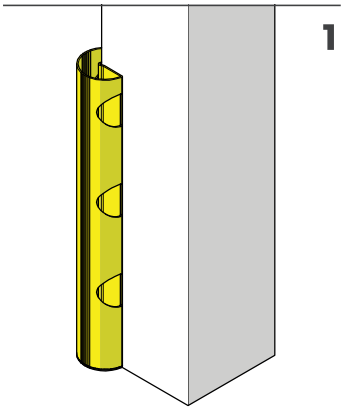


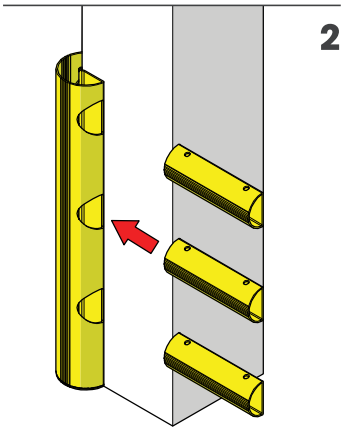


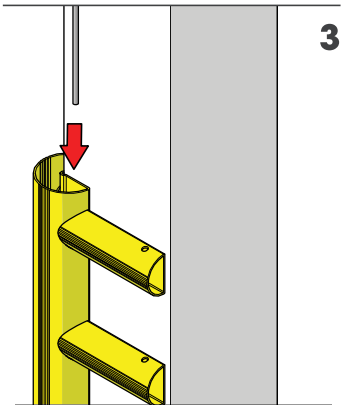


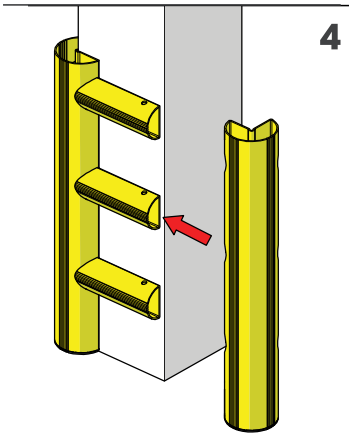


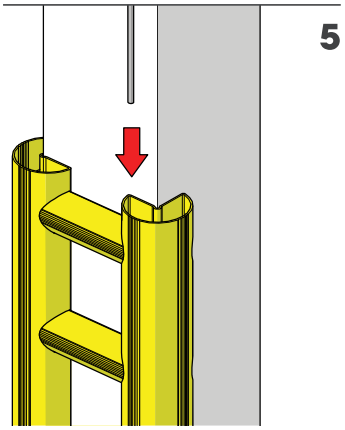

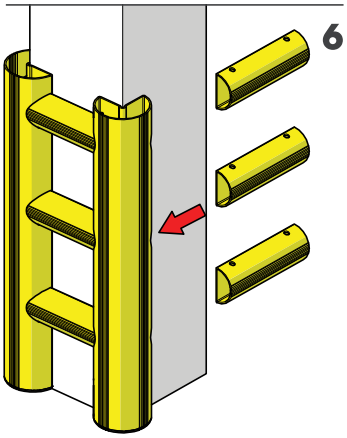

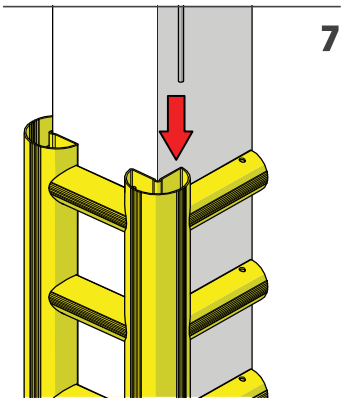


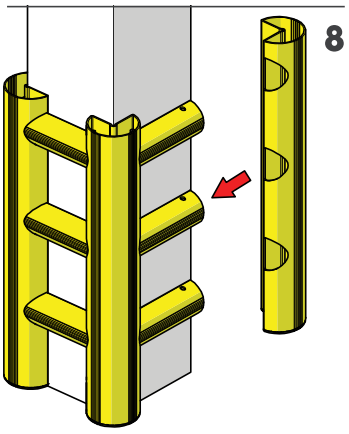


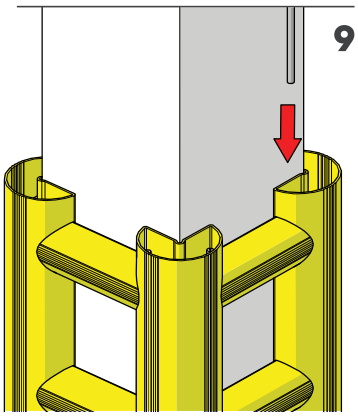



HUG TOWER


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

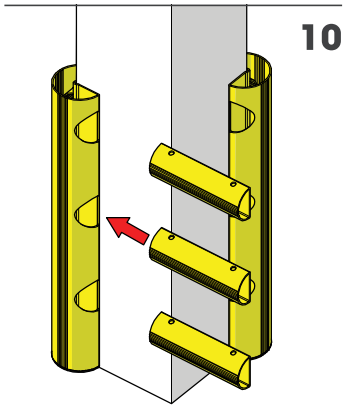


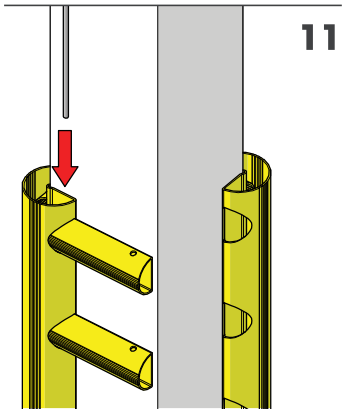


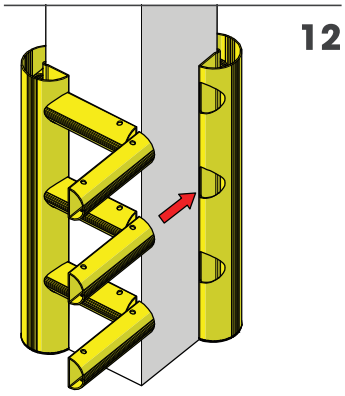

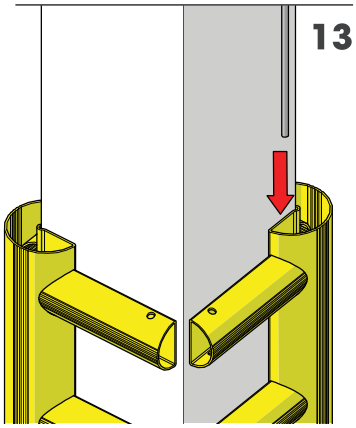

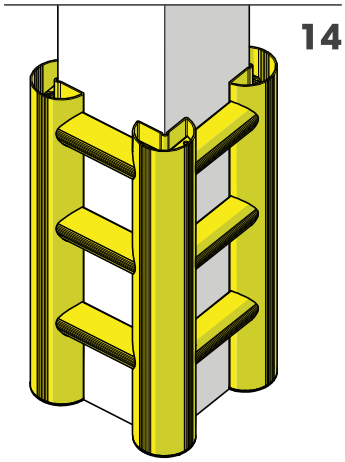

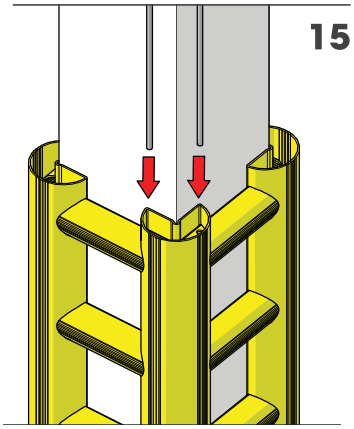


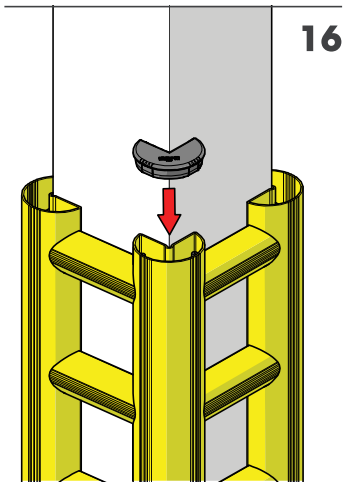



TOWER PROTECTIONS

PROTEZIONE COLONNA
COLUMN PROTECTION

HEAVY LOAD / FOR FORKLIFTS

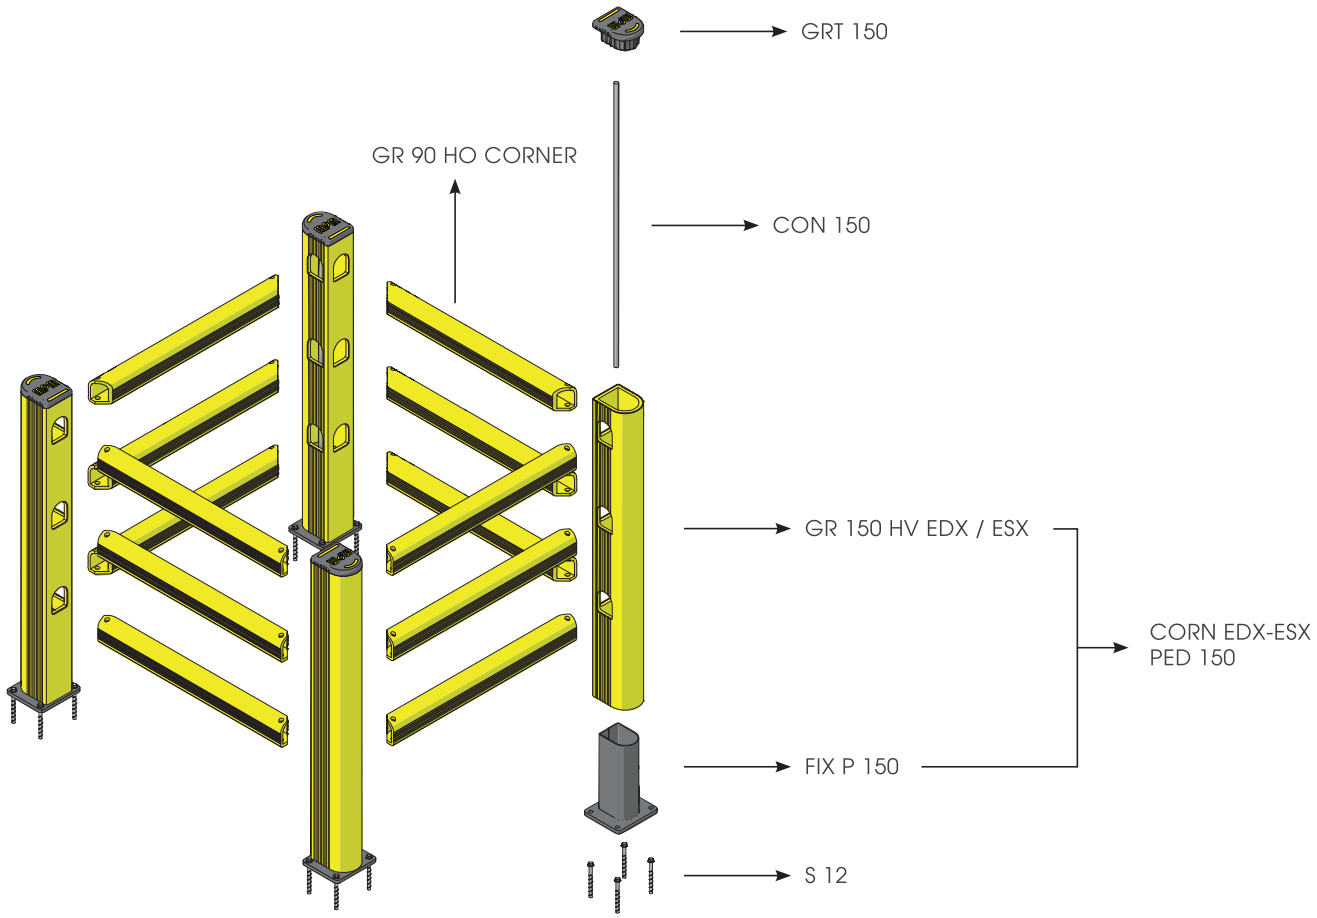

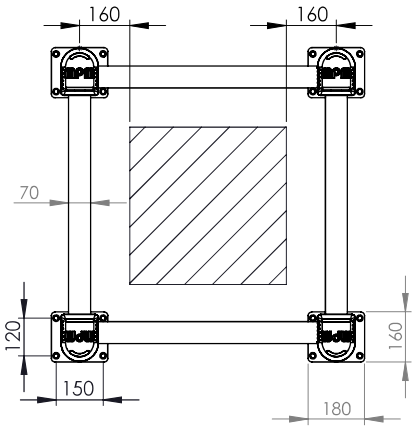

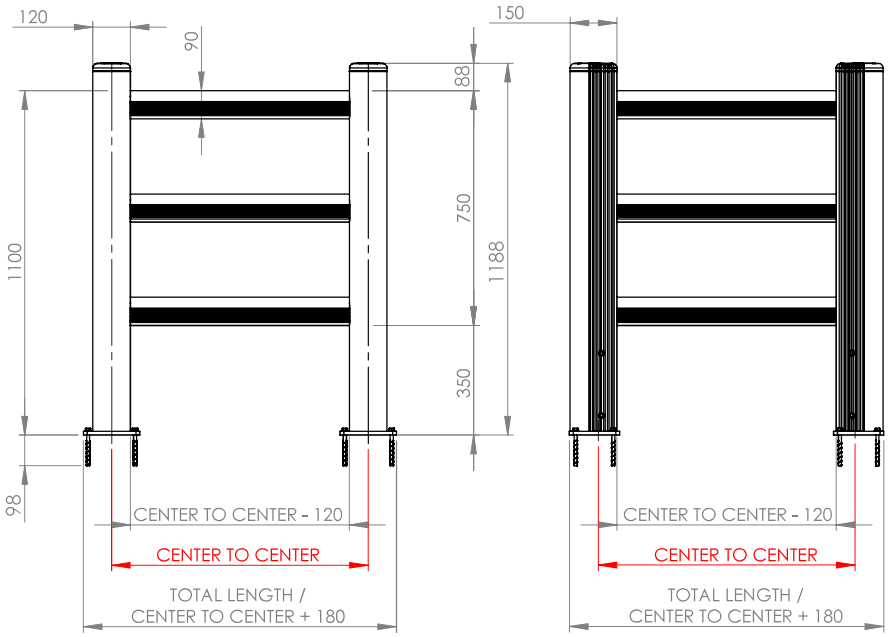


TOWER PROTECTIONS

PROTEZIONE COLONNA
COLUMN PROTECTION


PLEASE CHECK HERE BELOW
OTHER OPTIONS FOR ASSEMBLY


TWO SIDES OPEN

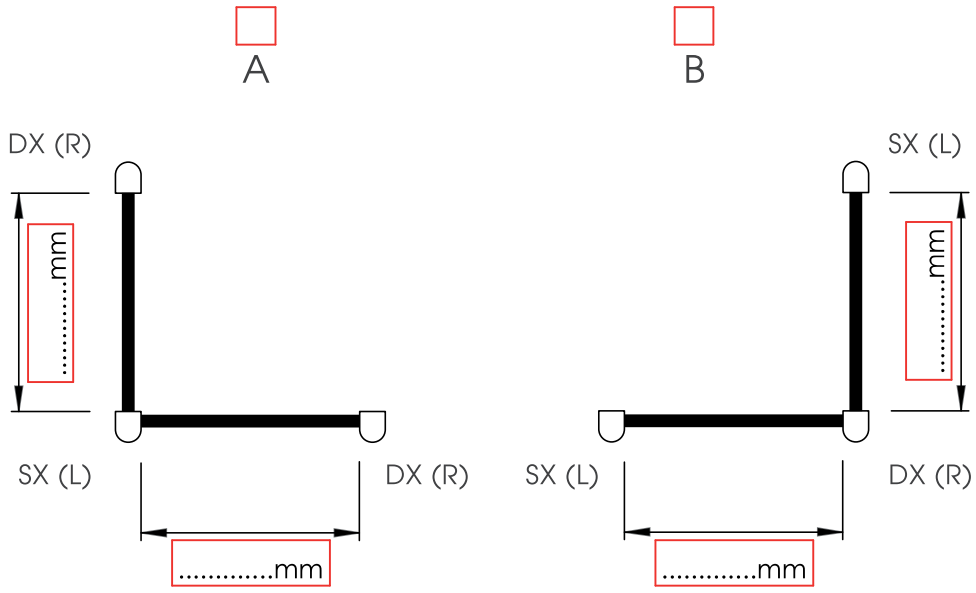


TOWER PROTECTIONS


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

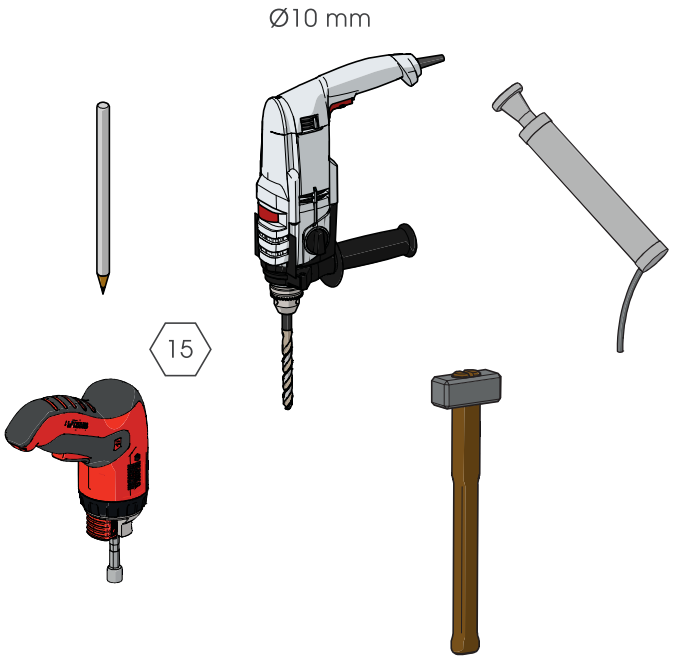


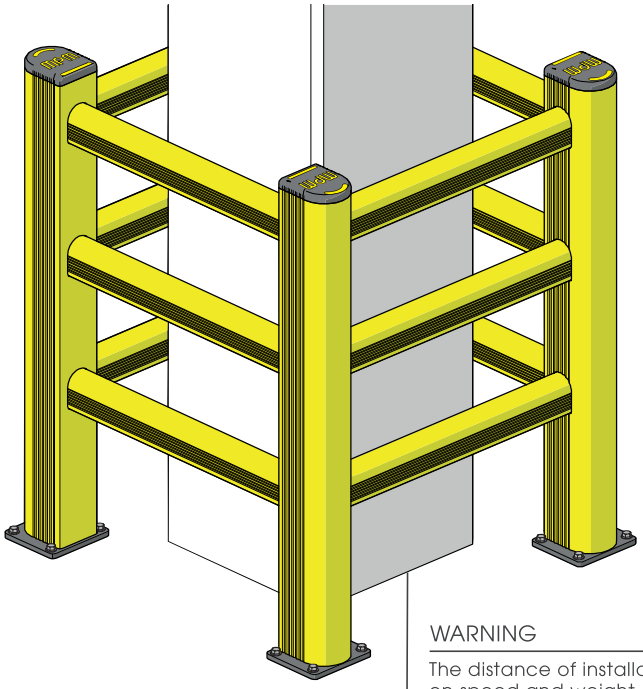


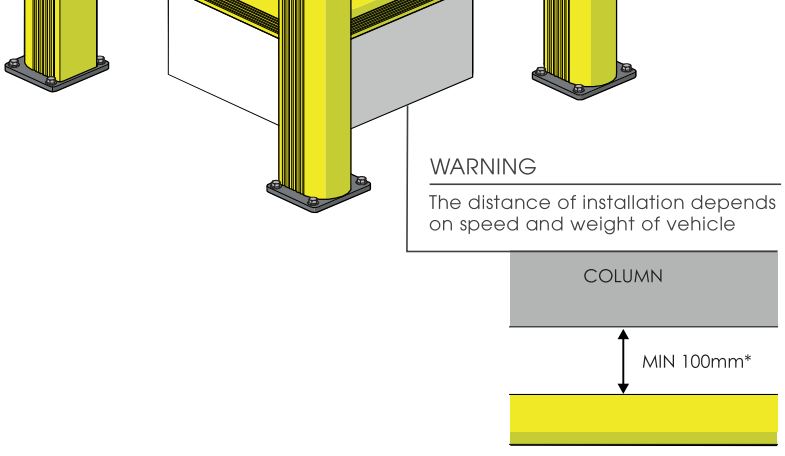


* Fixings for solid walls included

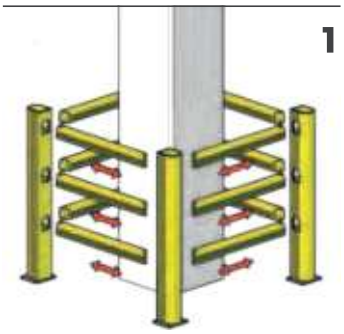

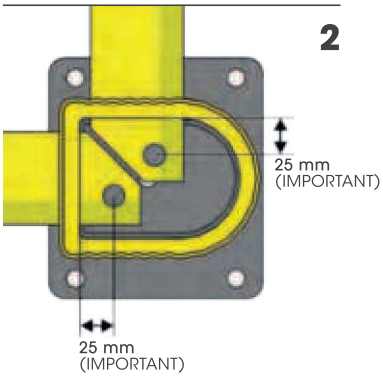


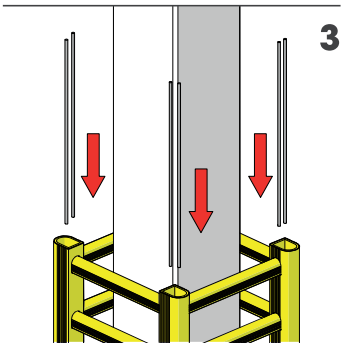


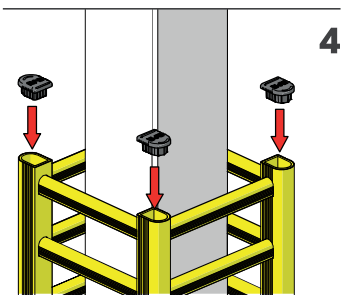


TOWER PROTECTIONS


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

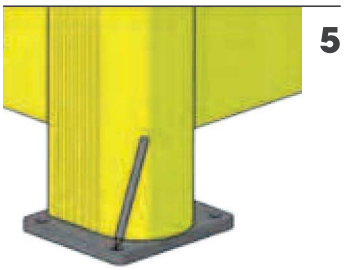

5

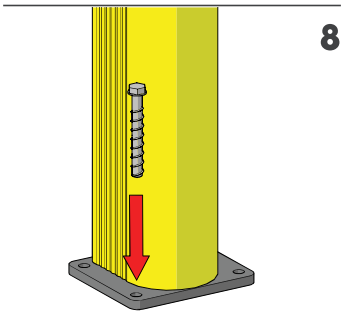
8

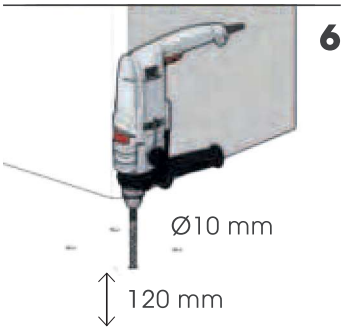

6

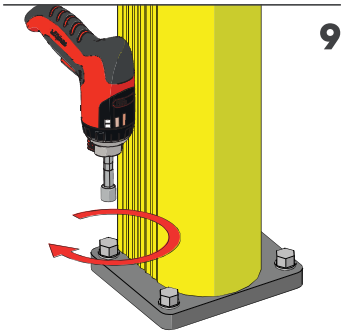
9

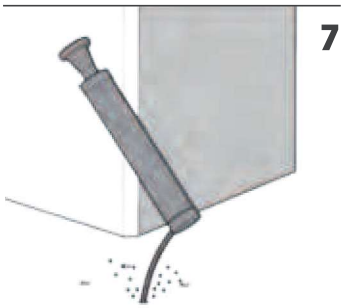

7


TOWER LINK


PROTEZIONE COLONNA
COLUMN PROTECTION


HEAVY LOAD / FOR FORKLIFTS

POST COMPONENTS	POST KIT NAME
GR 150 HV EDX 1P + FIX P 150 →	CORN EDX LINK 150/1
GR 150 HV EDX 2P + FIX P 150 →	CORN EDX LINK 150/2
GR 150 HV ESX 1P + FIX P 150 →	CORN ESX LINK 150/1
GR 150 HV ESX 2P + FIX P 150 →	CORN ESX LINK 150/2
GR 150 + FIX P 150 + GRT 150 →	GRD 150 (LINK 150/3)

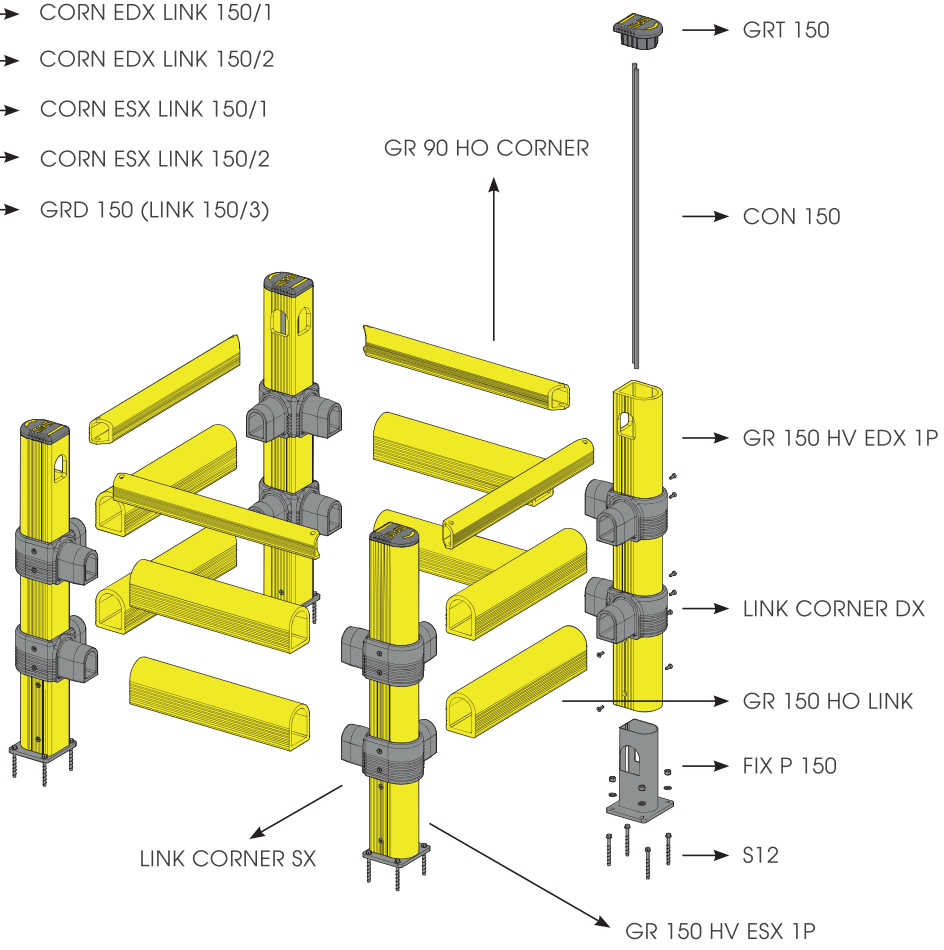

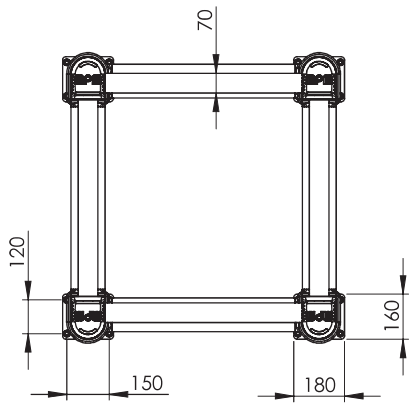

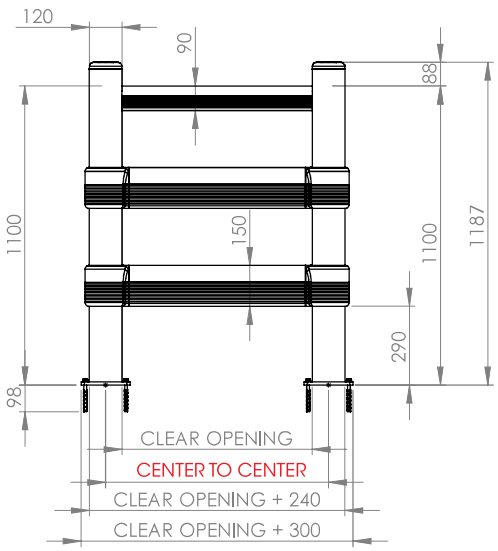


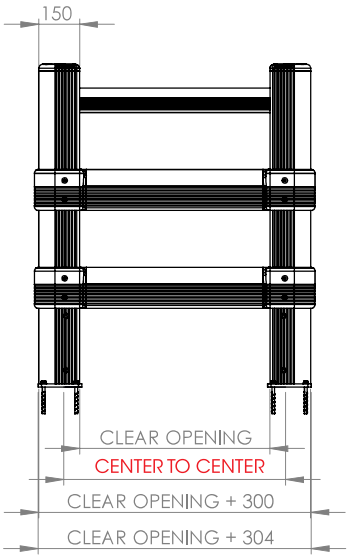


TOWER LINK

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


SOLUTION DISPLAYED: **TOWER LINK/2**

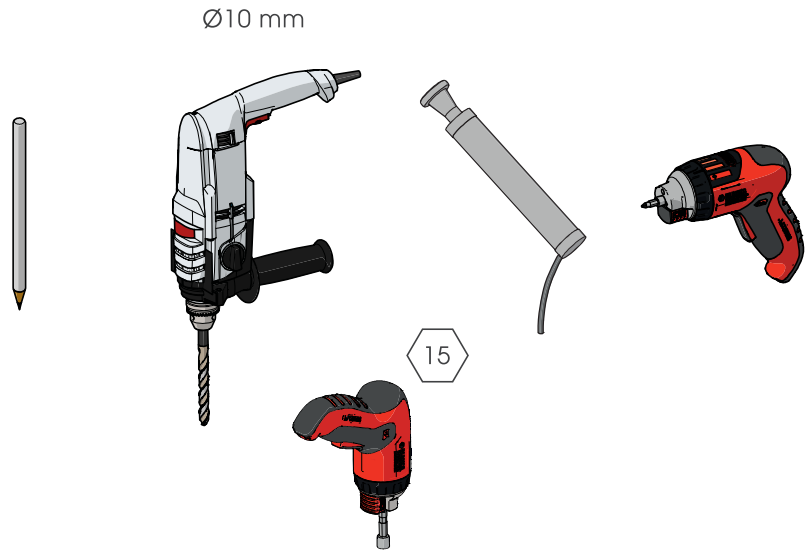

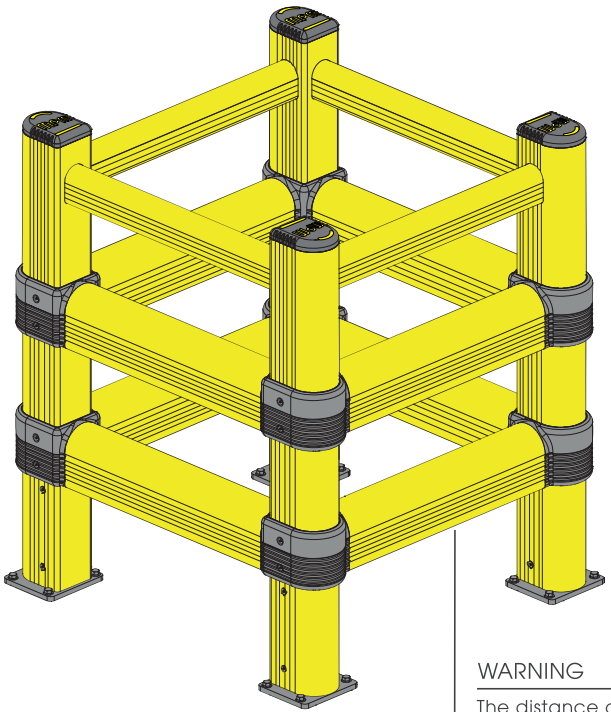


WARNING


The distance of installation depends on speed and weight of vehicle

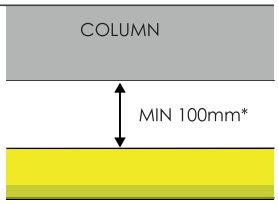


1




2

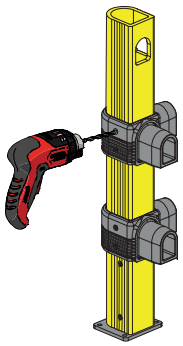

3

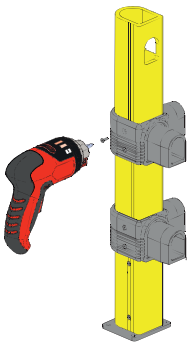


4

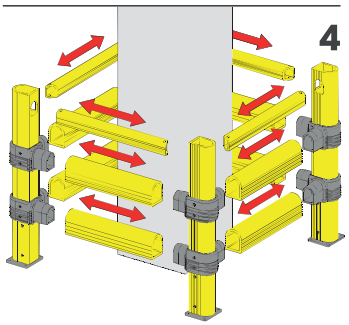


TOWER LINK

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

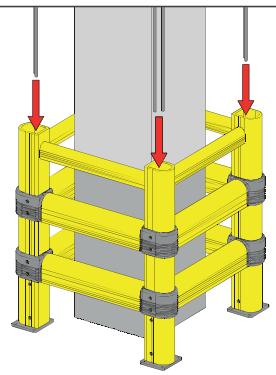


6

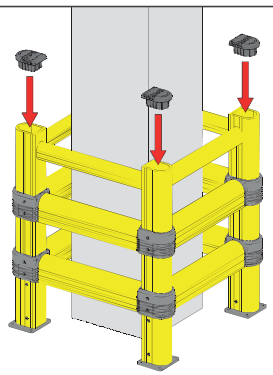


7

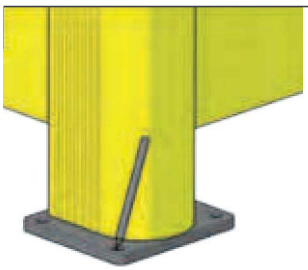


8

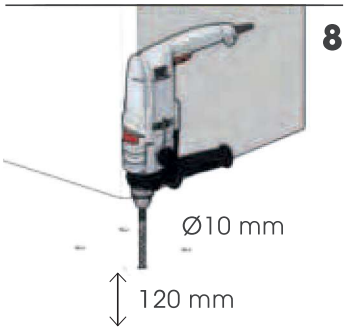


9

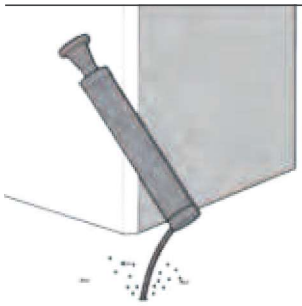


10

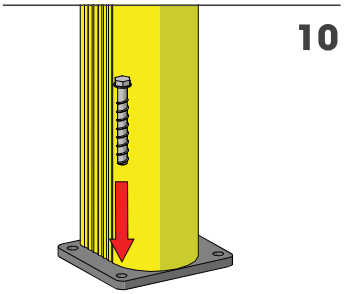


11

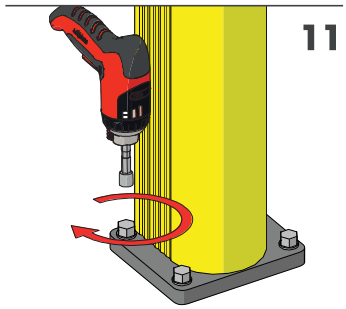


INSTALLATION TIP

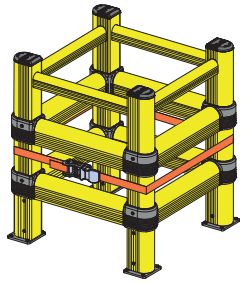


TOWER LINK/1

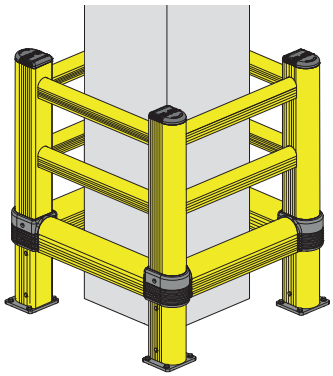

TOWER LINK/2

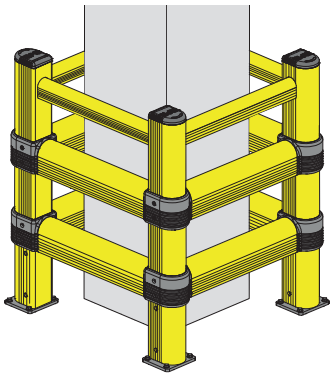


TOWER LINK/3

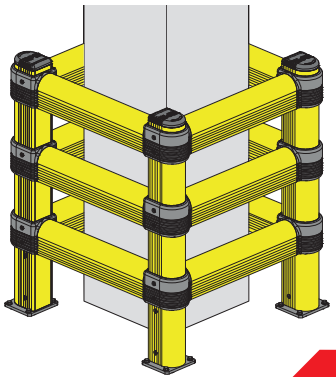



COPRO 90

PROTEZIONE COLONNA
COLUMN PROTECTION

LIGHT LOAD / FOR HAND PALLET TRUCKS

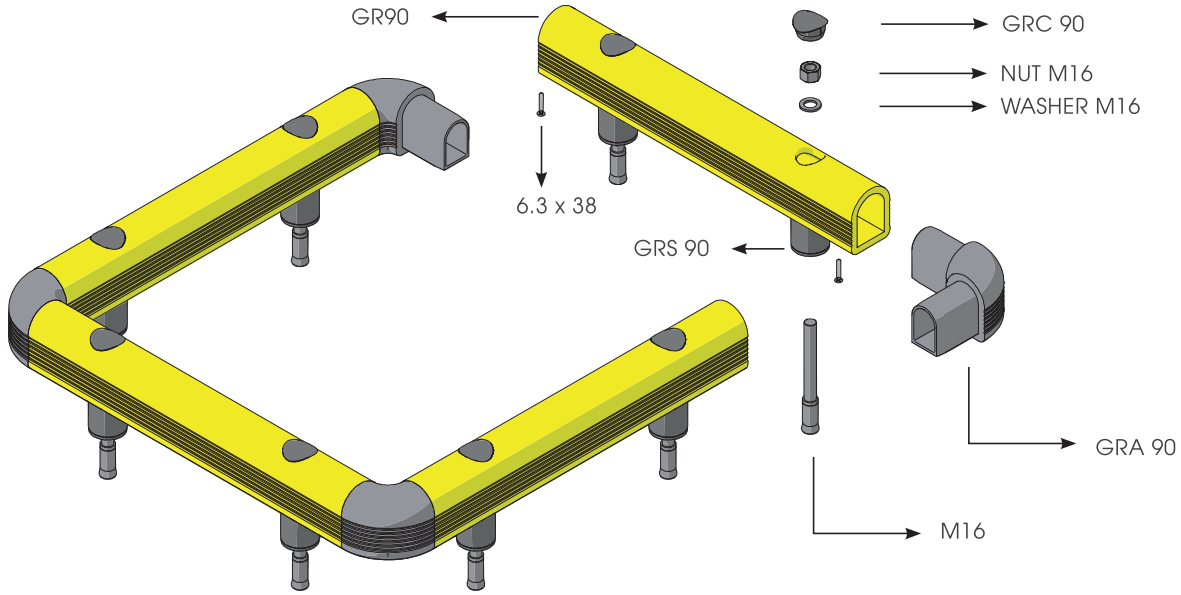


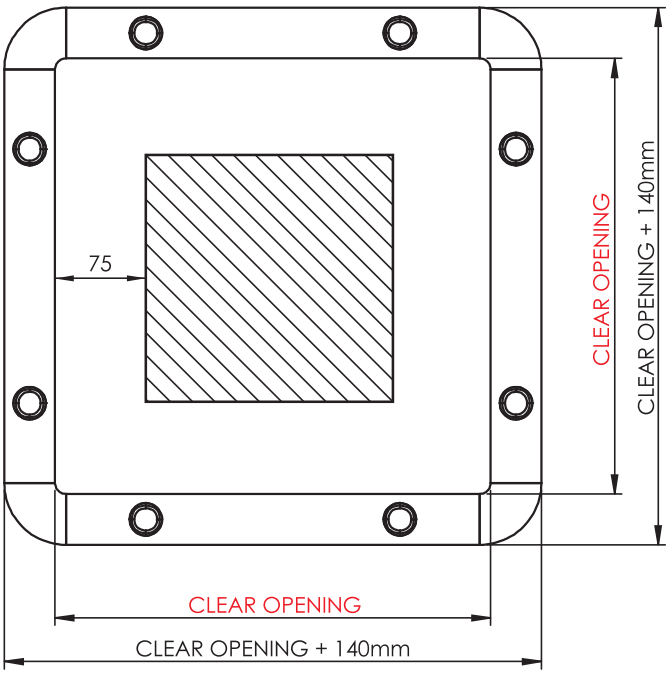


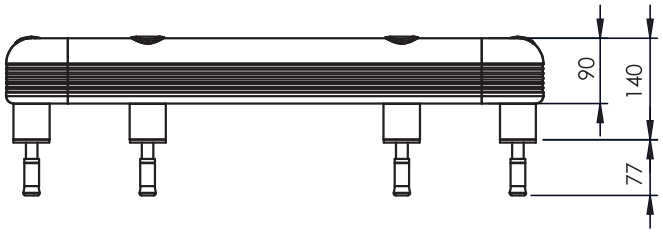



COPRO 90


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

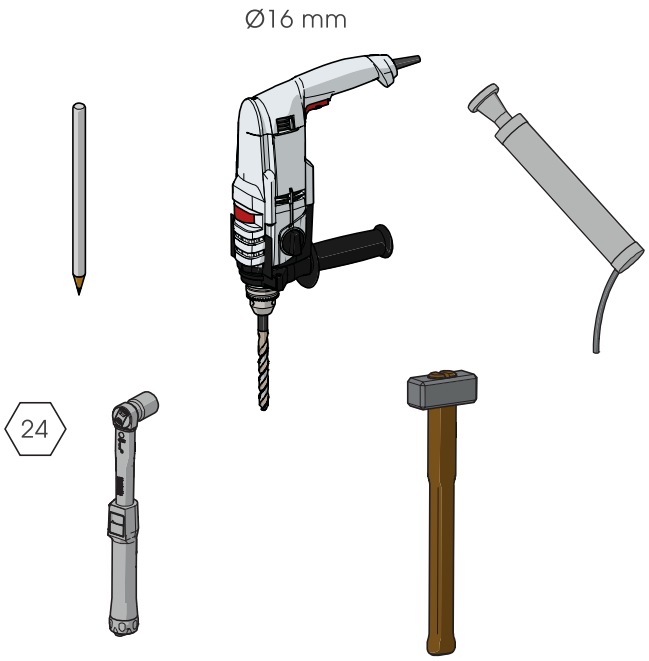


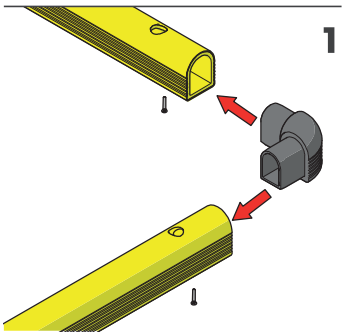

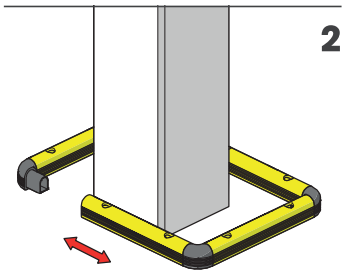

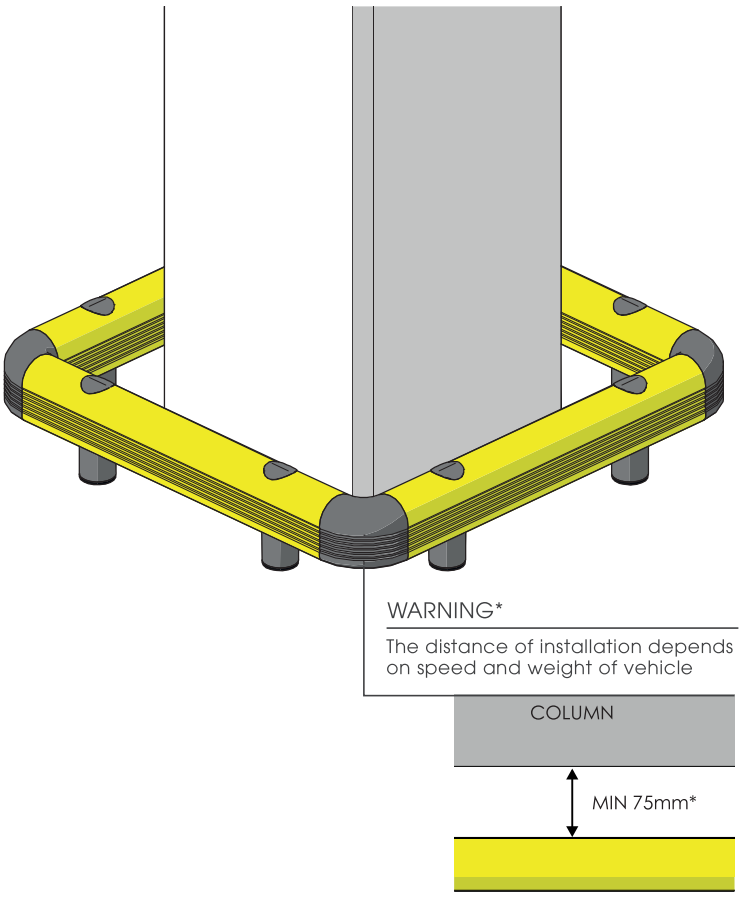


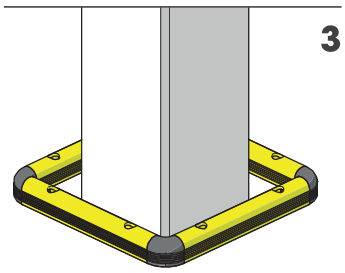


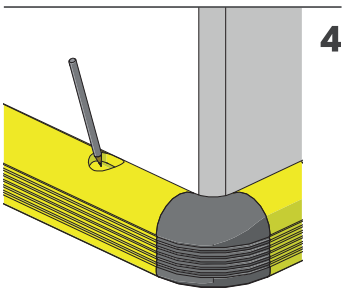


COPRO 90


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

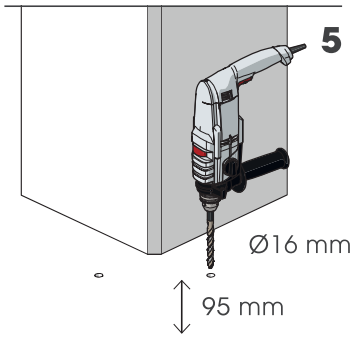


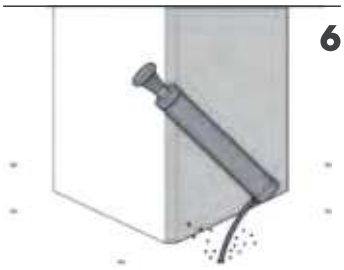


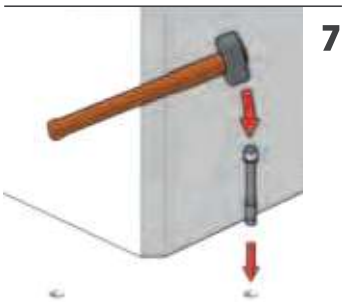





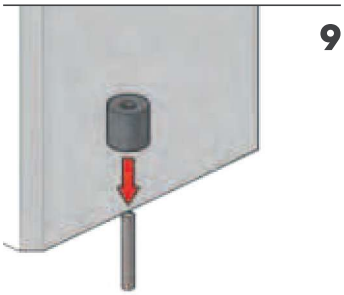

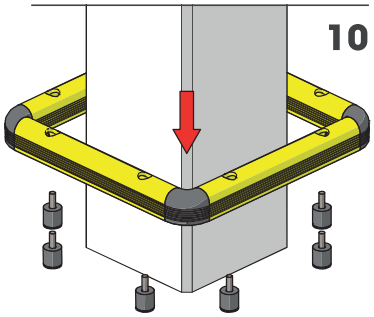

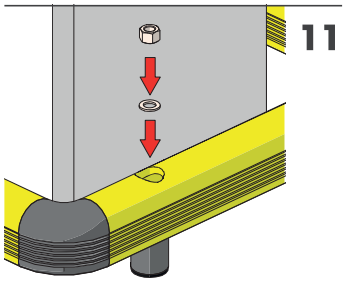

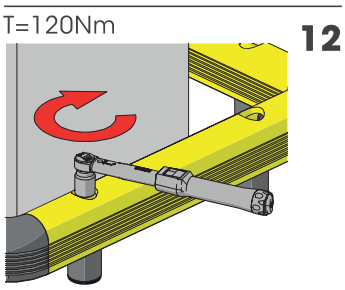


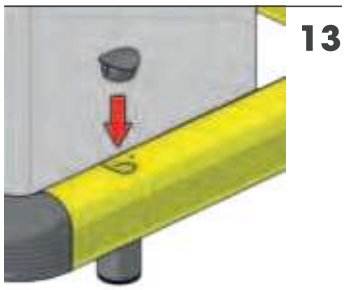



COPRO 150

PROTEZIONE COLONNA
COLUMN PROTECTION

HEAVY LOAD / FOR FORKLIFTS

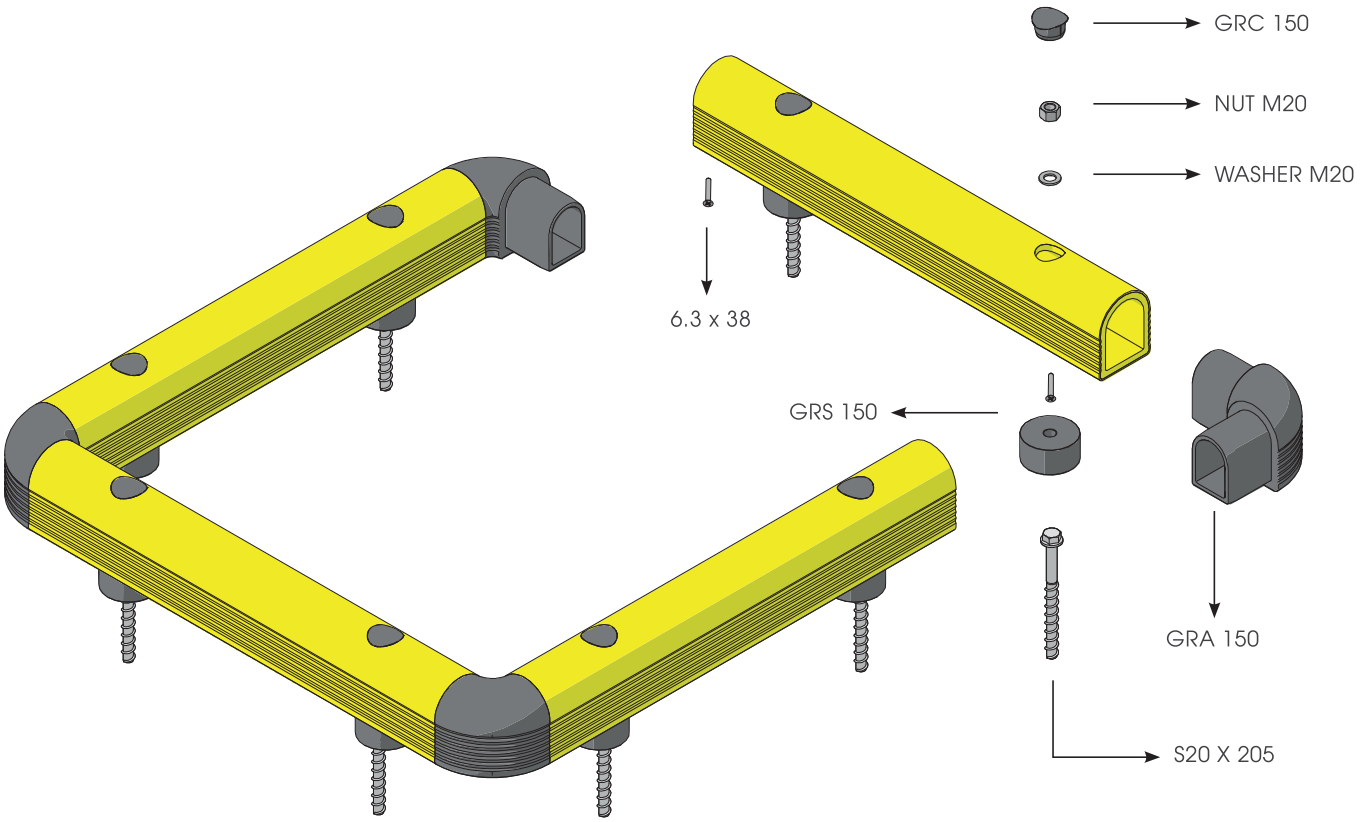

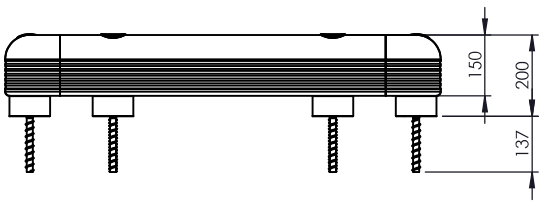

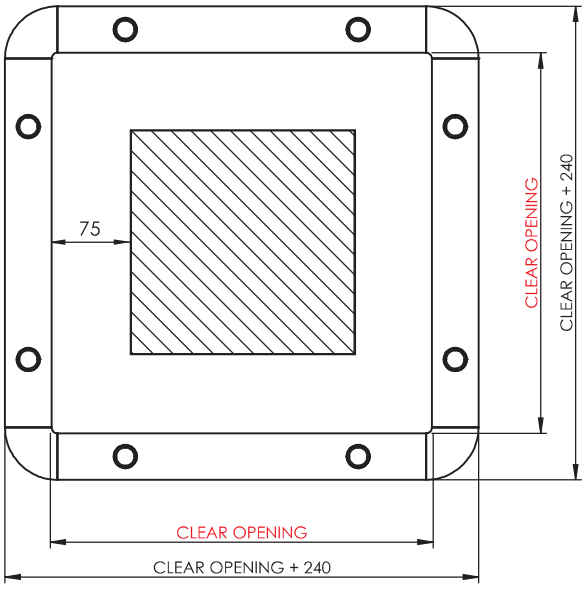

COPRO 150


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


CHEMICAL ANCHOR


Ø16 mm





24

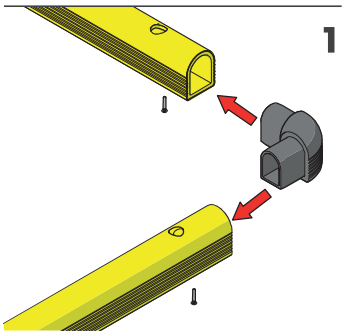

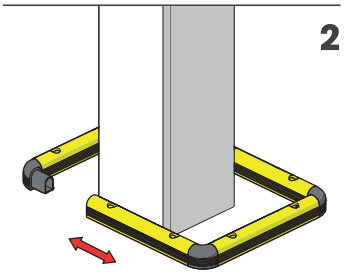

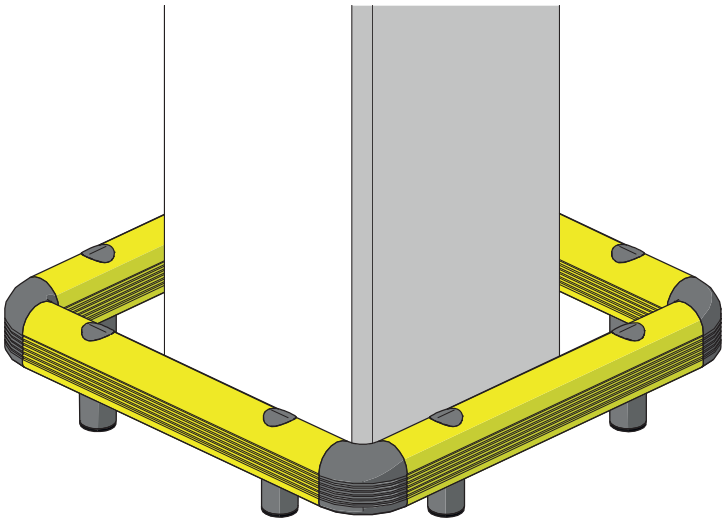


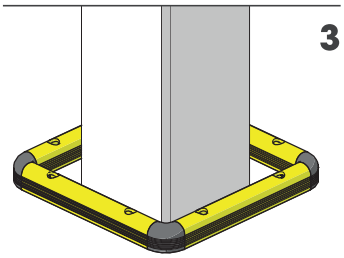

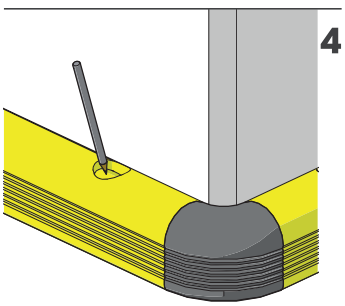


WARNING*


The distance of installation depends on speed and weight of vehicle

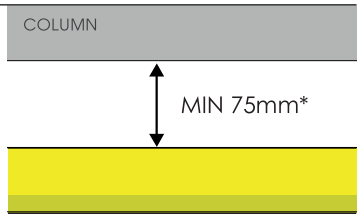



COPRO 150


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

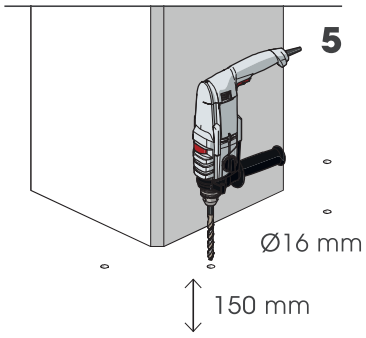


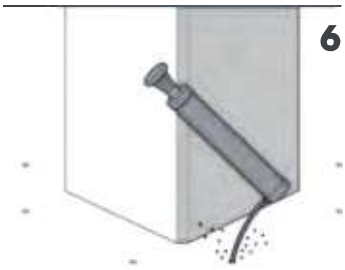

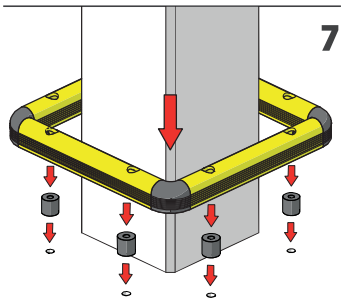

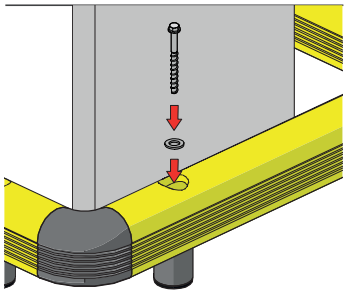

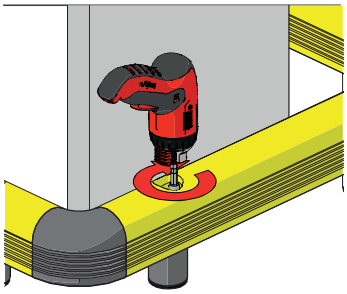


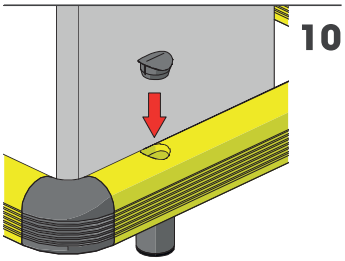

CP 100/200

PROTEZIONE PER PARETI
CORNER PROTECTION

LIGHT LOAD / FOR HAND PALLET TRUCKS

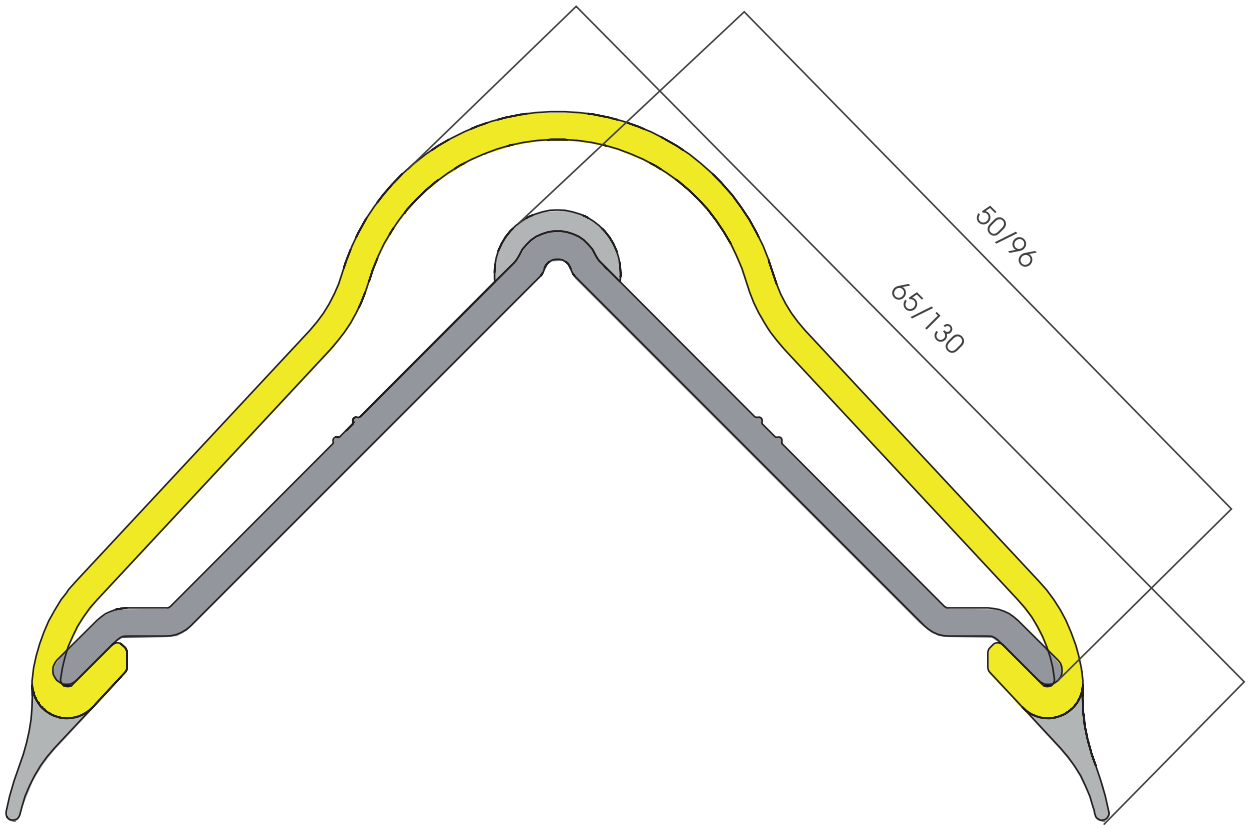


WARNING


The product is not equipped with fixing accessories for the wall.

CP 100/200


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS



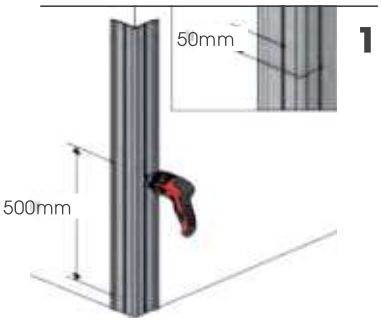

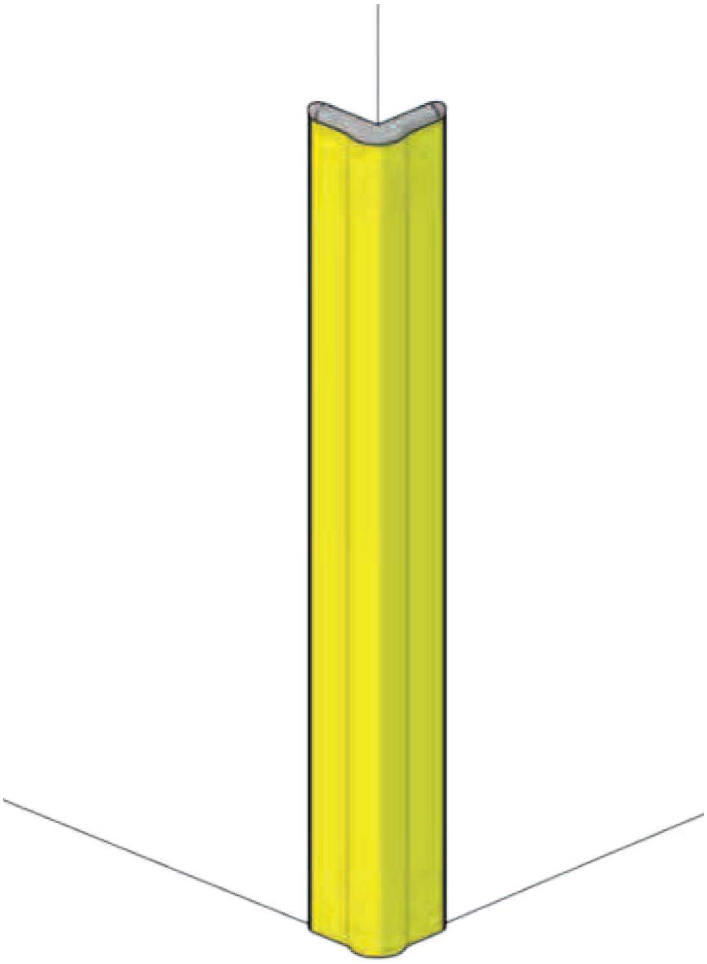




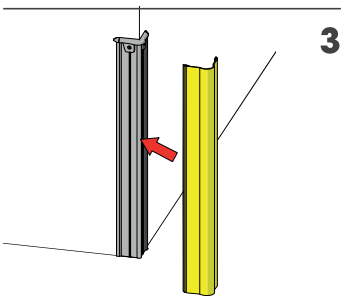


PLEX 100

PROFILO PLEX
PLEX PROFILE

LIGHT LOAD / FOR HAND PALLET TRUCKS

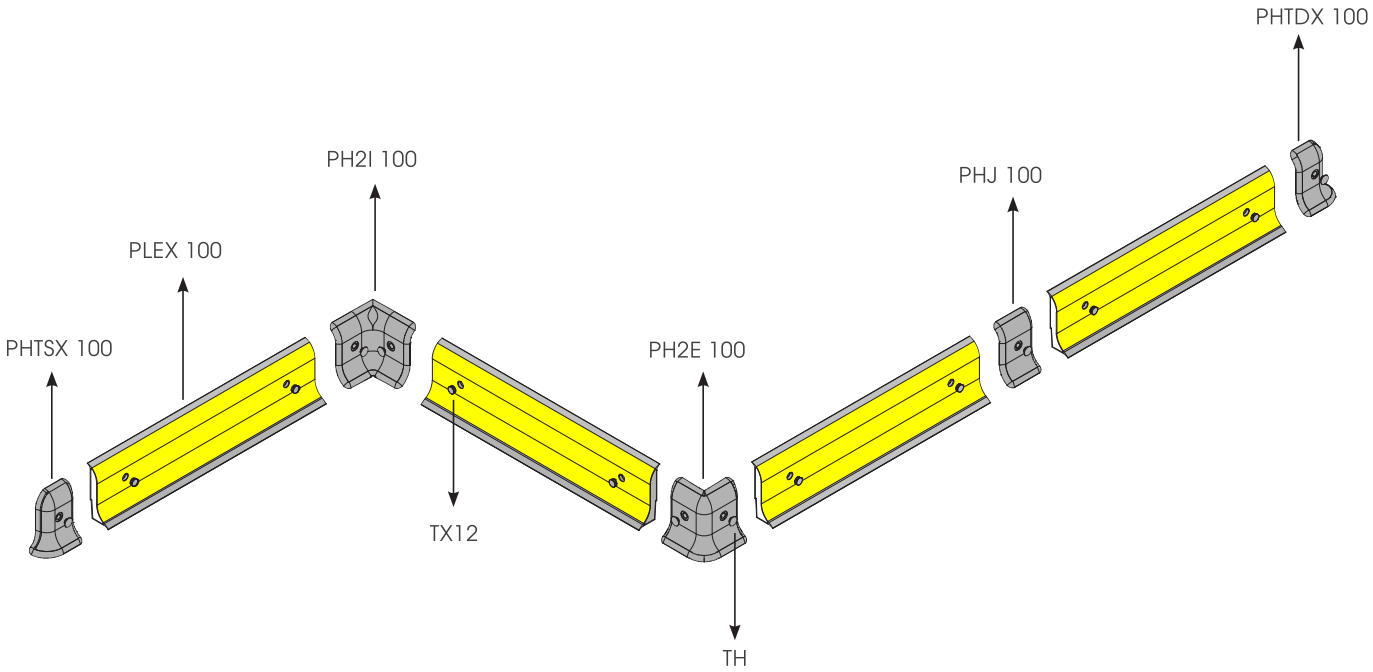



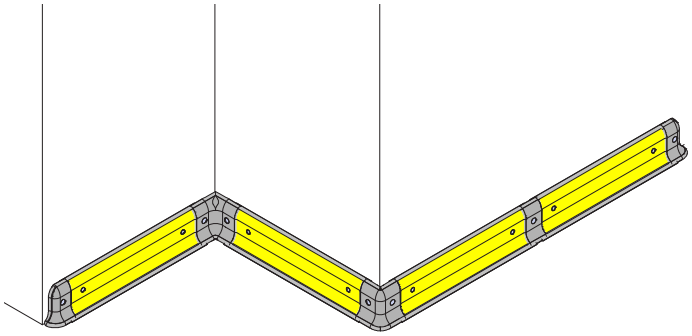


WARNING

The product is not equipped with fixing accessories for the wall.


PLEX 200

PROFILO PLEX
PLEX PROFILE

LIGHT LOAD / FOR HAND PALLET TRUCKS

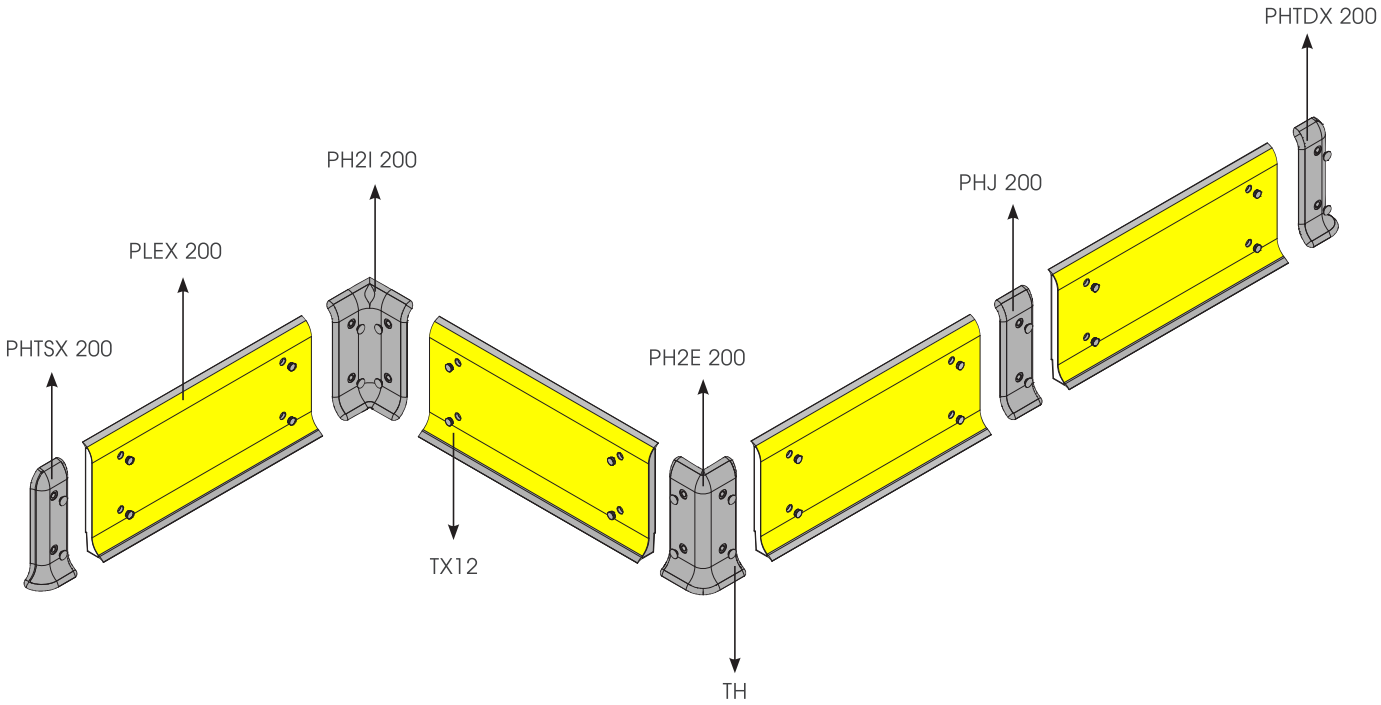



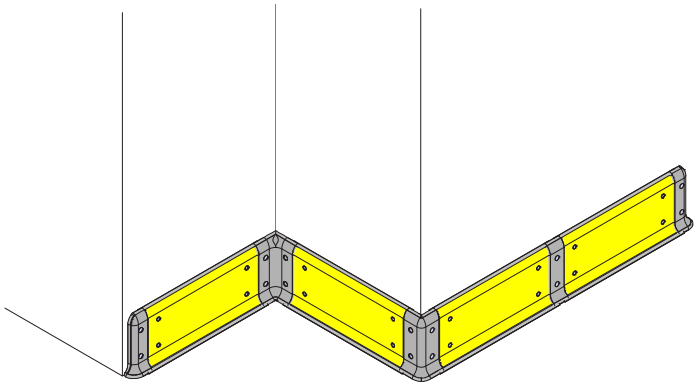


WARNING

The product is not equipped with fixing accessories for the wall.


PLEX 100/200

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


1

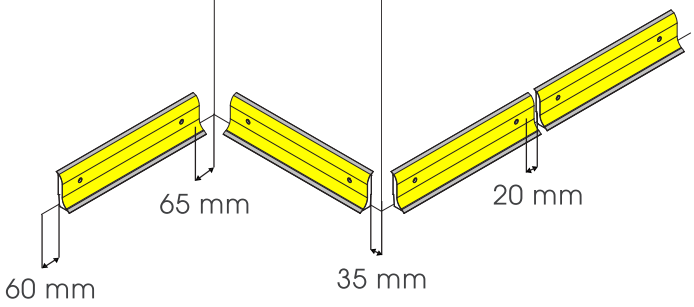


2

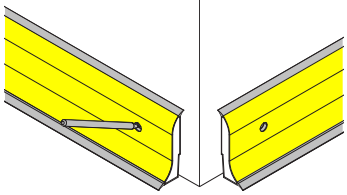

3

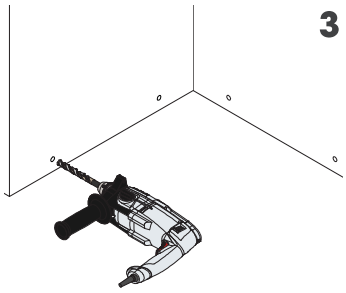


4

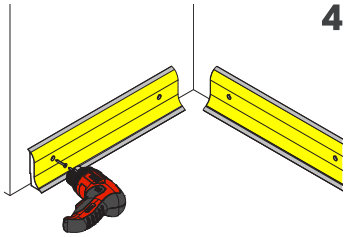


*Different fixings may be required based on the wall's structure and stratography (Bricks, metal, PVC etc.)


5

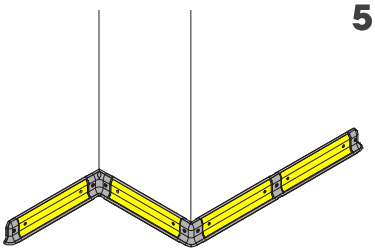


6

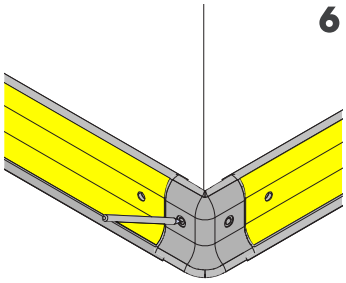


7

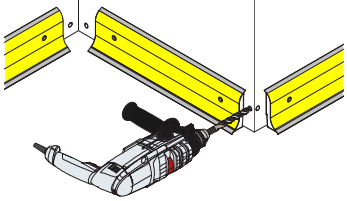

8

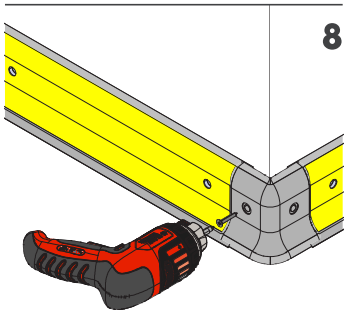


9

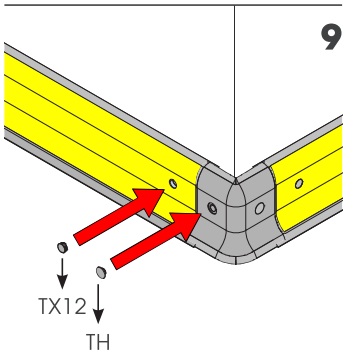

KERB 200/300

PROFILO KERB
KERB PROFILE

LIGHT LOAD / FOR HAND PALLET TRUCKS

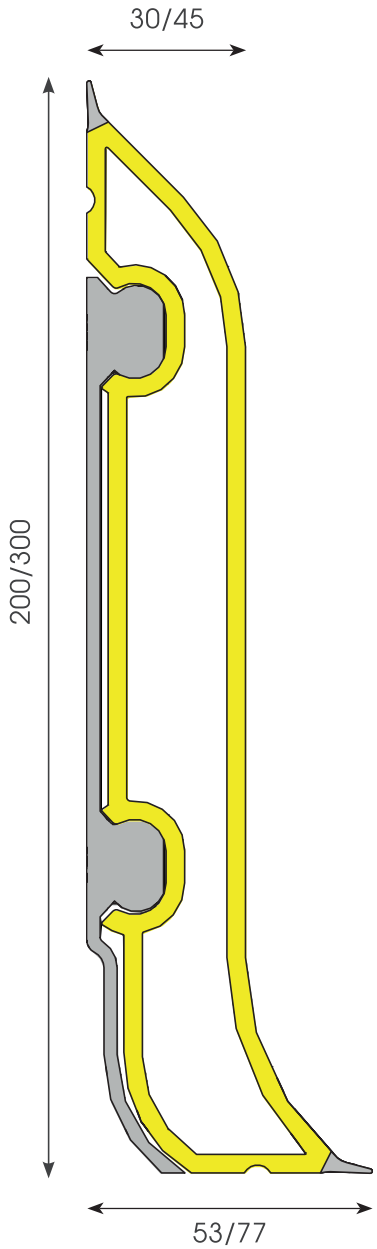


WARNING


The product is not equipped with fixing accessories for the wall.

KERB 200

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

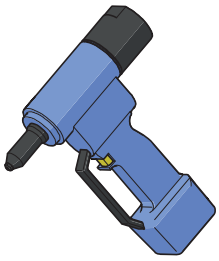




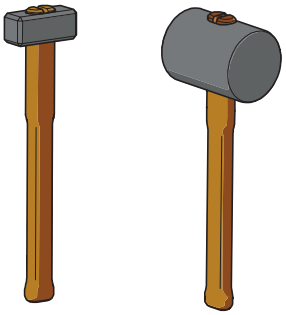






TB14


PLEASE SEE
IN 5A / 7A
9A / 12A

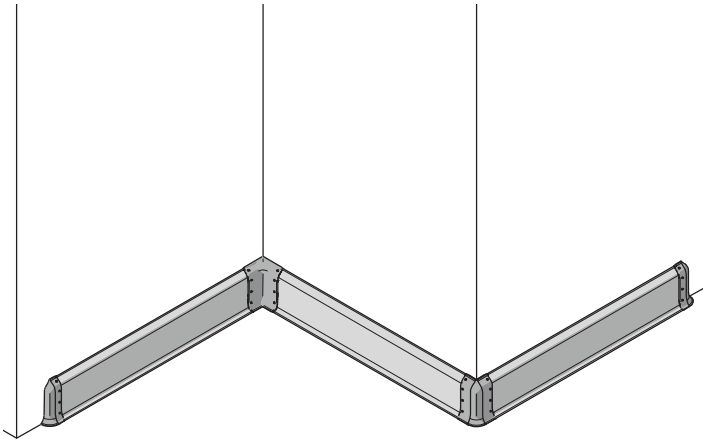

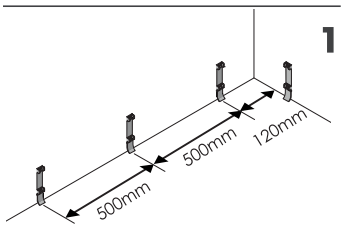

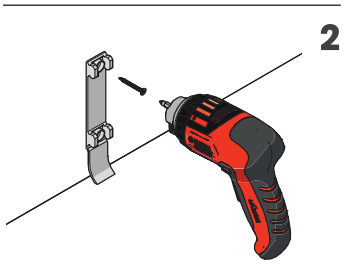

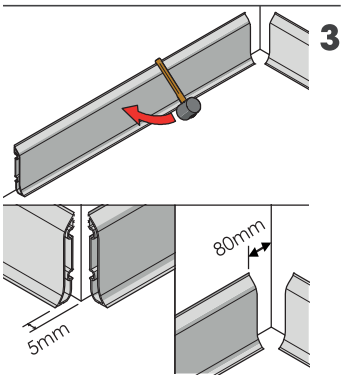


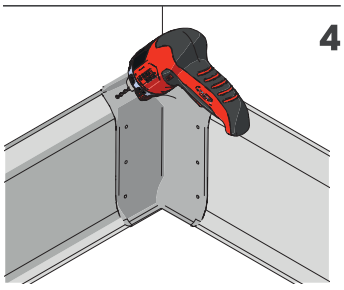


KERB 200

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

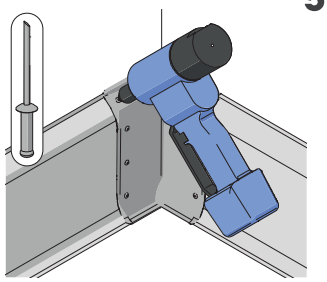

6

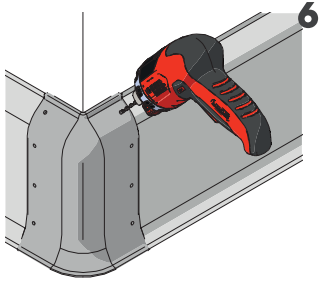


7

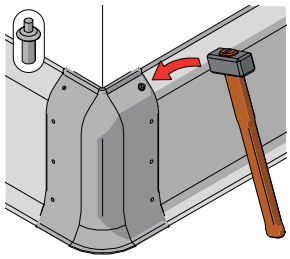


*PLEASE ALSO CHECK THIS ALTERNATIVE FOR INSTALLATION WITH NEW KSJ 200 LT

8

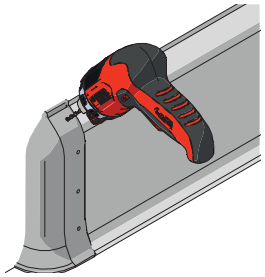


9

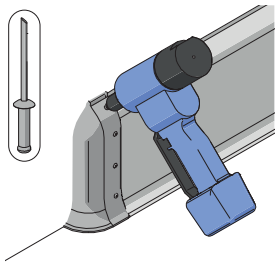


HARD

10*

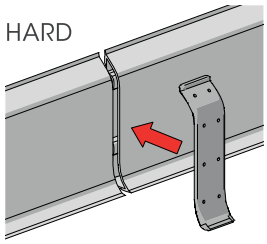


SOFT


10*

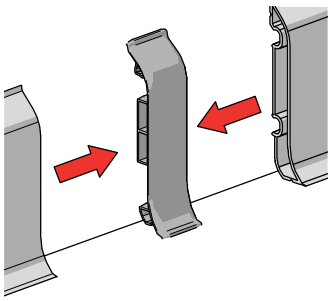

11

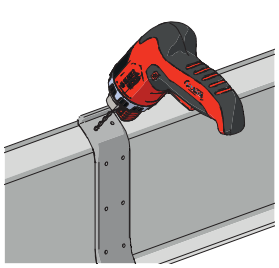


12

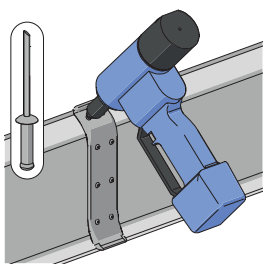


KERB 300


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

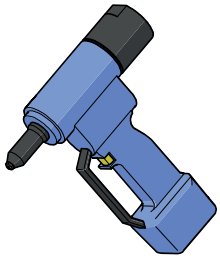













TB20


PLEASE SEE
IN 5A / 7A
9A / 12A

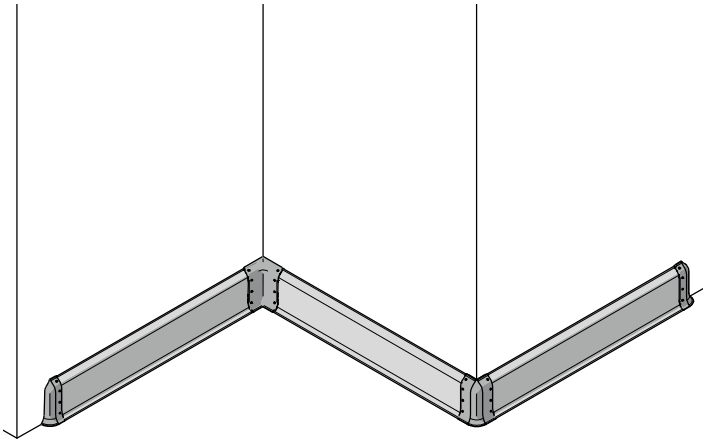

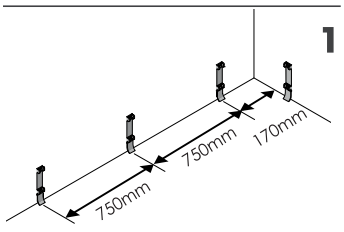

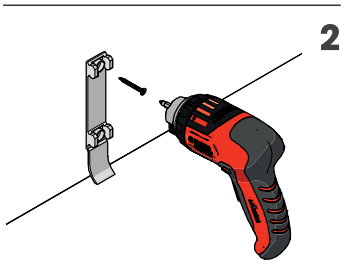

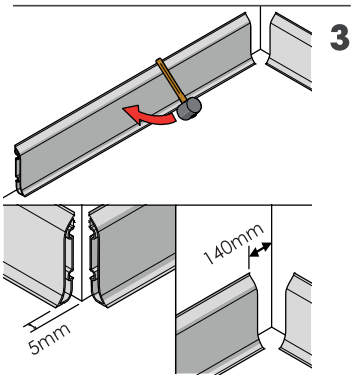


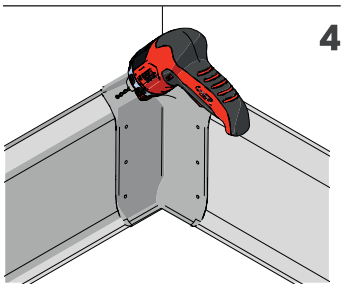


KERB 300

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

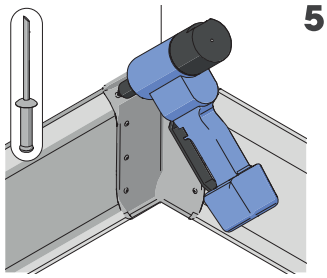


6

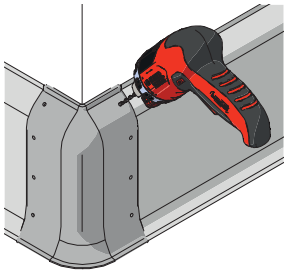


7

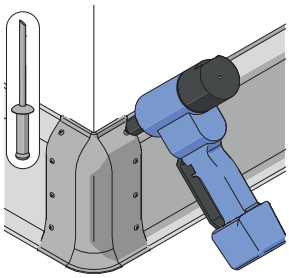


8

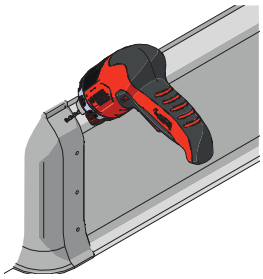


9

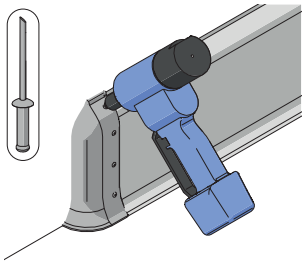


10

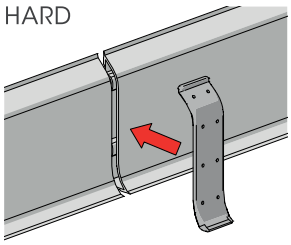

11

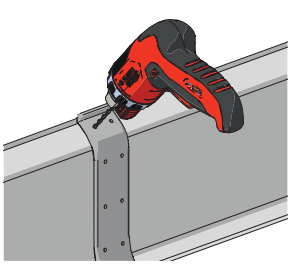

12

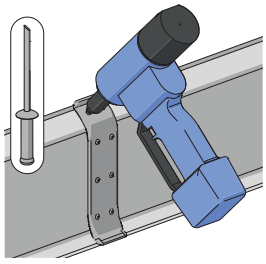


WP 100/150

PROTEZIONE PER PARETI
WALLS PROTECTION


LIGHT LOAD / FOR HAND PALLET TRUCKS

WP 100

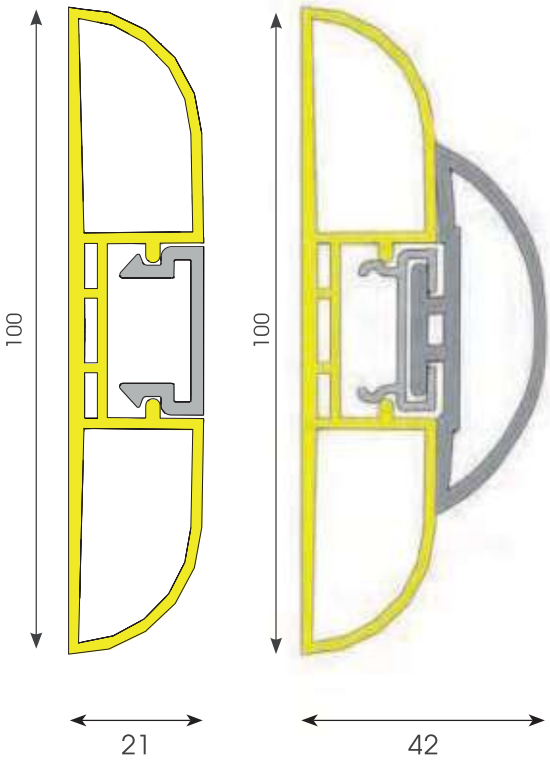

*WITH WPC *WITH WPCS

WP 150

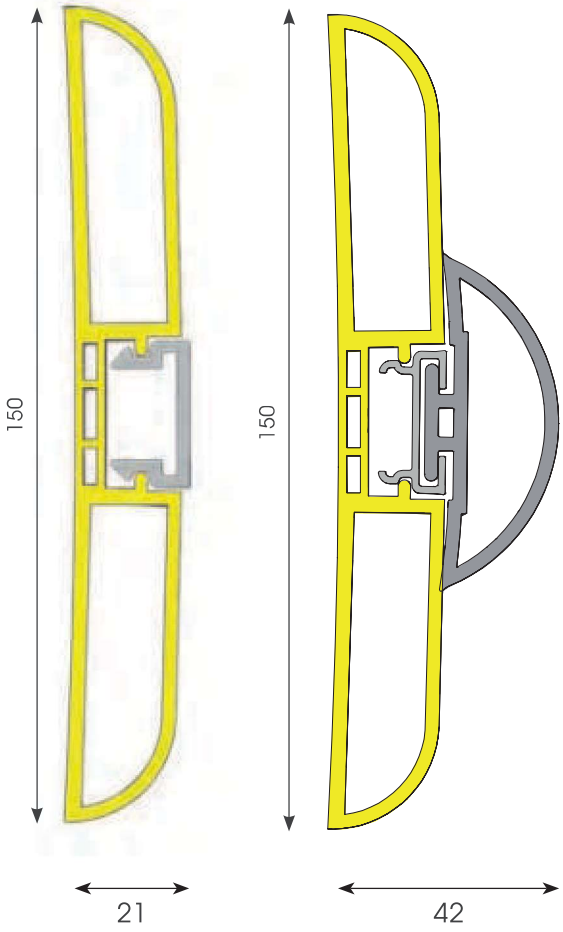


*WITH WPC *WITH WPCS


WARNING


The product is not equipped with fixing accessories for the wall.

WP 100


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

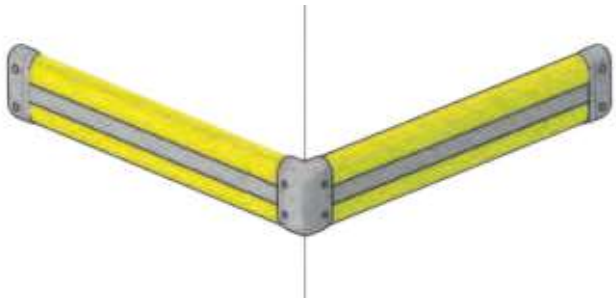

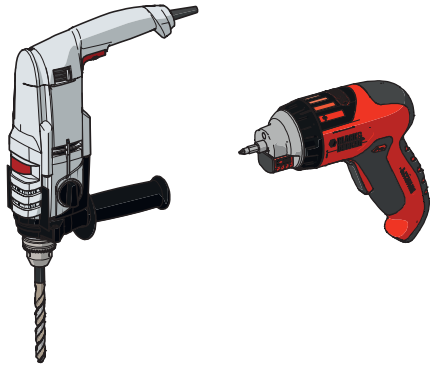


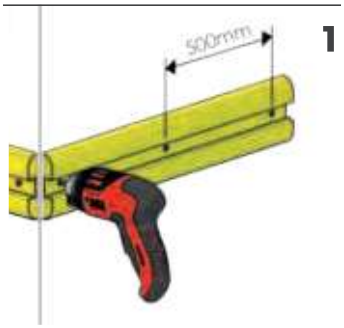


1

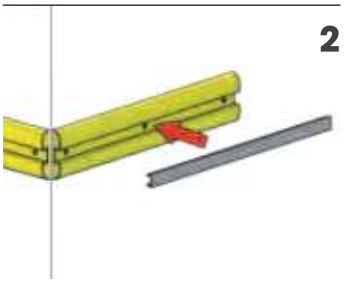


2

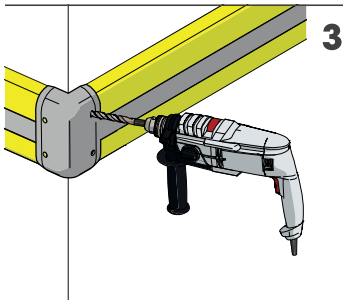


3

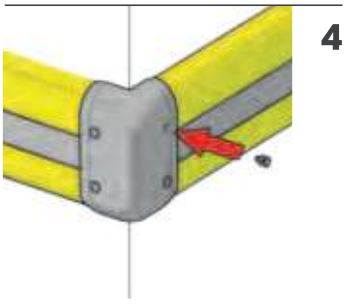

4

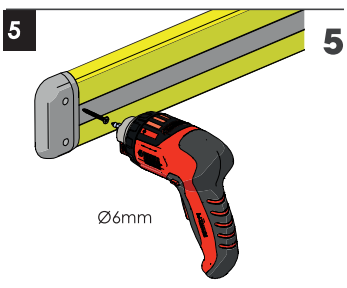


5

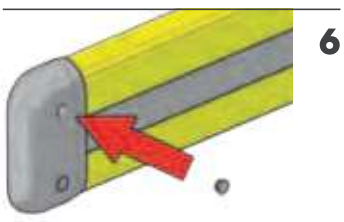


6


WP 150

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

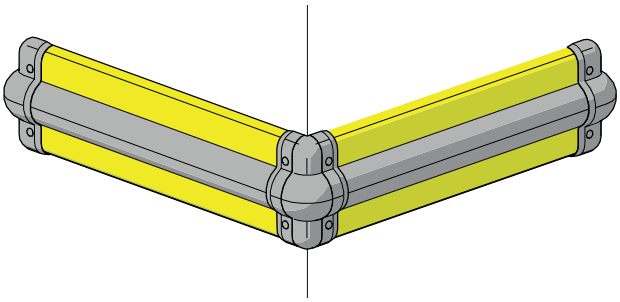


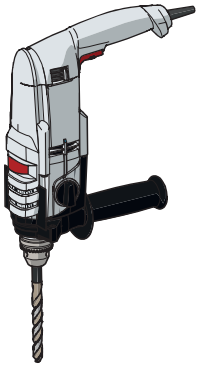





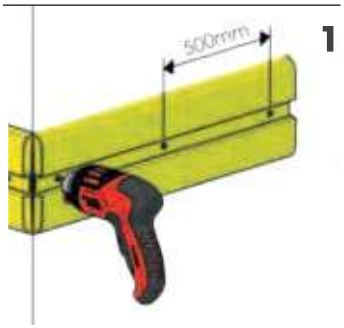



1

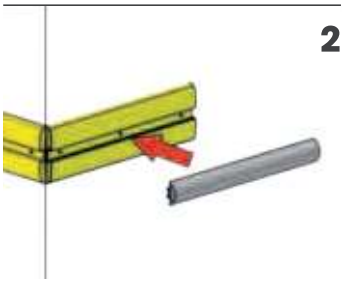
2

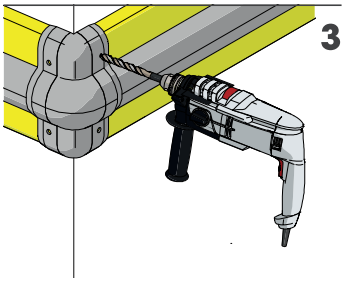
3

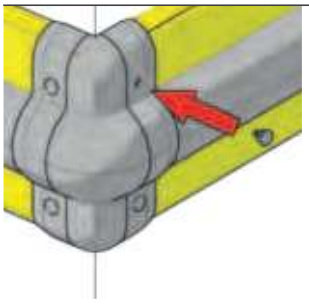
4

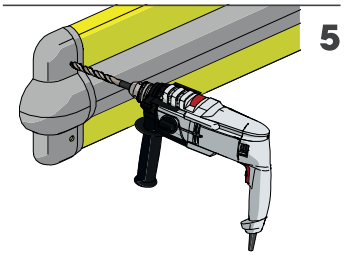

5

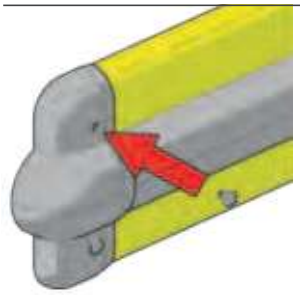
6

ASP 200

SISTEMA ANTISHOCK
ANTISHOCK SYSTEM

HEAVY LOAD / FOR FORKLIFTS

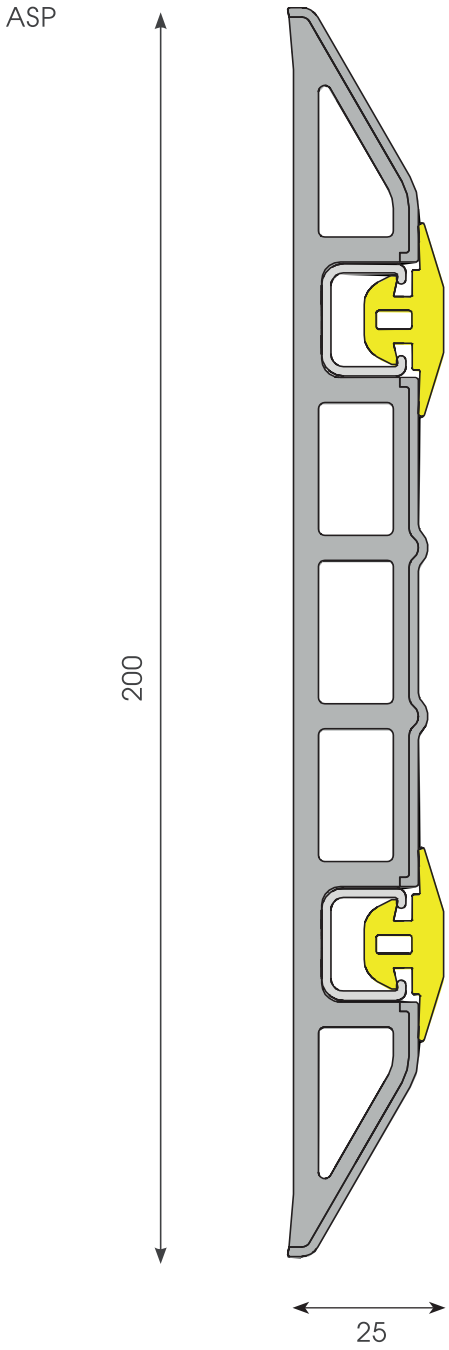


WARNING


The product is not equipped with fixing accessories for the wall.

ASP 200


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

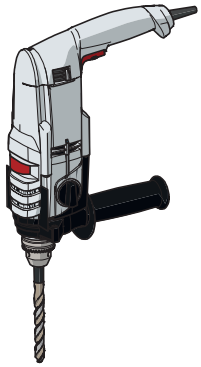




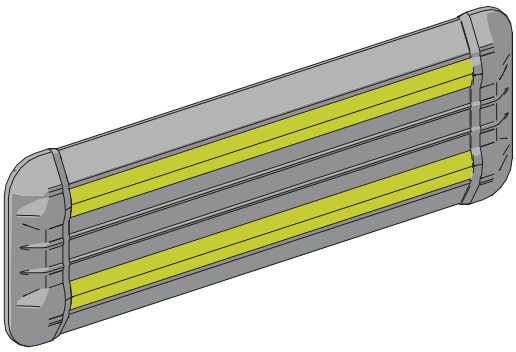


1

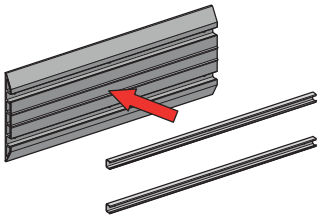


2

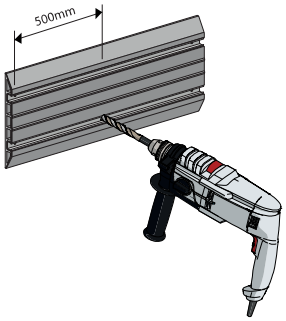

3

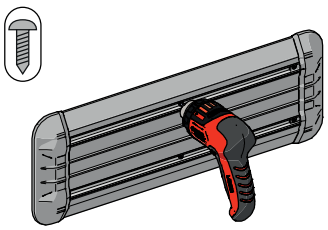


4

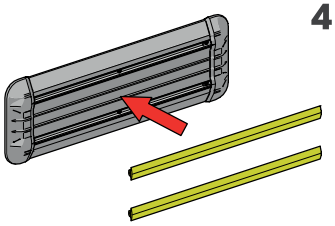



WALL HUG


PROTEZIONE PER PARETI
WALL PROTECTION


LIGHT LOAD / FOR HAND PALLET TRUCKS

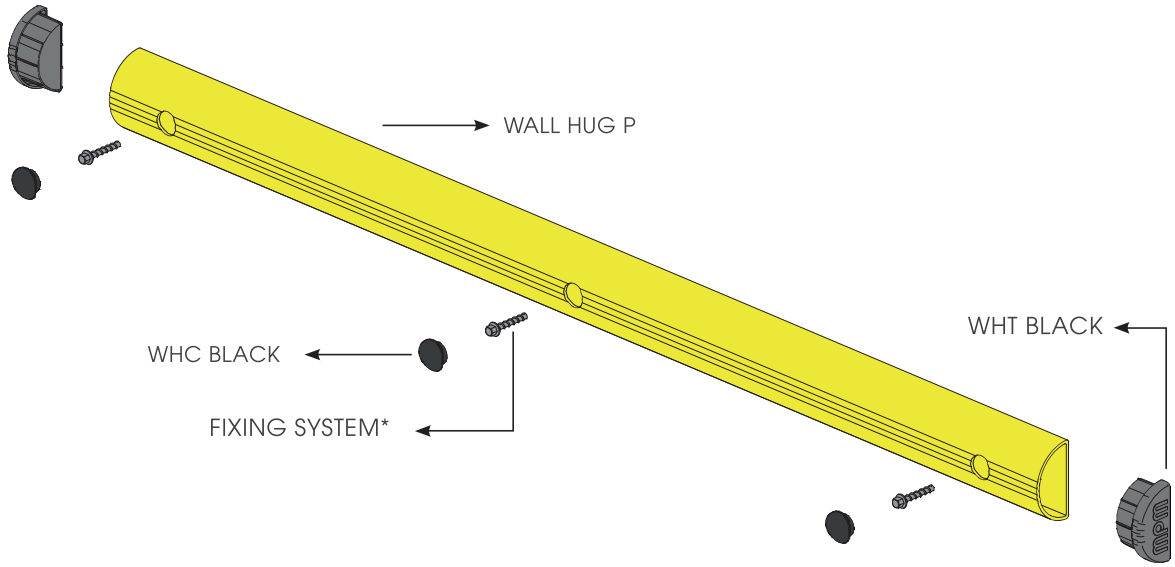


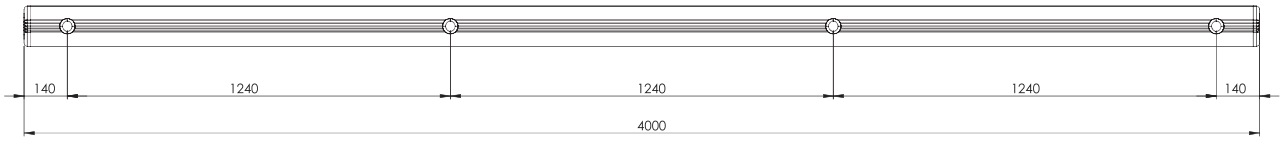

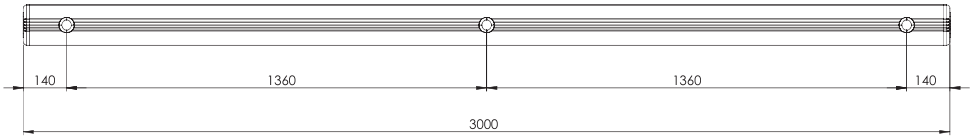

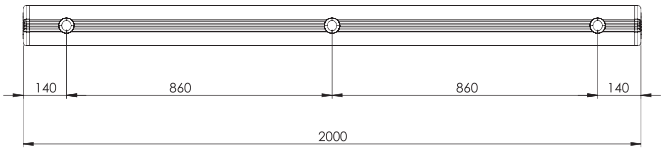

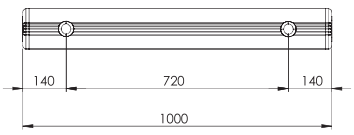

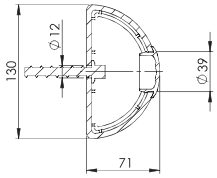


*WARNING


The product is not equipped with fixing accessories for the wall.

WALL HUG


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

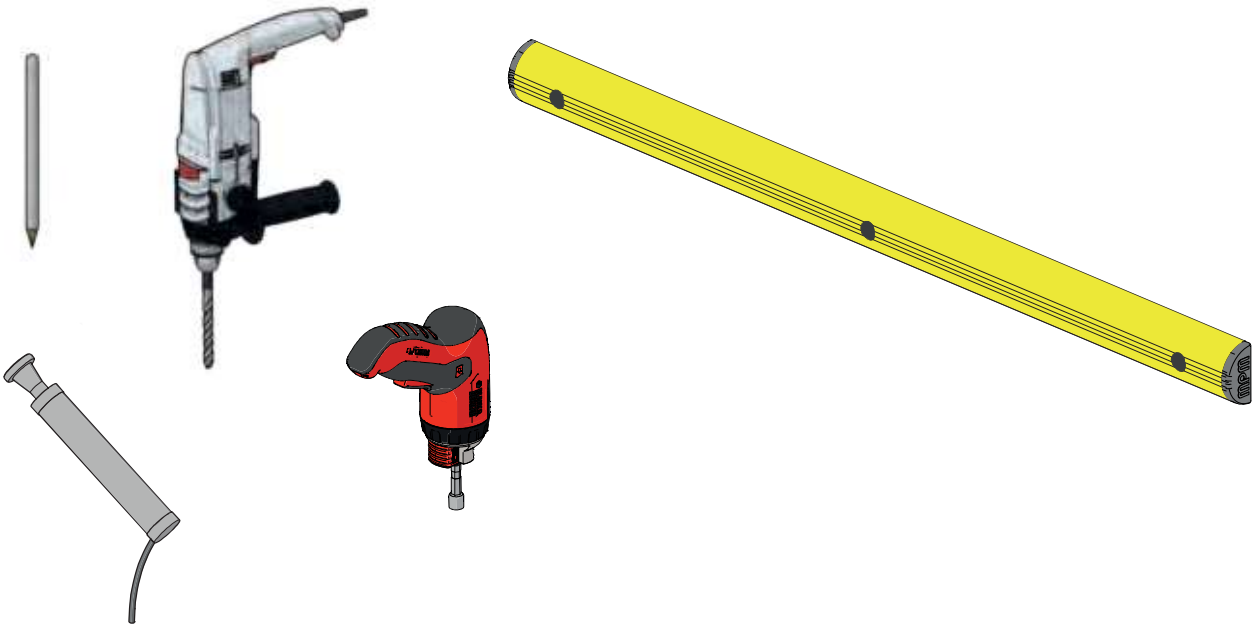

1

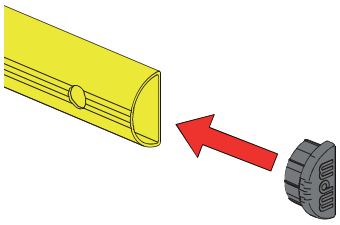


2

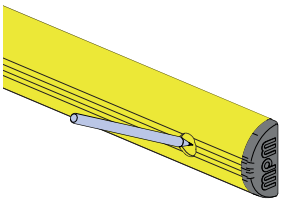


3




4

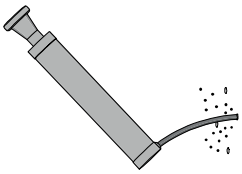

5

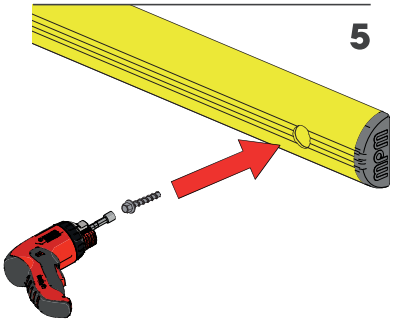


6

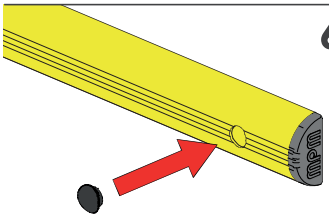



WALL BFLEX


PROTEZIONE PER PARETI
WALL PROTECTION


HEAVY LOAD / FOR FORKLIFTS

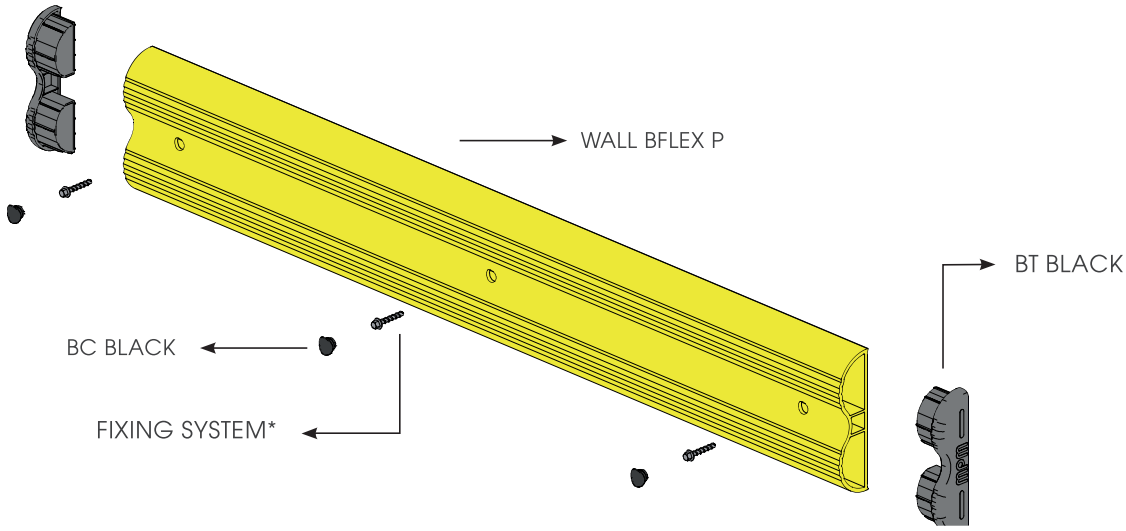


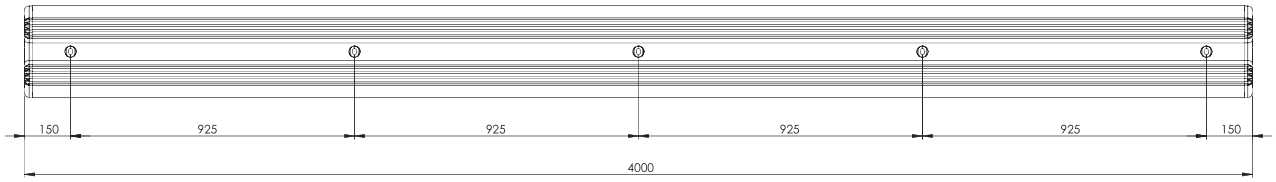

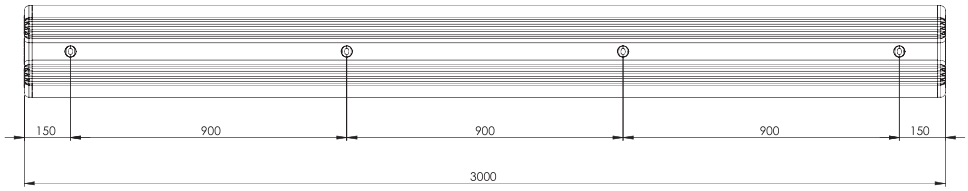

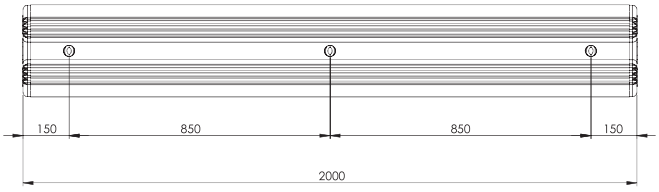

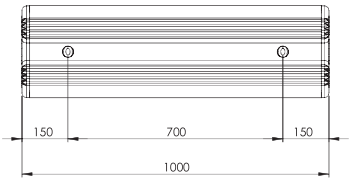

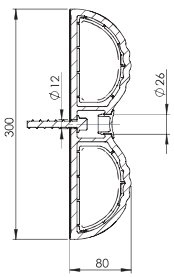


*WARNING

The product is not equipped with fixing accessories for the wall.


WALL BFLEX

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




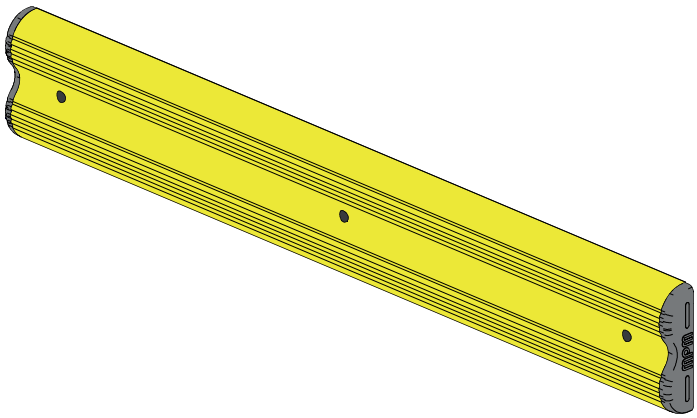

1

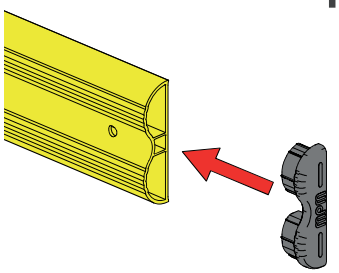


2

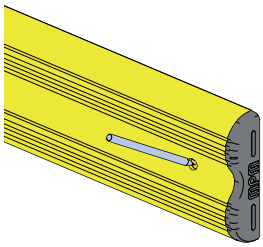


3




4

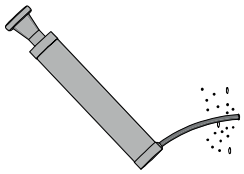

5

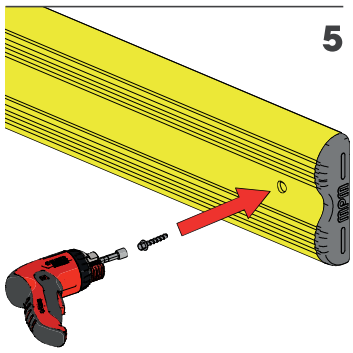


6

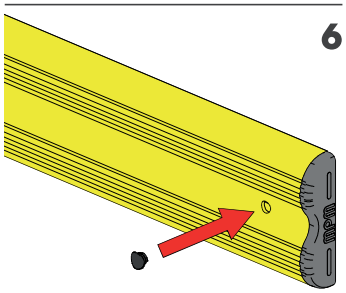


WALL BFLEX MODULAR

PROTEZIONE PER PARETI
WALL PROTECTION

HEAVY LOAD / FOR FORKLIFTS

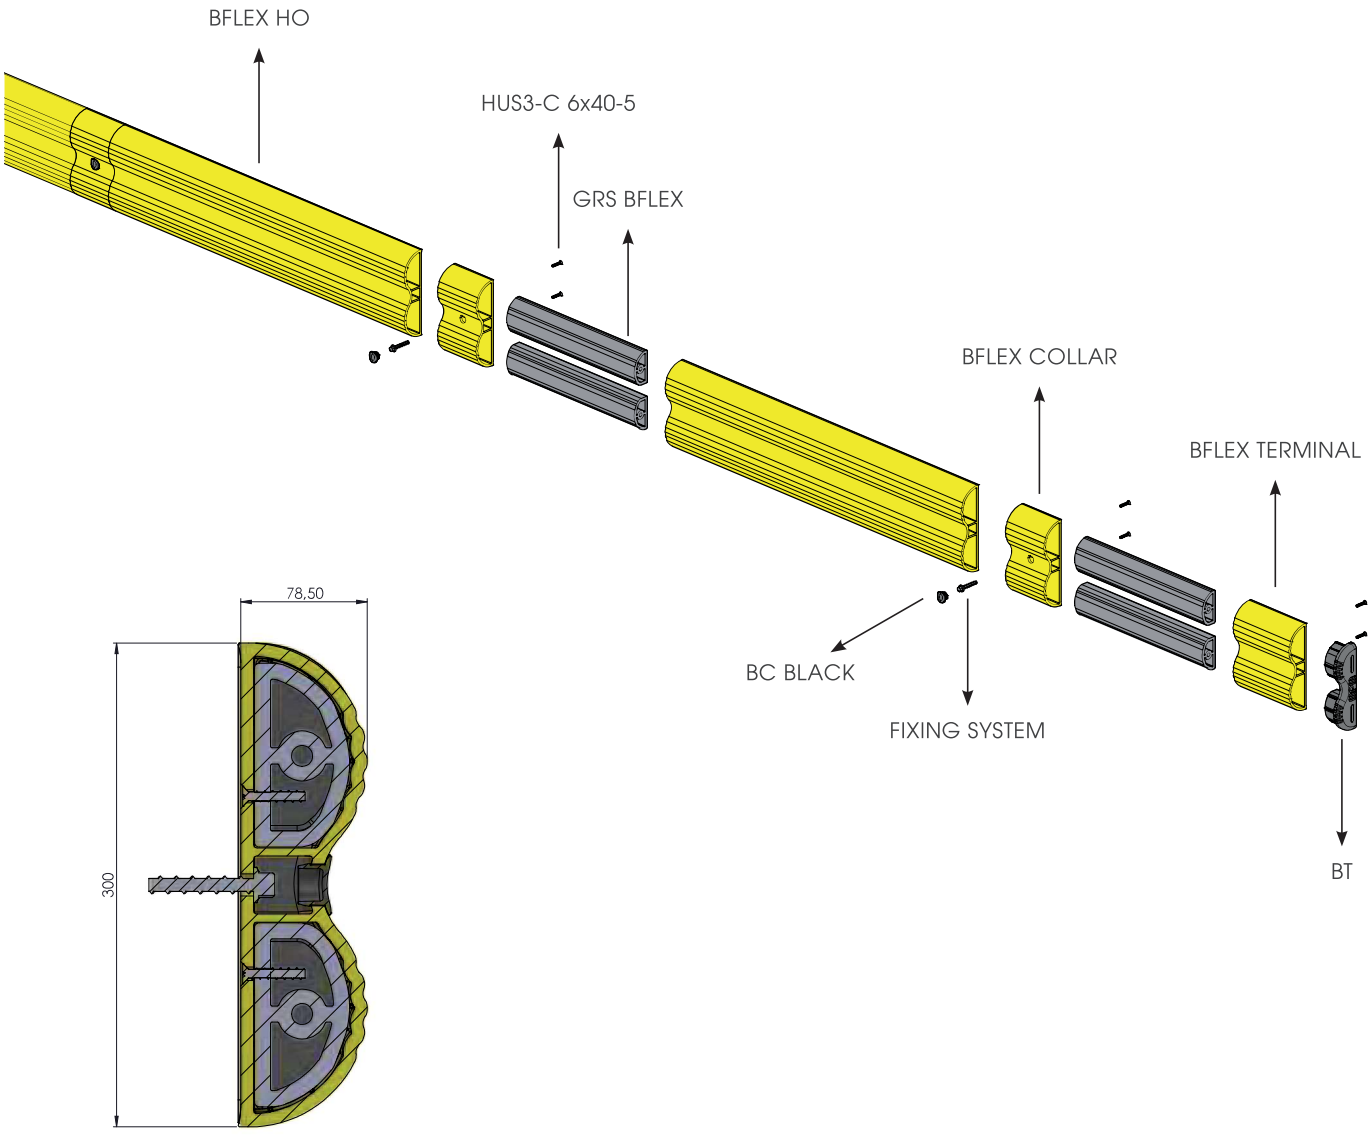

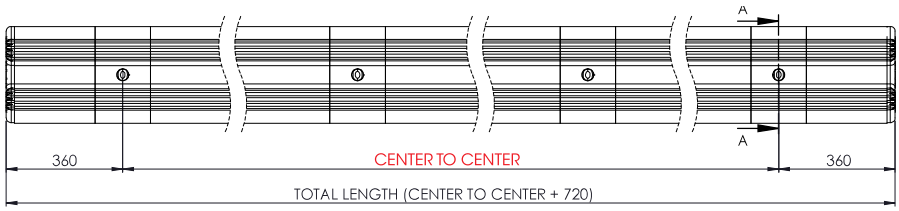

*WARNING


The product is not equipped with fixing accessories for the wall.

WALL BFLEX MODULAR


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




1

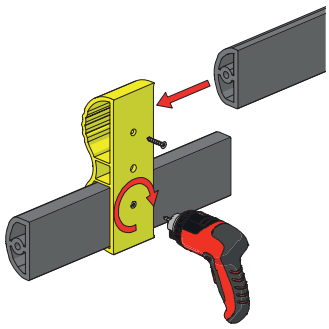


2

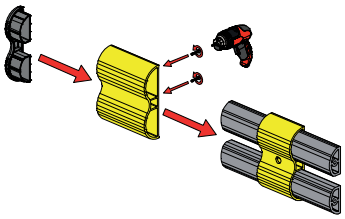


3

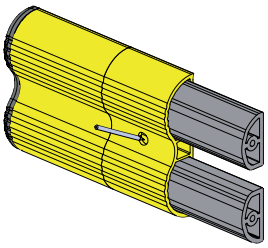


4

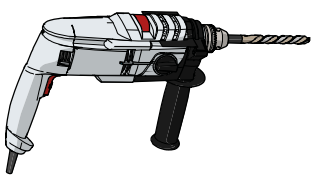

5

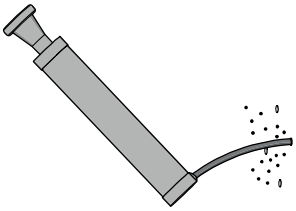


6

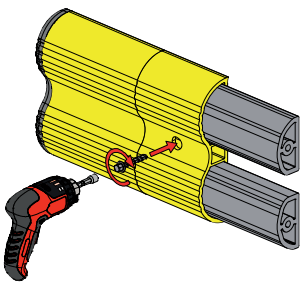


WALL BFLEX MODULAR

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


7

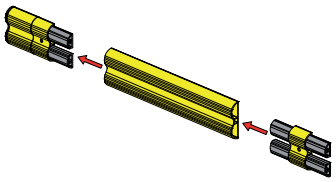


8

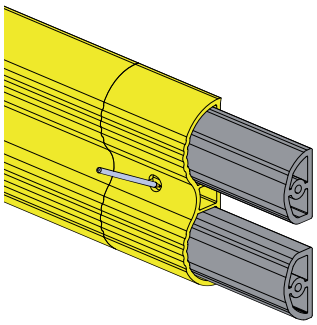


9

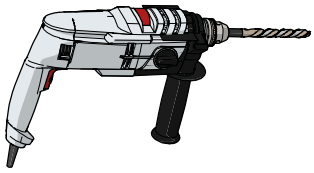


10

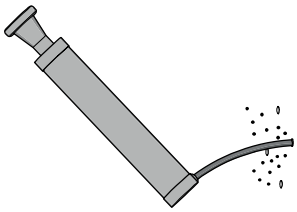


11

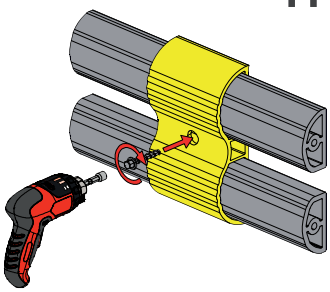


12

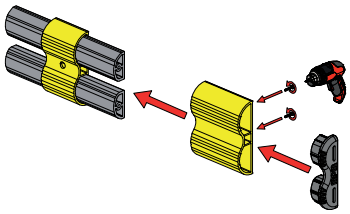


13

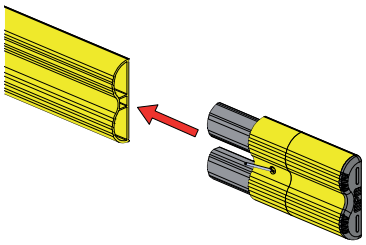

14

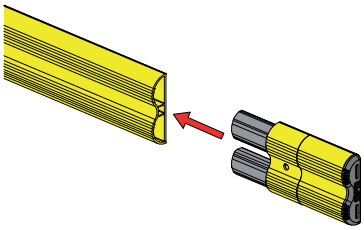


15

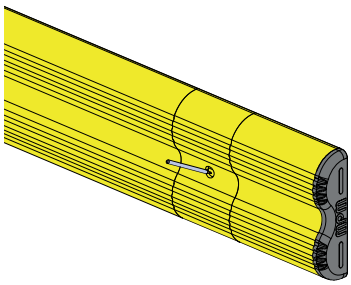


WALL BFLEX MODULAR

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


16

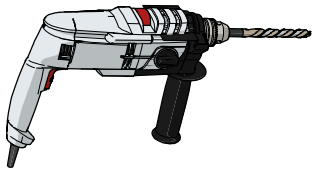


17

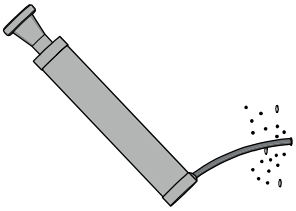

18

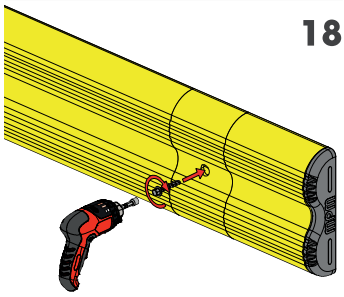



19

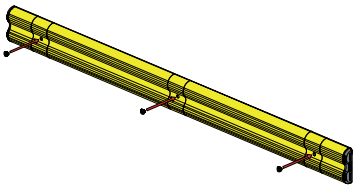

SOFT BOLLARD

PALO PROTEZIONE
BOLLARD

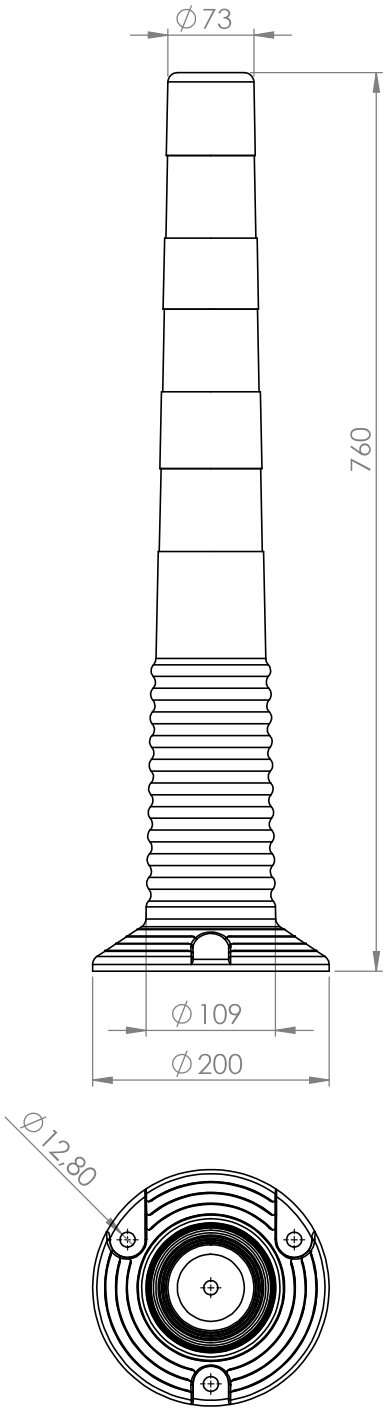


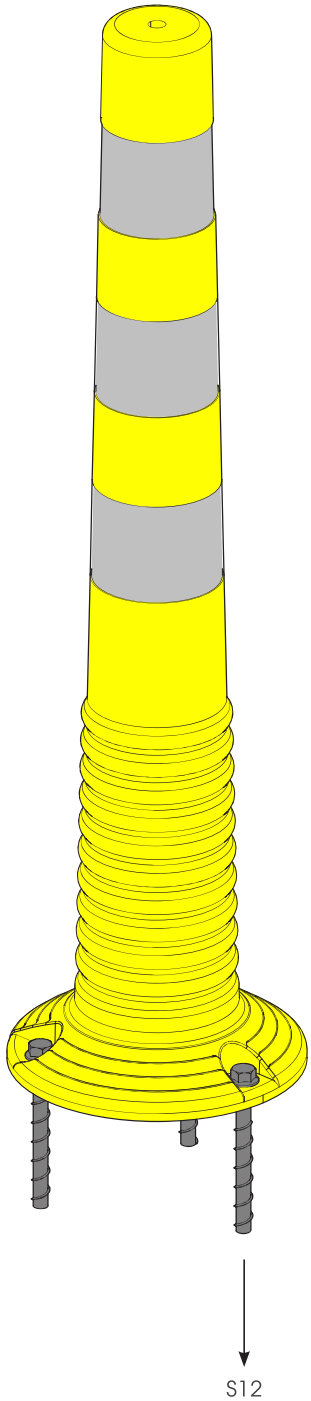


SOFT BOLLARD

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




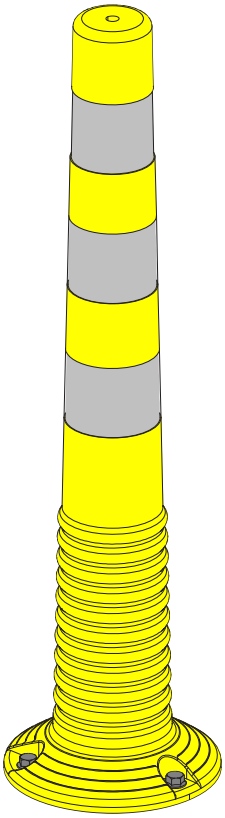


1




2

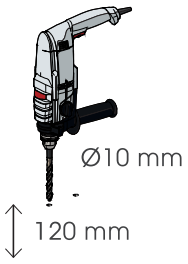


3

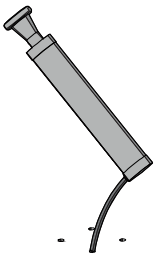

4





5

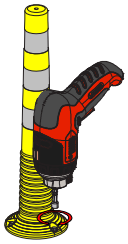



REMOVABLE SAFETY BARRIERS 90


PIASTRA REMOVIBILE PER SISTEMI 90
REMOVABLE PLATES FOR 90 SYSTEMS

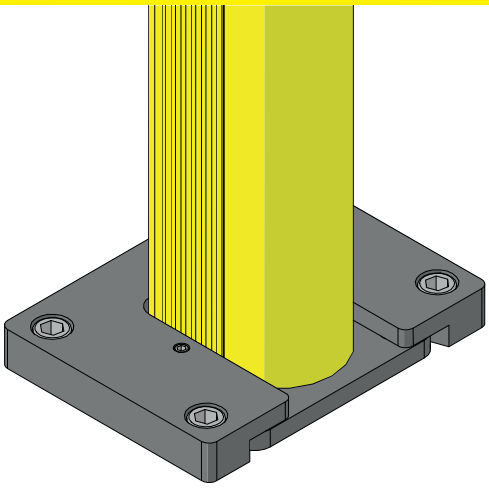



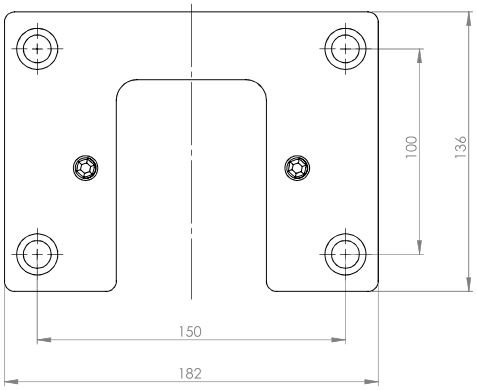

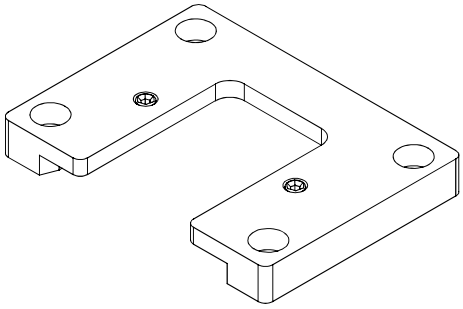

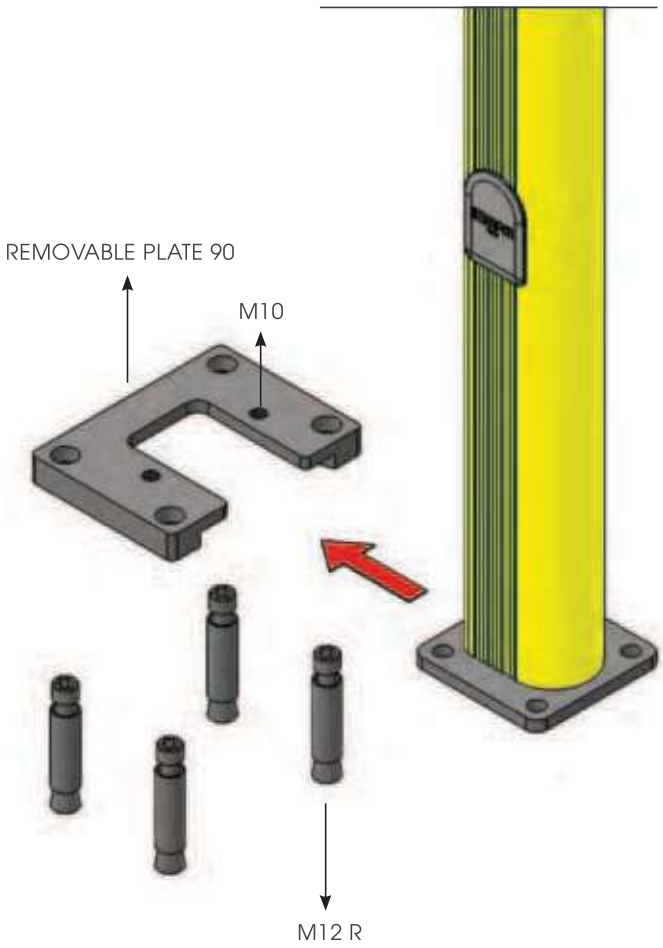



WARNING


The removable plate is supplied with special removable fixing accessories FIX RE


REMOVABLE SAFETY BARRIERS 90

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




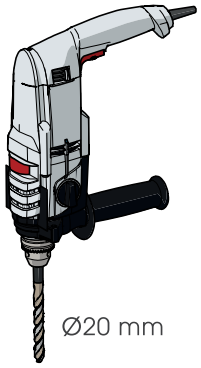







1

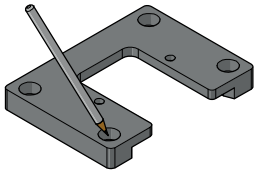


2

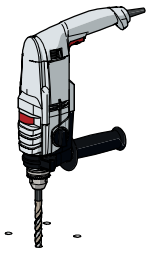


3

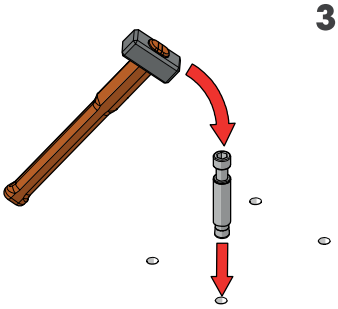


4

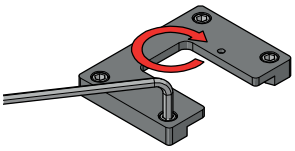

5

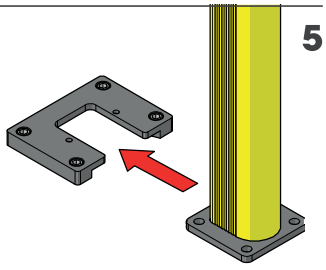



6

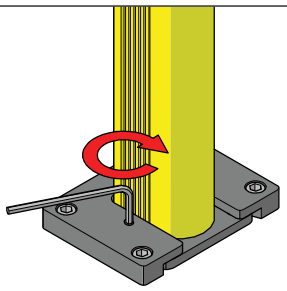



REMOVABLE SAFETY BARRIERS 150

PIASTRA REMOVIBILE PER SISTEMI 150
REMOVABLE PLATES FOR 150 SYSTEMS

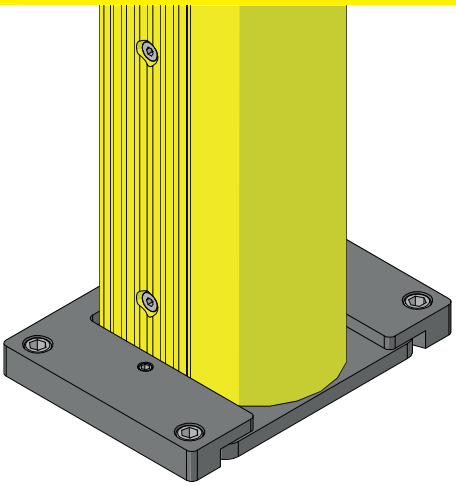

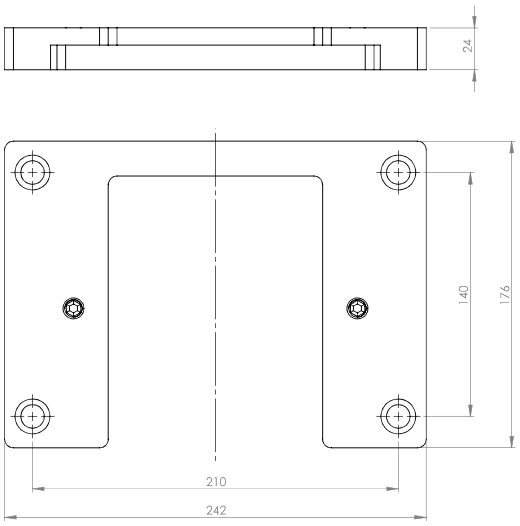

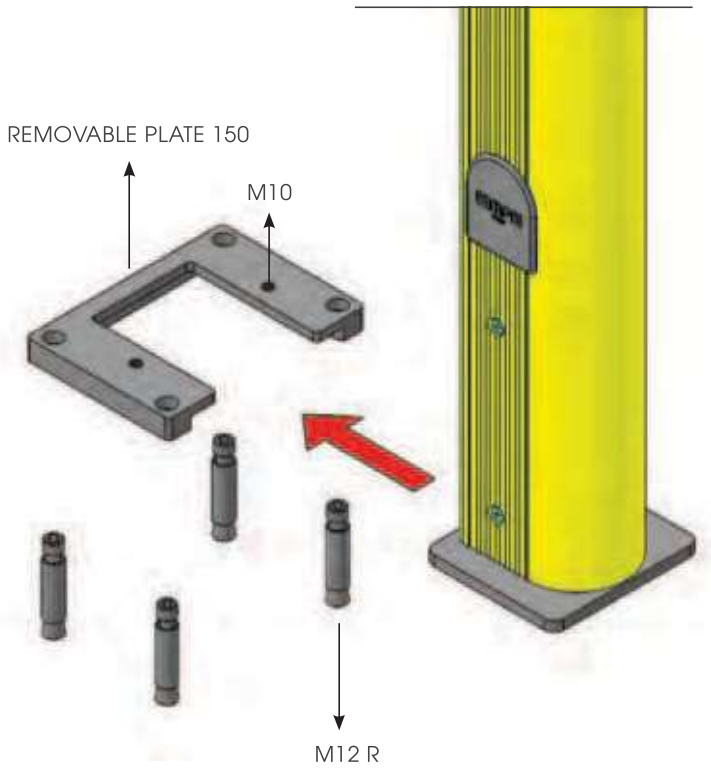

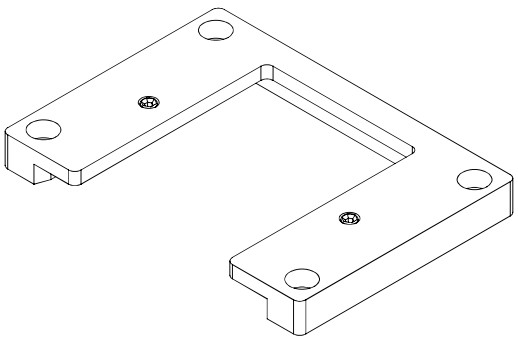



WARNING


The removable plate is supplied with special removable fixing accessories FIX RE


REMOVABLE SAFETY BARRIERS 150

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS




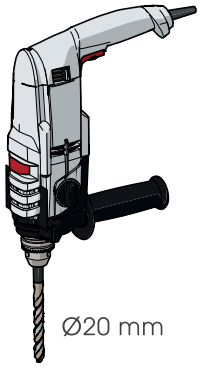







1

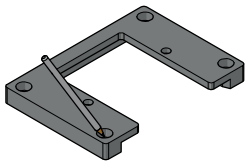


2

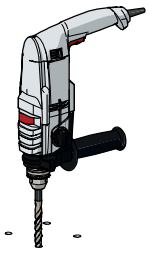


3

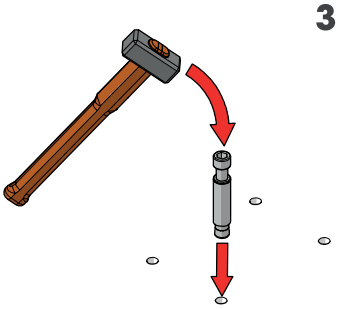


4

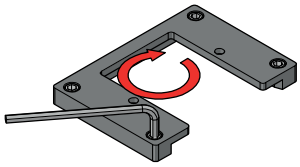

5

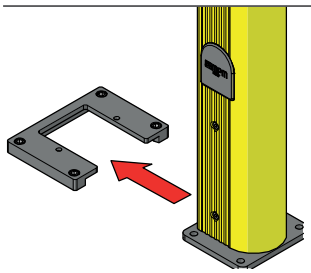


6

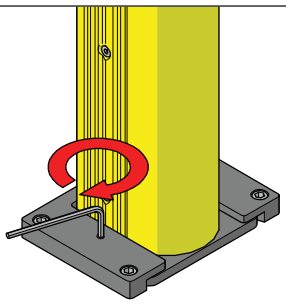


DP 150 SAFE WAY

PORTA PEDESTRIAN 150 - SAFE WAY
DOOR PEDESTRIAN 150 - SAFE WAY

HEAVY LOAD / FOR FORKLIFTS

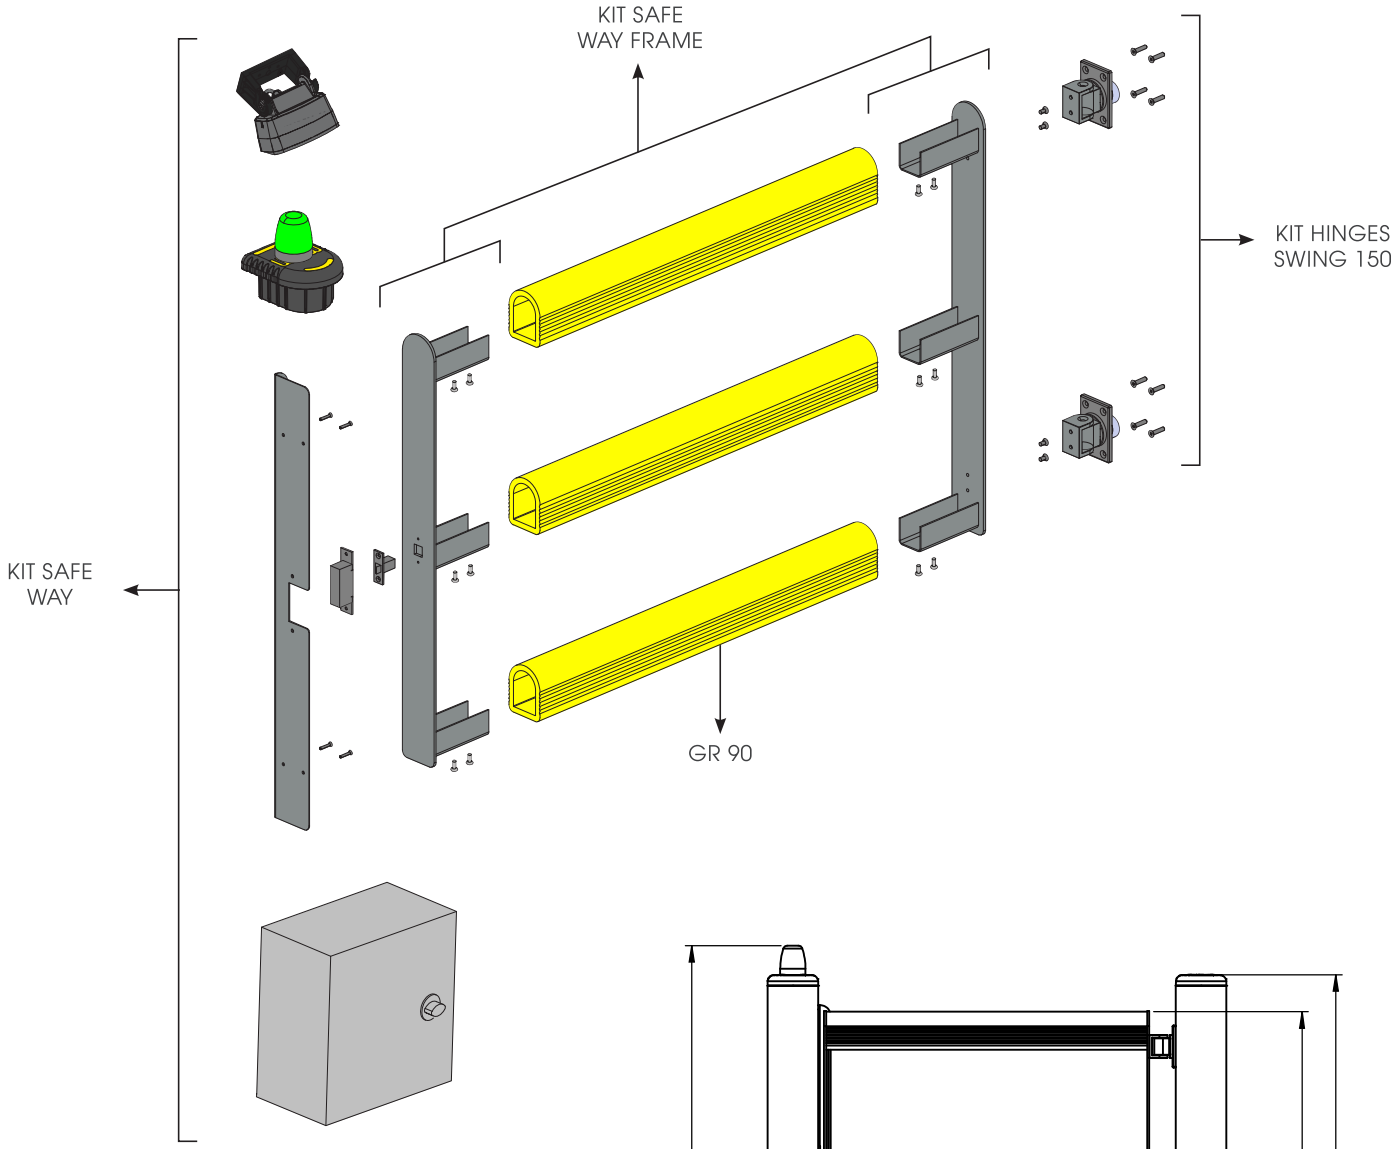

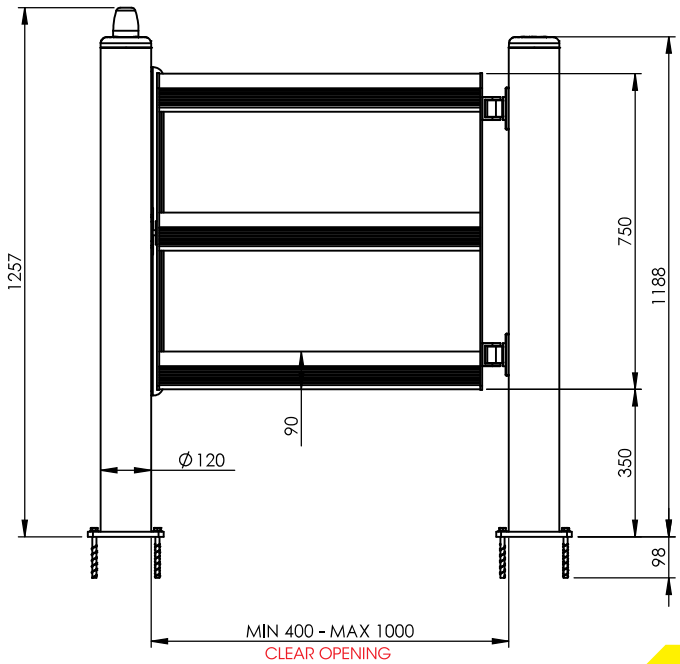


*the support lenght may vary based on the selected base product


DP 150 SAFE WAY

PORTA PEDESTRIAN 150
DOOR PEDESTRIAN 150

PLEASE CHECK HERE BELOW
HOW THE SIZE OF THE DOOR IS TO BE MEASURED

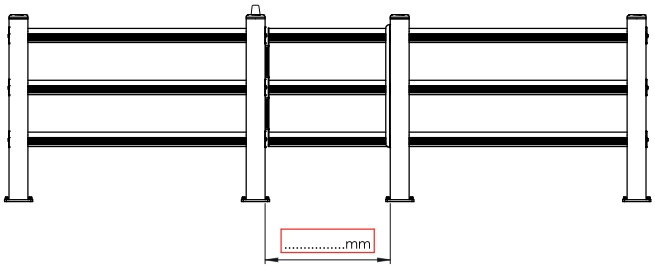



PLEASE CHECK HERE BELOW
WHICH DIRECTION OF OPENING YOU NEED

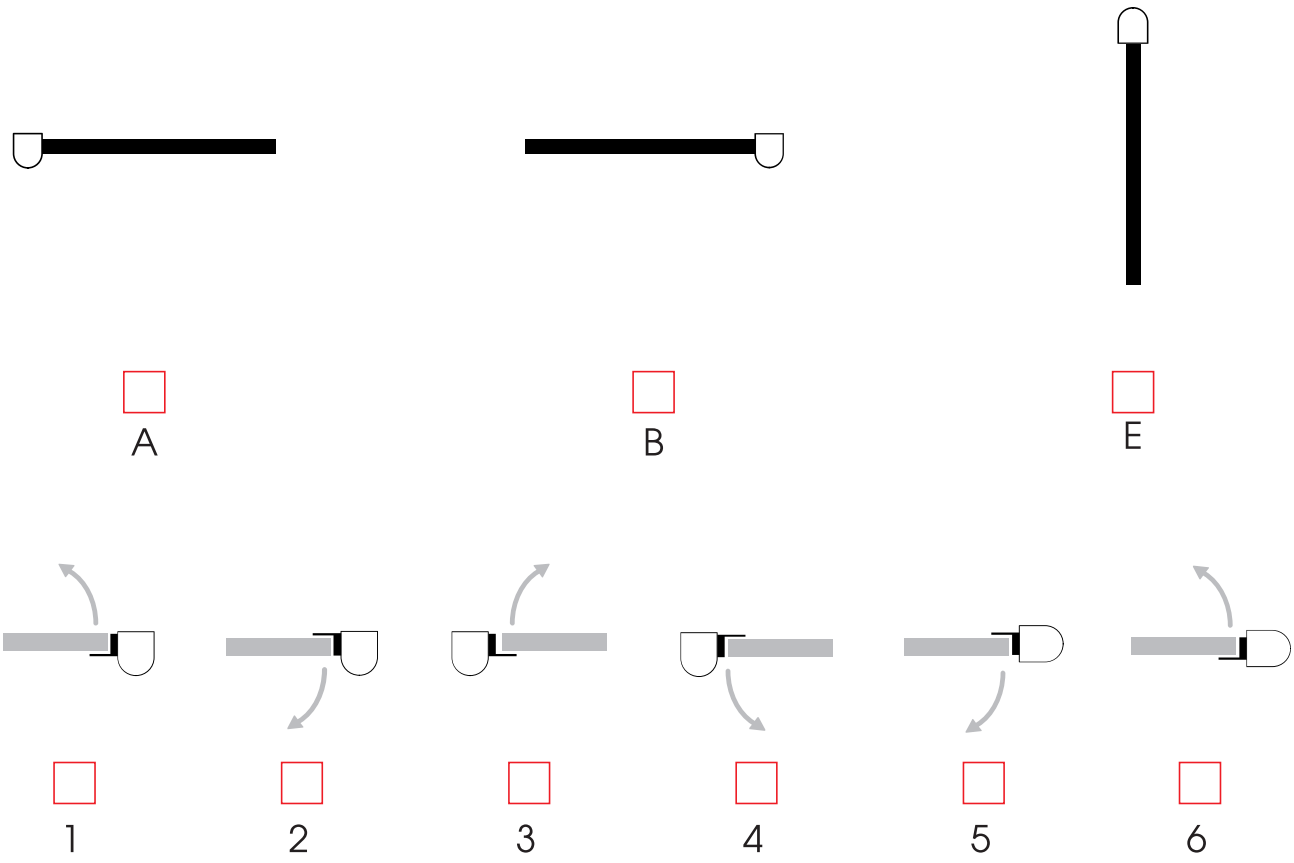


DP 150 SAFE WAY


ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

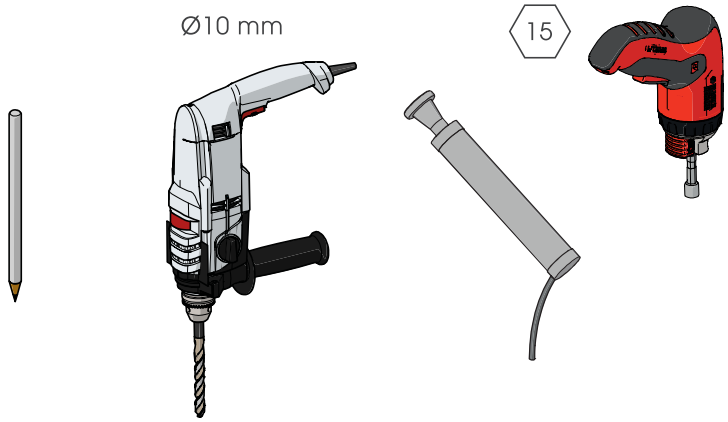


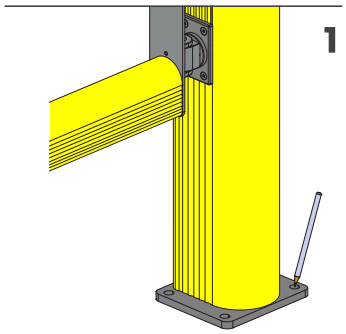



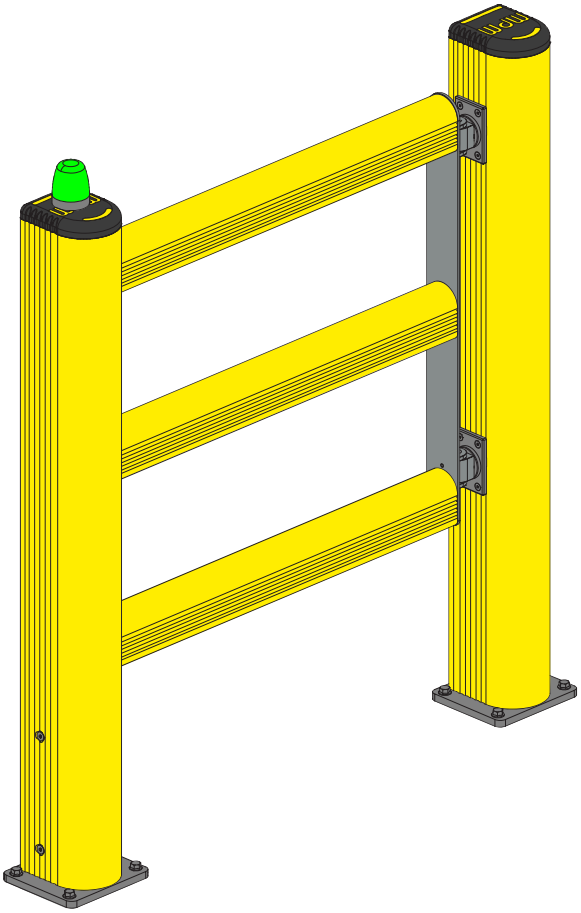

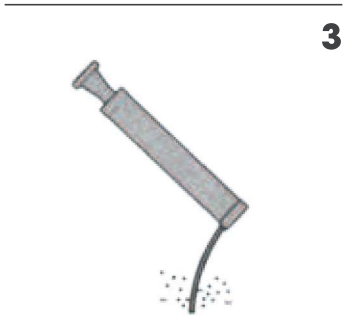


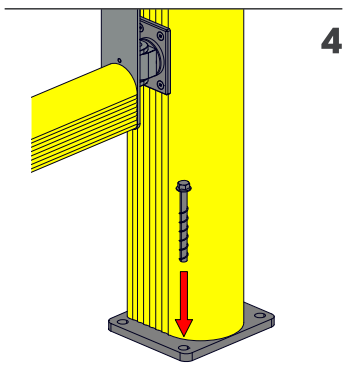


DP 150 SAFE WAY

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


5

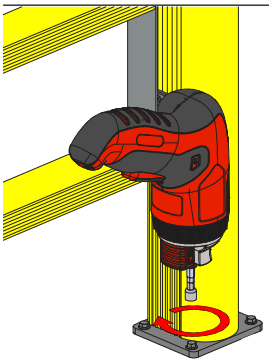


6

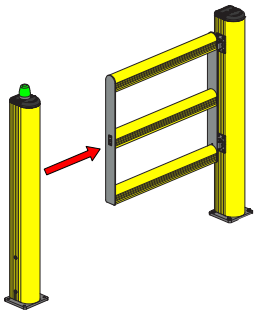


7

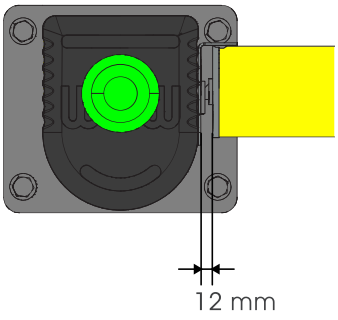


8

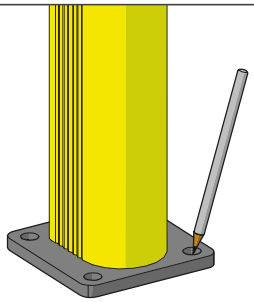


9

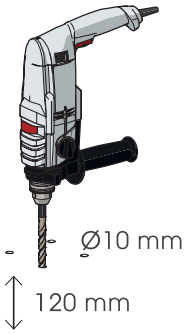


10

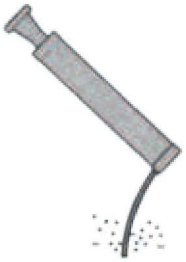


11

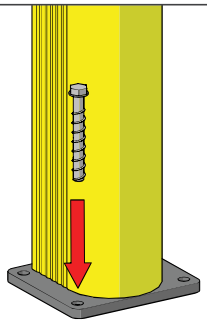


12

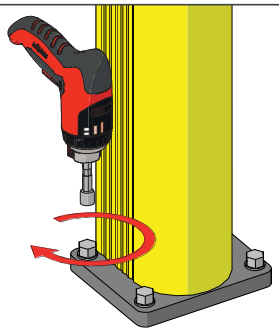


13

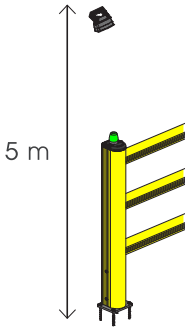

14

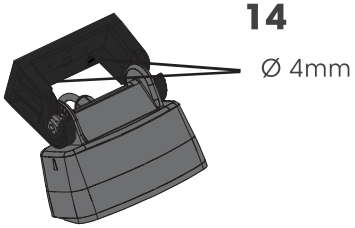

15

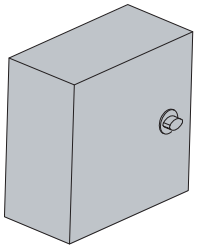

*The sensor must face in the direction of incoming traffic.


The Junction Box can be installed on the wall in whichever position is best suited. Electric Junctions are to be completed following the dedicated instruction manual.

Different fixings may be required based on the wall's structure and stratography

MPM PROTECTION'S IMPACT RESISTANCE

PRODUCT		MODEL	RAIL LENGTH	LOAD TYPE	ULTIMATE LOAD (JOULES) FOR IMPACT ANGLE DEGREES BELOW 10	15	30	45	60	90
RP		ANY								1.280,00
TR		ANY								1.280,00
RC		ANY								2.800,00
ROD		70 120								2.000,00 3.600,00
GRD		90 150 150 PLUS 200								1.600,00 4.100,00 5.033,00 9.365,00
ROCKET		150 200								5.000,00 7.500,00
GR		90 150			79.592,25 193.177,02	35.827,69 86.956,78	9.600,00 23.300,00	4.800,00 11.650,00	3.200,00 7.766,67	2.400,00 5.825,00
GRIN		90 150	1.500 2.000		92.857,62 261.195,23	41.798,97 117.574,53	11.200,00 31.504,00	5.600,00 15.752,00	3.733,33 10.501,33	2.800,00 7.876,00
ROD FLOOR		70 100 120			115.010,80 331.634,00 1.014.801,00	51.771,01 149.282,00 56.803,00	13.872,00 40.000,00 122.400,00	6.936,00 20.000,00 61.200,00	4.624,00 13.333,00 40.800,00	3.468,00 10.000,00 30.600,00

PRODUCT		MODEL	RAIL LENGTH	LOAD TYPE	ULTIMATE LOAD (JOULES) FOR IMPACT ANGLE DEGREES BELOW 10	15	30	45	60	90
SM			1500		34.887,94	15.704,47	4.208,00	2.104,00	1.402,67	1.052,00
LM		MOD	2000		135.970,00	61.205,63	16.400,00	8.200,00	5.466,67	4.100,00
		RE	2000		309.414,87	139.280,14	37.320,00	18.660,00	12.440,00	9.330,00
LM/1 LINK					388.973,96*	175.092,90*	46.916,00*	23.458,00*	15.638,67*	11.729,00*
FENCE		90	1.500		26.530,75	11.942,56	3.200,00	1.600,00	1.066,67	800,00
		150	1.500		132.885,89	59.817,31	16.028,00	8.014,00	5.342,67	4.007,00
		150 REF	1.500		233.337,95	105.034,84	28.144,00	14.072,00	9.381,33	7.036,00
		150 LINK	2.000		421.407,80*	189.692,68*	50.828,00*	25.414,00*	16.942,67*	12.707,00*
LINK		SINGLE	2.000		288.521,91	129.875,37	34.800,00	17.400,00	11.600,00	8.700,00
		LM	2.000		577.043,81*	259.750,74*	69.600,00*	34.800,00*	23.200,00*	17.400,00*
		120/1	2.000		132.654,00	59.713,00	16.000,00	8.000,00	5.333,00	4.000,00
		120/2	2.000		182.399,00	82.105,00	22.000,00	11.000,00	7.333,00	5.500,00
		120/3	2.000		198.981,00	89.569,00	24.000,00	12.000,00	8.000,00	6.000,00
		150/1	2.000		489.426,01*	220.310,42*	59.032,00*	29.516,00*	19.677,33*	14.758,00*
		150/2	2.000		677.495,86*	304.968,26*	81.716,00*	40.858,00*	27.238,67*	20.429,00*
PED		HAND RAIL	1500		57.719,67*	24.631,54*	6.600,00*	3.300,00*	2.200,00*	1.650,00*
		90	1.500		99.490,31*	44.784,61*	12.000,00*	6.000,00*	4.000,00*	3.000,00*
		90 GL REF	2.000		261.195,23	117.574,53	31.504,00	15.752,00	10.501,33	7.876,00
		90 LINK	2000		165.817,00	74.641,00	20.000,00	10.000,00	6.667,00	5.000,00
		150	2.000		301.356,16	135.652,58	36.348,00	18.174,00	12.116,00	9.087,00
		150 LINK	2.000		589.878,06*	265.527,95*	71.148,00*	35.574,00*	23.716,00*	17.787,00*
		150 TL	2.000		490.818,00*	220.937,00*	59.200,00*	29.600,00*	19.733,00*	14.800,00*

PRODUCT		MODEL	RAIL LENGTH	LOAD TYPE	ULTIMATE LOAD (JOULES) FOR IMPACT ANGLE DEGREES BELOW 10	15	30	45	60	90
PIN		PED 150	2500		557.145,80*	250.793,80*	67.200,00*	33.600,00*	22.40,00*	16.800,00*
		PED 200	2000		557.145,80*	250.793,80*	67.200,00*	33.600,00*	22.400,00*	16.800,00*
BFLEX		FRONT/1	2.000		135.970,09	61.205,63	6.400,00	8.200,00	5.466,67	4.100,00
		FRONT/2	2.000		271.940,19*	122.411,27*	32.800,00*	16.400,00*	10.933,33*	8.200,00*
		FRONT/1 MODULAR	2.000		135.970,09	61.205,63	16.400,00	8.200,00	5.466,67	4.100,00
		FRONT/2 MODULAR	2.000		271.940,19*	122.411,27*	32.800,00*	16.400,00*	10.933,33*	8.200,00*
		COM/1	2.000		143.697,17	64.683,90	17.332,00	8.666,00	5.777,33	4.333,00
		COM/2	2.000		287.394,35*	129.367,81*	34.664,00*	17.332,00*	11.554,67*	8.666,00*
TOWER					301.356,16*	135.652,58*	36.348,00*	18.174,00*	12.116,00*	9.087,00*
TOWER LINK		TOWER LINK/1	2.000		489.426,01*	220.310,42*	59.032,00*	29.516,00*	19.677,33*	14.758,00*
		TOWER LINK/2	2.000		677.495,86*	304.968,26*	81.716,00*	40.858,00*	27.238,67*	20.429,00*
		TOWER LINK/3	2.000		865.565,72*	389.626,10*	104.400,00*	52.200,00*	34.800,00*	26.100,00*
COPRO		90			79.592,25	35.827,69	9.600,00	4.800,00	3.200,00	2.400,00
		150			193.177,02	86.956,78	23.300,00	11.650,00	7.766,67	5.825,00
DOCK GATE					248.360,98	111.797,31	29.956,00	14.978,00	9.985,33	7.489,00
TRUCK LINE					193.177,02	86.956,78	23.300,00	11.650,00	7.766,67	5.825,00
CP		100			15.255,18	6.866,97	1.840,00	920,00	613,33	460,00
		200			21.556,23	9.703,33	2.600,00	1.300,00	866,67	650,00

MPM PROTECTION'S VEHICLE LOAD

LEGEND SYMBOLS	VEHICLE LOAD	VEHICLE TYPE
LIGHT LOAD FOR HANDPALLET TRUCKS		ELECTRIC PEDESTRIAN TRUCK
		ELECTRIC PEDESTRIAN STACKER
		MANUAL PALLET TRUCK

LEGEND SYMBOLS	VEHICLE LOAD	VEHICLE TYPE
HEAVY LOAD FOR FORKLIFTS		LIGHTWEIGHT COUNTERBALANCE FORKLIFT TRUCK
		ENGINE HEAVY DUTY FORKLIFT TRUCK
		ELECTRIC PALLET TRUCK WITH RIDER PLATFORM

* MPM specifies that such values are the result of a sum of the unit data for the number of rails.
The unit data is proved by tests, stored in MPM, on excellent conditions goods. Such tests cannot take note of particular situations, installation or bad maintenance.

FLEXIBLE PROTECTIONS

MPM PROTECTION'S IMPACT ENERGY

PRODUCT	WEIGHT (Kg)	IMPACT ENERGY (JOULES) FOR IMPACT SPEED (Km/h) 3	6	9	12	15
	**500**	160,00	722,50	1.562,50	2.722,50	4.410,00
	**750**	240,00	1.083,75	2.343,75	4.083,75	6.615,00
	**1250**	400,00	1.806,25	3.906,25	6.806,25	11.025,00
	**1750**	560,00	2.528,75	5.468,75	9.528,75	15.435,00
	**2500**	800,00	3.612,50	7.812,50	13.612,50	22.050,00
	**3500**	1.120,00	5.057,50	10.937,50	19.057,50	30.870,00
	**4500**	1.440,00	6.502,50	14.062,50	24.502,50	39.690,00
	**5600**	1.792,00	8.092,50	17.500,00	30.492,00	49.392,00
	**6300**	2.016,00	9.103,75	19.687,50	34.303,50	55.566,00

MPM PRODUCT WARRANTY

MPM guarantees the product supplied in accordance with articles 1490 and following of the Italian Civil Code.

The warranty lasts twenty-four (24) months and starts from the date of delivery of the goods. The warranty consists of free repair and/or replacement of the defective part. The transport costs of the product shall be borne by the Buyer.

The Buyer loses the warranty if he does not report the hidden defects within eight days of their discovery. For obvious defects, the reporting period starts from the delivery of the goods. The complaint must be made in writing (registered letter or certified e-mail).

MPM reserves the right to ascertain the existence of the defect and the right to replace the entire product supplied.

The warranty does not apply: to parts damaged during transport, to damages caused by accident, impact, inexperience in use, improper or unauthorized use, unauthorized modifications or repairs of tampering, lack of proper maintenance, normal wear and tear and deterioration due to atmospheric and environmental agents, both in colors and materials.

The warranty will be considered valid only if, according to MPM's discretional evaluation, all the assembly, installation and use rules of the supplied product, as defined in the technical catalogue on the company website (www.www.mpmprotections.com), are respected.

If MPM has carried out the installation, the Buyer will lose the warranty if interventions by unauthorized third parties take place after the installation itself.

Before buying and installing MPM solutions, please consult the technical data sheet of each product in the technical catalogue available on www.www.mpmprotections.com.

The photos shown in the catalogues and on the company websites are for advertising purposes only and do not represent in any way how the products are used.

Impact resistance and manufacturing tolerances
Impact resistances indicated in the brochure, or in other documents, refer to laboratory tests and cannot take into account consequences determined by installation methods or peculiarities of the place where the products are installed (in an operational environment vehicle type, speed and mass, routes, angles of impact, ground and anchorage are variable and uncontrolled conditions that no test can replicate).

The data refers to an intact product which length is indicated on the test report and it can be affected by alterations from incorrect maintenance, wear and tear, as well as the methods and characteristics of installation (with specific reference to floor-mounted products); the weight, dimensions, colors and characteristics of the material refer to the sample and the conformity with the latter of the product supplied will be subject to normal production tolerance. The product may be affected by environmental installation conditions.


The warranty does not apply in the case of direct installation on asphalt without foundation plinths. Due to the particular nature and variety of this flooring, it is not possible to guarantee the impact resistance.

Limits of liability
The maximum compensation under this guarantee shall not exceed the amount paid by the customer for the purchase of the product in dispute, and damages for image, loss of business and contracts, revenues, etc. are excluded from the compensation itself.

Temperature range
The standard operating temperature of MPM flexible protections is generally from +5 °C to +60 °C. For installations in low temperature environments up to -30 °C an alternative material should be required.

Color
The fastness of the color and its brightness depend on wear and tear and weather conditions that can affect its intensity over time. For outdoor applications exposed to direct sunlight it is possible to choose the grey color.

MADE IN
ITALY

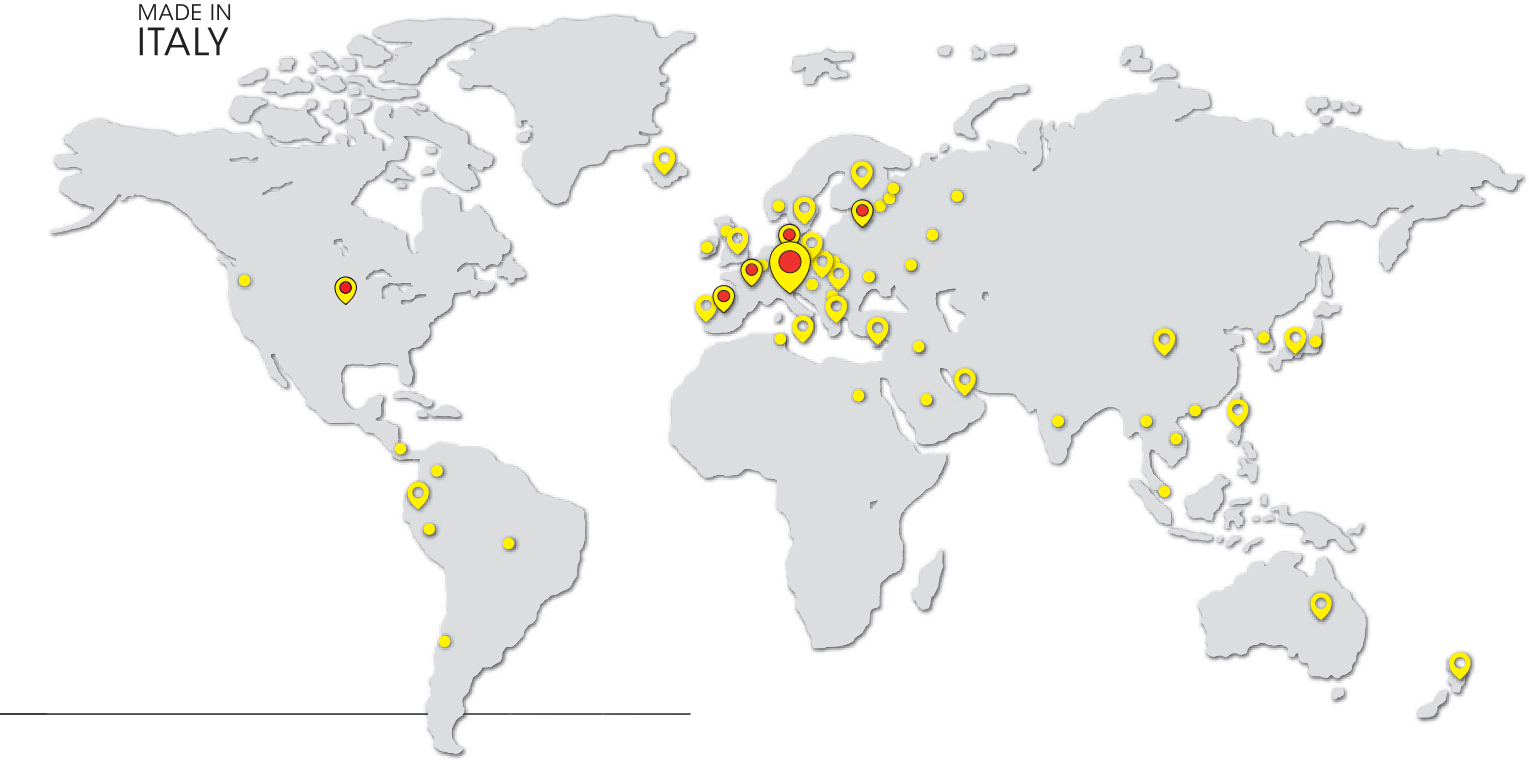

HEADQUARTER

MPM FLEXIBLE PROTECTIONS
Via Europa 2 35010 Fratte di S. Giustina
in Colle Padova · Italy
T +39 049 9301773
info@mpmpvc.com
www.mpmprotections.com

MPM USA
444 N Michigan Ave Chicago,
IL 60611
info@mpmprotections.us
www.mpmprotections.us

MPM ESPAÑA
Av.da Eduardo Guitian, Num 11, Planta 3,
Oficina 3, 19002 Guadalajara
T +34 949 146 001
info@mpmprotections.es
www.mpmprotections.es

MPM DEUTSCHLAND
Hauptstraße 59
23879 Mölln
T +49 4542 853 65 80
info@mpmdeutschland.de
www.mpmdeutschland.de

MPM FRANCE
9 Allée Irène Joliot Curie 69800 SAINT
PRIEST
T +33 41 21 20 500
info@mpmprotections.fr
www.mpmprotections.fr

MPM POLSKA
Ul. Runowa 52
Tychy 43-100
T +48 500 465 569
kontakt@mpmpolska.pl
www.mpmprotections.pl

mpm
FLEXIBLE PROTECTIONS